



# LeapTV™

Educational, Active Video Gaming

## Parent Guide & Instructions

This guide contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.

### Getting Started

Please read all Operating and Important Safety Instructions before using the LEAPTV™ system. Failure to follow Safety Instructions could result in injury or damage to the LEAPTV system or other property.

 
See **Guided Setup for Parents** located under the console for step by step setup instructions.

#### What's Included

- Console
- Controller with wrist strap
- HDMI cable
- Power adapter
- Camera
- Camera mount

#### 1. Connect Your System

Connect all cables as shown below. If using a wired connection for Internet access, connect to your router using an Ethernet cable (not included).

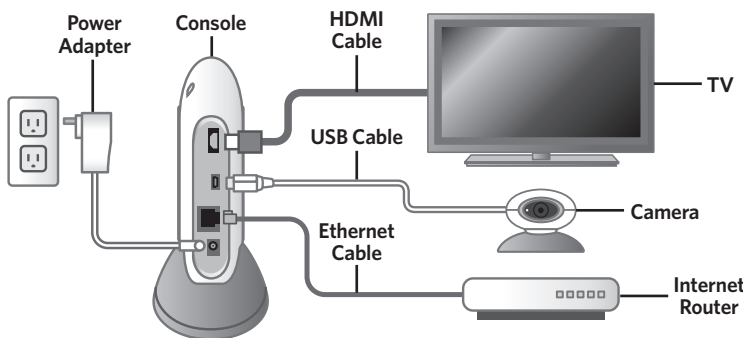

#### Parent Settings

Parent Settings allow you to control your system settings, including managing child profiles, removing or downloading games and videos you have purchased, changing wireless settings, and setting parental controls. Access to Parent Settings is protected by a 4-digit parent lock code that must be established during initial setup.

#### Forgetting or Resetting Your Parent Lock

If you have forgotten your 4-digit parent lock code you can look it up in the leapfrog.com Parent Account you created during system setup and registration. If you need to reset your parent lock, you can do it in Parent Settings or go to [leapfrog.com/support/leaptv](http://leapfrog.com/support/leaptv)

#### Operating Instructions

**Wi-Fi connection support.** If you experience any difficulty with Wi-Fi connectivity, troubleshooting suggestions are available online at [leapfrog.com/support/leaptv](http://leapfrog.com/support/leaptv)

**For indoor, dry location use only.** Take care not to spill food or liquid of any kind on this product as it may render it inoperable and not serviceable.

**Cleaning:** Disconnect all cords before cleaning. Clean your hands before handling the product. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use. Do not connect to the AC outlet if wet or damaged.

**Use the wrist strap:** Ensure your child uses the wrist strap during controller gameplay to avoid injury to others or damage to property. Tighten the strap securely but comfortably and instruct your child to maintain a firm grip on the controller at all times.

**Pausing gameplay:** Some televisions may be damaged when a stationary image appears on the screen for an extended period of time. If you or your child pauses the game, turn the television off until your child is ready to resume play.

**Repairing or modifying:** Never attempt to repair or modify the LEAPTV™ system as it does not contain any user-serviceable parts. Service should only be provided by LeapFrog Enterprises, Inc. If the product has been in contact with liquids, punctured, or subjected to a severe impact or fall, immediately remove this product from use.

For service information, go to: [leapfrog.com/support/leaptv](http://leapfrog.com/support/leaptv)

#### Instructions Operationnelles

**Connexion Wi-Fi :** Si vous avez des difficultés à vous connecter à votre connexion Wi-Fi, des aides sont disponibles en ligne à [leapfrog.com/support/leaptv](http://leapfrog.com/support/leaptv)

 
**A utiliser uniquement en intérieur, dans un endroit sec :** Faites attention à ne pas renverser de nourriture ou tout autre sorte de liquide sur ce produit car cela pourrait le rendre inopérant et inutilisable.

**Pour nettoyer :** Débranchez le produit de tous ces câbles. Lavez vos mains avant de manipuler le produit. Nettoyez le produit avec un chiffon légèrement humide (eau froide). N'utilisez pas de savon, de lessive ou autres produits chimiques. Ne jamais immerger le produit dans l'eau. Ne pas brancher à une prise si le produit est humide ou endommagé.

**Utilisation de la dragonne :** Assurez-vous que votre enfant porte la dragonne pour éviter de blesser autrui ou abimer les objets qui vous appartiennent. Assurez-vous que la dragonne est correctement serrée et que votre enfant tient la manette fermement et dites-lui de ne jamais la lâcher même si la dragonne est attachée.

#### 2. Set Up Transforming Controller

Insert two AA batteries (not included).

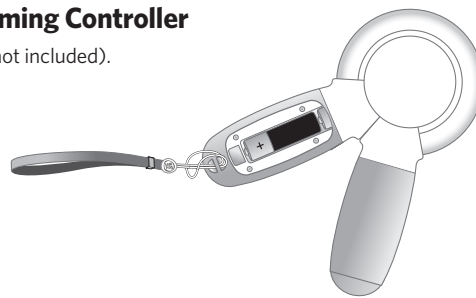

#### 3. Position Camera

Choose the best method to aim the camera directly at your child's chest. Either place camera on a flat surface or attach to TV with the included mount.



Center/Centre in Front of TV

 
#### 4. Set Up Console

Turn on the console and your TV, and select the correct input source.



#### 5. Clear Play Area

Clear enough space for your child to play safely. See Play Area Precautions for more guidance.

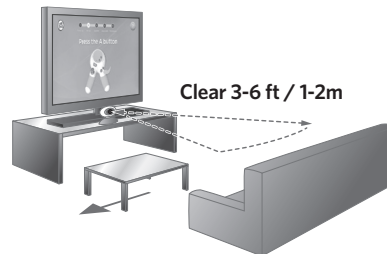

#### 6. On-Screen Guided Setup

 
Follow on-screen instructions. When prompted, complete Parent Account setup by going to:

[leapfrog.com/leaptv/register](http://leapfrog.com/leaptv/register)




### Get to Know Your System

#### Console

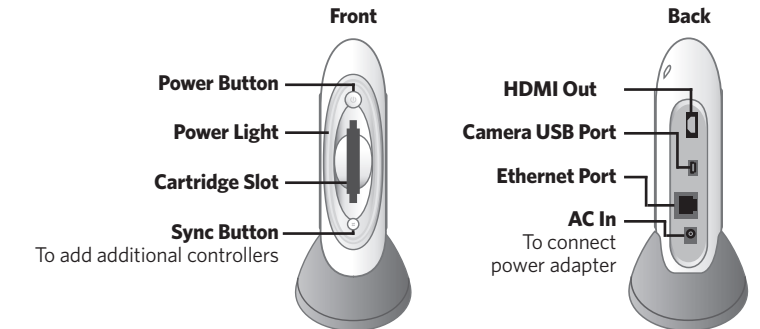

#### Transforming Controller

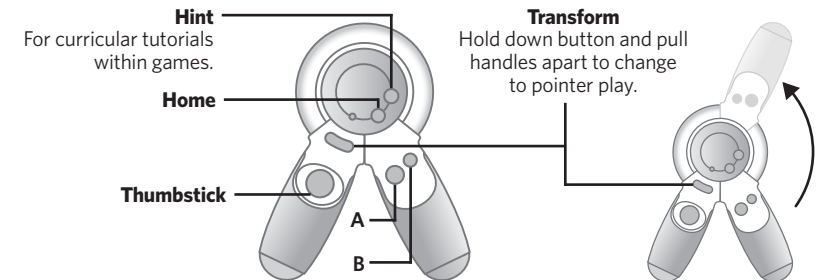 

### Using Your System

#### Play Area Precautions

To avoid injury or damage to property, make sure your child has enough space to move freely while playing. Be mindful of other people and clear the play area of obstructions such as pets, furniture and other objects. Check overhead to ensure that fans and light fixtures will not interfere with gameplay.

Ensure LEAPTV™ system cords will not pose a tripping hazard and are out of children's reach at all times.

Children should play at least 3-6 feet or 1-2 meters/metres from the television.

Children should wear clothing appropriate for physical activity, including footwear that provides sufficient traction (for example, avoid socks on hardwood floors).

**Mode pause :** Certains téléviseurs ou écrans peuvent être endommagés si une image fixe est affichée trop longtemps à l'écran. Si vous ou votre enfant mettez le jeu sur pause, éteignez le téléviseur jusqu'à ce que vous soyez prêt(e) à reprendre votre partie.

**Réparer ou modifier LEAPTV™:** N'essayez jamais de réparer ou modifier le LEAPTV – car celui-ci ne contient aucune pièce qui peut être réparée individuellement. Toute aide doit être faite par LeapFrog Enterprises, Inc. Si le produit a été en contact avec du liquide, troué, ou victime d'un impact fort ou est tombé, arrêter son utilisation immédiatement.

Pour toute information, visitez [leapfrog.com/support/leaptv](http://leapfrog.com/support/leaptv)

#### Important Safety Instructions:

**!** Please read all the Important Safety Instructions prior to using LEAPTV. Failure to follow these safety instructions could result in injury or damage to LEAPTV or other property.

**!** **WARNING:** Not suitable for children under 3 years. Misuse of transformer (AC power adapter) can cause electric shock.

**!** **WARNING:** The adapter, HDMI or USB cords could be a strangulation hazard. Not for children under 3 years.

**!** **WARNING:** CHOKING HAZARD - Small parts, Not suitable for children under 3 years.

**!** **WARNING:** It is rare but possible for seizures to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, play/watch in a well-lit room and take 10- to 15-minute breaks every hour.

**!** **WARNING:** Repetitive motion and playing video games may cause eye or muscle strain. Have the child take a 10- to 15-minute break every hour.

**!** **CAUTION:** Adult supervision is required at all times while children are playing with this product. Parents of children with injuries or other limitations should consult a doctor before use.

**!** **CAUTION:** To allow adequate space for your child to move, ensure that the play area is a safe distance away from walls, windows, furniture or other objects.

**!** **CAUTION:** To avoid choking, do not allow your child to eat or drink during play.

**!** **CAUTION:** Routinely check this product for proper and safe condition. If there is any damage or broken parts, remove product from use.

#### AC Power Adapter Safety

**!** **CAUTION:** Use only the AC power adapter provided with the product.

(Note: The word "transformer" is sometimes substituted for the word "Adapter". Use only the included AC power adapter.)

- Connection of the transformer to the wall outlet should be performed only by an adult or child 8+ years of age.

- The transformer is not intended to be used as a toy, and the use of the transformer shall be under the full supervision of parents.

- As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.

- The power adapter may become warm during normal use. Always allow adequate ventilation and use care when handling the power adapter.

- Do not connect or disconnect with wet hands.

- The transformer should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts, and in the event of such conditions, the transformer must not be used until the damage is repaired. The cord of this transformer cannot be replaced; if the cord is damaged, dispose of the transformer in accordance with your local electrical product recycling regulations.

**Unplug the AC Power Adapter** (transformer) if any of the following conditions exist:

- The power cord or plug, or the USB cord has become frayed or damaged.
- The power adapter is exposed to rain, liquid, or excessive moisture.
- The power adapter enclosure has become damaged.
- You suspect the power adapter needs service or repair.

AC Adapter Electrical Ratings:

US, CAN Input: ~ 120VAC, 60Hz

UK Input: ~ 230VAC, 50Hz

Australia and New Zealand Input: ~ 240VAC, 50Hz

Output: --- DC9V, 700mA, 6.3VA

#### Battery Information

The Transforming Controller requires 2AA batteries (called LR6 in some countries) alkaline batteries, not included.

#### Battery Removal and Installation Instructions


1. Open the battery door.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of the visible battery.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.


#### Battery Safety


Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries to avoid leaking. Dispose of used batteries properly. Remove batteries during prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.


- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries or types of batteries (i.e. alkaline/standard).
- **DO NOT** short circuit supply terminals.
- **DO NOT** charge non-rechargeable batteries.
  - Rechargeable batteries are only to be charged under adult supervision.
  - AA or LR6-size rechargeable batteries are to be removed from the product before being charged.


## Informations Importantes de sécurité :


 Veuillez lire toutes les informations importantes de sécurité avant d'utiliser le LEAPTV™. Ne pas appliquer ces consignes peut engendrer des risques d'incendie, d'électrocutions, autres blessures ou dommages au LEAPTV ou autres.


 **AVERTISSEMENT :** Ne convient pas aux enfants de moins de 3 ans. Une utilisation inappropriée du transformateur (adaptateur secteur) peut causer un risque d'électrocution.


 **AVERTISSEMENT :** L'adaptateur, le câble HDMI ou USB peuvent provoquer un risque d'étranglement. Ne convient pas aux enfants de moins de 3 ans.


 **AVERTISSEMENT :** Ne convient pas aux enfants de moins de 3 ans. RISQUE D'ETOUFFEMENT : Petits éléments risquant d'être ingérés.


 **AVERTISSEMENT :** Il est rare mais possible que les lumières clignotants ou les formes provoquent des crises d'épilepsies. Jouez/regardez dans une pièce bien éclairée et prenez des poses de 10 à 15 minutes toutes les heures.

 **AVERTISSEMENT :** Jouer à des jeux vidéo et des mouvements répétitifs peuvent causer une fatigue oculaire ou la fatigue musculaire. Demander à l'enfant de prendre une pause de 10 à 15 minutes toutes les heures.


 **ATTENTION :** La supervision d'un adulte est requise lorsque l'enfant joue avec ce produit. Les parents d'enfants handicapés devraient consulter un médecin avant l'utilisation de ce produit.

 **ATTENTION :** Pour laisser suffisamment d'espace aux mouvements du corps, assurer que l'aire de jeu est à une distance sécuritaire des murs, des fenêtres, des meubles ou d'autres objets.




 **ATTENTION :** Ne pas laisser un enfant manger ou boire pendant qu'il joue avec ce produit, afin d'éviter les risques d'étouffement.

 **ATTENTION :** Régulièrement vérifier que ce jouet est en bon état et qu'il ne pose pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

### Informations de sécurité pour l'adaptateur

 **ATTENTION :** Utilisez uniquement adaptateur recommandé (transformateur) pour recharger la pile. (Note: Le mot transformateur est, des fois, remplacé par le mot adaptateur). Utilisez uniquement adaptateur fourni.

- L'adaptateur doit être branché à la prise murale par un adulte ou un enfant de plus de 8 ans uniquement.
- Ce transformateur n'est pas un jouet, et son utilisation doit être faite uniquement sous la présence d'un adulte.
- Comme avec tous produits électriques, des précautions doivent être utilisées pour éviter des électrocutions.

Certification and Compliance	
	Console FCC ID: QDX31511 Transforming Controller FCC ID: QDX31704 Console Model: 31511; Transforming Controller Model: 31704
Canada: Console Model: 31511 IC: 4810A-31511 Transforming Controller Model 31704 IC: 4810A-31704 CAN ICES-3(B)/NMB-3(B)	
E.U.	 

#### Copyrighted Software

Certain software included in this product contains copyrighted software that is licensed under the General Public License (GPL). A copy of that license is included at **<http://www.leapfrog.com/en-us/legal/open-source.html>**. Anyone may obtain from us the complete corresponding source code for the software covered by the GPL for a period of three years after our last shipment of this product by contacting LeapFrog customer service at support@leapfrog.com. Please write "GPL source code for LEAPTV" in the subject line of your email. We reserve the right to charge a reasonable fee to cover the costs of shipping and the physical media on which the source code is loaded.

TM & © 2014 LeapFrog Enterprises, Inc. All rights reserved.

**leapfrog.com**

**Recommended for children ages 3-8 years.  
Convient aux enfants de 3 à 8 ans.**

Model: **LEAPTV™ Model: 31511**

LeapFrog Enterprises, Inc.  
6401 Hollis Street, Suite 100  
Emeryville, CA 94608  
(800) 701-LEAP (5327)

Item number: 31511  
Part number: 605-12129-B

- Le transformateur peut chauffer pendant son utilisation normale. Vérifiez que la ventilation est adaptée et faites attention quand vous utilisez ce produit.
- Ne branchez ou débranchez pas le produit avec des mains mouillées.
- Le transformateur doit être vérifié régulièrement (les lames, la prise, la prise murale et tout autre pièce) car si celui-ci est endommagé, il peut être un risque d'incendie, d'électrocution ou autres blessures. Si celui-ci est abîmé, arrêtez de l'utiliser immédiatement et attendez que celui-ci soit réparé avant de réutiliser. Le câble de cet adaptateur ne peut pas être remplacé, si le câble est abîmé, jetez le transformateur en suivant les règles de recyclage de votre région.

#### Débranchez l'adaptateur (transformateur) si une de ces conditions existe

- Le câble, la prise ou le câble USB est abîmé ou cassé.
- Le câble, la prise ou le câble USB sont exposés à la pluie, à du liquide ou une humidité excessive.
- La boîte de protection de l'adaptateur est abîmé.
- Si vous pensez que l'adaptateur a besoin d'être réparé.

Caractéristiques électriques de l'adaptateur secteur: Voltage d'entrée 120 VAC, 69 Hz (pour les États-Unis et Canada) ; 239 VAC, 59 Hz (pour le Royaume-Uni et l'Europe) ; 240 VAC, 50 Hz (pour l'Australie et la Nouvelle Zélande). Voltage de sortie : DC9V, 700mA, 6.3VA.

### Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+ / -) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées pour éviter les fuites. Suivez les procédures adéquates pour vous débarrassé des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent. Les piles incluses dans les produits lors de l'achat sont uniquement destinées aux démonstrations en magasin et doivent être remplacées pour améliorer les performances du produit.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** court-circuiter les terminaux d'alimentation.

**NE PAS** recharger des piles non rechargeables.

- Le rechargement des piles rechargeables doit être effectué sous la supervision d'un adulte.
- Les piles rechargeables doivent être retirées du contrôleur d'être chargées.

**Exposure to Radio Frequency Energy** The LEAPTV™ system contains a radio transmitter and receiver. When powered ON, the system sends and receives radio frequency (RF) energy through its internal antenna.

The LEAPTV console complies with the RF exposure guideline for an uncontrolled environment and is safe for intended operation as described in this manual. The console must be located at least 20 cm from nearby persons. The transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The transforming controller has been tested and found to meet the SAR exposure requirements for Wi-Fi operation as established by FCC, IC, and European Union guidelines. The controller has been tested when positioned at 0 mm from the body, without any metal parts in the vicinity and when properly used with the LEAPTV console.

### FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Changes or modifications to this unit not expressly approved by LeapFrog could void the EMC and wireless compliance and void the user's authority to operate the equipment. This product demonstrated EMC compliance using compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

**USB Cable** The USB cable provided with this product complies with FCC and other regulatory Emission limits. If using other than the provided USB cable, please note that in order not to exceed FCC and other regulatory emissions limits, a shielded cable must be used.

**Canadian Compliance** This Class B digital apparatus complies with Canadian ICES-003. CAN ICES-3(B)/NMB-3(B). Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada. CAN ICES-3(B)/NMB-3(B).

**European Community Compliance Statement** The equipment complies with the RF Exposure Requirement 1999/519/EC, Council Recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0–300 GHz). This wireless device complies with the R&TTE Directive.

**EU Declaration of Conformity** LeapFrog Enterprises, Inc., hereby declares that this Wi-Fi device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

**Environmental Phenomena** The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power OFF and then back ON. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by turning the power OFF and then back ON.

**Recycling** For information on how this product might be recycled, visit leapfrog.com/recycle or call (800) 701-5327.