
Front



Instruction Manual Display: 1. Normal time display: hour & minutes. 2. Press B1 once: month & date (automatically return to normal time display). 3. Press B1 twice: seconds (press B1 again to return to normal time display). Setting the watch: 1. Month: press B2 twice to display month and set the month with B1. 2. Date: press B2 to display the date and set the date with B1. 3. Hour: press B2 to display the hour and press B1 to set the hour ("A" for AM and "P" for PM time). 4. Minutes: press B2 to display the minutes and set the minutes with B1. 5. Press B2 once more to return to normal time display. 6.Press B1 once to activate the watch (colon will flash). How to show the projection images: 1. Press B3 to show the Ring projection images. 2. Twist the ring to change **B**3 projection images.

145mm

Battery Information:

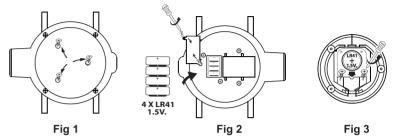

Projection requires 4 x 1.5V, LR41 and watch requires 1 x 1.5V, LR41 size or equivalent.

To replace Batteries, please follow below:

1. **Projection** : Unscrew 3 screws on the back. (Fig 1) to take out the LCD module and ring parts from top. Unscrew the battery cover (Fig2), replace with the new batteries, ensuring correct polarities as indicated, reassemble the watch and screw in place.

2. **Watch** : Unscrew 3 screws on the back. (Fig 1) to take out the LCD module from top. Unscrew the contact plate of the moudle and replace with new battery. (Fig 3) Reassemble the watch and screw in place.

Note: We recommended the battery replacement is done by a watch specialist.



Zeon Ltd Units 1 & 2 Phoenix Park Apsley Way, London NW2 7LN, UK. Tel : 0208 208 1833.

110MM