

Fig 1 How to erect the tent



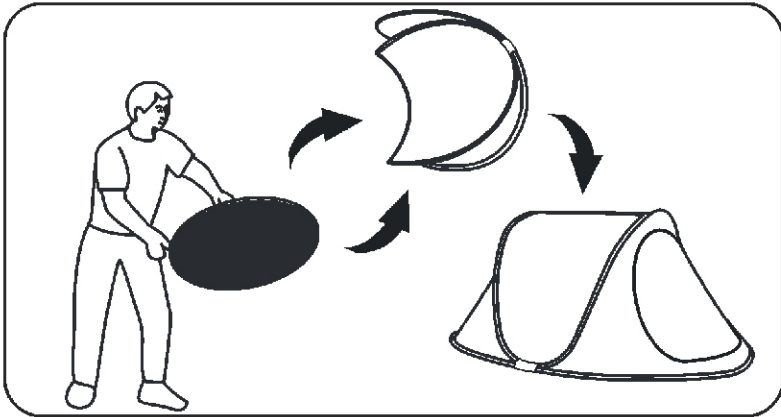



Fig 2 Packing Instructions

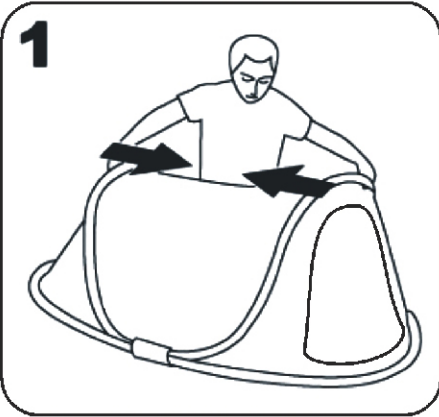



Pull the two top pole hoops together in the centre of the tent ensure the door is open to release excess air.

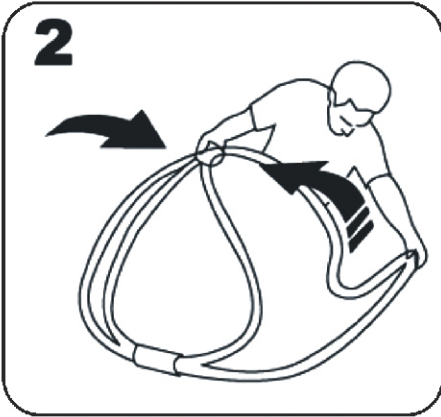

Holding the two top pole hoops together bring the rear pole hoop up to the centre. allow all excess air to be pushed out.

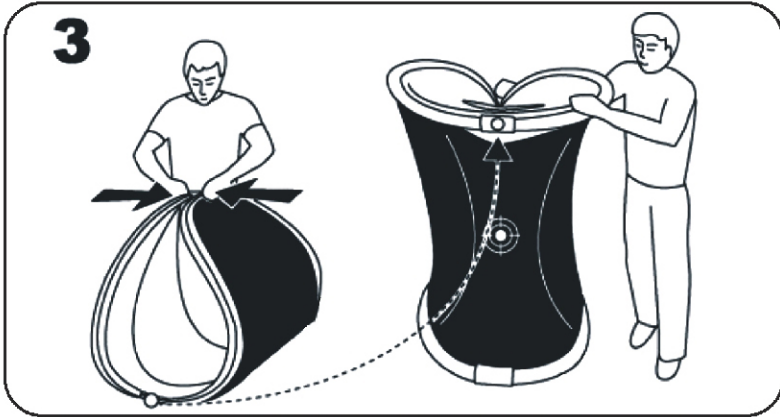

Bring the front pole hoops up to the centre. All 2 pole hoops should now be held together. Still holding the poles together stand the tent up on one end.

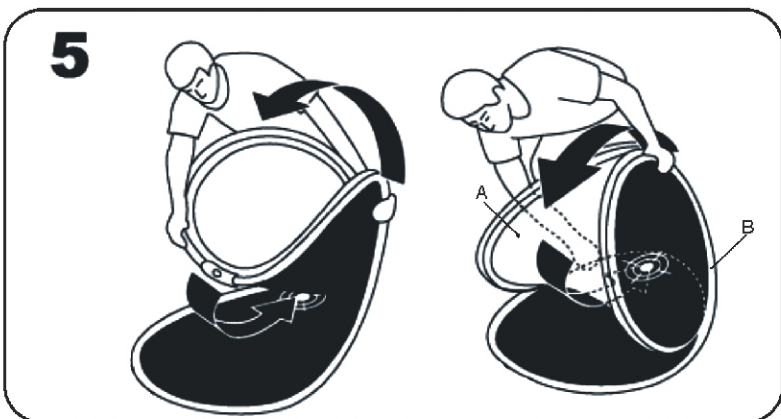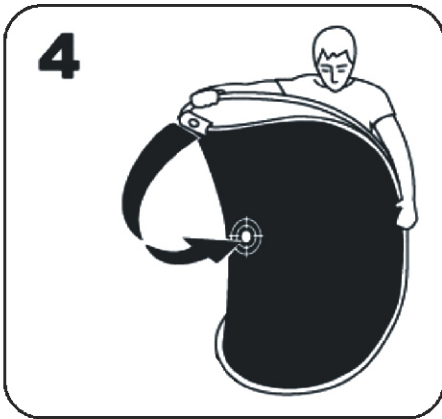

Hold the four pole hoops together with one hand. Take hold of the furthest point of the top loop with your other hand. Bring the top point down in an arc to the floor then tuck the front point into the rest of the tent. Apply gentle pressure to hold in place. Divide the four poles, get two in each hand. Lay the poles in one hand flat onto the loop on the floor.



The second loop can then be folded over the previous loop. This should create four hoops on top of each other.



The tent can now be put back into the bag.

PRIOR TO USE

- ▲ Before using your Tent check that it is complete and free from any defects.
- ▲ We strongly recommend you erect your Tent before going camping to familiarise yourself with the pitching of your Tent.
- ▲ We also recommend you weather the Tent by hosing it thoroughly checking for any seam leakage.
- ▲ **Please note and fully understand that no Tent can be totally guaranteed 100% waterproof!**

Whilst the material of your Tent is waterproof, certain weather conditions such as high winds and driven rain can sometimes cause slight leakage through the seamed and zipped areas. We recommend that prior to use you apply seam sealant to the outer seams of the flysheet. This will give your Tent added protection from the outside elements. Note, some discolouration may occur when seam sealant is applied.

USING YOUR TENT

- ▲ Choose a site that is stone or sharp object free.
- ▲ Avoid pitching near trees.
- ▲ Fully read the fire precaution label attached to your tent
- ▲ In high humidity, condensation can form on the inner side of your Tent. Do not confuse this with leaking. We recommend that as many ventilation points, including partial opening of doors and windows are left open, subject to weather conditions wherever possible.

AFTER USE CARE

- ▲ Prior to packing, always clean off mud and grass.
- ▲ If possible pack your Tent when it is dry.
- ▲ Do not store your Tent wet, mildew can form on the inners and rust can form on steel pegs and poles, always dry and clean these items prior to storage.
- ▲ Store in dry, ventilated conditions.

ASSEMBLY

- ▲ Open bag and remove tent.
- ▲ Find a clear space, hold the tent securely. Release the tent away from the body. (Fig 1)
- ▲ Peg out tent using all peg points and guylines.

PACKING

- ▲ See details. (Fig 2) and follow steps.
- ▲ Ensure the tent is securely in place before packing into the bag.

WARNING:

Do not use any stoves or heaters inside this tent or lanterns that use combustible fuels (e.g. gas, petrol, meths)

General Advice:

Be cautious when removing the tent from its bag - it is spring loaded and will take form immediately in front of you!

Children should pitch tent under adult supervision.

It is recommended that you open and re-pack the tent before using it for the first time so you become familiar with the packing process.

PLEASE NOTE

IT IS RECOMMENDED THAT A MALLET IS USED TO PEG OUT YOUR TENT AND THAT IT IS FULLY GUYED AT ALL TIMES FOR STABILITY