
HYGENA RETRO STYLE COLOURED DRAWERS SIDEBOARD

Assembly Instructions - Please keep for future reference

319/7958

hygena

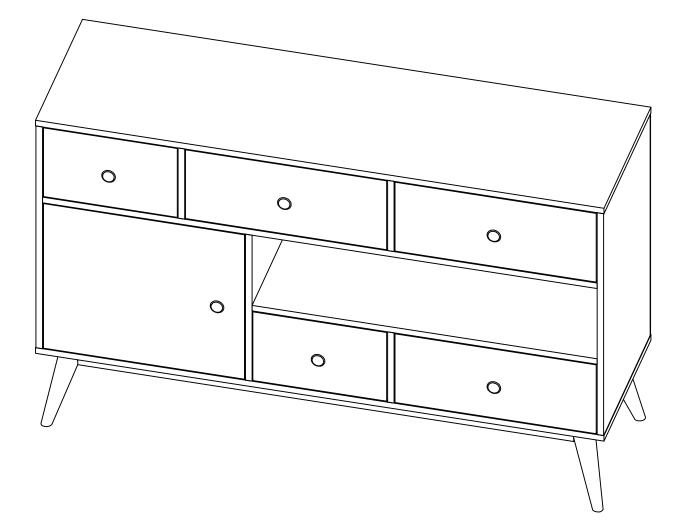

Dimensions

Width - 130cm Depth - 40cm Height - 83cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** *Argos= 0345* 640 0800

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages

• Remore all fitting from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly may be easier with 2 people.



• To reduce the likely hood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Reguraly check andensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels If you have damaged or missing components, call the Customer Helpline: Argos= 0345 6400800

Please check you have all the panels listed below

1 Top Cabinet (130x40x67.5cm)

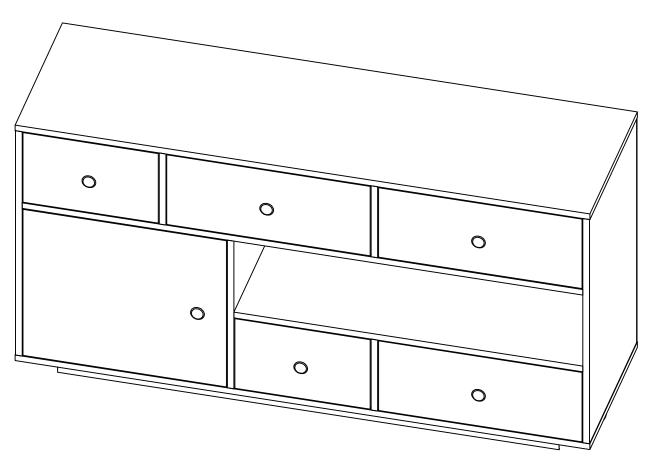

2 Legs x 4 (5.7x5.7x22.7cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to completed the assembly. In some cases more fittings may be supplied than are required.


A (7) M6x50mm Bolt x 8	B Spring Washer x 8	G Washer x 8
D Allen Key x 1	E Strap x 2	Φατατο Φατατο Φ Φ Φ Φ Φ Φ Φ Φ Φ Φ Φ Φ Φ
G Ø4x15mm Screw x 4		
Tools required		,
6mm Suitable drill l (for use with wall p		Ruler/tape measure
Phillips screwdriver	Drill	
Ruler - Use this ruler to help correctly identify the screws		
0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170		

Assembly Instructions

Step 1


Assemble legs

a: Turn over the cabinet
1 on smooth and clean surface as shown. Attach the legs2 to the cabinet 1 by bolts(A), spring washers (B), washers (C), and allen key(D). Tighten all bolts.

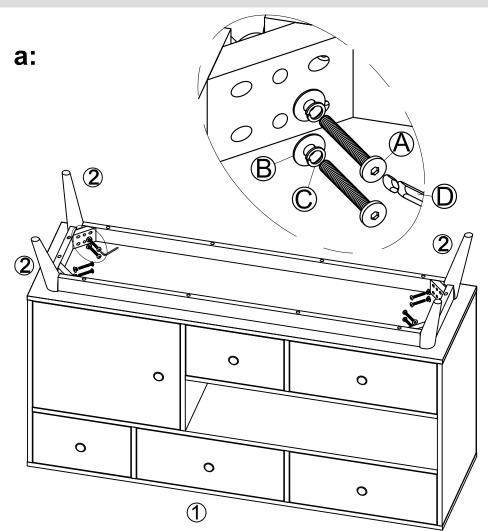

Turn over the cabinet as shown.


Assembly is completed.

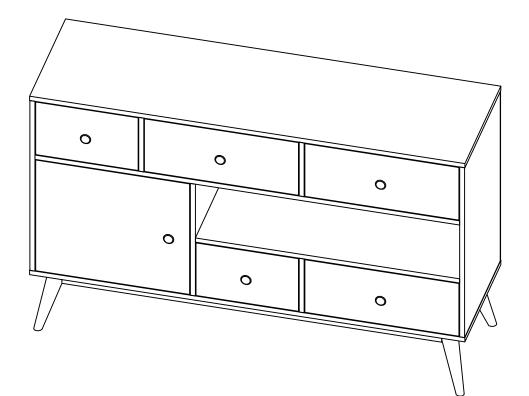

Assembly Instructions

Step 2

5

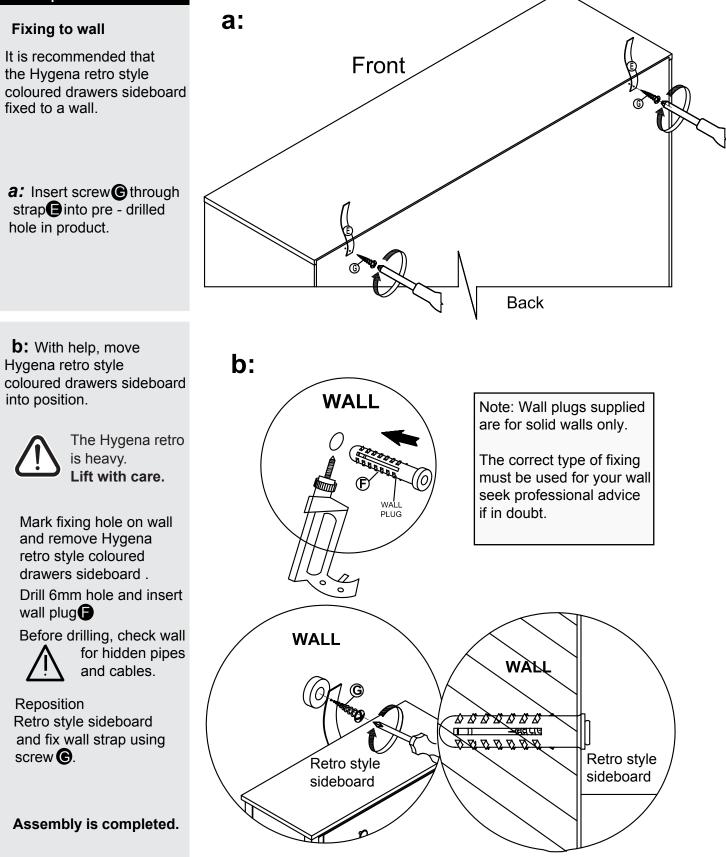

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product :



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

 
Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

- 1: General rule: Always us a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.


Types of walls

No. 1 "General Purpose" wall plug



Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No. 2 "Plasterboard" wall plug



For use when attaching light loads on to plasterboard partitions.

Care &

 
Maintenance

You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No. 3 "Cavity Fixing" wall plug

For use with plasterboard partitions or hollow wooden doors.


No. 4 "Cavity Fixing-Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: Always check the fitting and location to ensure your safety in and around the home.

 No. 5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No. 6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.

Fitting: From time to time check

the fitting to ensure the wall plugs or screws do not become loose.