
Alston Nest Of 2 Tables

Assembly Instructions - Please keep for future reference

3222933

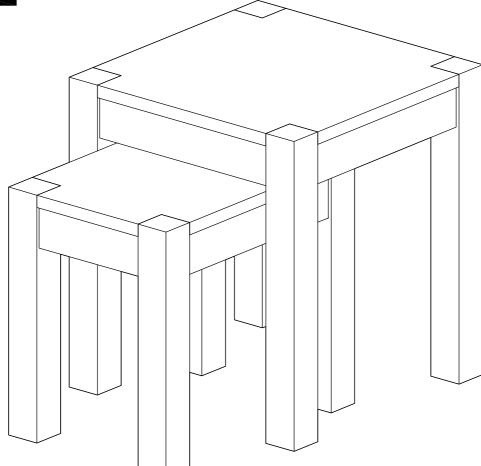



Dimensions

Width - 40 cm Depth - 40 cm Height - 45 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800

▲ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

 Check you have all the components and tools listed on pages 2 and 3.

 Remove all fittings from the plastic bags and separate them into their groups.

 Keep children and animals away from the work area, small parts could choke if swallowed.

 Make sure you have enough space to layout the parts before starting. Do not stand on the product, this could cause damage.

 Assemble the item as close to its final position (in the same room) as possible.

 Assemble on a soft level surface to avoid damaging the unit or your floor.

 Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Solid Wood / Real Wood Veneers

• This product has been finished using natural materials. As a living material, you may notice some variation in the grain and colour shade between the different components.

• Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal and is not the result of any manufacturing fault.

• Where sheets of wood are joined together, a line may be detected. Again, this is normal and is not an imperfection.

• Nature wood and veneers often have random pale markings in the grain, there are medullary rays which are a natural unique feature of the wood.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• Always use a non-silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

• Use non-silicone bees wax to maintain the shine. Do not use furniture polish.

• Do not put hot dishes directly on the surfaces of the item.

• From time to time check that there are no loose screws on this unit.

 Any spills should be removed immediately with a soft clean damp cloth and dried immediately.

 Avoid keeping furniture in direct sunlight or close to any heat sources as this can cause cracking, discoloration or warping. • This product should not be discarded with household waste. Take to your local authority waste disposal centre.

• Ensure the product is protected with mats and coasters when items are placed on the surfaces, to prevent scratching or demage.

• Never drag pieces of furniture across the floor as this will cause damage to the joints.


Components - Parts

I

T

If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**

Please check you have all the parts listed below

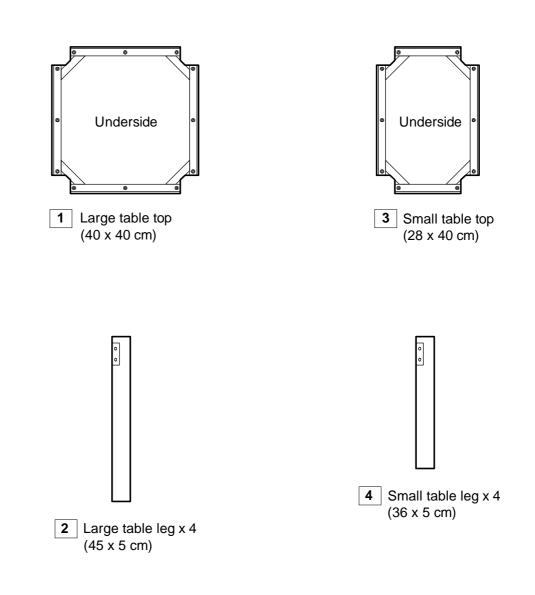


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

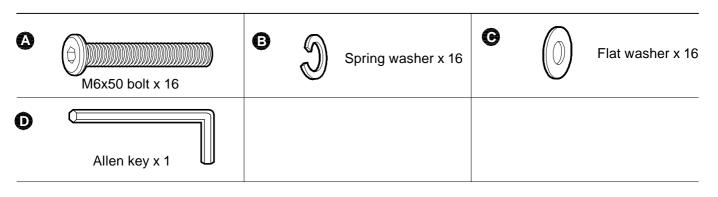

Tools required

Ruler/tape measure

Ruler - Use this ruler to help correctly identify the bolts

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions

Step 1

Step 2


Stand tables upright

Turn the tables upright.


Assembling legs


Place tops 1 and 3 upside down onto a clean flat surface.

Assemble legs 2 and 4 onto tops 1 and 3 respectively and sucure using fixings **A B** and **G**.

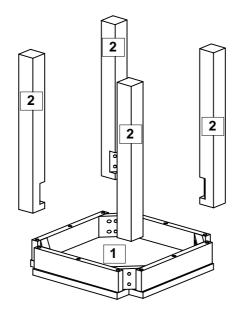


Large table

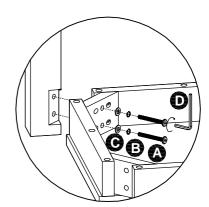

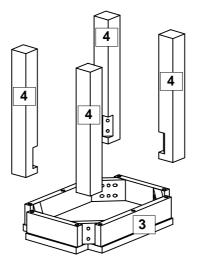

Small table

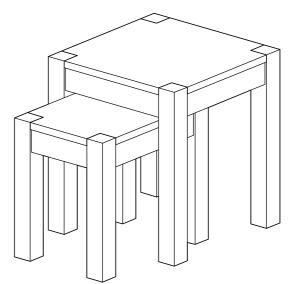

Assembly is complete

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800** Home Retail Group, 489-499 Avebury Boulevard, Saxon Gate West. Central Milton Keynes MK9 2NW