
# Glass and Metal Coffee Table

Assembly Instructions - Please keep for future reference 330/5070

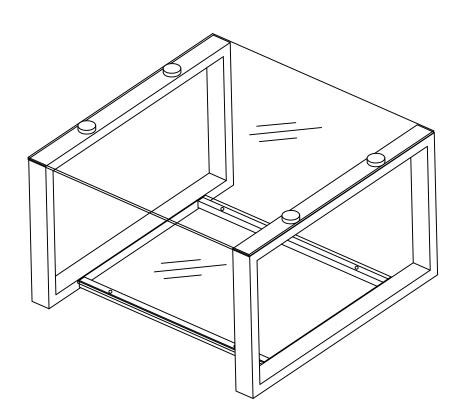

#### **Dimensions**

Width - 65cm

Depth - 65cm

Height - 40cm

#### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline**:0345 6400 800



# Safety and Care Advice

# Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area) small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put excessive weight on the product) this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- Place the product on flat and steady surface during use.

- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Keep these instructions for further use.
- To ensure an easier assembly)
  we strongly advise that all
  fittings are only finger tightened
  during initial assembly. Only
  upon completion of the
  assembly should all fixing points
  be fully tightened.

# Glass safety

- This product complies with BS EN 12521:2009
- Imported by:
   Argos Ltd
   489-499 Avebury Boulevard
   Central Milton Keynes
   MK9 2NW

CAT No.: 330/5070

- P/O No:
- If the glass is chipped or broken) stop using the product and consult the Manufacturer or Supplier.

### Warnings

- a) Do not place very hot or very cold items on the glass surface(s) unless adequately thick table mats are used to prevent such items from coming into contact with the glass..
- b) Do not sit or stand upon the glass surface(s).
- c) Do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.
- d) When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary) do not use washing powders or any other substance containing abrasives since these substances scratch glass.

 
# Care and maintenance

- Only clean using a damp cloth and mild detergent) do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

### Components - Panels

If you need help or have damaged or missing parts, call the **Customer Helpline**: **0345 6400 800** 


Please check you have all the panels listed below



1 Table Top (Glass) X 1 (0.6X65X65CM)



 2 Glass Shelf X 1 (0.6X45X54.6CM)



3 Side Frame X 2 (65X38.4CM)




4 Stretcher X 2 (1.8X55CM)

# Components - Fittings

#### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

		•
65mm Allen screw X 4	30mm Allen screw X 4	Plastic sucker X 4
Plastic washer X 4	Allen key X 1	

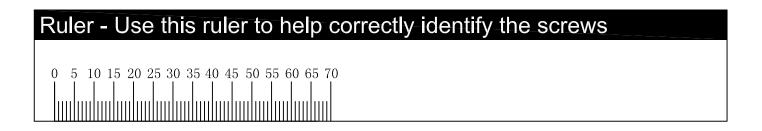

# **Assembly Instructions**


#### Step 1

#### **Assembling frame**

With help, carefully place glass top 1 upside down onto a clean flat surface.

Locate side frames 3 into position and secure using screws **B** and plastic washer **D**.

**Note:** Do not fully tighten.

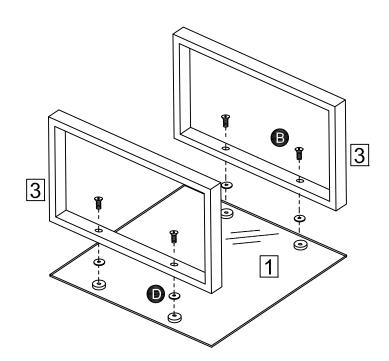


#### Step 2

#### **Locating stretchers**

Locate stretchers 4 in between side frames 3 and secure using screws

Note: Do not fully tighten.

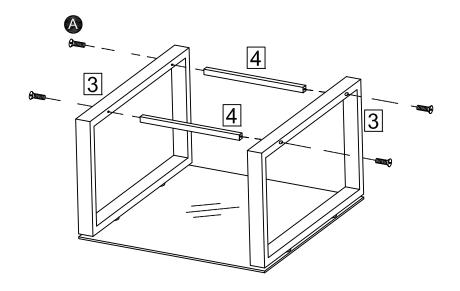

## **Assembly Instructions**

#### Step 3

#### **Assembling Glass**

With help, carefully turn the table over.


Fit plastic suckers into the holes in stretchers 4.

Fully tighten all fixing screws.

Note: Do not overtighten.

Carefully locate glass shelf 2 into position.

Assembly is complete.

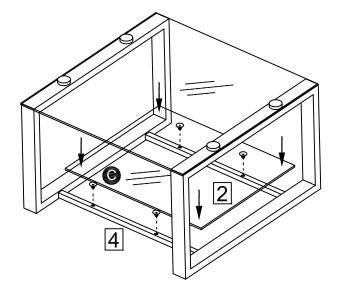

If you need help or have damaged or missing parts, call the **Customer Helpline**: **0345 6400 800** 

Home Retail Group. 488-489 Avebury Boulevard. Saxon Gate West. Central Milton Keynes. MK9 2NW