 


FM Shower Radio

Instruction Manual

331/3921


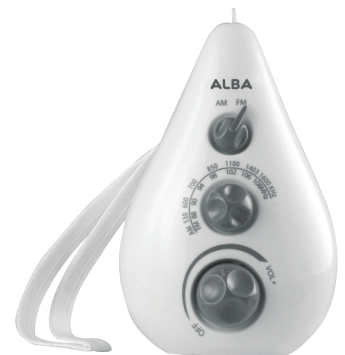


⚠ Important safety information

Your FM Shower Radio should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product has been designed and tested to meet the IPX4 standard and is safe to use in a Shower Environment where it is likely to be splashed with water. It has not been designed to be fully immersed in water as this will result in permanent damage to the product circuitry.
- **Do NOT** leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- **Do NOT** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- **Do NOT** store in dusty or dirty areas.
- **Do NOT** use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- **Do NOT** attempt to open the product. Unauthorised handling of the device may damage it and will void your warranty.
- Only use recommended batteries or those of the same equivalent type.
- **Do not** mix old and new batteries or batteries of different types
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove the batteries from the Radio if they will not be used for an extended period of time.
- Dispose of old batteries carefully
- Never throw batteries in a fire or attempt to open the outer casing
- Batteries are harmful if swallowed, so keep away from young children
- **CAUTION:** Danger of explosion if batteries are incorrectly replaced.
- **Do NOT** use your FM Shower Radio near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.

Your FM Shower Radio

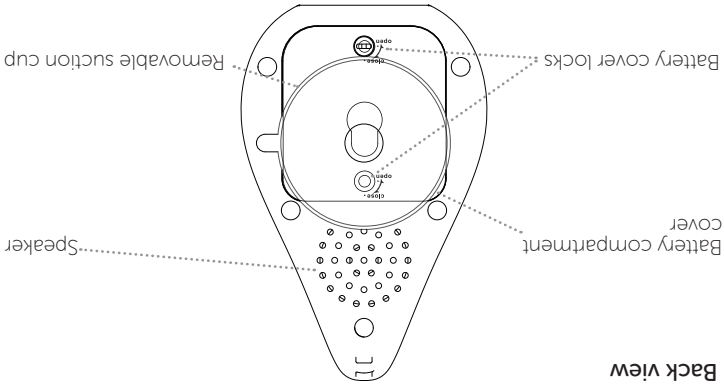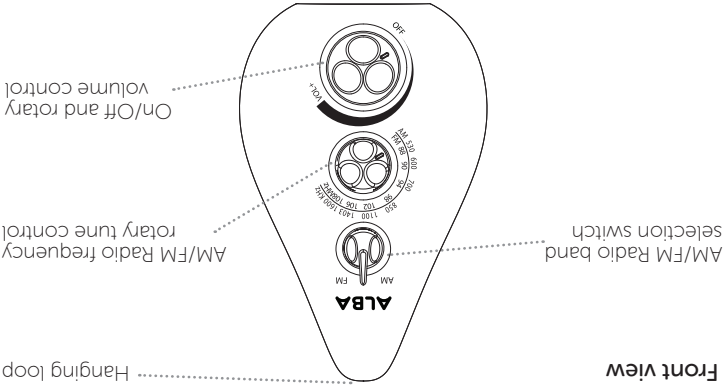

3 x AAA (also known as LR03) batteries required (not supplied)

Instructions for use

Check the package contents The package contains:

- 1 x FM Shower Radio
- 1 x Hanging loop
- 1 x Suction cup
- 1 x User manual

Setting up

1. Before installing the batteries (not supplied), please ensure that the Shower Radio is switched off. Turn the rotary volume control fully anti-clockwise until it 'clicks' into the 'OFF' position.

2. Insert 3 x AAA (also known as LR03) good quality batteries into the battery compartment on the back of the Shower radio, making sure to note the '+' and '-' markings and position the batteries the correct way around.

3. Fit the battery compartment cover, ensuring that the two 'keys' on the inside of the battery compartment cover, fit into the two 'keyholes' on the top and bottom of the battery compartment on the back of the shower radio.

4. Use a small flat bladed screwdriver to turn the two battery cover locks clockwise to the 'close' position. Check that the cover locks have tightened into place. The battery cover should now be fitted securely to the shower radio.

5. Choose whether to hang up your radio, stand it on a shelf, or stick it to the wall in the shower, using the suction cup provided.

Fit the suction cup into the keyway on the battery compartment cover and slide upwards to lock into place.

Note: The suction cup will only stick to a clean flat surface, such as glass or a large tile. Please wet the suction cup before attempting to stick it to your shower wall.

6. Your Shower radio is now ready for use.

Select the AM or FM band

1. Turn the AM/FM band switch to point to AM or FM, as appropriate.

Switch on

1. Turn the rotary volume control clockwise to switch the radio on.

Switch off

1. Turn the rotary volume control fully anti-clockwise until it 'clicks' into the 'OFF' position.

Adjusting the volume

Turn the rotary volume control clockwise to increase the volume and anti-clockwise to decrease the volume.

Tune to an AM or FM radio station

Turn the rotary tune control to tune to an AM or FM radio station.

3

Simple solutions

If you are experiencing problems with your Shower radio, there are some quick and easy checks that you can do, which may help to solve the problem.

Problem	Solution
No power:	- Low battery. Please change the batteries and ensure that you note the '+' and '-' markings and position the batteries the correct way around.
No sound:	- Increase the volume. - The batteries may be exhausted. Please change the batteries.

Changing the batteries

1. If the suction cup is fitted, please remove this by sliding downwards and out of the keyway on the back of the battery compartment cover.

2. Ensure that the Shower Radio is switched off. Turn the rotary volume control fully anti-clockwise until it 'clicks' into the 'OFF' position.

3. Use a small flat bladed screwdriver to turn the two battery cover locks anti-clockwise to the 'open' position. Remove the battery compartment cover.

4. Remove the 3 x AAA batteries and dispose of them appropriately at your local recycling facility.

5. Insert 3 x AAA (also known as LR03) good quality batteries into the battery compartment, making sure to note the '+' and '-' markings and position the batteries the correct way around.

6. Fit the battery compartment cover, ensuring that the two 'keys' on the inside of the battery compartment cover, fit into the two 'keyholes' on the top and bottom of the battery compartment on the back of the shower radio.

7. Use a small flat bladed screwdriver to turn the two battery cover locks clockwise to the 'close' position. Check that the cover locks have tightened into place. The battery cover should now be fitted securely to the shower radio.

8. If you use the suction cup with your shower radio, re-fit the suction cup into the keyway on the battery compartment cover and slide upwards to lock into place.

9. Your shower radio is now ready for use again.


4

General Information

Audio output:	1W RMS
Power requirement:	3 x AAA (LR03) batteries (not supplied)
Water resistance level:	IPX4 (protected against splashing water)

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

This symbol  indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing.

5

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of:



year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.,
489-499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

6