

Micro Hi-Fi MCS-512

Set up & Operating Instructions - Please keep for future reference

332/8978

BUSH

Real Life Technology



Important - Please read these instructions fully before using your product

These instructions contain important information which will help you get the very best from your Micro Hi-Fi and ensure safe and correct set up and operation.

Micro Hi-Fi


Contents

Important safety information...	3	Random	11
Instructions for use.....	5	Programmed play mode	11
Check the package contents .	5	A-B music sample	12
Where to put your Hi-Fi	5	Remove the CD.....	12
Setting up.....	5	Caring for compact discs ...	13
Using your Micro Hi-Fi.....	6	USB mode	13
Switch on	6	USB mode controls	13
Switch off	6	Using the FM radio	14
Change the mode	6	Wire FM aerial	14
Adjusting the volume.....	6	FM radio mode	14
Mute	6	Tuning to an FM station	14
Equalizer	7	Store an FM station preset ..	15
Adjust the bass setting	7	Tune to an FM station preset	15
Adjust the treble setting	7	Bluetooth mode	16
Loudness	7	Connecting or 'Pairing'	16
Using headphones	7	Listening to Music/Audio ...	16
Your Micro Hi-Fi.....	8	Line in mode	17
Using the CD Player	10	Line in	17
CD mode.....	10	Audio out	17
Play a CD.....	10	Troubleshooting	18
CD controls	10	General information	21
Play	10	Guarantee	22
Pause	10		
Next track	11		
Previous track	11		
Fast forward/Fast Backward .	11		
Intro	11		
Repeat	11		

Important safety information

Your Micro Hi-Fi should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do NOT** leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- **Do NOT** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- **Do NOT** block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- **Do NOT** store in dusty or dirty areas.
- Disconnect your Hi-Fi from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Hi-Fi, before you change or disconnect the power supply.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

- **Do NOT** attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- **Do NOT** use your Hi-Fi near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.
- **Do NOT** use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
-  **This is a CLASS-1 laser product.** Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure. **Do NOT** open the cover and **do NOT** repair yourself. Refer servicing to qualified personnel.
- **CAUTION:** Never touch or look into the optical lens within the CD compartment.
- **Do NOT** place foreign objects into the CD compartment.
- The underneath and sides of this product may become warm after a long period of use. This is normal.
- If the Hi-Fi will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged.
- Only use recommended batteries or those of the same equivalent type.
- Do not mix old and new batteries or batteries of different types.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove the batteries from the Remote Control if they will not be used for an extended period of time.
- Do not attempt to recharge non-rechargeable batteries.
- Dispose of old batteries carefully.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- **CAUTION:** Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Instructions for use

Check the package contents

The package contains:

- 1 x Micro Hi-Fi with attached mains power lead and plug
- 2 x speakers
- 1 x remote control
- 1 x FM radio wire aerial
- 2 x audio cables
- 1 x Instruction manual

Where to put your Micro Hi-Fi

It is important that you consider carefully in advance where your Hi-Fi will be situated and make sure that it is:

- * on a flat and stable surface

Note: Never place your Hi-Fi directly onto antique or polished surfaces.


- * within 1 metre of a power socket. Please ensure that the mains power lead is not a trip hazard.
- * at least 1 metre away from other electrical appliances to avoid interference
- * where you can fully extend the wire radio aerial
- * away from bright sunlight or heat sources, such as a radiator
- * not in a humid or very damp place such as a bathroom

Setting up

1. Plug the speakers into the left and right speaker sockets on the back of the Hi-Fi.
2. Unwind the FM radio aerial and plug into FM Antenna socket on the back of the Hi-Fi. Extend the wire aerial in a vertical position to receive the best radio reception.
3. Remove the cable tie from the mains power lead and extend it to its full length.
4. Remove the battery cover from the back of the remote control and insert 2 x AAA batteries (not supplied), into the remote control, noting the '+' and '-' markings and position the batteries the correct way around. Replace the battery cover, making sure it 'clicks' shut.
5. Plug the mains power plug into the mains power wall socket and switch on. The red power LED to the left of the display will switch on.

Using your Micro Hi-Fi


Switch on

Press and release the power button  to the left of the display on the Micro Hi-Fi or on the remote control.

The red power LED to the left of the display will switch off.

Your Micro Hi-Fi will power on in CD mode and 'HELLO', followed by 'LOAD' and then 'NO Cd' will be displayed.

Switch off

Press and release the power button  to the left of the display on the Micro Hi-Fi or on the remote control.

'OFF' will be displayed and the red power LED to the left of the display will switch off.

To completely power off the Micro Hi-Fi, switch off the mains power at the wall socket.

Change the mode

Press and release the 'Mode' button on front of the Micro Hi-Fi or on the remote control to change modes. CD/FM Radio/Line in and Bluetooth are available. Please check the display, which will confirm the mode.

Adjusting the volume

Turn the rotary volume control on the front of the Micro Hi-Fi, anti-clockwise to decrease the volume and clockwise to increase the volume.

You can also use the 'Vol-' or 'Vol+' buttons on the remote control to decrease or increase the volume.

When you adjust the volume, please check the display which will confirm the volume setting.

Mute

Press and release the 'Mute' button on the remote control to turn the sound off.

Press and release the 'Mute' button to turn the sound on again.

Note: The mute function will be cancelled automatically if you use the rotary volume control on the Micro Hi-Fi or press the 'Vol+' or 'Vol-' buttons on the remote control.

Equalizer or EQ setting

You can change the sound of your Micro Hi-Fi, using the EQ setting, there are 4 options and EQ off available (Rock, Classic, Pop, Jazz and Off).

Press and release the 'EQ' button on the remote control to display and change the EQ setting.

Adjust the bass setting

Use the 'Bass +' or 'Bass -' buttons on the remote control to adjust the bass setting. When you adjust the bass, please check the display, which will confirm the setting.

Press and release the 'Reset' button on the remote control to reset the Micro Hi-Fi Bass and Treble settings.

Adjust the treble setting

Use the 'Treble +' or 'Treble -' buttons on the remote control to adjust the treble setting. When you adjust the treble, please check the display, which will confirm the setting.

Press and release the 'Reset' button on the remote control to reset the Micro Hi-Fi Bass and Treble settings.

Loudness

Press and release the 'Loudness' button on the remote control to enhance the bass level.

Press and release the 'Loudness' button again to turn the loudness function off.

Using headphones


You can connect headphones with a 3.5mm plug (not included) to your Micro Hi-Fi. The headphone socket can be found on the front of the Micro Hi-Fi of the left hand side.

When you have headphones connected the Micro Hi-Fi speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.

Your Micro Hi-Fi

Remote control:

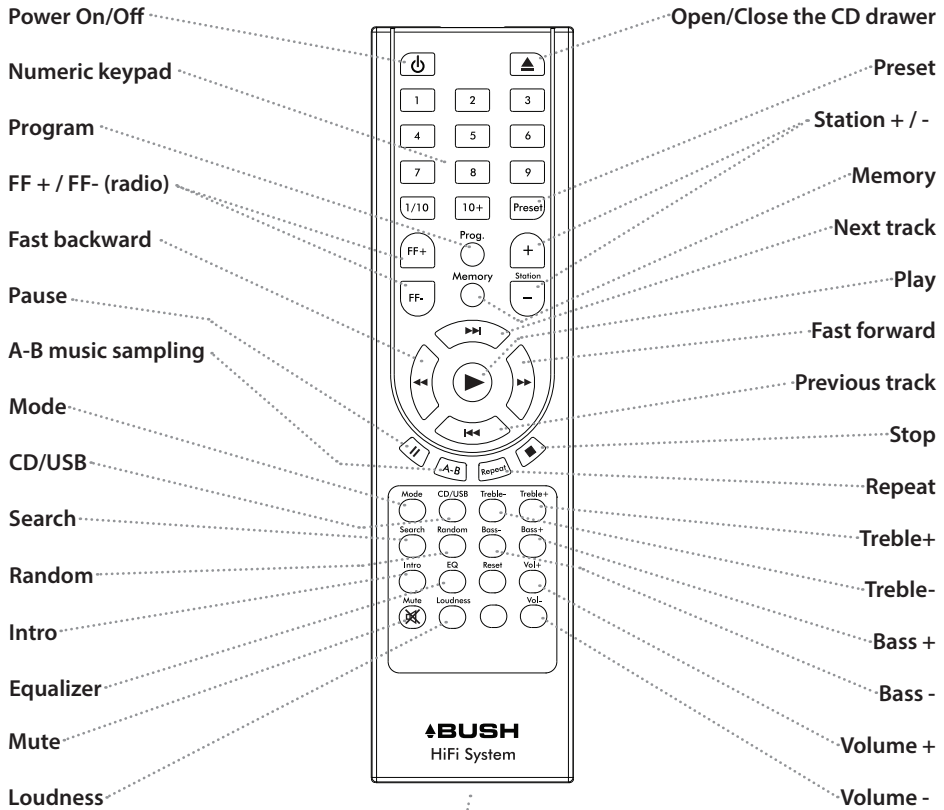

Battery compartment (at rear)
2 x AAA batteries required (not supplied)

Note:

The remote signal may not be received if there is an obstacle between the remote and the Micro Hi-Fi. Direct sunlight or other bright light sources shining on the remote sensor, may affect the performance of the remote control.

Using the CD Player

CD mode

Check that your Micro Hi-Fi is in CD mode. If you are not already in CD mode, briefly press and release the 'Mode' button on the front of the Micro Hi-Fi or on the remote control, until you are in CD mode (check the display). 'LOAD' and then 'NO Cd' will be displayed.

Note: If there is already a CD in the CD drawer, 'LOAD' will be displayed and then after a short delay the audio CD will begin to play.

Play a CD

Your Micro Hi-Fi will play Audio CDs as well as the following CD types:

CD-Recordable (CD-R)

CD-Rewritable (CD-RW)

Note: It is not possible to play DVD or computer CDs on your Micro Hi-Fi.

1. Press and release the ▲ button on the front of the Micro Hi-Fi to the right of the CD tray, or on the remote control, to open the CD drawer. 'OPEN' is displayed.
2. Place an audio CD, label side facing up, into the CD tray.

3. Press and release the ▲ button on the front of the Micro Hi-Fi or on the remote control, to close the CD drawer.

'CLOSE', followed by 'LOAD' will be displayed and then after a few moments the first track will begin to play.

The track number and the elapsed time for the track will be displayed.

CD controls

You can use the following controls on your Micro Hi-Fi and on your remote control in CD mode.

Play

Press and release the ►|| button on the Micro Hi-Fi or the ► on the remote control. The first track will begin to play and each track number will be displayed as it is played.

Pause

Press and release the ►|| button on the Micro Hi-Fi or the || button on the remote control. The CD will continue to rotate in pause mode. Press and release the ►|| or || button again to continue to play the track/CD.

Next track:

Press and release the ►► button on the Micro Hi-Fi or on the remote control.

Previous track:

Press and release the ◀◀ button on the Micro Hi-Fi or on the remote control.

Fast forward/Fast backward within a track:

Your Micro Hi-Fi has 5 different speed options for Fast forward or Fast Backward within a track. These are 2x, 4x, 8x, 16x and 32x.

For each press and release of the Fast Forward ►► or Fast Backward ◀◀ button on the remote control, the speed will be displayed. E.g. FF 2, 4, 8, 16, 32.

Press and release the ► button again to play the track at normal speed or press and release ►► or ◀◀ one more time when 32 is displayed.

Intro feature

When the CD is playing, press and release the 'Intro' button on the remote control. 'INtr ON' will be displayed.

The first 10 seconds of each track will now be played.

Press and release the 'Intro' button again to turn this feature off. 'INtr OFF' will be displayed.

Repeat

Press and release the 'Repeat' button on the remote control. 'rEP ONE' is displayed and the current track will be repeated.

Press and release the 'Repeat' button again to repeat all of the tracks on the CD. 'rEP ALL' is displayed.

Continuously press and release the 'Repeat' button on the remote control to cycle through the available options of Repeat (current track), Repeat all (all the tracks on the CD) or Repeat off.

Random

Press and release the 'Random' button on the remote control. 'rAN ON' will be displayed and the tracks on the CD will be played in a random order.

Press and release the 'Random' button again to turn this feature off. 'rAN OFF' will be displayed.

Programmed play mode

In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 9 tracks in total.

Note: To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. Press and release the 'Prog' button on the remote control. PrOG will be briefly displayed, followed by 'P--C--'.
2. Use the numeric keypad on the remote control to enter the track number that you would like to program to play first. E.g. If you would like track number 8 to play first, press and release the number 8 on the remote control. 'P01C08' will then be displayed.
3. Continue to enter each track number, one after the other, in the order you would like them to play, up to a total of 9 tracks.
4. Press and release the ► button to play the programmed tracks or if you wait for a short while they will begin to play automatically.
5. To exit programmed play mode, press and release the ■ button twice.

A-B music sample

You can use the 'A-B' button on the remote control to select a music sample for repeat playing within a music track.

1. With the music track playing, press and release the 'A-B' button on the remote control at the beginning of the section of music that you'd like to repeat play. 'A-' will be displayed.
2. At the end of the section of music that you'd like to repeat play, press and release the 'A-B' button again. 'A-b' will now be displayed and the selected section of music will now continuously repeat play.
3. Press and release the 'A-B' button again to turn off this feature and listen to the rest of the music track/CD.

Remove the CD

1. Press and release the ▲ button on the front of the Micro Hi-Fi to the right of the CD tray, or on the remote control, to open the CD drawer. 'OPEN' is displayed.
2. Put your fingers around the outside edge of the CD and lift off the tray to remove the CD.
3. Press and release the ▲ button on the front of the Micro Hi-Fi or on the remote control, to close the CD drawer. 'CLOSE', followed by 'LOAD' will be displayed..

Note: If you stop or pause playing a CD for 15 minutes, your Hi-Fi will go to Standby mode automatically.

Caring for compact discs

- **Do NOT** touch the playback side of the CD.
- **Do NOT** attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

USB mode

Note: USB mode is accessed from CD mode. Please make sure that you are in CD mode. If there is a CD in the CD tray, please make sure that this is stopped before following the steps below to use USB mode.

1. Plug a USB stick containing music files into the USB port on the front of your Micro Hi-Fi.
2. Press and release the 'CD/USB' button on the remote control. 'USB' will be displayed.
3. The music tracks on your USB stick will begin to play.

USB mode controls

You can use the following controls in USB mode:

Volume +/-

Play

Pause

Next track

Previous track

Fast forward

Fast backward

Repeat

A-B music sample

Stop

Note: Before disconnecting the USB stick, press the 'Mode' button on the front of the Micro Hi-Fi or on the remote control.

Using the FM radio

Wire FM aerial

Please make sure that the FM wire aerial on the back of the Micro Hi-Fi is fully extended before you attempt to tune to an FM station. This will ensure that the maximum signal strength is available when the Hi-Fi begins to scan. Extending the aerial also ensures the best possible sound quality.

FM Radio mode

Check that your Hi-Fi is in FM radio mode. If you are not already in FM mode, briefly press and release the 'Mode' button on the front of the Micro Hi-Fi or on the remote control, until you are in FM mode (check the display). 'tUNER' will be displayed, followed by a radio frequency e.g. 87.50MHz.

Tuning to an FM station

In FM radio mode:

1. Press and release the 'Search' button on the remote control. You will see the frequency change in the display as the Micro Hi-Fi starts to scan for stations.
2. Your Micro Hi-Fi will automatically store the stations found into its 40 radio presets.
3. Press and release the 'Station +' or 'Station -' button on the remote control to move to each preset location. When the radio station frequency that you would like to listen to displayed, wait a few seconds and your Micro Hi-Fi will tune to that station and begin to play.
4. To fine tune a radio frequency press and release the 'FF+' or 'FF-' buttons on the remote control.

Note: If reception is still poor adjust the position of the wire aerial or try moving the Micro Hi-Fi to another location.

Store an FM station preset

When you search for stations on your Micro Hi-Fi (see Tuning to an FM station on page 14), your Micro Hi-Fi will automatically store each station found into its preset memories. A total of 40 preset locations are available.

You can manually store an FM radio station into a preset memory location.

1. Tune the Hi-Fi to the radio station that you wish to preset
2. Press and release the 'Memory' button on the remote control.
3. Using the numeric keypad on the remote control, enter the number of the preset location that you would like to store the station to.
4. Press and release the ► button on the remote control to confirm. Your radio station will now be stored to that preset location.

Tune to an FM station preset

In FM radio mode:

1. Briefly press and release the 'Preset' button on the remote control twice. 'CH--' is displayed.
2. Use the numeric keypad on the remote control to enter the preset location that you would like to go to, e.g. 02.

The Micro Hi-Fi will tune to that preset location and station and begin to play.

Note: Alternatively, you can repeatedly press and release the 'Station +' or 'Station -' button on the remote control to move quickly through the preset locations. When the radio station frequency that you would like to listen to displayed, wait a few seconds and your Micro Hi-Fi will tune to that station and begin to play.

Bluetooth mode

Bluetooth (BT) mode

Check that your Micro Hi-Fi is in Bluetooth mode. If you are not already in BT mode, briefly press and release the 'Mode' button on the front of the Micro Hi-Fi or on the remote control, until you are in BT mode (check the display).

'bLUE-t' will be displayed and a blue LED will flash if a device has not been 'paired' or connected with your Hi-Fi.

Connecting or 'Pairing' with your Hi-Fi

In Bluetooth (BT) Mode:

1. 'bLUE-t' will flash in the display.
2. On the device that you would like to connect to your Micro Hi-Fi via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Hi-Fi will be displayed as 'BUSH Audio'. Select the device name to begin pairing.

5. Your Hi-Fi will give an audible 'Beep' when it has discovered a Bluetooth device. When pairing is complete 'bLUE-t' will stop flashing in the display and will remain constantly on.

6. Now that you have paired your device with the Bluetooth speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.

7. Your device will remain paired with the Hi-Fi unless you decide to disconnect or 'unpair' it.

Note: If your device should become unpaired for any reason, follow the steps above to 'pair' it again.

Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Micro Hi-Fi speakers. Adjust the volume on the connected device and/or your Hi-Fi.

Line in mode

Line in mode

Check that your Micro Hi-Fi is in Line in mode. If you are not already in Line in mode, briefly press and release the 'Mode' button on the front of the Micro Hi-Fi or on the remote control, until you are in Line in mode (check the display). 'LINE IN' will be displayed,

Line in

1. Using the audio cables supplied, you can connect an external audio device to the Line in sockets on the back of the Micro Hi-Fi. (White = Left speaker and Red = Right speaker).
2. Press the 'Play' button on your external device to start playback through the Micro Hi-Fi speakers.
3. To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Micro Hi-Fi.

Audio out

1. Using the audio cables supplied, you can connect to an external audio system. Plug the cables into the Audio out sockets on the back of the Micro Hi-Fi. (White = Left speaker and Red = Right speaker).
2. Connect the other end of the audio cables to your secondary device or sound system.
3. Start the music on your Micro Hi-Fi, it should now play through your secondary device or sound system.
4. To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Micro Hi-Fi.

Note: It is recommended that you unplug the Audio cables from the Line in or Audio out sockets after you have finished using them.

Troubleshooting

If you are experiencing problems with your Micro Hi-Fi, there are some quick and easy checks that you can do, which may help to solve the problem.


Problem	Solution
No sound / power:	<ul style="list-style-type: none">- If using mains power, check that the mains power wall socket is switched on and that you are not in standby mode.- Adjust the volume using the rotary control on the right hand side of the Hi-Fi or the 'Vol-' or 'Vol+' buttons on the remote control.- You may have headphones connected. Either use the headphones to listen to your Micro Hi-Fi or unplug the headphones.- Check that you are trying to use the function buttons for the mode that you are in.- If you are using a Bluetooth connected device or an external sound source via Line in. Increase the volume on the secondary device and on the Micro Hi-Fi.
Radio reception is poor:	<ul style="list-style-type: none">- Check the wire aerial connection on the back of your Micro Hi-Fi and fully extend the aerial to get the best reception and sound quality.- Retune the radio station/s, see page 14.- Try moving your Hi-Fi to another location to see if reception improves.- Check that you do not have other electrical equipment too close to your Micro Hi-Fi, causing interference.

Problem	Solution
The function buttons do not respond:	<ul style="list-style-type: none"> - Check that mains power wall socket is switched on and that the Micro Hi-Fi is not in standby mode. - Check that you are trying to use the function buttons for the mode that you are in. - If you are using mains power, unplug the mains power. Leave the Micro Hi-Fi for 3 minutes and then reconnect the power.
CD does not play:	<ul style="list-style-type: none"> - Check that you are in CD mode. If you are not already in CD mode, briefly press and release the 'Mode' button on the front of the Micro Hi-Fi or on the remote control, until you are in CD mode (check the display). - Check that the CD in the CD tray is the right way up (label side up). - Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Hi-Fi or may skip or not rotate correctly. - Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

Problem	Solution
Unable to pair with a Bluetooth device:	<ul style="list-style-type: none"> - Check that you are in Bluetooth mode. If you are not already in BT mode, briefly press and release the 'Mode' button on the front of the Micro Hi-Fi or on the remote control, until you are in BT mode (check the display). - Ensure that you are within range of the Micro Hi-Fi for Bluetooth functionality (less than 10 metres, line of sight). - Move the Hi-Fi and Bluetooth device away from other Bluetooth devices/electrical equipment. - If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.
Line in function failure	<ul style="list-style-type: none"> - Check that you are in the correct mode for the connected external device or sound system. Press and release the 'Mode' button on the front of the Micro Hi-Fi or on the remote control, until you are in Line in mode (check the display). - Check that you have connected the audio cables supplied to the correct sockets on the back of the Micro Hi-Fi (Line in or Audio out, as appropriate).
Remote control no longer works	<ul style="list-style-type: none"> - Ensure that you are in range of the Micro Hi-Fi when you use the Remote control and +/- 30 degrees. - The batteries may be exhausted. Please replace the 2 x AAA remote batteries.


General information



This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.



This symbol  indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of:



year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.,
489-499 Avebury Boulevard
Central Milton Keynes
MK9 2NW



CE

Nov 14/Issue: 1