## Merrick Chair


Assembly Instructions - Please keep for future reference

355 / 2672

357 / 7468

339 / 0982

339 / 0425

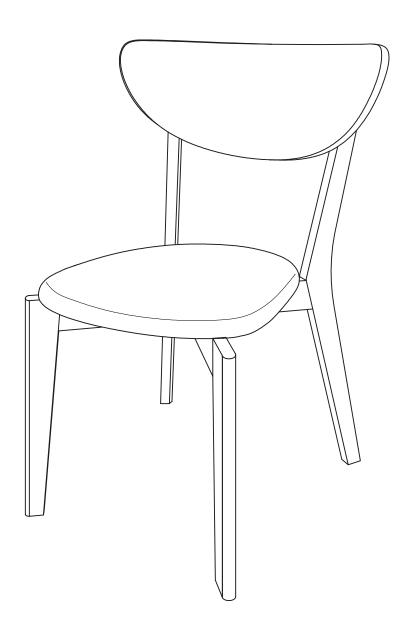

#### **Dimensions**

Width - 48cm

Depth - 52cm

Height - 79.5cm

### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the page 2 & 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

The maximum safe weight of user: 110kg.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This produt should not be discarded with household waste. Take to your local authority waste disposal centre.

#### **Handy Hints**


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the Customer Helpline: 0345 6400800


### Please check you have all the panels listed below

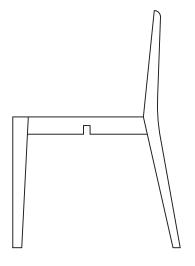

Left Side Frame x 1 (52 x 74cm)

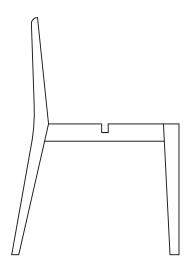


Right Side Frame x 1 (52 x 74cm)

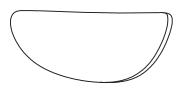 


3 Top Rest x 1 (19.5 x 51cm)



4 Cushion Seat x 1 (41 x 43.5cm)

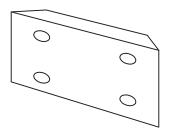

5 Left Corner Block x 1 (5.5 x 12cm)

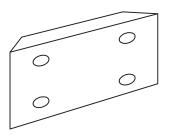


6 Right Corner Block x 1 (5.5 x 12cm)





## Components - Fittings
 
### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly for one chair. In some cases more fittings may be supplied than are required.

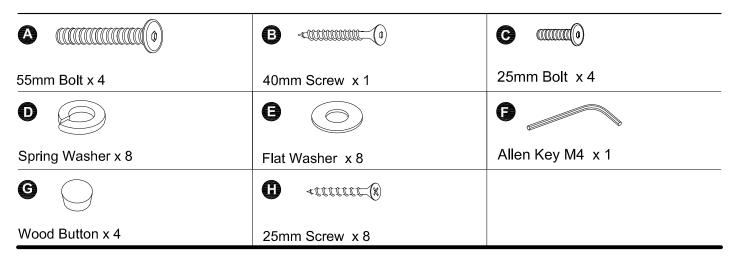

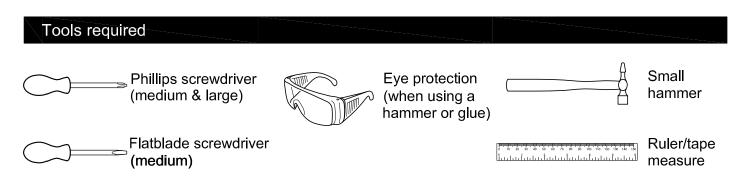




### Step 1

Fitting the Side Frame

Crossover the Left Side Frame 1 into Right Side Frame 2

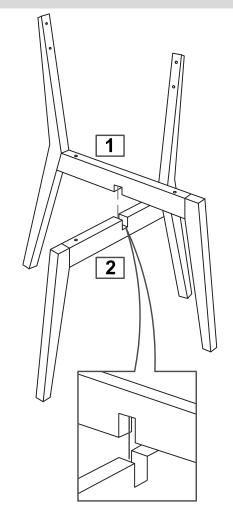


## Step 2

Fitting the Top Rest

Note: It would be useful to ask someone to help you at this stage.

- a: Use Bolt @ ,Spring Washer **①**,Flat Washer (a) with the Allen Key (b) to fix the Top Rest 3
- **b:** Insert Wood Button **G** into the holes.

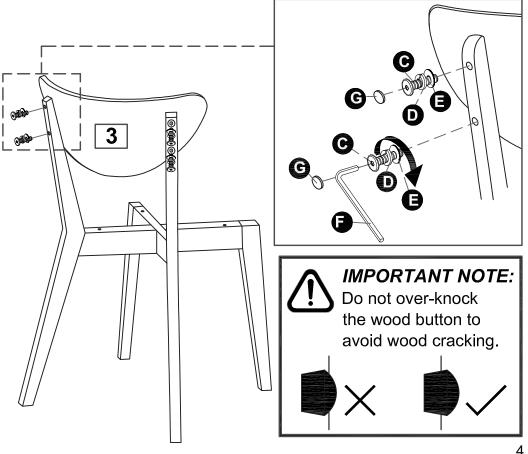


### Step 3

Fitting the Seat Cushion

Use Bolt , Spring Washer , Flat Washer with the allen key to fix the seat cushion onto the unit.

Fully tighten all screws now.

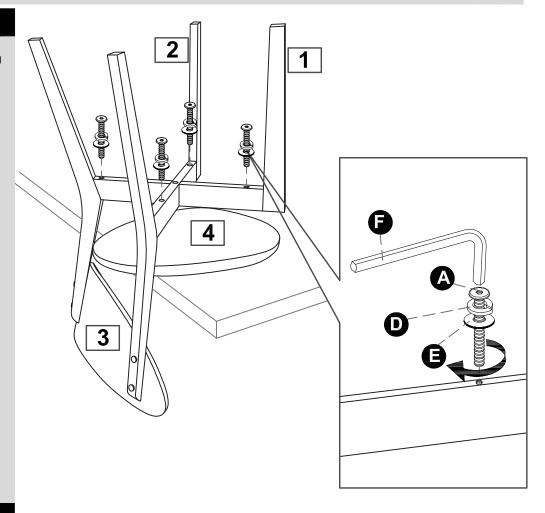


## Step 4

Fitting the Crossover Side Frame

Use Screw , with the Allen Key to fix Cushion Seat onto the unit.

Fully tighten all screws now.

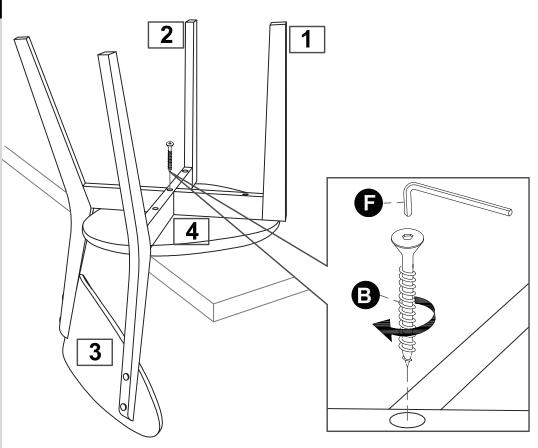

### Step 5


Fitting the Corner Block

**Note:** It would be useful to ask someone to help you at this stage.

a: Use Screw to fix the Corner Block 5 onto the unit.

**b:** Use Screw **(1)** to fix the Corner Block **(6)** onto the unit.

Fully tighten all screws now.

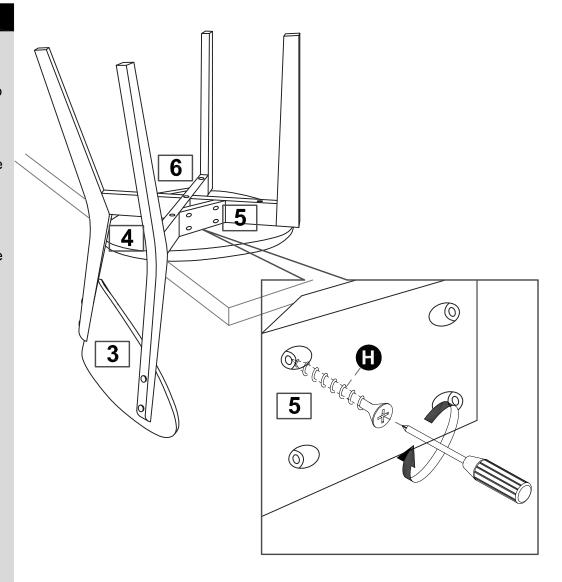

### Step 6

#### Finishing the unit

**Note:** Before use always make sure the unit is secure.


**Note:** The maximum safe weight of user: 110kg.



#### Warning:

- •Do not stand on this chair. Do not use this chair as a step ladder.
- •Use this product only for seating one person at a time.
- •Do not use this chair unless all bolts, screws and knobs are firmly secured.
- •At least every 4 months, check all bolts, screws and knobs, to be sure they are tight.
- If parts are missing, broken or damaged or worn, stop use of this product until repairs are made & using factory authorized parts.
- Failure to follow these warnings could result in serious injury.

Assembly is complete.

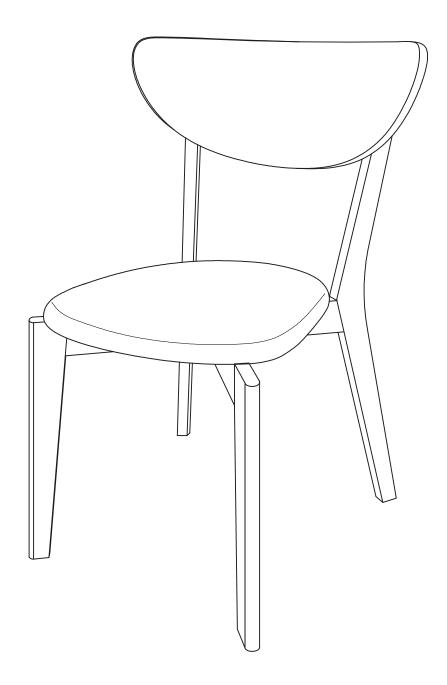

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 6400800