

## FOLDING TABLE - CAMPING ITEM

# IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

### PRODUCT INFORMATION:

- ~ Lightweight folding table intended for camping use only.
- ~ The maximum load weight for this item is 30 kg.
- ~ Regularly check all fastenings or fixings to ensure that they are properly tightened or secured.

CAT NO.: 340/0298 (D)

Made in China for:

Argos, MK9 2NW, U.K.




### ASSEMBLY INSTRUCTIONS - IMPORTANT READ BEFORE USE

- ~ Assembly to be carried out by a competent adult only.
- ~ During assembly children should be kept away from the product due to possible risk of injury.
- ~ Do not use this item if any components are missing or damaged.
- ~ Plastic bags can be dangerous. To avoid danger of suffocation please keep plastic bags away from babies and children.

LOCKING PIN (2)

LOCKING HOOK (2)

HINGE MECHANISM (4)

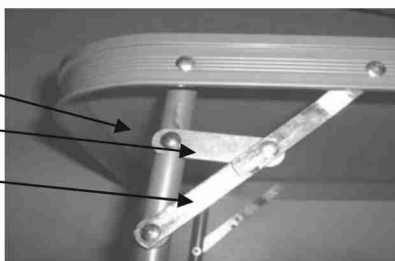

### Assembly - Unfolding for Use:

- 1 Place table top on flat firm surface with underside face up, taking care not to scratch top surface.
- 2 Unfold legs on both sides taking care not to trap or pinch fingers.
- 3 Position locking hook (attached to unfolding hinge) so that it will catch the pin attached to the leg. Repeat on the other side.
- 4 When locking hook is in correct position (see picture), ensure legs are in fully extended position on both sides and that the four hinge mechanisms are straight (see picture).
- 5 Turn table right side up and re-check that both sets of legs are in fully locked position. Test by placing table on flat firm surface and press down gently on the table top - check that all four hinges and the two locking hooks are fully locked.
- 6 Always ensure that the item is fully erected in its intended position before use, and that all parts are locked in place. Always use on a flat firm surface.
- 7 Care must be taken when opening or closing the item to ensure that you do not trap or pinch your fingers.

### Folding after Use:

- 1 Place table top on flat firm surface with underside face up, taking care not to scratch top surface.
- 2 Unhook locking hook from pin on both sides.
- 3 Open hinge mechanism on all four legs outwards, away from the table top.
- 4 Fold narrower set of legs flat toward the underside of table top. Fold wider set second.
- 5 Ensure locking hooks are not protruding from the table, by turning inward toward the table.
- 6 Store indoors.

### CARE INSTRUCTIONS - IMPORTANT READ BEFORE USE

- ~ Clean the product with mild soap and water, rinse thoroughly. Dry completely. Do not use bleach, acid or solvents on the item. Store indoors when not in use.

### WARNING - IMPORTANT READ BEFORE USE

- ~ To be used under adult supervision only.
- ~ Do not sit or stand on the table or allow children to play on or around the item.

21.0x28.5cm