



**Swan**  
designed for life

# Retro Larder Fridge

**Installation and User Guide**

For model: **SR11030** (all colours)

Swan Service Helpline

**0845 610 4118**





# Table of Contents

---

**3. Your Refrigerator**

**4. Important Safeguards**

**5 - 6. Installation Notes**

**6. Under Counter Installation**

**8. First time use**

**9. Food Storage Tips**

**10. Cleaning & Maintenance**

**11. Troubleshooting**

**12. Service & Spares, Specification**

**14. Warranty**

 


# Your Refrigerator



## CHANGING THE BULB

1. Turn off the refrigerator and disconnect the plug from the outlet.
2. Using a Phillips screwdriver to remove the bulb lens
3. Remove the old bulb by turning it counterclockwise.
4. Replace a new bulb (10W) clockwise making sure you have correctly positioned the bulb.
5. Replace the light cover in original location and click to put in place.
6. Reconnect the refrigerator to the electrical outlet and switch on.

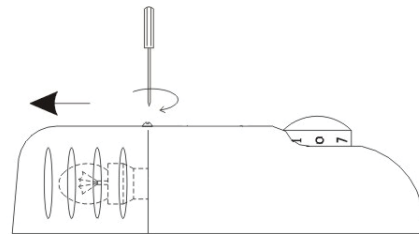



# Important Safeguards

- Do not connect your appliance to the electricity supply until all packing and transit protectors have been removed.

- Leave to stand upright for at least 4 hours before switching on to allow compressor oil to settle

- This fridge/freezer must only be used for its intended purpose i.e the storing and freezing of edible foodstuff.

- Do not dispose of the appliance on a fire. Your appliance contains non CFC/HFC natural substances in the cooling system and in the insulation, which are potentially flammable if exposed to fire. Therefore, take care not to damage, the cooling circuit or pipes of the appliance in transportation and in use. In case of damage do not expose the appliance to fire or potential ignition source and immediately ventilate the room where the appliance is situated.

- We suggest you contact your local authority for disposal information and facilities available.

- See installation section for information on suitable location.

- On delivery, check to make sure that the product is not damaged and that all the parts and accessories are in perfect condition.

- Ensure that the plug remains readily accessible. Do not use multiple adaptor or extension cables.

- Failure to observe these instructions may invalidate your right to free service during the guarantee period.

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

**WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

**WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

**WARNING:** Do not damage the refrigerant circuit.

**WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- We suggest you keep these instructions in a safe place for easy reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- The plug must be accessible after the installation.

- Children should be supervised to ensure that they do not play with the appliance.

 
 
**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility company

**This appliance should only be connected to an earthed, switched mains socket. Do not use an extension cord with this appliance**





# Installation Notes


It is important that upon receipt you stand your appliance upright for at least 4 hours before switching on to allow the system to settle. Please note that the door cannot be reversed on this product.

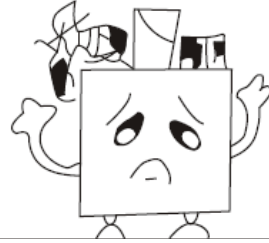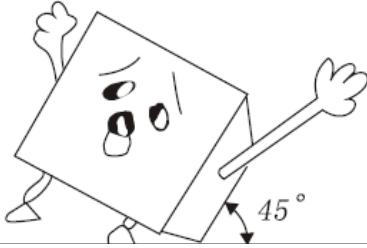

  1. The appliance should not be tilted more than 45 degrees when you move it. Do not use force on any part such as the condenser, the door or handle. They could distort and affect the operation of the refrigerator. Ensure ALL packaging is removed before installation

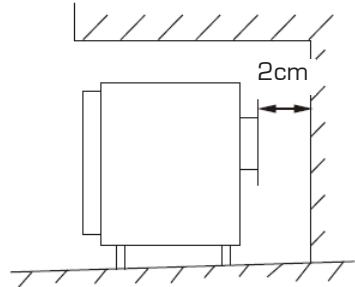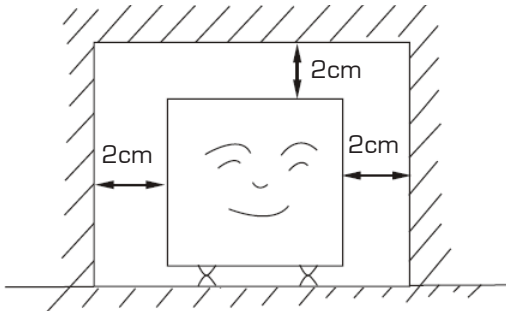

 2. Make sure there is enough ventilation space around refrigerator.

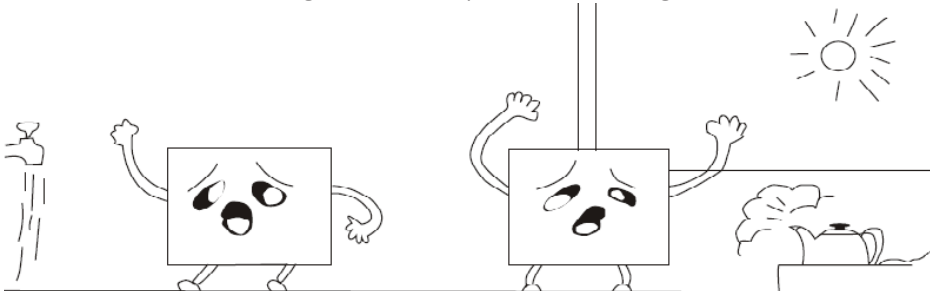


3. The appliance should not be installed near external heat sources eg direct sunshine - or external moisture sources.

**Swan**  
designed for life





## Installation Notes

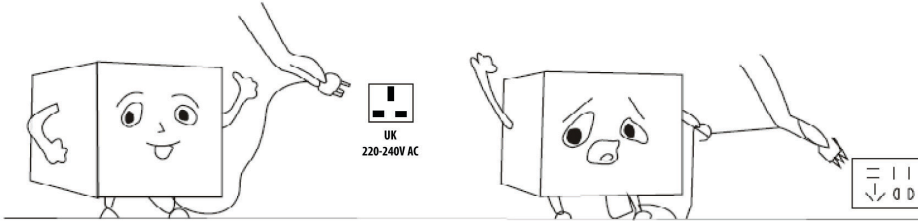 



4. Ensure the supply voltage of socket is same as rating label.
5. The plug must be properly inserted to the wall socket.
6. **The mains supply socket must be earthed - preferably with a switch. If it is not earthed, do NOT install this appliance there. Do not use an extension cord**
7. The product is equipped with adjustable feet. Once the product is in place, adjust these to ensure the fridge is level and doesn't rock.

DO NOT SITE THE PRODUCT WHERE THE AMBIENT TEMPERATURE IS LIKELY TO DROP BELOW 5 DEGREES CENTIGRADE - EG: GARAGE OR SHED



## Under Counter Installation

  
If the refrigerator is to be installed in an under counter position, the top cover will most likely need to be removed. Proceed as follows:

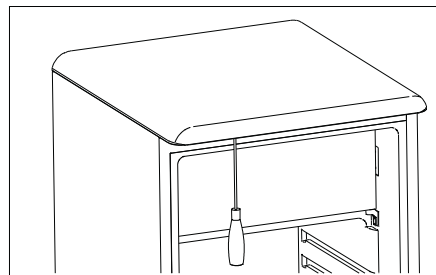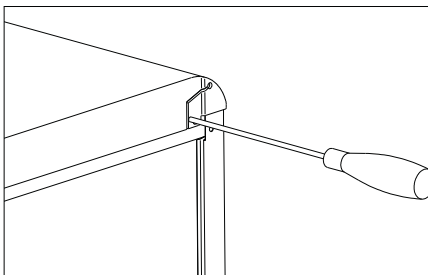


1. Remove the two screws to the rear of the refrigerator, then the three screws from the front underside.




## Under Counter Installation

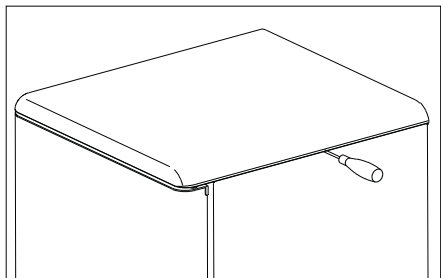 

 2. Carefully pry the top panel free as shown here, taking care not to damage it.

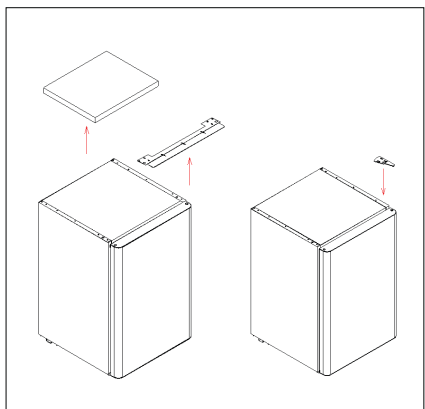

 3. Fit the decorative parts (provided) as shown here.

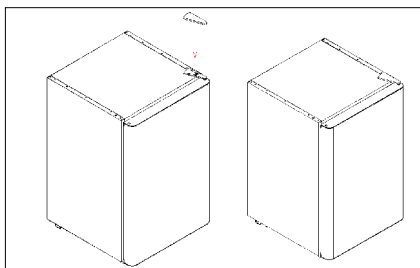

**Notes :** The height of the fridge is around 86 cm after removal of the top panel. Please store the removed top and screws in a safe place in case they are needed again in the future.





## Refitting the Top Panel

Re-fitting the top panel is a reversal of the removal procedure.

1. Remove the decorative parts
2. Refit the lid panel and refit the screws

**NOTE:** The top of the refrigerator is not designed to take heavy weight. Please do not put heavy items on top of the refrigerator.



## First Time Use

1. It is important that upon receipt you stand your appliance upright for at least 4 hours before switching on to allow the system to settle

2. When using the refrigerator for the first time, set the thermostat inside the refrigerator to 5 without any food inside. When the refrigerator starts, you will hear the quiet hum of the compressor. You may also hear the circulation of liquids and gases in the refrigeration system. This is normal on first start up, Generally it will take 2-3 hours for the appliance to reach temperature. Once temperature has been reached then put the food inside.

3. The temperature of the refrigerator can be adjusted by rotating the disc of the thermostat. The higher the value on the setting of the thermostat, the maximum value of refrigeration (coldest being 7 ). Typically a medium setting of 4-5 is best for most circumstances.

4. Do not put too much food in the refrigerator. Avoid opening the doors too frequently as this will waste energy and can cause excessive frost build-up.





# Food Storage Tips

## Dairy and multi-purpose Guard

- Store fatty foods, like butter and cheese.
- Store small, packed foods, like milk, yogurt and beverages.

## Refrigerator compartment: 1°C to 5°C

This is the area where the food should be stored to be kept cold/chilled:

- Note: raw and uncooked foods should always be wrapped
- pre-cooked chilled foods, such as ready meals, meat pies, soft cheeses.
- pre-cooked meats such as beef and ham,
- prepared salads (including pre-washed salad greens, rice, potato salad mixed cut and pre packaged, etc.).
- desserts, such as fresh cheese, cakes, homemade products, and leftovers

## Vegetable Drawer/Crisper

- This is the part of the refrigerator has higher humidity.
- Vegetables, fruit, fresh salads, unwashed lettuce, tomatoes, and radishes should be stored in this compartment.

## Wire Wine Rack

- For storing bottled liquids. Always ensure lids are air tight and sealed properly.

## Notes:

- Always place raw meat, fish and poultry on the lowest shelf of the refrigerator.
- Ensure that food is well-wrapped or covered before it is stored. This will prevent food from dehydrating, deteriorating in colour or losing flavour and will help maintain freshness. It will also prevent cross-flavouring.



# Cleaning & Maintenance

## DAILY CLEANING

The outside of your refrigerator can be cleaned using a soft cloth moistened with a mild detergent solution. Wipe dry with kitchen towel.

Do not use chemical or abrasive cleaners on any part of your refrigerator as these could permanently damage or discolour the surfaces.

## INTERNAL CLEANING

Wipe up any internal spills immediately with a soft cloth moistened with a mild detergent solution. Dry thoroughly.

## SHELVES AND GUARDS

The Dairy guards, and shelves can be removed and cleaned separately. However, we don't recommend cleaning the transparent plastic parts in a dishwasher because the high temperatures can dull the plastic over time.

## DOOR SEALS

Ensure that the door seals are kept free from debris at all times. If they don't seal properly this can waste energy and cause excessive ice build-up

## DRAIN HOLE AND CLEANING TOOL

There is a small drain hole at the back of the refrigerator cabinet. There is also a small cleaning tool in the hole. Use the tool to clear the drain hole when necessary. Do not allow foodstuff to clog this hole

## PERIODIC MAINTENANCE

From time to time, it may be necessary to perform more extensive cleaning to keep your refrigerator in top condition and to maintain energy efficiency.

Before performing any of these maintenance steps, switch off your refrigerator and remove the plug from the mains socket. Allow the freezer section to defrost thoroughly.

## EVAPORATOR TRAY

At the other side of the drain hole in the refrigerator cabinet, there is a small plastic tray that sits on top of the compressor. This should be removed and cleaned thoroughly from time to time to prevent unpleasant odours.

Take care when moving the refrigerator not to damage the cooling matrix or tilt the appliance more than 45 degrees.

After maintenance, replace any shelves etc and reconnect the appliance to the mains supply.





# Troubleshooting

## 1. If the refrigerator does not run:

Check the supply voltage is available at the socket and check that the power plug is correctly connected.

## 2. If the refrigerator does not become cold enough:

- a. is the thermostat is set too low? (setting 1 is warmest setting 7 is coldest)
- b. is there enough space around the refrigerator?
- c. is the door is opened too frequently or not closed properly? (check seals).
- d. is there direct sun shine on the appliance or are there heat sources nearby?
- e. is there too much food inside the compartment?
- f. is there dust and debris built up on cooling matrix or compressor?

## 3. Food is freezing or too cold in refrigerator compartment:

- a. There is too little food in the refrigerator
- b. Thermostat is set too high

## 4. If the refrigerator operates noisily:

- a. Check that the appliance is installed on a stable, level floor. Adjust the feet if necessary. The refrigerator is too near the wall
- b. The food stored in the refrigerator is not touching - particularly applies to bottles. The refrigerator creates very slight vibrations, which can be amplified greatly with touching bottles!

### Note:

During high relative humidity environment, condensation may occur on the surface of the refrigerator. This is not a malfunction. Simply clean the surface of condensation.

If the refrigerator is not working properly after all these checks, contact the service center without further delay.





## Service and Spares

---

If you experience any problems at all with your refrigerator or require spare parts, expert help is just a phone call away!

**0845 610 4118**

You will need to quote the model and serial number of your appliance. This is printed on the service label just inside the door under the thermostat.



## Specifications

---

Total Net capacity: 130L

Energy A+

**Includes:**

3 x Glass fridge shelves

1 x Chrome wine rack

2 x Salad Crisper

Dimensions: (H)873 x (W)628 x (D) 540



## BS Plug Wiring

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

**WARNING: THIS APPLIANCE MUST BE EARTHED**



## WEEE Directive



### Disposal of Unit

Disposal instructions for Swan items in accordance with the WEEE directive. Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recyclenow.co.uk](http://www.recyclenow.co.uk), or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





# Warranty

This product is guaranteed for one year from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty product will be repaired, refunded or replaced at our discretion.

**The following conditions apply:**

The product must have been purchased from new. Proof of purchase will be required. The product must be installed and used in accordance with the instructions contained in this instruction guide. It must be used only for household and similar purposes such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person not authorised by Swan.

Any repair work must be undertaken by us or our appointed agent.

Any parts removed during repair work or any appliance that is replaced becomes our property. It does not cover wear and tear, damage, misuse or consumable parts. Swan Products Ltd has no liability for incidental or consequential loss or damage. Food value is NOT covered by the warranty.

This guarantee is valid in the UK and Eire Only.

**Notes:**



## Swan Brand Heritage

---



Camden St, Birmingham

### Did you know...

Components for the Swan Teasmade were still being made at the original Bullpitt & Sons factory on Camden St, Birmingham as recently as 2006.

Please visit our website at:

**[www.swan-brand.co.uk](http://www.swan-brand.co.uk)**

For more information and history of the Swan Brand

**Swan**  
designed for life





[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



Scan this QR code  
to hear about  
our story



We love  
what we do



we're proud  
of our quality



Find us on Facebook

Copyright © 2012  
Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD

