

vax[®]
Air[™] Steerable
ULTRA LITE

**POWERFUL,
STEERABLE,
ULTRA LIGHTWEIGHT**

LET'S GET STARTED.

U86-AC-Be
U85-AC-Pe
U85-AC-Re



Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

Please keep instructions for further use.

- Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.



Don'ts

- Don't use this vacuum cleaner if it has been dropped, damaged or left outdoors.
- Don't run over the power cord or use vacuum cleaner if the power cord or plug is damaged. Please contact our Customer Care Line on: 0330 026 8455 (Mon - Fri 8:30am to 6:30pm, Sat 9:00am to 5:00pm).
- Don't handle the plug or use the vacuum cleaner with wet hands.
- Don't pull or carry this vacuum cleaner by the power cord.
- Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord.
- Don't unplug vacuum cleaner by pulling on the power cord.



Do's

- Turn off all controls on the vacuum cleaner before disconnecting or connecting the power cord.
- Always keep the power cord away from the brushes whilst using your vacuum cleaner. After use always wrap the power cord around the cord clips provided.
- Always make sure both the pre-motor/post-motor filters are in place before use.
- Always switch off the vacuum cleaner before disconnecting or connecting the hose and accessories.
- Keep all openings clear and free from debris as this may affect the airflow/suction.

Let's talk safety

- This vacuum cleaner is NOT to be used by children under eight years or persons with reduced physical, sensory or mental capabilities, unless they have been given instructions on how to use the machine or are supervised during use.
 - Any cleaning or maintenance of your vacuum cleaner should not be made by children without supervision and ensure they don't play with the vacuum cleaner.
 - Only Vax recommend tools should be used with this vacuum cleaner.
- Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the vacuum cleaner in an area with explosive vapours or liquid.
 - Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
 - Don't attempt to remove blockages with sharp objects as this may cause damage to your vacuum cleaner.
 - Don't vacuum up hard or sharp objects such as glass, nails, screws or coins etc.
 - Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
- Always replace the fuse in the plug with a 13amp fuse.
 - Always protect the power cable from heated surfaces and open flames.
 - Always ensure the brushbar is turned off when using your vacuum on the stairs and take extra care when positioning the vacuum cleaner on your stairs.
 - Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
 - Store your vacuum cleaner in a cool, dry area. If filters have been cleaned as per user guide instructions ensure they are thoroughly dry before storing away.

Thank you for buying this Air™ Steerable Ultra Lite.

Taking care of your carpets and hard floors

The Air™ Steerable Ultra Lite is designed to make vacuuming carpets and hard floors regularly, as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your carpets and hard floors will ensure they keep their appearance for longer. You've chosen the carpets and hard floors for your home for a reason and Vax will help you take good care of them.

Taking care of your Air™ Steerable Ultra Lite

Also inside this guide are instructions on maintaining your new vacuum cleaner, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:










Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WR9 0LW, UK

This user guide can be found online at: vax.co.uk/support

The Vax logo is displayed in a bold, orange, sans-serif font. The letters 'vax' are lowercase, and a registered trademark symbol (®) is positioned to the upper right of the 'x'.

Let us know what you think @VaxUK

Contents

-  [Let's talk safety](#)
-  [Getting to know your machine](#)
-  [Getting started](#)
-  [Using your machine](#)
-  [Taking care of your machine](#)
-  [Let's talk technical](#)
-  [What to do if it goes wrong](#)
-  [Getting in touch](#)
-  [Accessories](#)

Air™ Steerable Ultra Lite (Included with all models)

Included with your machine



2-in-1 Crevice Tool
and Dusting Brush



 
Pre-motor Filter



Post-motor Filter

Air™ Steerable Ultra Lite Pet

All the above, plus



TurboTool

Air™ Steerable Ultra Lite Reach

All the above, plus



2m Extension Hose

Initial Setup for normal operation

1. Use the base accessories.
 - Shortest hose
 - Extension tube set to shortest practicable length.
2. Clean filters installed.
3. Dust receptacle empty.
4. All air vents must be closed.
5. Floorheads/tools set to Carpet Mode for carpet cleaning.
6. Mechanical Agitation set turned ON for carpet cleaning.
7. Floorheads/tools set to Hard Floor Mode for hard floor cleaning.
8. Mechanical Agitation set turned OFF for hard floor cleaning.

Getting to know your machine

Handle

Dirt container
release button

Carry handle

Power On/Off button

Inner cyclones

Dirt container

Post-motor filter cover

Brushbar blockage indicator

Hose end clip

Rotating brushbar

Handle release button

Brushbar On/Off button

Quick release
cord wrap

Power cord

Quick release
cord wrap

Stretch hose

Wheels

Technical Specification

Name **Air™ Steerable Ultra Lite**

Voltage **Please refer to product rating label**

Wattage **Please refer to product rating label**

Cord length **6-8m**

Weight **4.0kg**

Consumables & Accessories

Pre-motor filter (Type 58)*
1-1-131167-00

HEPA Post-motor filter (Type
102)*
1-1-134236-00

 
Belt Kit (Type 26)
1-1-134530-00

2-in-1 tool (Type 3)
1-1-132115-00


TurboTool (Type 6)
1-1-134419-00

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE


Assembling your upright



Remove all packaging.
Insert the handle.

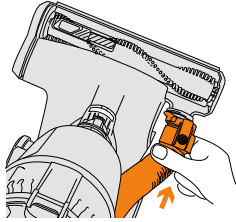


Attach the hose end to the floorhead ensuring it clicks into place. (All accessories can be used by either attaching them to the handle or the hose).

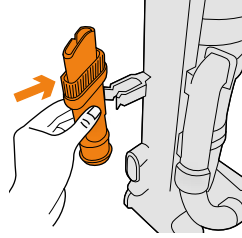


Place your tools onto the product.


How to use

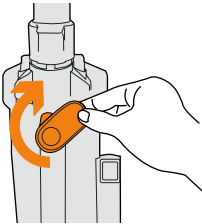


Twist the cord holder to release the cord.

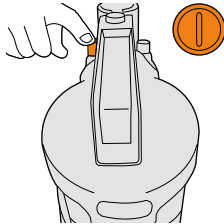


Plug in your machine and turn it on.

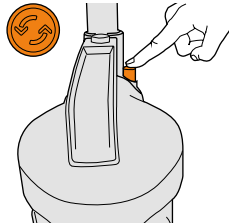


To activate brushes, press the brushbar On/Off button at the top of the machine.
Brushbar On — carpets.
Brushbar Off — hard floors.

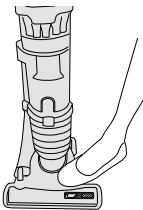

Place your foot on the base of the vacuum and pull backwards to recline the unit.

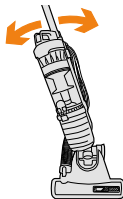

Twist the handle to manoeuvre under and around furniture.

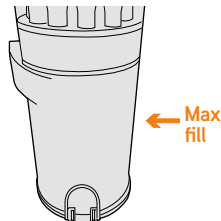

Don't over fill the container to avoid logging your filters.

Using your machine

Before you begin cleaning


IMPORTANT: Always switch off and unplug the vacuum cleaner before connecting or disconnecting the hose/ attachments, or removing and emptying the dirt container.

Always switch off the brushbar before using any accessories/hose/telescopic extension tube.


IMPORTANT: The vacuum cleaner is equipped with a thermal cut-out. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens, switch the vacuum cleaner off and unplug from electrical socket. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filters please wait 24 hours for the filters to fully dry before putting back into the vacuum machine).

If the vacuum cleaner is blocked, switch off and unplug before removing the blockage.

Hose

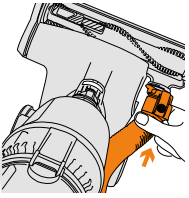

Remove hose.

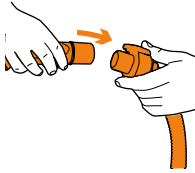


Attach required tool to the hose.


The 2-in-1 tool can be attached to the tube or directly to the hose.




Extension tube

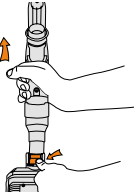

Remove extension tube.

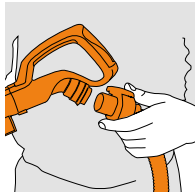

Attach hose to extension tube.

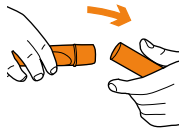


Attach accessory to extension tube.




IMPORTANT: Hold vacuum cleaner when using hose or extension tube for above floor cleaning.

How to use the Air Vent

Note: For most efficient results the air vent should be closed.

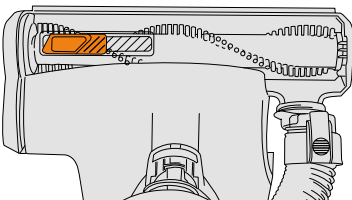


Slide vent cover open to decrease suction, if required on high piled carpets.

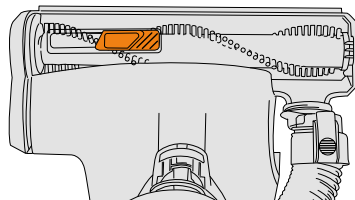


Close the vent cover to increase suction, for maximum cleaning on hard floors.

Taking care of your machine


Emptying and cleaning the dirt container

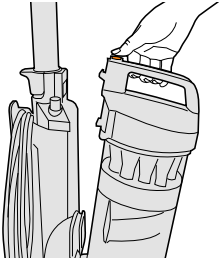

Press dirt container release button to remove the dirt container.

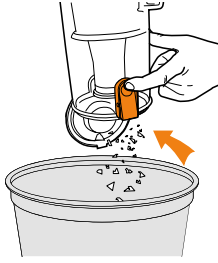


Hold dirt container over a bin and press dirt release button to open, allowing dirt to fall out.

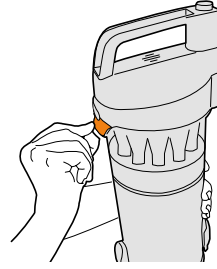

Unclip the dirt container lid to open.



Lift lid to access inner cyclones.

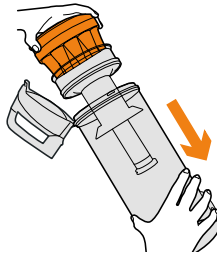

Lift out the inner cyclones.



Hold cyclones/separators over bin and tap to remove dirt and debris.


Always switch off and unplug the vacuum cleaner from the electrical socket before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

CAUTION




Taking care of your machine


Cleaning the pre-motor filter

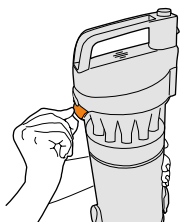


Unclip the dirt container lid to open.

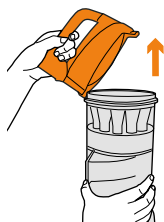


Lift lid to access filter.

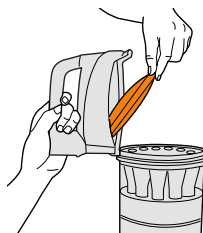

Remove filter.

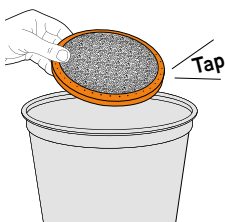


Tap filter clean.

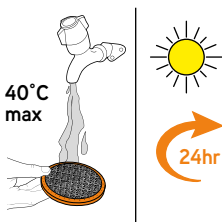


Wash in water 40°C max and leave for at least 24 hours or until dry before replacing into the machine.

HEPA post-motor filter maintenance

IMPORTANT: The exhaust filter is designed to offer long life with no maintenance. The filter should be checked periodically and when heavily discoloured it should be replaced. Please do not wash, scrub or brush the filter as this will damage the delicate filter media.

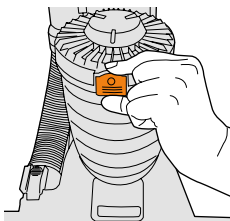

Remove the post-motor filter by unclipping it from the body of the vacuum.

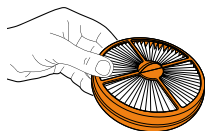

Check the post-motor filter for discoloration.




IMPORTANT: The pre-motor filter requires cleaning at least every three months. Do not use your vacuum cleaner without all of the filters in place.


The motor is equipped with a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off. For further help go to the **'What to do if it goes wrong'** page.

IMPORTANT: If the air inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.


Removing debris from the brushbar

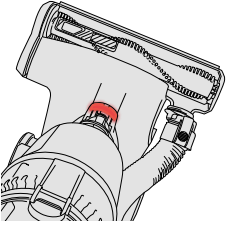

A **RED** light will indicate a jammed brushbar.

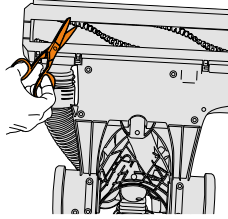


Switch off your vacuum cleaner at the main socket. Using a pair of scissors, cut any hair or debris free from around the brushbar.

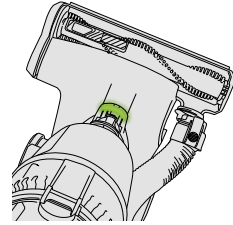


A **GREEN** light indicates no blockages in the brushbar.

Changing the brushbar


IMPORTANT: Unplug and switch off vacuum cleaner before maintenance or troubleshooting checks.

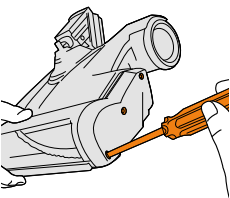


Using a crosshead screwdriver, remove 3 screws from the side of the floorhead.

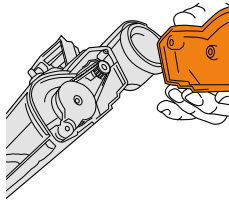


Pull to remove the end cap belt cover.

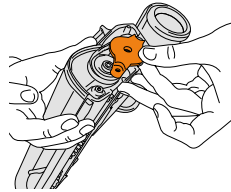

Pull to remove the brushbar location plate. Remove belt.

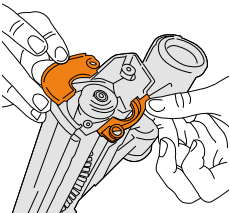

Lift and separate brushbar side cover.

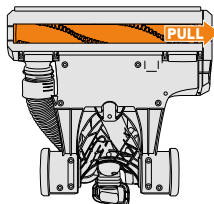


Pull brushbar through brushbar side cover to remove.


Let's talk technical

Changing the belt


IMPORTANT: Unplug and switch off vacuum cleaner before maintenance or troubleshooting checks.

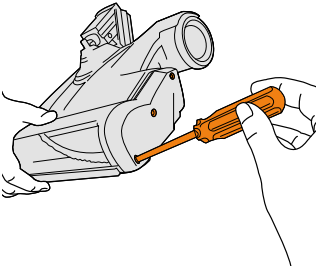


Using a crosshead screwdriver, remove 3 screws from the side of the floorhead.

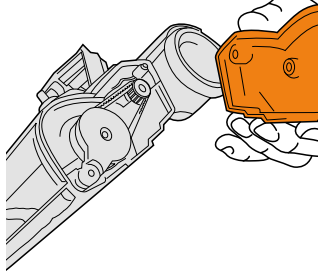

Pull to remove the end cap belt cover.

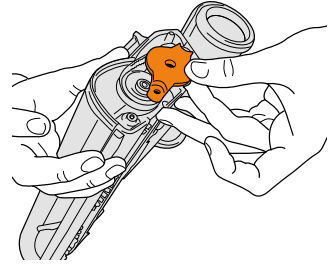

Pull to remove the brushbar location plate. Remove and dispose of old belt.

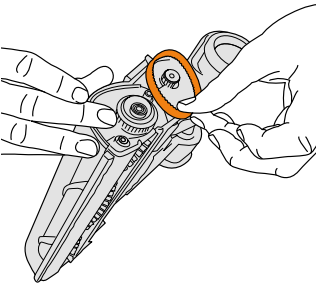

Clean any debris from spindle.
Place new belt onto spindle, lining up teeth on belt over and onto the cog.

When changing the belt, this is the perfect time to clear any debris from your brushbar.



Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Pro cleaning kit (Type 2) 1-1-133326-00

All our best tools all in one kit that makes cleaning your home quicker, easier and with even better results. We've taken care of cleaning all of the hard to reach areas such as on top of cupboards and in between blinds to the dust that collates behind and within the radiator.



TurboTool (Type 6) 1-1-134419-00

A TurboTool for your vacuum cleaner. Use the TurboTool for vacuuming your stairs, upholstery and car interiors. It's great for picking up stubborn pet hair.



What to do if it goes wrong

Problem

Solution

Why does my vacuum cleaner have no power?

- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing, always replace with a 13amp fuse.
- The motor thermostat may have tripped. If this has happened, unplug the vacuum cleaner. Remove and empty the dirt container and check the hose for blockages. Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).

Why does my vacuum cleaner not pick up?

- There may be a blockage in the hose. Please remove the hose from the vacuum cleaner, check and clear any blockages.
- Empty the dirt container and clean filters. Go to the 'Taking care of your machine' pages.
- The brushbar may not be turning. Go to 'My brushbar isn't turning' below.
- If the accessory/tool will not pick up, check and clear any blockages.
- The separator or shroud may be clogged. Go to 'Taking care of your machine'.
- The dirt container may be full or blocked. Go to 'Taking care of your machine'.
- The dirt container may be incorrectly installed, ensure the dirt container is locked in place.
- Air vent may be open, close vent. Go to 'Using your machine'

My brushbar isn't turning

- The brushbar may not be switched on, please check the brushbar On/Off switch.
- If the vacuum cleaner is not reclined the brushbar will automatically switch off.
- If the red light is flashing the brushbar may be jammed. Clear any blockages for further help go to the 'Let's talk technical' pages.
- Check the belt. Go to 'Changing the belt' on the 'Let's talk technical' pages.

My vacuum cleaner is making an excessive noise?

- If the vacuum cleaner is making a whistling noise, please remove the dirt container open the bottom and clean the seals. Replace the dirt container and retry.
- If there is an air sucking noise from the top of the dirt container, this would indicate a blockage in the machine. Go to 'Why does my vacuum cleaner not pick up?' Above

CAUTION: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

It's quick and easy to
register for your **FREE**

**6 year
guarantee[†]**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

we're here if you need us

Online **vax.co.uk/support**

Call: (UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm*

Alternatively, you can write to us at:

Vax Ltd. Plot 302, Stonebridge Cross Business Park, Hampton Lovett,
Droitwich, WR9 OLW, UK

[†] Registration required. Terms and conditions apply, see vax.co.uk for details

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

GET IN TOUCH

 0330 026 8455  info@vax.co.uk  vax.co.uk  [VaxVacuums](https://www.facebook.com/VaxVacuums)  [@VaxUK](https://twitter.com/VaxUK)

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the U86-AC-Be/U85-AC-Pe/U85-AC-Re is manufactured in compliance with the following Directives:

Safety: 2006/95/EC Low Voltage Directive. **EMC:** 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 All rights reserved. VAX®, VAX Lozenge, are trade marks or registered trade marks of Techtronic Floor Care Technology Ltd.

