New Sywell - 3 Door Mirror Robe


Assembly Instructions - Please keep for future reference

355/9510

333/9259

343/9692

323/2909

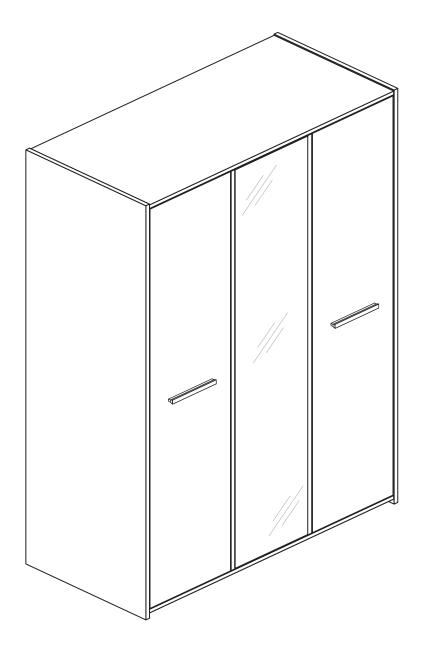

Dimensions

Width - 104cm

Depth - 50cm

Height - 172cm



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800



!\ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Warning: This unit weighs approximately 67kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



 We do not recommend the use of power drill/drivers for inserting screws,


as this could damage the unit. Only use hand screwdrivers.

- Safety note: It is recommended that this unit is secured to a wall using the bracket supplied.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Tools required

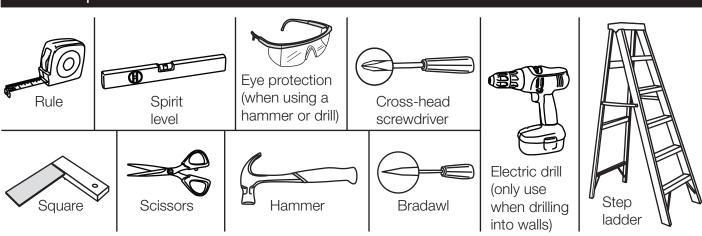

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

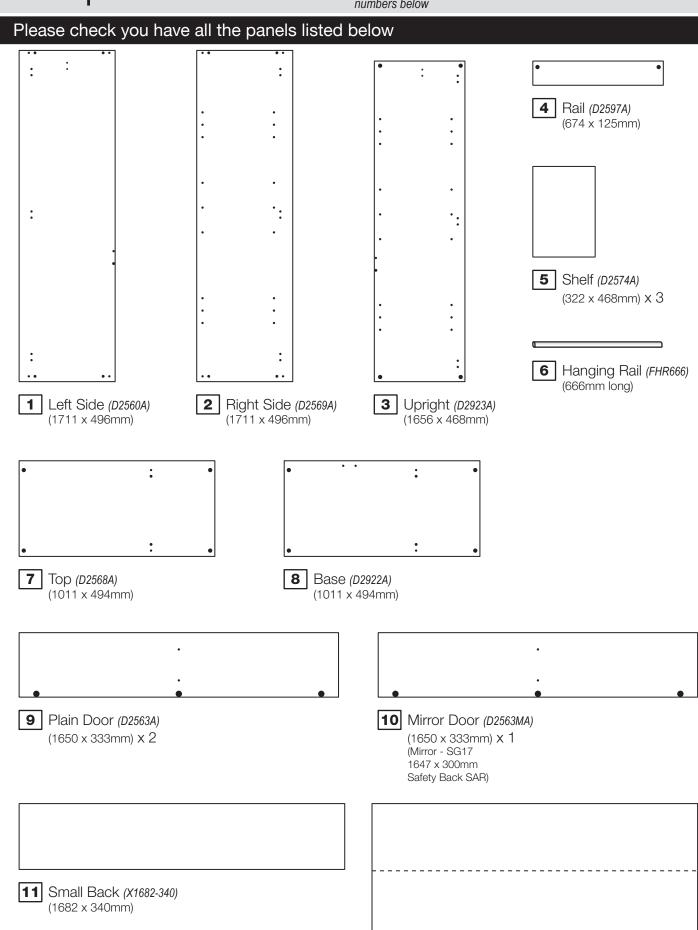




12 Large Back (X1682-694) (1682 x 694mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

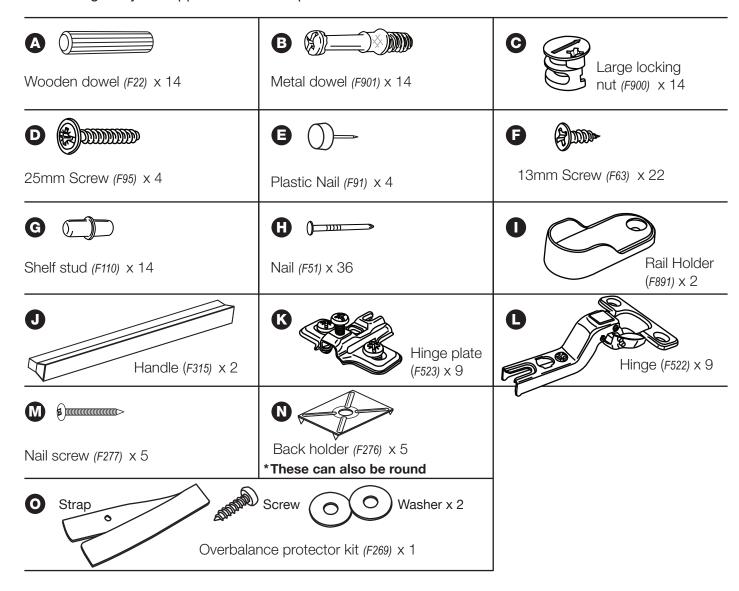



If you have damaged or missing components, call the Assembly Instructions Customer Helpline: 03456 400800 quoting the reference numbers below

Step 1

Prepare the upright

a: Insert 4 large locking nuts **©** into the upright 3.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap 4 wooden dowels A into the upright 3.


Note: Wooden dowels must not stick out from the edge by more than 10mm or they may damage other panels.


Screw a metal dowel B into the upright 3.

Note: Tighten the metal dowel up fully against the panel.

b: Fit 3 hinge plates **K** onto the upright 3, making sure that the slot is facing towards the finished front edge.

Fit the rail holder
to the upright 3 using 2 screws **F**.

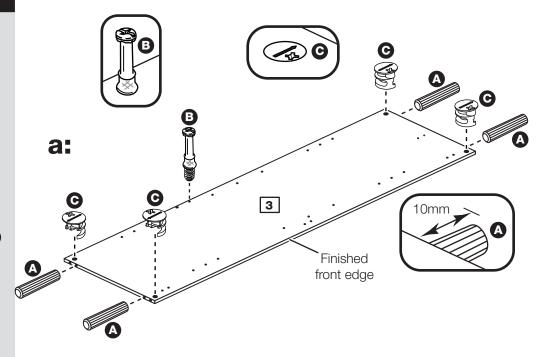

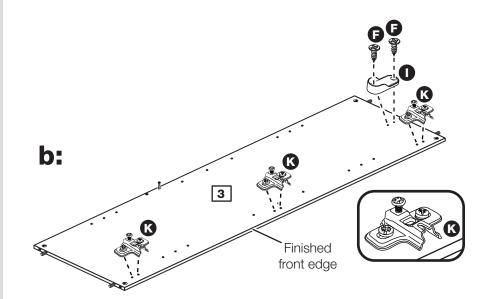

Step 2


Prepare the top

Tap 4 wooden dowels **A** into the top **7**.

Insert 4 large locking nuts **©** into the top **7**.

Screw 2 metal dowels **B** into the top **7**.

Note: Tighten the metal dowels up fully against the panels.

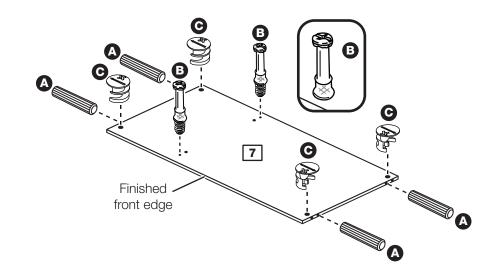

Step 3


Prepare the base

a: Tap 4 wooden dowels **A** into the base **8**.

Insert 4 large locking nuts **©** into the base

Turn the base over

b: Screw 2 metal dowels **3** into the base

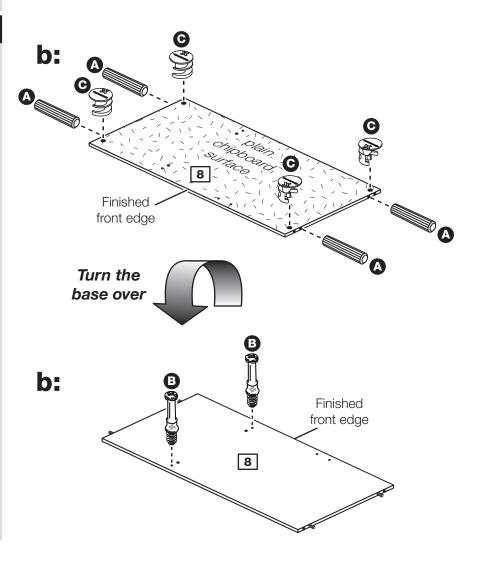


Step 4

Fit the top and base to the upright

Push the top 7 and the base 8 onto the upright 3.

Use a screwdriver to tighten the 4 large locking nuts • fitted to the upright 3.

Note: Turn the large locking nuts (a) as far as they will go - more than 1/2 a turn.

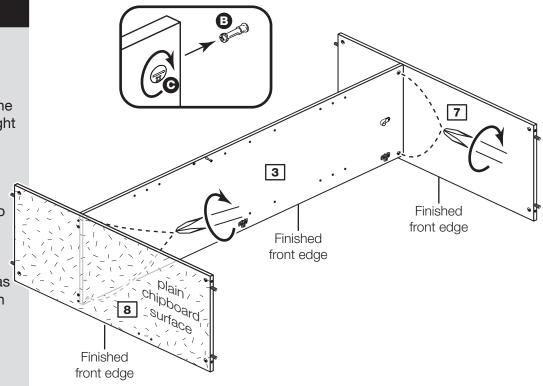

Step 5


Prepare the left side

Screw 5 metal dowels **B** into the left side **1**.

Note: Tighten the metal dowels up fully against the panels.

Fit 3 hinge plates (c) onto the left side (1), making sure that the slot is facing towards the finished front edge.

Fit the rail holder to the left side using 2 screws.

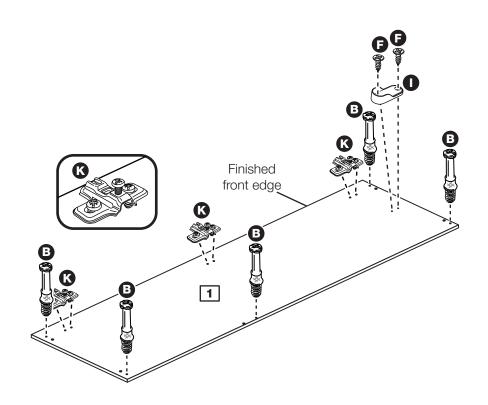


Step 6

Prepare the right side

Screw 4 metal dowels **B** into the right side **2**.


Fit 3 hinge plates **(C)** onto the right side **(2)**, making sure that the slot is facing towards the finished front edge.

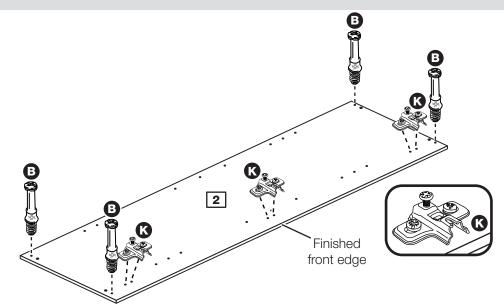


Step 7

Fit the right side

Push the right side 2 onto the top 7 and base 8.

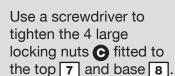

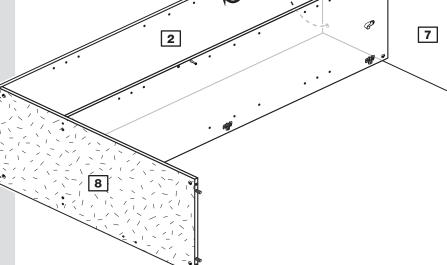


Step 8

Prepare the rail

Tap 2 wooden dowels **A** into the rail **4**.

Insert 2 large locking nuts **©** into the rail **4**.

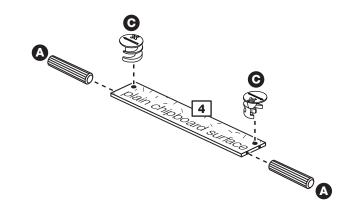


Step 9

Fit the rail

Push the rail 4 onto the upright 3.

Use a screwdriver to tighten the large locking nut **6** fitted to the rail **4**.

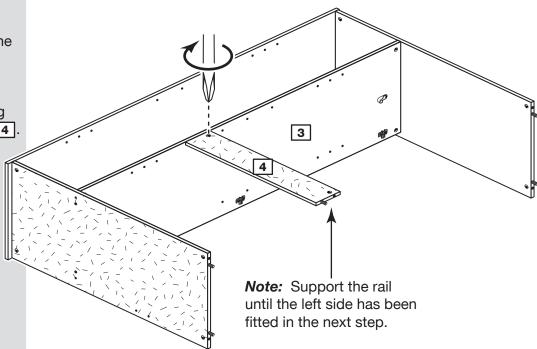

Step 10

Fit the left side

Push the left side 1 onto the assembly.

Use a screwdriver to tighten the 5 large locking nuts **©** fitted to the top **7**, base **8** and rail **4**.

Tinished front edge

Step 11

Fit the back panel

a: Square up the unit by making sure that measurement **x** to **x** equals **y** to **y**.

Place the small back 11 and large back 12 down onto the unit as shown, with the white surface facing the inside of the unit.

Make sure that the 2 backs are pushed up tight against each other and that they meet in the centre of the upright panel's edge.


b: Nail **(+)** around the outside edges only of the 2 back panels **(11)** and **(12)**.

Note: Do not nail where the backs meet. Nails should be spaced about 150mm apart.


C: Push the nail screws
through the back
holders n and tap them
down between the small
back 11 and large back
12 and into the back
edge of the divider.

Keep tapping the nail screws **(M)** in until the back holders **(N)** dig into the small and large back.

The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

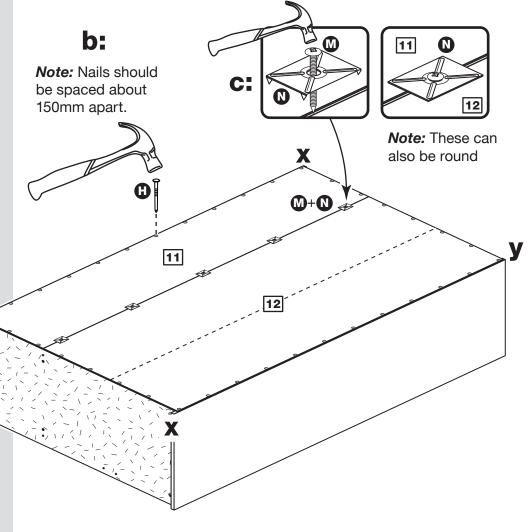

Note: If ever you need to take the backs off to dismantle the unit, the nail screws can be taken out using a screwdriver.

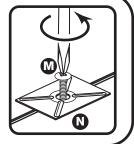

Step 12

Fit the plastic nails

Tap 2 plastic nails into the bottom edge of each of the sides and and 2.

Stand the unit up for the next step.




BO


Step 13

Fit the hanging rail

Push the hanging rail 6 into the rail holders 1.

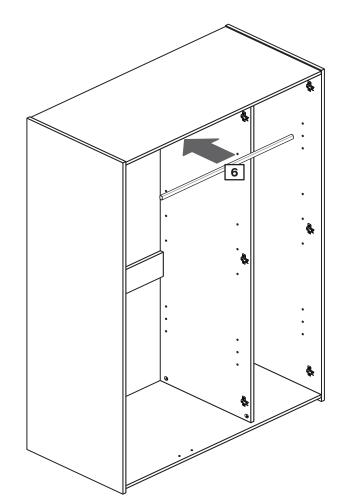

1

 


Step 14

Fit the shelves and door stops

For each shelf 5, insert 4 shelf studs 6 at the required height.

Lower the 3 shelves 5 down onto the shelf studs **G**.

Push the other 2 shelf studs **(G)** down into the holes in the base **(8)** to act as door stops.

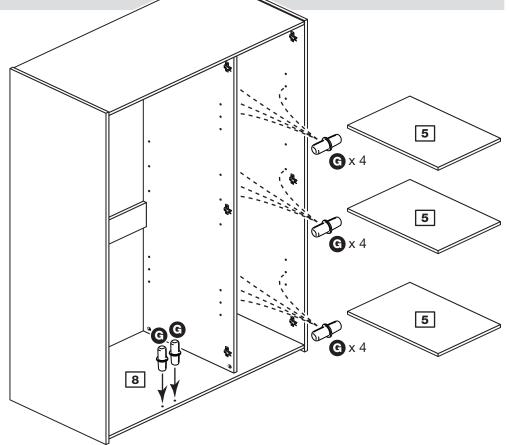


Step 15

Prepare the 3 doors

Push fit 3 hinges into each of the 3 doors and and 10.

Secure each hinge with 2 screws **F**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the

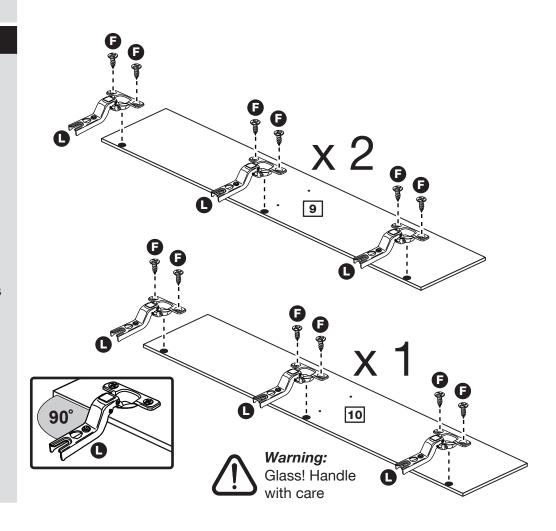

Step 16

Fit doors and handles

Note: The easiest way to attach each door 9 and 10 is to fit the top hinge first, then align and fit the other hinges.


onto the front part of the hinge plate **(C)**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **C**FLAT against the hinge plate **C** as you slide it across as far as it will go. Tighten screw A.

C: The hinge must be flat against the hinge plate prior to any adjustment.

d: The hinge must NOT be AT AN ANGLE to the hinge plate when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **①** to each of the plain doors **9** using 2 screws **①**.

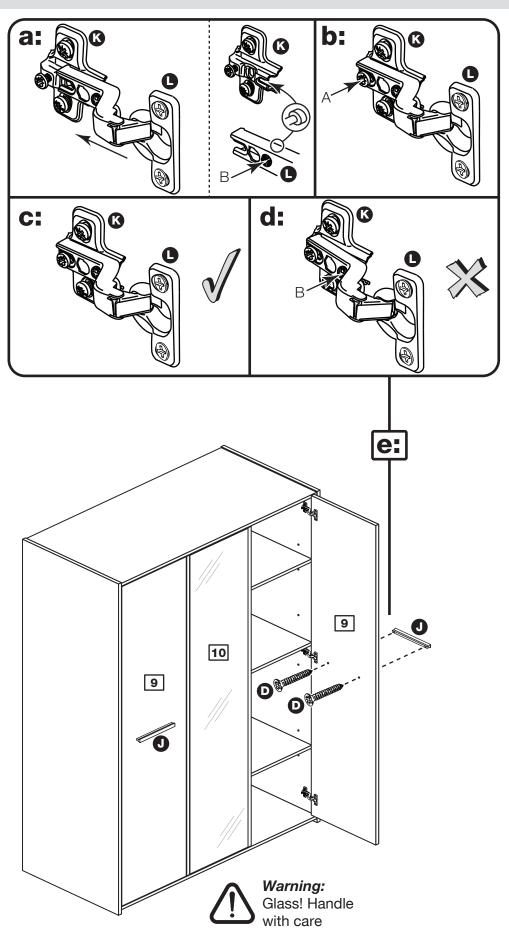

Step 17

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.

Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

C: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

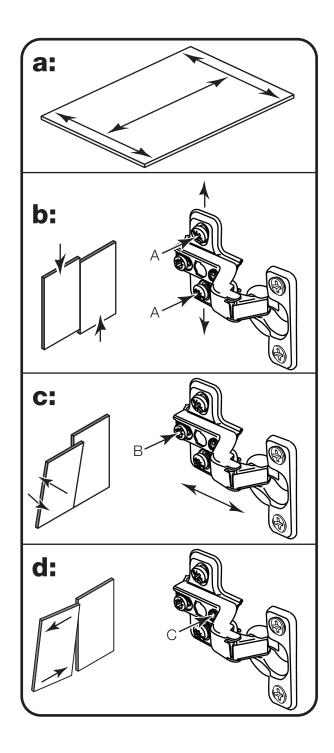

Step 18

Fit the overbalance protector


To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the overbalance protector kit of itted to the unit or, an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.




Warning: The unit is heavy. Lift with care.

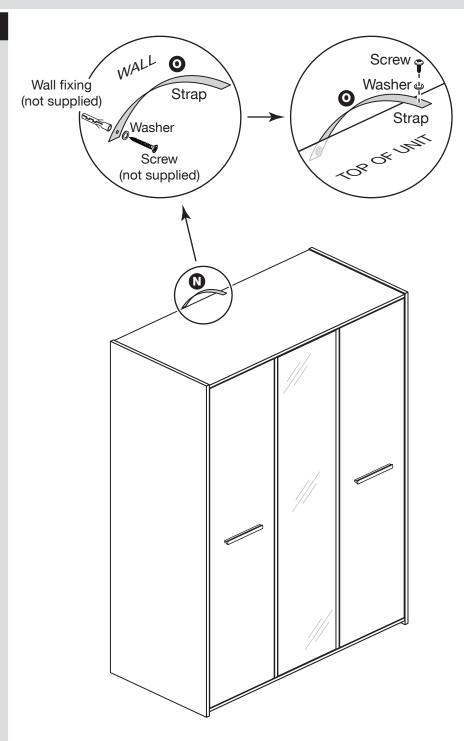

Step 19

Assembly is complete

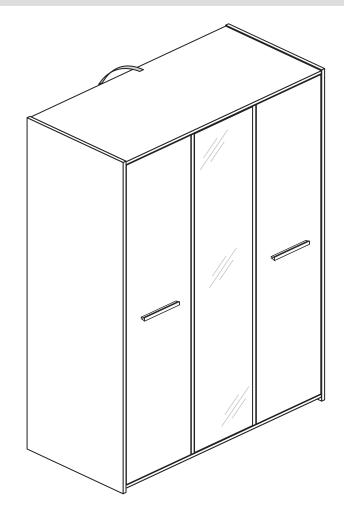

IMPORTANT INFORMATION ABOUT THIS PRODUCT

This product complies with the requirements of BS 7449:1991 and has been manufactured by DECORATIVE PANELS FURNITURE LTD, TEESSIDE INDUSTRIAL ESTATE, THORNABY-ON-TEES, CLEVELAND, TS17 9LT.

The product code for this unit and the item code(s) for the glass components are listed in the Assembly Instructions along with a description of the type of glass used. All clear/tinted glass complies with the requirements of BS 6206 Class A. All mirrors comply with the requirements of BS 6206 Class C. If the glass component contained in this unit is chipped or broken consult the furniture manufacturer, retailer, or agent with regard to obtaining a manufacturing specification and shape for replacement glass quoting the unit description and batch number or date of manufacture.

Do not place very hot or very cold items against or in close proximity to glass surface(s) unless adequately thick insulating material is used to prevent such items coming in contact with the glass.

Do not strike the glass with hard or pointed items.

Do not sit or stand upon horizontal glass surfaces.

When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary - do not use washing powders or any other substance containing abrasives since these substances scratch glass.

If stated in the instruction leaflet, it is essential that this unit is fixed to a wall.

KEEP THESE INSTRUCTIONS FOR FUTURE USE

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800 and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

15 ALR3092