



AirRevolve™
PET

**MULTI-ORIENTATION
CYLINDER VACUUM**



LET'S GET STARTED.

C85-AC-Pe

Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use

- Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.
- This vacuum cleaner can be used by children aged from 8 years and above and persons with reduced physical,



Don'ts

- Don't stand the machine with the carry handle on the floor this will make the machine unstable and reduce the air flow through the machine.
- Don't use this vacuum cleaner if it has been dropped, damaged or left outdoors.
- Don't run over the power cord or use vacuum cleaner if the power cord or plug is damaged. Please contact our Customer Care Line on: 0330 026 8455 (Mon-Fri 8:30am to 6:30pm, Sat 9:00am to 5:00pm).
- Don't handle the plug or use the vacuum cleaner with wet hands.
- Don't pull or carry this vacuum cleaner by the power cord.
- Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord.



Do's

- Turn off all controls on the vacuum cleaner before disconnecting or connecting to the mains.
- Always make sure the pre-motor filter and bin is in place before use.
- Always switch off the vacuum cleaner before disconnecting or connecting the hose and accessories.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Always replace the fuse in the plug with a British 13amp fuse.

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the vacuum cleaner in a safe way and understand the hazards involved.

- Children shall not play with the vacuum cleaner.
- Cleaning and user maintenance shall not be made by children without supervision.
- Only Vax recommended tools and accessories should be used with this vacuum cleaner.

- Don't unplug vacuum cleaner by pulling on the power cord.
- Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the vacuum cleaner in an area with explosive vapours or liquid.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- Don't attempt to remove blockages with sharp objects as this may cause damage to your vacuum cleaner.
- Don't vacuum up hard or sharp objects such as glass, nails, screws or coins etc.
- Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- Always protect the power cable from heated surfaces and open flames.
- Take extra care when positioning and using the vacuum cleaner on the stairs.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Store your vacuum cleaner in a cool, dry area. If filters have been cleaned as per user guide instructions ensure they are thoroughly dry before storing away.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Thank you for buying this AirRevolve™ Pet.

Taking care of your carpets and hard floors

The AirRevolve™ Pet is designed to make vacuuming carpets and hard floors regularly as effective and efficient as possible and this user guide will help you get the most out of your machine. Maintaining your carpets will ensure they keep their appearance for longer. You've chosen the carpets and hard floors for your home for a reason and Vax will help you take good care of them.

Taking care of your AirRevolve™ Pet

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you



We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:

Vax Ltd, Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, WR9 0LW, UK

This User Guide can be found online at: vax.co.uk/support



Let us know what you think @VaxUK

Contents

AirRevolve™ Pet

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

Let's talk technical

Accessories

Notes

What to do if it goes wrong

Getting in touch

Included with your machine



Accessory hose and handle



Powered head



Dusting brush



Crevice tool



Upholstery tool



Pre-motor filter



Pre-Motor sponge



Hard floor tool



Telescopic extension tube & parking clip

Getting to know your machine

Castor wheel

Dirt container
release button


Hose entry point

Castor wheel

Cord rewind button

On/Off button

Carry handle

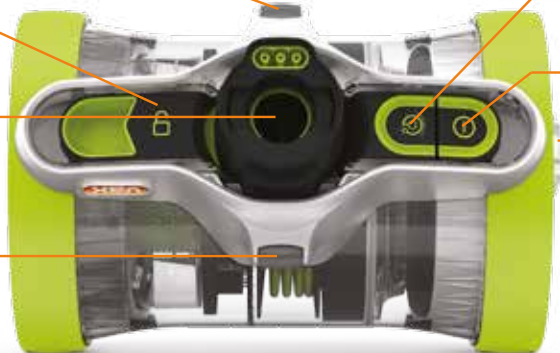

Wheel

Wheel

Separator and shroud



Technical Specification

Name **AirRevolve™ Pet**

Voltage **See product rating label on machine for details**

Wattage **See product rating label on machine for details**

Cord length **6m**

Weight **5.2kg**

Accessories & Consumables

Pre-Filter (Type 128)*

1-1-135703-00

Hard Floor Tool (Type 5)*

1-1-135754-00


PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

CAUTION: Always switch off the vacuum cleaner before connecting or disconnecting the hose/attachments, or removing and emptying the dirt container.


IMPORTANT: The vacuum cleaner is equipped with a thermal cut-out. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens, switch the vacuum cleaner off and unplug. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filter please wait 24 hours for the filter to fully dry before putting back into the machine).

If the vacuum cleaner is blocked, switch off and unplug before removing the blockage.


Assembling your vacuum cleaner

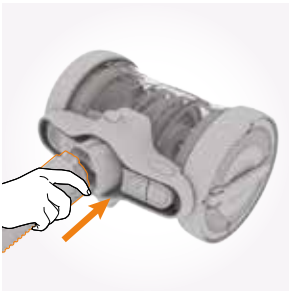


Line up hose connector with hose entry point. Squeeze both buttons on either side of hose connector.

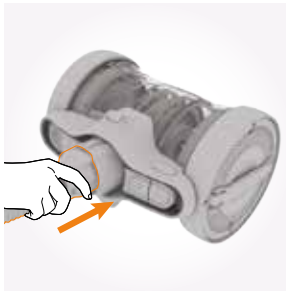


Push hose connector into hose entry point until hose connector clicks and locks into place.

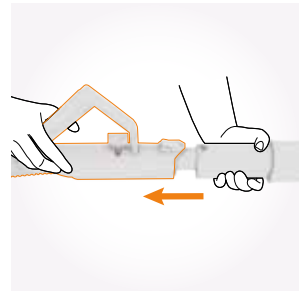

Line up hose handle with telescopic tube. Push hose handle into telescopic tube until clicks and locks into place.

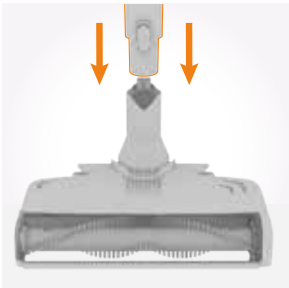

Line up and push the other end of the telescopic tube into the powered head until it clicks into place.

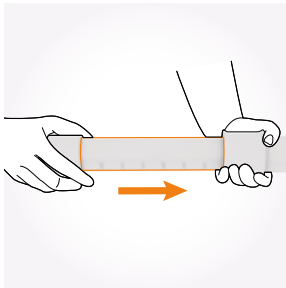

Slide the adjuster on the telescopic extension tube and select required length.

Getting started

Using your accessories



Choose an accessory and push onto the telescopic extension tube or hose handle until it clicks and/or locks into place. For most efficient results on hard floors replace the powered head with the specialist hard floor tool.

Carrying your machine



Always use the carry handle to lift and carry the machine. Never stand the machine with the carry handle on the floor.

The dirt container has a peel of sticker which you can remove if you wish.




Using your machine

CAUTION: The power cord must always be completely unwound, do not pull further than the black marker.


CAUTION: When the vacuum and powered head are switched on, never leave the powered head in one position for long periods of time. The powered head brush should be ON for carpets and OFF for hard floors.




Unwind the power cord. Do not pull further than the black marker.

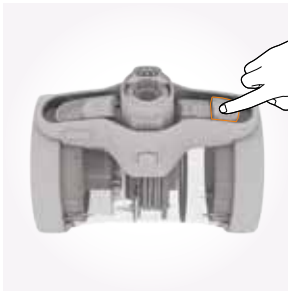

Plug into the mains and press the On/Off button on the machine, or on the hose handle to switch the machine on.

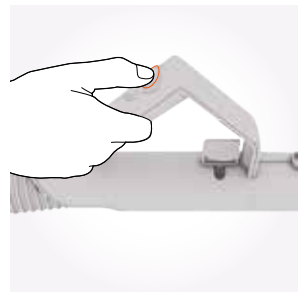

Press the powered head brush On/Off button once, the brushes on the powered head will spin, light on powered head will turn blue. Press again and the brushes will stop, light will turn off.

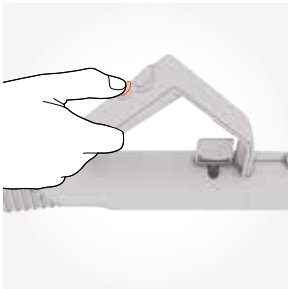

Slide the vent cover on the hose handle to reduce suction if required.

Using your machine on the stairs



When cleaning stairs to prevent the vacuum cleaner falling, always stand the vacuum cleaner upright with the carry handle at the top.


Taking care of your machine

CAUTION: Unplug and switch off the vacuum cleaner before cleaning, performing maintenance or troubleshooting checks.


Emptying and cleaning the dirt container



Do not over-fill the machine. Stand the machine vertically to check whether the max fill line has been reached.

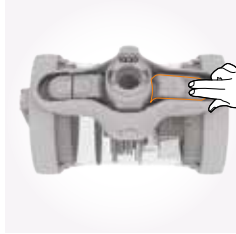

Place the machine hose side up. Pull and slide dirt container release button.

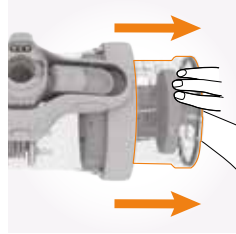


Pull to remove dirt container from main body.




Hold dirt container over a bin and press the dirt release clip on the bottom of the dirt container, allowing dirt/debris to fall out.


Cleaning the shroud and separator

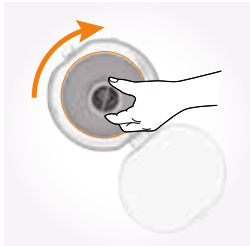


Twist the shroud clockwise to unlock.

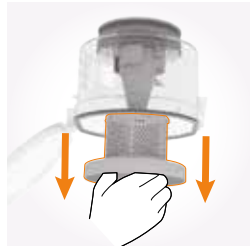


Pull to remove the shroud out of the dirt container.

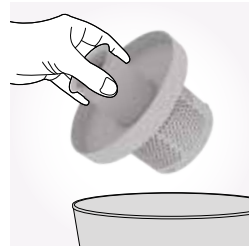


Tap the shroud over a bin to remove any dirt/debris. Using a soft brush remove any remaining dirt/debris from the shroud.

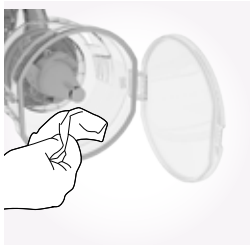

Wipe the dirt container and separator with a damp cloth to remove dirt/debris.

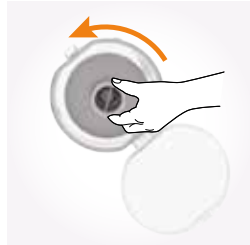

Line up the tabs on the separator into the dirt container. Twist the separator anti-clockwise to lock into place.

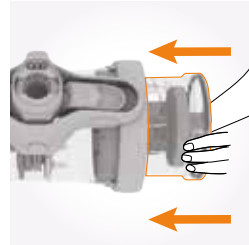


Line up dirt container with marked arrow and push firmly into main body of vacuum cleaner.

Taking care of your machine

CAUTION: For best cleaning results filters require cleaning every 3-6 months or more frequently depending upon use of vacuum cleaner. Unplug and switch off the vacuum cleaner before performing maintenance or troubleshooting checks.

IMPORTANT: Do not use your vacuum cleaner without the filter in place.


Cleaning the pre-motor filter

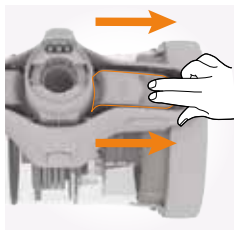

Pull and slide the dirt container release button. Pull to remove dirt container from main body.



Pull the tab on the pre-motor filter to remove the pre-motor filter from the base of the dirt container.

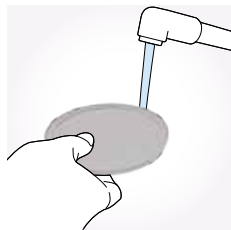


Tap the pre-motor filter over a bin to remove any dirt/debris. Wash the filter under running water (40°C max).



Leave for 24hrs or until fully dry before re-fitting.




Make sure the tab on the pre-motor filter is visible when re-fitting the pre-motor filter and sponge into the dirt container.

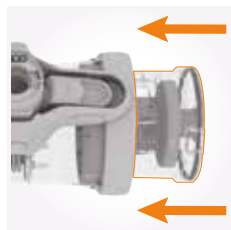


Line up dirt container with marked arrow and push firmly into main body of vacuum cleaner.

Removing hose, telescopic extension tube and accessories

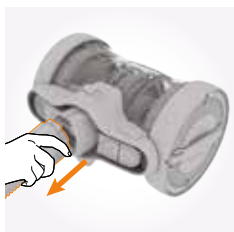

Squeeze both buttons on either side of hose connector. Pull to remove hose.

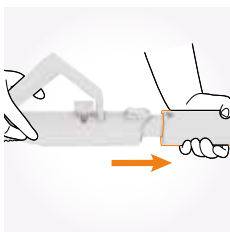

Press release clip on hose handle, pull to remove telescopic tube.



Press release clip on telescopic extension tube, pull to remove accessory.

Taking care of your machine

CAUTION: Remove the accessory from the hose or telescopic extension tube before performing any maintenance or troubleshooting checks.

Storing your vacuum cleaner




Press cord rewind button to retract cord into vacuum cleaner.




Stand the vacuum cleaner upright with the carry handle at the top. Place the floorhead parking clip into the semi-circular slot on the top of the vacuum cleaner.


Removing blockages from the powered head

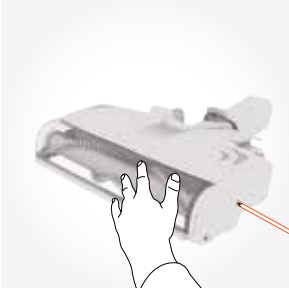


Using a crosshead screwdriver, remove 3 screws from the side of the floorhead and remove end cap belt cover.

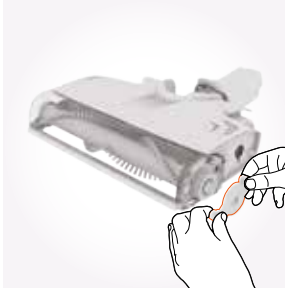


Pull and remove the brushbar location plate.

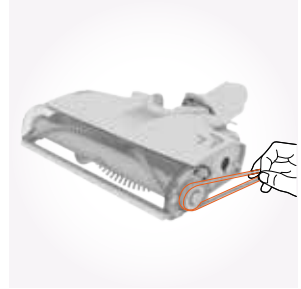


Remove the belt.

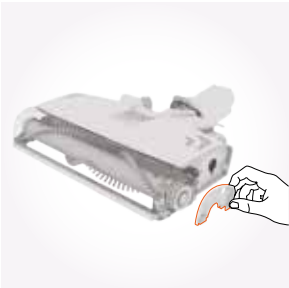

Lift and remove the top part of the brushbar side cover.

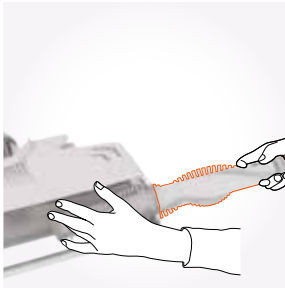

Pull brushbar and remove.

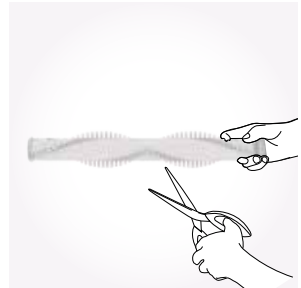

Use scissors to remove any blockages before replacing back into the machine.

Removing blockages from the hose



Remove the hose from the vacuum cleaner and telescopic extension tube. Remove any blockage by inserting a broom handle or similar object into the hose.

CAUTION: This hose contains electrical connections:

- Do not use to suck up water (for vacuum cleaners only);
- Do not immerse in water for cleaning;
- The hose should be checked regularly and must not be used if damaged.

Let's talk technical

Resetting Powered Head



The red light on the powered head will illuminate to indicate there is a blockage. Switch the vacuum cleaner off and clear the blockage.





Wait 30 seconds then switch the vacuum cleaner back on. Press the power head On/Off button once, the brush on the power head will spin and the blue light will illuminate.


Removing blockages from powered head




Pull brush bar out of powered head and separate the brush bar side cover.

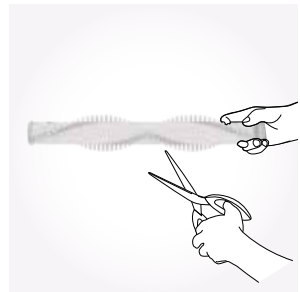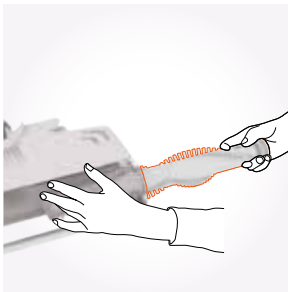


Using scissors remove any threads or hair from around the brush bar and clear any dirt or debris from powered head.

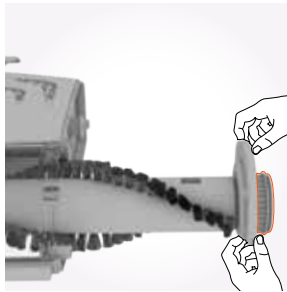

Slide brush bar halfway into powered head Push brush bar side covers together around edge of brush bar.

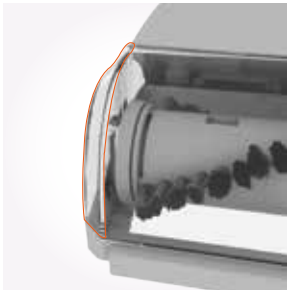

Line up the other end of the brush bar with the square recess and push brush bar and plate into powered head.

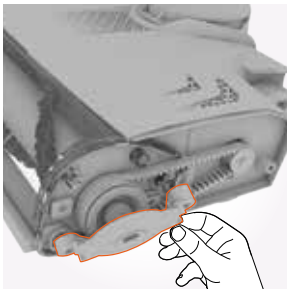

Refit belt and push the brush bar location plate into place.


Refit the end cap belt cover and tighten 3 screws.

Let's talk technical


Replacing powered head belt



Using a crosshead screwdriver, remove 3 screws from the side of the powered head and remove end cap belt cover.

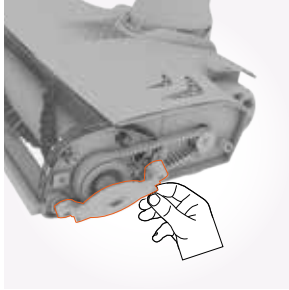

Pull and remove the brush bar location plate.

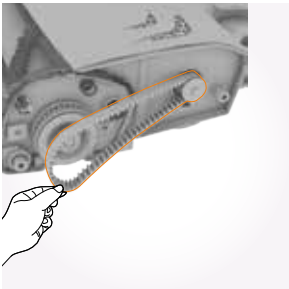

Remove the belt and clean any belt residue from the spindles before replacing the new belt

Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Crevice tool (Type 7)

1-1-135882-00

Ideal to tackle those hard to reach areas.



Dusting brush (Type 4)

1-1-135883-00

Ideal for removing dirt from delicate surfaces.



Mattress tool (Type 7)

1-1-135884-00

Ideal for use on upholsteries such as, curtains, sofas, chair seats, car interiors, and mattresses.



Up top tool (Type 2)

1-1-135885-00

 
Ideal for removing dirt from those hard to reach areas.



Radiator tool (Type 2)

1-1-135886-00

Ideal for reaching behind radiators and cabinets.



What to do if it goes wrong

Problem

Solution

There is an accessory missing.

- Check the 'This pack contains' panel on the box to make sure the part is included with your vacuum cleaner.

Why does my vacuum cleaner have no power?

- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing, always replace with a 13amp fuse.
- The On/Off button on the vacuum cleaner or the hose handle has not been turned on. Go to 'Using your machine'.
- The motor thermostat may have tripped. If this has happened, unplug the vacuum cleaner. Remove and empty the dirt container and check the hose for blockages. Clean the filter and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filter you will need to wait 24 hours for the filter to fully dry before refitting back into the vacuum cleaner).

Why won't the vacuum cleaner pick up?

- The dirt container may not be correctly fitted, remove the dirt container from the vacuum cleaner and check it's assembled correctly, refit ensuring it's locked into place. Go to 'Taking care of your machine'.
- The brushes on the powered head have not been turned on. Go to 'Using your machine'.
- The filter may be clogged, clean the filter. Go to 'Taking care of your machine'.
- The dirt container, shroud or separator may be blocked, empty and clean the dirt container. Go to 'Taking care of your machine'.
- There may be a blockage in the hose/telescopic extension tube/power head. Disconnect from the vacuum cleaner and carefully remove any blockages. Go to 'Let's talk technical'.

Why won't the powered head brush turn?

- Activate powered head brush by pressing powered head brush On/Off button. Go to 'Using your machine'.
- The powered head may be blocked. Go to 'Removing blockages from the powered head'.
- Powered head needs resetting. Go to 'Lets talk technical'
- The belt may be broken. Go to ' Lets talk technical'
- Brush bar not fitted correctly. Go to 'Lets talk technical'

Why is dust escaping from the vacuum?

- The filter may be clogged, clean the filter. Go to 'Taking care of your machine'.

CAUTION: To reduce the risk of personal injury, unplug the product before performing maintenance/troubleshooting checks.

It's quick and easy to
register for your **FREE**

**6 year[†]
guarantee[†]**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

we're here if you need us

Online **vax.co.uk/support**

Call: (UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm*

Alternatively, you can write to us at:

Vax Ltd. Plot 302, Stonebridge Cross Business Park, Hampton Lovett,
Droitwich, WR9 OLW, UK

[†] Registration required. Terms and conditions apply, see vax.co.uk for details.

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product cleaner before calling.

GET IN TOUCH

 0330 026 8455

 info@vax.co.uk

 vax.co.uk

 [VaxVacuums](https://www.facebook.com/VaxVacuums)

 [@VaxUK](https://twitter.com/VaxUK)

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the C85-AC-Pe is manufactured in compliance with the following Directives: **Safety:** 2006/95/EC Low Voltage Directive. **EMC:** 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 All rights reserved. VAX®, VAX Lozenge, AirRevolve™ are trade marks or registered trade marks of Techtronic Floor Care Technology Ltd.

