


#### DIGITAL CAMERA

# COOLPIX L330

# **Reference Manual**





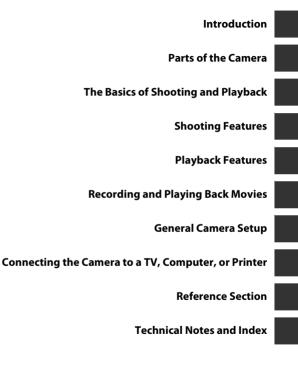

#### i

## Introduction

#### **Read This First**

Thank you for purchasing the Nikon COOLPIX L330 digital camera. Before using the camera, please read the information in "For Your Safety" (
 viii-xi) and familiarize yourself with the information provided in this manual. After reading, please keep this manual handy and refer to it to enhance your enjoyment of your new camera.

# Introduction

#### **About This Manual**

If you want to start using the camera right away, see "The Basics of Shooting and Playback" (C 12).

To learn about the parts of the camera and information that is displayed in the monitor, see "Parts of the Camera" ( $\square$  1).

#### **Other Information**

• Symbols and Conventions

 $\dot{\text{To}}$  make it easier to find the information you need, the following symbols and conventions are used in this manual:

lcon	Description
V	This icon indicates cautions and information that should be read before using the camera.
Ø	This icon indicates notes and information that should be read before using the camera.
∏/ <b>€</b> ⁄ <i>j</i>	These icons indicate other pages containing relevant information;

- SD, SDHC, and SDXC memory cards are referred to as "memory cards" in this manual.
- The setting at the time of purchase is referred to as the "default setting."
- The names of menu items displayed in the camera monitor, and the names of buttons or messages displayed on a computer monitor appear in bold.
- In this manual, images are sometimes omitted from monitor display samples so that monitor indicators can be more clearly shown.
- Illustrations and monitor content shown in this manual may differ from the actual product.

#### **Information and Precautions**

#### Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually updated information is available online at the following sites:

- For users in the U.S.A.: http://www.nikonusa.com/
- For users in Europe and Africa: http://www.europe-nikon.com/support/
- For users in Asia, Oceania, and the Middle East: http://www.nikon-asia.com/

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. Visit the site below for contact information:

http://imaging.nikon.com/

#### **Use Only Nikon Brand Electronic Accessories**

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries, and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry. THE USE OF NON-NIKON ELECTRONIC ACCESSORIES COULD DAMAGE THE CAMERA AND MAY VOID YOUR NIKON WARRANTY.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

#### **Before Taking Important Pictures**

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

#### **About the Manuals**

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort was made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

#### Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that was digitally copied or reproduced by means of a scanner, digital camera or other device may be punishable by law.

#### Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds or local government bonds, even if such copies or reproductions are stamped "Sample." The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited. Unless the prior permission of the government was obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

#### Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards and tickets, such as passes and meal coupons.

#### Comply with copyright notices

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcut prints, maps, drawings, movies, and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.

#### **Disposing of Data Storage Devices**

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the **Select an image** option in the **Welcome screen** setting ( $\square$  65). Care should be taken to avoid injury or damage to property when physically destroying data storage devices.

#### **For Your Safety**

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

#### WARNINGS



#### Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or AC adapter, unplug the AC adapter and remove the batteries immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.

#### Do not disassemble

Touching the internal parts of the camera or AC adapter could result in injury. Repairs should be performed only by qualified technicians. Should the camera or AC adapter break open as the result of a fall or other accident. take the product to a Nikon-authorized service representative for inspection. after unplugging the product and/or removing the batteries.

#### Do not use the camera or AC adapter in the presence of flammable gas

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

#### A Handle the camera strap with care

Never place the strap around the neck of an infant or child

#### 🔺 Keep out of reach of children

Particular care should be taken to prevent infants from putting the batteries or other small parts into their mouths.

▲ Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use

Parts of the devices become hot. Leaving the devices in direct contact with the skin for extended periods may result in low-temperature burns.

▲ Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight

Failure to observe this precaution could cause damage or fire.

#### ▲ Observe caution when handling batteries

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Before replacing the batteries, turn the product off. If you are using an AC adapter, be sure it is unplugged.
- Use only the batteries approved for use in this product (III 13). Do not combine old and new batteries or batteries of different makes or types.
- When charging Nikon EN-MH2 rechargeable Ni-MH batteries, use only the specified charger and charge the batteries four at a time. When replacing the batteries with EN-MH2-B2 batteries (available separately), purchase two sets (total of four batteries).
- The EN-MH2 rechargeable batteries are for use with Nikon digital cameras only, and are compatible with COOLPIX L330.
- Insert batteries in the correct orientation.
- Do not short or disassemble batteries or attempt to remove or break battery insulation or casing.
- Do not expose batteries to flame or to excessive heat.

- Introduction
- Do not immerse in or expose to water.
- Do not transport or store with metal objects such as necklaces or hairpins.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when no charge remains.
- Discontinue use immediately should you notice any change in the batteries, such as discoloration or deformation.
- If liquid from damaged batteries comes in contact with clothing or skin, rinse immediately with plenty of water.
- ▲ Observe the following precautions when handling the Battery Chargers (available separately)
- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.

- Do not handle the power cable or go near the battery charger during lightning storms. Failure to observe this precaution could result in electric shock.
- Do not damage, modify, forcibly tug or bend the power cable, place it under heavy objects, or expose it to heat or flame. Should the insulation be damaged and the wires become exposed, take it to a Nikonauthorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug or battery charger with wet hands. Failure to observe this precaution could result in electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or with DCto-AC inverters. Failure to observe this precaution could damage the product or result in overheating or fire.

#### Use appropriate cables

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

#### M Handle moving parts with care

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

#### ▲ CD-ROMs

The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

#### Observe caution when using the flash

Using the flash close to your subject's eyes could cause temporary visual impairment. The flash should be no less than 1 m (3 ft 4 in.) from the subject. Particular care should be observed when photographing infants

#### Do not operate the flash with the flash window touching a person or object

Failure to observe this precaution could result in burns or fire

#### Avoid contact with liquid crvstal

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

#### Turn the power off when using inside an airplane or the hospital

Turn the power off while inside the airplane during take off or landing. Do not use wireless network functions

while in the air

Follow the instructions of the hospital when using while in a hospital.

The electromagnetic waves emitted by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital. If you are using an Eye-Fi card, remove it from the camera before boarding an aircraft or entering a hospital.

#### Notices

# Notice for Customers in the U.S.A.

#### Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the ECC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



#### CAUTIONS

#### Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

#### **Interface Cables**

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

# Notice for customers in the State of California

#### WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

#### Wash hands after handling.

Nikon Inc.,

1300 Walt Whitman Road Melville, New York 11747-3064 USA Tel: 631-547-4200

#### Notice for customers in Canada

CAN ICES-3 B / NMB-3 B

#### **Notice for Customers in Europe**

This symbol indicates that electrical and electronic equipment is to be collected separately.



The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the batteries indicates that the batteries are to be collected separately.



The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

#### **Table of Contents**

Introduction ii
Read This First ii
About This Manual iii
Information and Precautionsv
For Your Safety viii
WARNINGS vii
Noticesxii
Parts of the Camera 1
The Camera Body 1
Attaching the Camera Strap and Lens Cap 4
Raising and Lowering the Flash

Applicable Batteries	13
Preparation 2 Insert a Memory Card	. 14
Internal Memory and Memory Cards	15
Preparation 3 Setting the Display Langua	ige,
Date, and Time	. 16
Step 1 Turn the Camera On	. 20
Step 2 Select a Shooting Mode	. 22
Available Shooting Modes	23
Step 3 Frame a Picture	. 24
Using the Zoom	25
Step 4 Focus and Shoot	. 26
The Shutter-release Button	27
Step 5 Play Back Images	. 28
Step 6 Delete Images	. 29

Shooting Features	31
💕 (Easy Auto) Mode	31
Scene Mode (Shooting Suited to Scenes)	
Tips and Notes	33
Smart Portrait Mode	
(Capturing Images of Smiling Faces)	36
🗖 (Auto) Mode	38
Functions That Can Be Set Using the Mult	i
Selector	39
Using the Flash	40
Using the Self-timer	43
Using Macro Mode	45
Adjusting Brightness	
(Exposure Compensation)	46
Default Settings	47
Functions That Can Be Set with the	
MENU Button (Shooting Menu)	49
Options Available in the Shooting Menus	50
Functions That Cannot Be Used	
Simultaneously	51
Focusing	52
Using Face Detection	52
Using Skin Softening	53
Subjects Not Suitable for Autofocus	54
Focus Lock	55

Playback Features	56
Playback Zoom	. 56
Thumbnail Playback, Calendar Display	
Functions That Can Be Set with the	
MENU Button (Playback Menu)	. 58
Recording and Playing Back Movies	59
Recording Movies	. 59
Functions That Can Be Set with the	
MENU Button (Movie Menu)	62
Playing Back Movies	. 63
General Camera Setup	65
Functions That Can Be Set with the	
MENU Button (Setup Menu)	. 65
Connecting the Camera to a TV,	
Computer, or Printer	67
Connection Methods	. 67
Using ViewNX 2	. 69
Installing ViewNX 2	69
Transferring Images to the Computer	72
Viewing Images	74

Reference Section	<b>0-0</b> 1
Using Panorama Assist	
Editing Still Images	
Before Editing Images	
D-Lighting:	
Enhancing Brightness and Contrast	🏍 6
Skin Softening:	
Softening Skin Tones	🏍7
Small Picture:	
Reducing the Size of an Image	🏍 8
Crop: Creating a Cropped Copy	🏍 9
Connecting the Camera to a TV	
(Viewing Images on a TV)	ð <b>ð</b> 10
Connecting the Camera to a Printer	
(Direct Print)	
Connecting the Camera to a Printer	
Printing Individual Images	
Printing Multiple Images	
Editing Movies	<b>6-0</b> 18
The Shooting Menu	
(for 🖸 (Auto) Mode)	0-020
Image Mode Settings	
(Image Size and Quality)	
White Balance (Adjusting Hue)	
Continuous Shooting	
ISO Sensitivity	
Color Options	
The Smart Portrait Menu	
Skin Softening	
Smile Timer	
Blink Proof	0-029

The Playback Menu	
Print Order	
(Creating a DPOF Print Order)	<b>6-6</b> 30
Slide Show	<b>6-6</b> 33
Protect	<b>6-6</b> 34
Rotate Image	<b>6</b> 36
Copy (Copy Between Internal Memo	ry
and Memory Card)	<b>6</b> 37
The Movie Menu	<b>6</b> 38
Movie Options	
Autofocus Mode	<b>66</b> 39
Wind Noise Reduction	<b>6-6</b> 39
The Setup Menu	
Welcome Screen	<b>6-6</b> 40
Time Zone and Date	<b>6-0</b> 41
Monitor Settings	
Print Date (Imprinting Date and Time)	<b>6-0</b> 45
Vibration Reduction	
Motion Detection	<b>6-6</b> 47
AF Assist	
Sound Settings	
Auto Off	
Format Memory/Format Card	
Language	
Video Mode	<b>6-0</b> 51
Blink Warning	<b>6-0</b> 52
Eye-Fi Upload	<b>6-0</b> 53
Reset All	<b>6-0</b> 54
Battery Type	
Firmware Version	<b>6-0</b> 55
Error Messages	
File Names	
Optional Accessories	<b>66</b> 0


Technical Notes and Index	<b>⊘</b> -1
Caring for the Product	. Ø-2
The Camera	. 🍎 2
Batteries	. <b>Ö</b> -4
Memory Cards	. <b>Ö</b> -6
Cleaning and Storage	. Ø 7
Cleaning	. 🝎 7
Storage	. 🛱 7
Troubleshooting	. Ø 8
Specifications	<b>Ö</b> ∙15
Approved Memory Cards	<b>Ö</b> -19
Index	<b>Ö</b> -22


## Parts of the Camera

 
#### **The Camera Body**

1

3

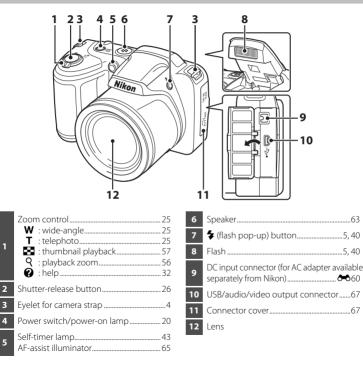

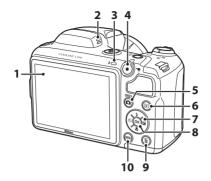



1	Monitor8
2	Microphone
3	Flash lamp42
4	● (▶ movie-record) button
5	🗖 (shooting mode) button
<u> </u>	
6	▶ (playback) button

7	Multi selector
8	🕲 (apply selection) button6
9	🛍 (delete) button29
10	MENU (menu) button6, 49, 58, 62, 65
11	Battery-chamber/ memory card slot cover
12	Tripod socket

#### Attaching the Camera Strap and Lens Cap


Attach the lens cap to the camera strap, and then attach the strap to the camera.









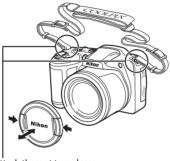

Attach them at two places.

#### Lens Cap

 
When the camera is not in use, protect the lens by attaching the lens cap.

# Parts of the Camera

#### **Raising and Lowering the Flash**

Press the 🗲 (flash pop-up) button to raise the flash.

- See "Using the Flash" (🛄 40) for more information about flash settings.
- Push the flash down gently to lower the flash until it clicks into place when not in use.








#### Using Menus (the MENU Button)

Use the multi selector and 🐼 button to navigate the menus.

#### **1** Press the **MENU** button.

 • The menu is displayed.



#### 2 Press the multi selector ◀.

• The current menu icon is displayed in yellow.



Menu icons

#### **3** Select the desired menu icon.

• The menu is changed.



- 4 Press the 🛞 button.
  - The menu options become selectable.



#### 5 Select a menu option.



**7** Select a setting.

#### 6 Press the 🛞 button.

 The settings for the option you selected are displayed.



#### 8 Press the 🕲 button.

- The setting you selected is applied.
- When you are finished using the menu, press the **MENU** button.





#### Notes About Setting Menu Options


- Certain menu options cannot be set depending on the current shooting mode or the state of the camera. Unavailable options are displayed in gray and cannot be selected.

#### **The Monitor**

The information that is displayed in the monitor during shooting and playback changes depending on the camera's settings and state of use.

By default, information is displayed when the camera is first turned on and when you operate the camera, and turns off after a few seconds (when **Photo info** is set to **Auto info** in **Monitor settings** (C) 65)).

#### **Shooting Mode**

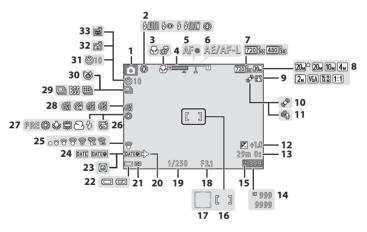


0
a
ţ
9
ŧ
ē
Ca
ž
Ð
a

1	Shooting mode 22, 23
2	Flash mode40
3	Macro mode45
4	Zoom indicator 25, 45
5	Focus indicator26
6	AE/AF-L indicator
7	Movie options62
8	Image mode
9	Vibration reduction icon65
10	Motion detection icon65
11	Wind noise reduction
12	Exposure compensation value46
13	Movie recording time remaining
14	Number of exposures remaining (still images)20
15	Internal memory indicator
16	Focus area26
17	Focus area (face detection, pet detection)26, 35, 36

18	Aperture value
19	Shutter speed27
20	Travel destination icon65
21	ISO sensitivity50
22	Battery level indicator20
23	"Date not set" indicator16, 65
24	Print date65
25	Eye-Fi communication indicator
26	Skin softening50
27	White balance mode50
28	Color options50
29	Continuous shooting mode
30	Blink proof icon50
31	Self-timer indicator43
32	Smile timer50
33	Pet portrait auto release

**Playback Mode** 

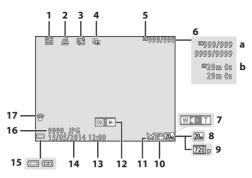


1	Protect icon
2	Print order icon
3	Skin softening icon
4	D-Lighting icon
5	Internal memory indicator15
6	<ul><li>(a) Current image number/ total number of images</li><li>(b) Movie length</li></ul>
7	Volume indicator63
8	Image mode
9	Movie options62, 🖚 38

10	Small picture icon
11	Crop icon56, 🏍9
12	Movie playback guide63
13	Time of recording16
14	Date of recording16
15	Battery level indicator20
	File number and type 🏍 59
17	Eye-Fi communication indicator
.,	


## The Basics of Shooting and Playback
 
#### **Preparation 1 Insert the Batteries**

- Open the battery-chamber/memory card slot cover.
  - Hold the camera upside down to prevent the batteries from falling out.



 • Confirm that the positive (+) and negative (-) terminals are oriented correctly and insert the batteries.



 Slide the cover while securely holding down the area marked 2.







#### **Applicable Batteries**

- Four LR6/L40 (AA-size) alkaline batteries (included batteries)
- Four FR6/L91 (AA-size) lithium batteries
- Four EN-MH2 rechargeable Ni-MH (nickel metal hydride) batteries
- \* EN-MH1 rechargeable Ni-MH batteries cannot be used.

#### Removing the Batteries

- Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.
- The camera, batteries, and memory card may be hot immediately after using the camera.

#### Notes About the Batteries

- Do not combine old and new batteries or batteries of different makes or types.
- Batteries with the following defects cannot be used:



Batteries with peeling



Batteries with insulation that does not cover the area around the negative terminal

Batteries with a flat negative terminal

#### Battery Type

By setting **Battery type** in the setup menu (C) 65) to match the type of batteries inserted in the camera, the batteries can perform more efficiently.

The default setting is the type of batteries included with purchase.

#### Notes About EN-MH2 Rechargeable Batteries

When using EN-MH2 batteries with the camera, charge four batteries at a time using Battery Charger MH-73 (+).

 
#### Alkaline Batteries

Performance of alkaline batteries may vary greatly depending on the manufacturer. Choose a reliable brand.

#### **Preparation 2 Insert a Memory Card**


#### 1 Turn off the camera and open the batterychamber/memory card slot cover.

 Hold the camera upside down to prevent the batteries from falling out.



 • Slide the memory card in until it clicks into place.









#### Be Careful to Insert the Memory Card in Correct Direction

Inserting the memory card upside down or backwards could damage the camera and the memory card.



#### 3 Close the battery-chamber/memory card slot cover.

 Slide the cover while securely holding down the area marked 2.



# The Basics of Shooting and Playback

#### Formatting Memory Cards

The first time you insert a memory card that has been used in another device into this camera, make sure to format it with this camera. Insert the card into the camera, press the **MENU** button, and select **Format card** in the setup menu.

#### **Removing Memory Cards**

Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/ memory card slot cover.

Gently push the memory card into the camera  $(\widehat{1})$  to partially eject the card  $(\widehat{2})$ .

#### High Temperature Caution

The camera, batteries, and memory card may be hot immediately after using the camera.

#### **Internal Memory and Memory Cards**


Camera data, including images and movies, can be saved either in the camera's internal memory or on a memory card. To use the camera's internal memory, first remove the memory card.



#### Preparation 3 Setting the Display Language, Date, and Time

When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed.

 If you exit without setting the date and time, will flash when the shooting screen is displayed.

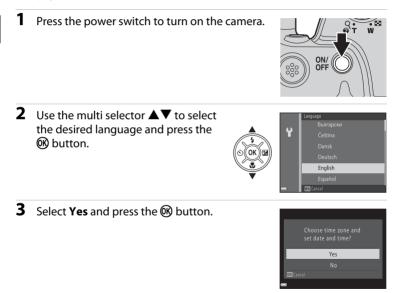

# 4 Select your home time zone and press the 🕅 button.

- To enable daylight saving time, press A.
   When the daylight saving time function is enabled, S is displayed above the map.
   To turn off the daylight saving time function, press V.

#### 

- Select a field: Press ◀► (changes between D, M, Y, h, and m).
- Edit the date and time: Press  $\blacktriangle \nabla$ .
- Confirm the setting: Select  ${\bf m}$  and press the  ${\it left}$  button.
- 7 Select Yes and press the 🛞 button.







 


The Basics of Shooting and Playback

9

# 8 Make sure that the lens cap has been removed and press the D button.

• The shooting-mode selection screen is displayed.



- The camera enters the shooting mode and you can take images in Easy auto mode (C 22).





#### 🖉 Changing the Language Setting and the Date and Time Setting

- You can change these settings using the **Language** and **Time zone and date** settings in the **4** setup menu (C) 65).
- You can enable or disable daylight saving time in the **Y** setup menu by selecting **Time zone and date** followed by **Time zone**. Press the multi selector **>** and then **▲** to enable daylight saving time and move the clock forward one hour, or **▼** to disable daylight saving time and move the clock back one hour.

## The Clock Battery

- The camera's clock is powered by a built-in backup battery. The backup battery is charged when the main batteries are inserted into the camera or when the camera is connected to an optional AC adapter, and it can run the clock for several days after about ten hours of charging.

## Imprinting the Shooting Date on Printed Images

- You can permanently imprint the shooting date on images as they are captured by setting Print date in the setup menu (D) 65).
- If you want the shooting date to be printed without using the **Print date** setting, print using the ViewNX 2 software (C 69).

## Step 1 Turn the Camera On

# Remove the lens cap and press the power switch.

- The monitor turns on.
- To turn the camera off, press the power switch again.



# **2** Check the battery level indicator and the number of exposures remaining.

#### Battery level indicator

Display	Description	
	The battery level is high.	
	The battery level is low.	ې Ba
Battery exhausted.	The camera cannot capture images. Replace the batteries.	Du



#### Number of Exposures Remaining


The number of images that can be taken is displayed.

• III is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.

## Notes About the Flash

When you need to use the flash, such as when shooting in dark locations or when the subject is backlit, press the  $\frac{4}{7}$  (flash pop-up) button to raise the flash ( $\square$  5, 40).

## Interpretation Interpretation

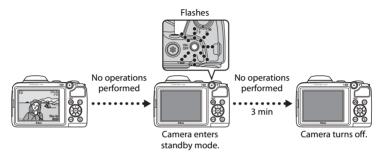

- The time that elapses before the camera enters standby mode is about 30 seconds. The time can be changed using the **Auto off** setting in the setup menu (CC 65).
- While the camera is in standby mode, the monitor turns back on if you perform any of the following operations:
  - → Press the power switch, shutter-release button, (a) (shooting mode) button, (b) (playback) button, or (b) (The movie-record) button

## Step 2 Select a Shooting Mode



Ő

**D** 

#### 

- 🗳 (easy auto) mode is used in this example.
- The shooting mode setting is saved even after the camera is turned off.





## **Available Shooting Modes**

Scene mode

Ň

2

## Easy auto mode

The camera automatically selects the optimum scene mode when you frame an image, making it even easier to take images using settings that suit the scene.

	Camera settings are optimized according to the scene that you select.	
3	Smart portrait	
	When the camera detects a smiling face, you can take an image automatically with pressing the shutter-release button (smile timer). You can also use the skin softeni option to smooth the skin tones of human faces.	
Ô	Auto mode	

Used for general shooting. Settings can be adjusted to suit the shooting conditions and the type of shot you want to capture.



## **III** 36

38

## **Step 3 Frame a Picture**

## **1** Hold the camera steady.

• Keep fingers and other objects away from the lens, flash, AF-assist illuminator, microphone, and speaker.





#### **2** Frame the picture.

• When the camera automatically determines the scene mode, the shooting mode icon changes (CC 31).





## Notes About Easy Auto Mode

- Depending upon shooting conditions, the camera may not select the desired scene mode. In this case, select another shooting mode (CC) 32, 36, 38).
- When the digital zoom is in effect, the scene mode changes to 💁.

#### When Using a Tripod

- We recommend using a tripod to stabilize the camera in the following situations.
  - When shooting in dim lighting
  - When the flash is lowered or when using a shooting mode in which the flash does not fire
  - When using the telephoto setting
- When using a tripod to stabilize the camera during shooting, set **Vibration reduction** to **Off** in the setup menu (CC 65) to prevent potential errors caused by this function.

## Using the Zoom

When you move the zoom control, the zoom lens position changes.

- To zoom in closer to the subject: Move toward  ${\sf T}$  (telephoto)
- To zoom out and view a larger area: Move toward W (wideangle)

 
When you turn the camera on, the zoom moves to the maximum wide-angle position.

- A zoom indicator is displayed at the top of the monitor when the zoom control is moved.
- Digital zoom, which allows you to further magnify the subject up to approximately 4× the maximum optical zoom ratio, can be activated by moving and holding the zoom control toward **T** when the camera is zoomed in to the maximum optical zoom position.

## 🖉 Digital Zoom and Interpolation

While using digital zoom, the image quality decreases due to interpolation when the zoom is increased beyond the  $\Delta$  position. The position of  $\Delta$  moves to the right as the size of an image decreases.

Small image size





## **Step 4 Focus and Shoot**

## **1** Press the shutter-release button halfway.

- When the subject is in focus, the focus area glows green (multiple focus areas can glow green).
- If the focus area or focus indicator flashes, the camera is unable to focus. Modify the composition and try pressing the shutter-release button halfway again.

**2** Without lifting your finger, press the shutter-release button the rest of the way down.



## **The Shutter-release Button**

Press halfway		To set focus and exposure (shutter speed and aperture value), press the shutter-release button lightly until you feel a slight resistance. Focus and exposure remain locked while the shutter- release button is pressed halfway.
Press all the way		Press the shutter-release button all the way to release the shutter and take an image. Do not use force when pressing the shutter-release button, as this may result in camera shake and blurred images. Press the button gently.

 
## Notes About Saving Images and Recording Movies

The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open the battery-chamber/memory card slot cover or remove the batteries or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

## **Step 5 Play Back Images**

## 1 Press the 🕨 (playback) button.

 If you press and hold down the 
 (playback) button while the camera is turned off, the camera turns on in playback mode.



#### Display the previous image



Display the next image



# **2** Use the multi selector to select an image to display.

Press and hold down ▲▼◀▶ to scroll through the images quickly.

 To return to shooting mode, press the D button or shutter-release button.

## **Step 6 Delete Images**

1 Press the finibutton to delete the image currently displayed in the monitor.

- - To exit without deleting, press the MENU button.



Ť

## **3** Select **Yes** and press the **(B)** button.

- Deleted images cannot be recovered.
- To cancel, select **No** and press the ℗ button.



#### **Operating the Erase Selected Images Screen**

#### Use the multi selector ◀► to select an image to be deleted, and then use ▲ to display m.

- To undo the selection, press  $oldsymbol{
  abla}$  to remove  $oldsymbol{ ilde{b}}$  .
- Move the zoom control (
   <sup>(</sup>) 1) toward **T** (**9**) to switch to full-frame playback or **W** (
   <sup>(</sup>) to switch to thumbnail playback.



## 2 Add <sup>™</sup>/<sub>☉</sub> to all images that you want to delete and then press the <sup>™</sup> button to confirm the selection.

• A confirmation dialog is displayed. Follow the instructions displayed in the monitor.

#### Deleting the Last Image Captured While in Shooting Mode

When using shooting mode, press the  $\overleftarrow{\mathbf{m}}$  button to delete the last image that was saved.

#### 31

## **Shooting Features**

## 🗳 (Easy Auto) Mode

The camera automatically selects the optimum scene mode when you frame an image, making it even easier to take images using settings that suit the scene.

#### Enter shooting mode $\rightarrow$ $\square$ (shooting mode) button $\rightarrow$ $\square$ (easy auto) mode $\rightarrow$ M button

When the camera selects a scene mode, the shooting mode icon displayed in the shooting screen changes to that for the scene mode currently enabled.

ž*	Portrait
<b>E</b> ĭ	Landscape
£1°	Night portrait
<b>≞</b> ″	Night landscape
	Close-up
<b>*</b> 2*	Backlighting
٥ï	Other scenes

#### Functions Available in 🗳 (Easy Auto) Mode

- Self-timer (CC 43)
- Exposure compensation (🛄 46)
- Easy auto mode menu (🛄 49)

## Scene Mode (Shooting Suited to Scenes)

When a scene is selected, camera settings are automatically optimized for the selected scene.

Enter shooting mode  $\Rightarrow$   $\square$  (shooting mode) button  $\Rightarrow 2$  (second icon from the top\*)  $\Rightarrow$  $\Rightarrow \Rightarrow \blacksquare \forall \Rightarrow$  select a scene  $\Rightarrow \bigotimes$  button

\* The icon of the last scene selected is displayed.

Portrait (default setting)	Landscape <sup>2</sup>	<ul> <li>Sports<sup>1</sup></li> <li>(         33)     </li> </ul>	Night portrait <sup>3</sup> (CC 33)
Party/indoor <sup>1</sup> (CCC) 33)	Beach <sup>1</sup> Beach <sup>1</sup> Beach <sup>1</sup>	8 Snow <sup>1</sup>	
🔺 Dusk/dawn <sup>2, 3</sup>	Night landscape <sup>2, 3</sup>	Close-up <sup>1</sup> (C) 33)	Food <sup>1</sup> (C) 33)
▲ Museum <sup>1</sup> (□ 34)	Fireworks show <sup>2, 3</sup> (C 34)	Black and white copy <sup>1</sup> (C 34)	Backlighting <sup>1</sup> (CC 34)
Panorama assist <sup>1</sup> (CC 34)	♥ Pet portrait (□ 35)		

<sup>1</sup> The camera focuses on the area in the center of the frame.

<sup>2</sup> The camera focuses at infinity.

<sup>3</sup> Use of a tripod is recommended, because the shutter speed is slow. Set **Vibration reduction** to **Off** in the setup menu (CCC 65) when using a tripod to stabilize the camera during shooting.

#### To View a Description (Help Display) of Each Scene

Select a scene and move the zoom control ( $\square$  1) toward **T** (**\textcircled{O}**) to view a description of that scene. To return to the original screen, move the zoom control toward **T** (**\textcircled{O}**) again.



## **Tips and Notes**

## 💐 Sports

- While the shutter-release button is held all the way down, the camera shoots up to about 4 images continuously at a rate of about 1 fps (when Image mode is set to 200 5152×3864).
- The frame rate for continuous shooting may vary depending upon the current image mode setting, the memory card used, or shooting condition.
- Focus, exposure, and hue are fixed at the values determined with the first image in each series.

#### 📓 Night portrait

• The flash always fires. Raise the flash before shooting.

#### X Party/indoor

• To avoid the effects of camera shake, hold the camera steady. Set **Vibration reduction** to **Off** in the setup menu (CC) 65) when using a tripod to stabilize the camera during shooting.

#### 🏶 Close-up

• Macro mode (CC 45) is enabled and the camera automatically zooms to the closest position at which it can focus.

#### ¶Food

- Macro mode (
   <sup>45</sup>) is enabled and the camera automatically zooms to the closest position at which it can focus.
- You can adjust hue by using the multi selector ▲▼. The hue setting is saved in the camera's memory even after the camera is turned off.



#### 🏛 Museum

- The camera captures a series of up to ten images while the shutter-release button is held all the way
  down, and the sharpest image in the series is automatically selected and saved (BSS (Best Shot
  Selector)).
- The flash does not fire.

#### Fireworks show

• The shutter speed is fixed at about four seconds.

#### Black and white copy

• Use together with macro mode (CC 45) when shooting subjects that are close to the camera.

#### E Backlighting

• The flash always fires. Raise the flash before shooting.

#### 🞞 Panorama assist

- Use this mode when shooting a series of images that can later be joined on a computer to form a single panorama.
- After shooting the first image, shoot the necessary number of images while confirming the seams. To finish shooting, press the 🛞 button.
- Transfer taken images to a computer and use the Panorama Maker software (CC 71) to join them in a single panorama.

See "Using Panorama Assist" (🖚 2) for more information.

#### 🦋 Pet portrait

 
- When you point the camera at a dog or cat, the camera detects the pet's face and focuses on it. By default, the shutter is automatically released when the camera detects a dog or cat face (pet portrait auto release).
- From the screen displayed after 🐝 Pet portrait is selected, select 🕥 Single or 🖵 Continuous.
  - S Single: Whenever the camera detects a dog or cat face, it captures one image.
  - Continuous: Whenever the camera detects a dog or cat face, it captures three images continuously.

### V Pet Portrait Auto Release

- Press the multi selector ◄ (ⓒ) to change the **Pet portrait auto release** settings.
  - 📓: The shutter is automatically released when the camera detects a dog or cat face.
  - OFF: The camera does not release the shutter automatically, even if a dog or cat face is detected. Press the shutter-release button.
- Pet portrait auto release is set to OFF after five bursts have been taken.
- Shooting is also possible by pressing the shutter-release button, regardless of the Pet portrait auto release setting. When U Continuous is selected, you can take images continuously while holding down the shutter-release button all the way.

## Focus Area

- When the camera detects a face, the face is displayed inside a yellow border. When the camera acquires focus on a face displayed inside a double border (focus area), the double border turns green. If no faces are detected, the camera focuses on the subject in the center of the frame.
- In some shooting conditions, the pet face may not be detected and other subjects may be displayed inside a border.



## Smart Portrait Mode (Capturing Images of Smiling Faces)

When the camera detects a smiling face, you can take an image automatically without pressing the shutter-release button (smile timer ( $\square$  50)). You can use the skin softening option to smooth the skin tones of human faces.

Enter shooting mode  $\rightarrow$  🗖 (shooting mode) button  $\rightarrow$  🕑 Smart portrait mode  $\rightarrow$  🛞 button

#### 1 Frame the picture.

- Point the camera at a human face.
- **2** Without pressing the shutter-release button, wait for the subject to smile.
  - If the camera detects that the face framed by the double border is smiling, the shutter is automatically released.
  - · Whenever the camera detects a smiling face, it automatically releases the shutter.

## **3** End automatic shooting.

- Perform one of the operations listed below to end shooting.
  - Set Smile timer to Off.
  - Press the 🖸 button and select a different shooting mode.

#### V Notes About Smart Portrait Mode

Under some shooting conditions, the camera may be unable to detect faces or detect smiles (CC 52). The shutter-release button can also be used for shooting.

#### When the Self-timer Lamp Flashes

When using smile timer, the self-timer lamp flashes when the camera detects a face and flashes quickly immediately after the shutter is released.

#### Functions Available in Smart Portrait Mode

- Flash mode (**Q** 40)
- Self-timer (CC 43)
- Exposure compensation (\$\overline\$ 46)
  Smart portrait menu (\$\overline\$ 49)

## 🗖 (Auto) Mode

Used for general shooting. Settings can be adjusted to suit the shooting conditions and the type of shot you want to capture.

Enter shooting mode  $\rightarrow$  **D** (shooting mode) button  $\rightarrow$  **D** (auto) mode  $\rightarrow$  **W** button

• The camera focuses on the area in the center of the frame.

#### Functions Available in 🗖 (Auto) Mode

- Flash mode ( 40)
- Self-timer (CC 43)
- Macro mode (🖽 45)
- Exposure compensation (CC 46)
- Shooting menu (🛄 49)

## Functions That Can Be Set Using the Multi Selector

The functions that are available vary with the shooting mode, as shown below.



		🗳 (easy auto)	Scene	Smart portrait	🗖 (auto)
1	Flash mode <sup>1</sup> ( 40)	-		$\checkmark^2$	~
2	🍅 Self-timer (🛄 43)	~	2	$\checkmark^2$	~
3	🗶 Macro (🛄 45)	-		-	~
4	Exposure compensation ( <sup>1</sup> 46)	~		V	~

<sup>1</sup> Can be set when the flash is raised. The flash does not fire while it is lowered.

<sup>2</sup> Availability depends on the setting.

 
## Using the Flash

In dark locations or when the subject is backlit, you can take images with the flash by raising the flash.

When using **O** (auto) mode and other shooting modes, you can select the flash mode to match the shooting conditions.

## 1 Press the 🗲 (flash pop-up) button.

- The flash pops up.
- The flash does not fire while it is lowered. (3) is displayed to indicate that the flash does not fire.



**2** Press the multi selector  $\blacktriangle$  (**4**).



# **3** Select the desired flash mode ( $\square$ 41) and press the 🛞 button.

• If a setting is not applied by pressing the 🛞 button within a few seconds, the selection will be canceled.



#### **Available Flash Modes**

#### \$AUTO Auto

The flash fires when necessary, such as in dim lighting.

 The flash mode icon on the shooting screen is displayed only immediately after the setting is made.

#### **\$** Auto with red-eye reduction

Reduce red-eye in portraits caused by the flash (CC 42).

#### 5 Fill flash

The flash fires whenever an image is taken. Use to "fill-in" (illuminate) shadows and backlit subjects.

#### Slow sync

Suited to evening and night portraits that include background scenery. The flash fires when necessary to illuminate the main subject; slow shutter speeds are used to capture background at night or under dim lighting.

## Lowering the Flash

Push the flash down gently to lower the flash until it clicks into place when not in use ( $\square$  5).

## 🖉 The Flash Lamp

The status of the flash can be confirmed by pressing the shutterrelease button halfway.

- On: The flash fires when you press the shutter-release button all the way down.
- Flashing: The flash is charging. The camera cannot shoot images.
- Off: The flash does not fire when an image is taken.

If the battery level is low, the monitor turns off while the flash is charging.

## The Flash Mode Setting

 
- The setting may not be available with some shooting modes.
- The setting applied in 🖸 (auto) mode is saved in the camera's memory even after the camera is turned off.

#### Red-eye Reduction

If the camera detects red eye while saving an image, the affected area is processed to reduce redeye before the image is saved.


Note the following when shooting:

- More time than usual is required to save images.
- Red-eye reduction may not produce the desired results in all situations.
- In some cases, red-eye reduction may be applied to areas of an image unnecessarily. In these cases, select another flash mode and take the image again.



The camera is equipped with a self-timer that releases the shutter about ten seconds after you press the shutter-release button.

 Set **Vibration reduction** to **Off** in the setup menu (CC 65) when using a tripod to stabilize the camera during shooting.






## 2 Select ON and press the ® button.

- If a setting is not applied by pressing the 🛞 button within a few seconds, the selection will be canceled.
- When the shooting mode is **Pet portrait** scene mode,
   (pet portrait auto release) is displayed (
   35). The self-timer cannot be used.




# **3** Frame the picture and press the shutter-release button halfway.

 • Focus and exposure are set.



# **4** Press the shutter-release button the rest of the way down.

 - Countdown starts. The self-timer lamp flashes and then glows steadily about one second before the shutter is released.
- When the shutter is released, the self-timer is set to **OFF**.
- To stop the countdown, press the shutterrelease button again.





## **Using Macro Mode**

1

Use macro mode when taking close-up images. Press the multi selector  $\mathbf{\nabla}$  ( $\mathbf{\mathbf{\Psi}}$ ).

## 2 Select ON and press the 🛞 button.

• If a setting is not applied by pressing the **R** button within a few seconds the selection will be canceled

3 Move the zoom control to set the zoom ratio to a position where  $\bigotimes$  and the zoom indicator glow green.

- When the zoom ratio is set to a position where 🚱 and the zoom indicator glow green, the camera can focus on subjects as close as approximately 10 cm (4 in.) from the lens.
- When the zoom position is in the area indicated by (1), the camera can focus on subjects as close as approximately 1 cm (0.4 in.) from the lens.

## Notes About Using the Flash

 
The flash may be unable to light the entire subject at distances of less than 50 cm (1 ft 8 in.).

#### The Macro Mode Setting

- The setting may not be available with some shooting modes.
- The setting applied in 🗖 (auto) mode is saved in the camera's memory even after the camera is turned off

Shooting Feature:









0 N



## Adjusting Brightness (Exposure Compensation)

You can adjust overall image brightness.





## 

- To brighten the image, set a positive (+) value.
- To darken the image, set a negative (-) value.



#### Exposure Compensation Value

The setting applied in (auto) mode is saved in the camera's memory even after the camera is turned off.

## **Default Settings**

Default settings for each shooting mode are described below.

	Flash <sup>1</sup> (🎞 40)	Self-timer (🎞 43)	Macro (🛄 45)	Exposure compensation ( 46)
💕 (easy auto)	\$AUTO <sup>2</sup>	Off	Off <sup>3</sup>	0.0
Scene				
💈 (portrait)	\$®	Off	Off <sup>4</sup>	0.0
(landscape)	$\mathfrak{S}^4$	Off	Off <sup>4</sup>	0.0
💐 (sports)	$\mathfrak{S}^4$	Off <sup>4</sup>	Off <sup>4</sup>	0.0
📓 (night portrait)	<b>‡⊚</b> ⁵	Off	Off <sup>4</sup>	0.0
💥 (party/indoor)	<b>\$@</b> <sup>6</sup>	Off	Off <sup>4</sup>	0.0
😫 (beach)	\$ AUTO	Off	Off <sup>4</sup>	0.0
😫 (snow)	\$ AUTO	Off	Off <sup>4</sup>	0.0
🚔 (sunset)	$\mathfrak{S}^4$	Off	Off <sup>4</sup>	0.0
當 (dusk/dawn)	$\mathbf{G}^4$	Off	Off <sup>4</sup>	0.0
🖬 (night landscape)	$\mathfrak{B}^4$	Off	Off <sup>4</sup>	0.0
🗱 (close-up)	٢	Off	On <sup>4</sup>	0.0
ff (food)	$\mathfrak{D}^4$	Off	On <sup>4</sup>	0.0
🏛 (museum)	$\mathbf{G}^4$	Off	Off	0.0
(fireworks show)	$\mathfrak{B}^4$	Off <sup>4</sup>	Off <sup>4</sup>	0.04
(black and white copy)	٤	Off	Off	0.0
😰 (backlighting)	<b>\$</b> <sup>4</sup>	Off	Off <sup>4</sup>	0.0
🕅 (panorama assist)	۲	Off	Off	0.0
🦋 (pet portrait)	$\mathfrak{S}^4$	<b>5</b> 7	Off	0.0
🕑 (smart portrait)	\$AUTO <sup>8</sup>	Off <sup>9</sup>	Off <sup>4</sup>	0.0
🗖 (auto)	<b>\$</b> AUTO	Off	Off	0.0

- <sup>1</sup> The setting that is used when the flash is raised.
- <sup>2</sup> The setting cannot be changed. The camera automatically selects the flash mode appropriate for the scene it has selected.
- <sup>3</sup> The setting cannot be changed. Automatically changes to macro mode when the camera selects **Close-up**.
- <sup>4</sup> The setting cannot be changed.
- <sup>5</sup> The setting cannot be changed. The flash mode setting is fixed at fill flash with slow sync and redeye reduction.
- <sup>6</sup> Slow sync with red-eye reduction flash mode may be used.
- $^7$  Self-timer cannot be used. Pet portrait auto release can be turned on or off ( $\square$  35).
- <sup>8</sup> Cannot be used when **Blink proof** is set to **On**.
- <sup>9</sup> Can be set when **Smile timer** is set to **Off**.

## Functions That Can Be Set with the MENU Button (Shooting Menu)

The settings listed below can be changed by pressing the **MENU** button during shooting.



The settings that can be changed vary depending on the shooting mode, as shown below.

	Easy auto mode	Scene	Smart portrait	Auto mode
Image mode*	~	~	~	~
White balance	-	-	-	~
Continuous	-	-	-	~
ISO sensitivity	-	-	-	~
Color options	-	-	-	~
Skin softening	-	-	~	-
Smile timer	-	-	~	-
Blink proof	-	-	~	-

\* The setting is also applied to other shooting modes.

## **Options Available in the Shooting Menus**

Option	Description	
lmage mode	Allows you to set the combination of image size and image quality used when saving images. • Default setting: 200 5152×3864	
White balance	Allows you to adjust white balance to suit the weather conditions or light source in order to make the colors in images match what you see with your eyes. • Default setting: <b>Auto</b>	
Continuous	Allows you to select single or continuous shooting. <ul> <li>Default setting: Single</li> </ul>	<b>6-0</b> 25
ISO sensitivity	Allows you to control the camera's sensitivity to light. • Default setting: <b>Auto</b> When <b>Auto</b> is selected, <b>(SO)</b> is displayed in the monitor while shooting if ISO sensitivity increases.	
Color options	Allows you to change the color tones of images.  • Default setting: Standard color	
Skin softening	Allows you to make the skin tones in human faces smoother. • Default setting: <b>On</b>	
Smile timer	Allows you to select whether or not the camera automatically releases the shutter when it detects a human smiling face. <ul> <li>Default setting: <b>On</b></li> </ul>	
Blink proof	The camera automatically releases the shutter twice with every shot and saves one image in which the subject's eyes are open. • Default setting: <b>Off</b>	<b>6</b> 29

## Functions That Cannot Be Used Simultaneously

Some functions cannot be used with other menu options.

Restricted function	Option	Description		
Flash mode	Continuous (🛄 50)	When a setting other than <b>Single</b> is selected, the flash cannot be used.		
	Blink proof (🛄 50)	When <b>Blink proof</b> is set to <b>On</b> , the flash cannot be used.		
Self-timer	Smile timer (🛄 50)	When <b>Smile timer</b> is selected, the self-timer cannot be used.		
Digital zoom	Continuous (🎞 50)	When <b>Multi-shot 16</b> is selected, digital zoom cannot be used.		
Image mode	Continuous (🎞 50)	When <b>Multi-shot 16</b> is selected, the <b>Image mode</b> setting is fixed at <b>Su</b> (image size: 2560 × 1920 pixels).		
White balance	Color options (踊 50)	When <b>Black-and-white</b> , <b>Sepia</b> , or <b>Cyanotype</b> is selected, the <b>White balance</b> setting is fixed at <b>Auto</b> .		
Continuous	Self-timer (🛄 43)	When the self-timer is used, the setting changes to <b>Single</b> .		
ISO sensitivity	Continuous (🛄 50)	When <b>Multi-shot 16</b> is selected, the <b>ISO sensitivity</b> setting is automatically specified according to the brightness.		
	Flash mode (🛄 40)	When the flash fires, Motion detection is disabled.		
Motion detection	Continuous (🎞 50)	When <b>Multi-shot 16</b> is selected, <b>Motion detection</b> is disabled.		
	ISO sensitivity (踊 50)	When the ISO sensitivity is set to any setting other than <b>Auto</b> , <b>Motion detection</b> is disabled.		
Shutter sound	Continuous (🛄 50)	When a setting other than <b>Single</b> is selected, the shutter sound is disabled.		

 
## Focusing

The focus area varies depending on the shooting mode.

## **Using Face Detection**

In the following shooting modes, the camera uses face detection to automatically focus on human faces.

- 🗳 (easy auto) mode (🕮 31)
- Portrait and Night portrait in scene mode (
   32)
- Smart portrait mode (🛄 36)



If the camera detects more than one face, a double border is displayed around the face that the camera focuses on, and single borders are displayed around the other faces.

If the shutter button is pressed halfway when no faces are detected:

- In **Portrait** and **Night portrait** scene modes, or in smart portrait mode, the camera focuses on the area in the center of the frame.

## Notes About Face Detection

- The camera's ability to detect faces depends on a variety of factors, including the direction in which the faces are looking.
- The camera may be unable to detect faces in the following situations:
  - When faces are partially hidden by sunglasses or otherwise obstructed
  - When faces take up too much or too little of the frame

### **Using Skin Softening**

When the shutter is released while using one of the shooting modes listed below, the camera detects human faces and processes the image to soften facial skin tones (up to three faces).

- Smart portrait mode (🛄 36)
- Portrait or Night portrait in 🗳 (easy auto) mode (🛄 31)
- Portrait or Night portrait in scene mode (
   32)

Skin softening can also be applied to saved images (🛄 58, 🖚7).

#### Notes About Skin Softening

- It may take more time than usual to save images after shooting.
- Under some shooting conditions, the desired skin softening results may not be achieved, and skin softening may be applied to areas of the image where there are no faces.

## **Subjects Not Suitable for Autofocus**

The camera may not focus as expected in the following situations. In some rare cases, the subject may not be in focus despite the fact that the focus area or the focus indicator glows green:

- Subject is very dark
- Objects of sharply differing brightness are included in the scene (e.g. the sun behind the subject makes that subject appear very dark)
- No contrast between the subject and surroundings (e.g. a portrait subject wearing a white shirt is standing in front of a white wall)
- Several objects are at different distances from the camera (e.g. the subject is inside a cage)
- Subjects with repeating patterns (window blinds, buildings with multiple rows of similarly shaped windows, etc.)
- Subject is moving rapidly

In the situations noted above, try pressing the shutter-release button halfway to refocus several times, or focus on another subject positioned at the same distance from the camera as the actual desired subject, and use focus lock ( $\square$  55).

 
### **Focus Lock**

Focus lock shooting is recommended when the camera does not activate the focus area that contains the desired subject.

## 1 Select 🖸 (auto) mode (🛄 38).

- **2** Position the subject in the center of the frame and press the shutter-release button halfway.
  - Confirm that the focus area glows green.
  - · Focus and exposure are locked.
- **3** Without lifting your finger, recompose the picture.
  - Make sure to maintain the same distance between the camera and the subject.
- **4** Press the shutter-release button the rest of the way down to take the picture.









## **Playback Features**

## Playback Zoom

Moving the zoom control toward  ${\rm T}\,(\!Q\!)$  in full-frame playback mode (  $\square$  28) zooms in on the image.



Image is displayed full-frame.

Image is zoomed in.

- You can change the zoom ratio by moving the zoom control toward W ( $\mathbf{E}$ ) or T ( $\mathbf{Q}$ ).
- To view a different area of the image, press the multi selector ▲▼◀▶.
- If you are viewing an image that was captured using face detection or pet detection, the camera zooms in on the face detected at the time of shooting (except when viewing an image with an image size that is less than 320×240). To zoom in on an area of the image where there are no faces, adjust the magnification rate and then press AVAD.
- When a zoomed image is displayed, press the 
   w
   button to return to full-frame playback
   mode.

#### Cropping Images

When a zoomed image is displayed, you can press the **MENU** button to crop the image to include only the visible portion and save it as a separate file ( >> 9).

## Thumbnail Playback, Calendar Display

Moving the zoom control toward **W** (🔄) in full-frame playback mode (🛄 28) displays images as thumbnails.



- You can change the number of thumbnails displayed by moving the zoom control toward W ( ) or T (Q).
- While using thumbnail playback mode, press the multi selector ▲▼◀▶ to select an image and then press the 
   w button to display that image full-frame.
- While using calendar display mode, press ▲▼▲► to select a date and then press the w button to display the images captured on that day.

#### Notes About Calendar Display

Images captured when the camera's date is not set are treated as images captured on January 1, 2014.

## Functions That Can Be Set with the MENU Button (Playback Menu)

When viewing images in full-frame playback mode or thumbnail playback mode, you can configure the menu operations listed below by pressing the **MENU** button.

Option	Description	
D-Lighting*	Allows you to create copies with enhanced brightness and contrast, brightening dark portions of an image.	<b>6</b> 6
Skin softening*	The camera detects human faces in images and creates a copy with softer facial skin tones.	
Print order	Allows you to select which images are printed, and how many copies of each image are printed, prior to printing.	
Slide show	Allows you to view images in an automatic slide show.	<b>6</b> 33
Protect	Protects selected images from accidental deletion.	<b>6-0</b> 34
Rotate image	Allows you to rotate the displayed image to portrait or landscape orientation.	<b>æ</b> 36
Small picture*	Creates a small copy of images.	<b>20</b> 8
Сору	Allows you to copy images between the internal memory and a memory card.	<b>6</b> 37

\* Edited images are saved as separate files. Some images may not be edited.

## **Recording and Playing Back Movies**

## **Recording Movies**

1

#### Display the shooting screen.

- Check the remaining amount of movie recording time.
- If Photo info in the Monitor settings (
   G) in the setup menu is set to Movie frame+auto info, the area that will be visible in the movie can be confirmed before movie recording starts.



Movie recording time remaining

## **2** Lower the flash ( $\square$ 5).

• Recording movies while the flash is raised may cause the audio to be muffled.

# 3 Press the ● (\*\mathbf{m} movie-record) button to start movie recording.

• The camera focuses on the subject in the center of the frame.





**4** Press the ● (\***T** movie-record) button again to end recording.

#### Maximum Movie Length

Individual movie files cannot exceed 4 GB in size or 29 minutes in length, even when there is sufficient free space on the memory card for longer recording.

- The maximum movie length for a single movie is displayed on the shooting screen.
- Recording may end before either limit is reached if camera temperature becomes elevated.
- The actual movie length may vary depending on the movie content, subject movement, or type of memory card.

#### Notes About Saving Images and Recording Movies

The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open the battery-chamber/memory card slot cover or remove the batteries or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

#### Notes About Movie Recording

- Memory cards with an SD Speed Class rating of 6 or faster are recommended when recording movies (2014). Movie recording may stop unexpectedly when memory cards with a lower Speed Class rating are used.
- There may be some degradation in image quality when digital zoom is used. When switching from optical zoom to digital zoom while recording movies, the zoom operation stops temporarily.
- The sounds of zoom control operation, zoom, autofocus lens drive movement, vibration reduction, and aperture operation when brightness changes may be recorded.
- Smear (3) visible in the monitor with movie recording is recorded with movies. Avoiding bright
  objects such as the sun, reflections of the sun, and electric lights is recommended.
- Depending on the distance to the subject or the amount of zoom applied, subjects with repeating patterns (fabrics, lattice windows, etc.) may have colored stripes (interference patterns, moire, etc.) in them during movie recording and playback. This occurs when the pattern in the subject and the layout of the image sensor interfere with each other; it is not a malfunction.

#### Camera Temperature

- The camera may become warm when shooting movies for an extended period of time or when the camera is used in a hot area.
- If the inside of the camera becomes extremely hot when recording movies, the camera will
  automatically stop recording.

The amount of time remaining until the camera stops recording (@10s) is displayed. After the camera stops recording, it turns itself off.

Leave the camera off until the inside of the camera has cooled.

 
## Notes About Autofocus

Autofocus may not perform as expected (CC 54). Should this occur, try the following:

- 1. Set **Autofocus mode** in the movie menu to **Single AF** (default setting) before starting movie recording.
- 2. Frame another subject—positioned at the same distance from the camera as the intended subject—in the center of the frame, press the (\* movie-record) button to start recording, and then modify the composition.

#### Functions That Can Be Set with the MENU Button (Movie Menu)

#### Enter shooting mode $\rightarrow$ MENU button $\rightarrow$ 🔭 menu icon $\rightarrow$ 🛞 button





Option	Description	
Movie options	Select the movie type. • Default setting: 220 80 720/30p	<b>6</b> 38
Autofocus mode	Select either <b>Single AF</b> , which locks focus when movie recording begins, or <b>Full-time AF</b> , which continues focusing during movie recording. • Default setting: <b>Single AF</b>	<b>æ</b> 39
Wind noise reduction	Set whether or not to reduce wind noise during movie recording. • Default setting: <b>Off</b>	<b>6</b> 39

## **Playing Back Movies**

Press the **>** button to enter playback mode. Movies are indicated by the movie options icon ( $\square$  62). Press the 🛞 button to play back movies.

• To adjust the volume, move the zoom control (QQ 1).





#### **Functions Available During Playback**

Playback controls are displayed in the monitor.

The operations listed below can be performed by using the multi selector  $\blacktriangleleft$  to select a control and then pressing the B button.



lcon		Description	
*	Hold d	Hold down the 🔀 button to rewind the movie.	
₩	Hold d	Hold down the 🛞 button to advance the movie.	
	Pause	Pause playback. The operations listed below can be performed while paused.	
	-	Rewind the movie one frame. Hold down the 🞯 button for continuous rewinding.	
	₩	Advance the movie one frame. Hold down the 👀 button for continuous advancing.	
		Resume playback.	
,	I.	Extract the desired portion of a movie and save it as a separate file (🗢 18).	
	Return	to full-frame playback mode.	
	*	Image: state	

#### **Deleting movies**

To delete a movie, select the desired movie in full-frame playback mode (CC 28) or thumbnail playback mode (CC 57) and press the **f** button (CC 29).

## **General Camera Setup**

## Functions That Can Be Set with the MENU Button (Setup Menu)

#### Press the MENU button $\rightarrow$ $\clubsuit$ (setup) menu icon $\rightarrow$ M button

The settings of the menu options listed below can be configured.




Option	Description	
Welcome screen	Allows you to select whether or not the welcome screen is displayed when the camera is turned on.	<b>6</b> 40
Time zone and date	Allows you to set the camera clock.	
Monitor settings	Allows you to adjust photo information display and monitor brightness settings.	<b>6-6</b> 43
Print date	Allows you to imprint the shooting date and time on images.	<b>6</b> 45
Vibration reduction	Allows you to select the vibration reduction setting used when shooting.	<b>6</b> 46
Motion detection	Allows you to set whether or not the camera automatically increases the shutter speed to reduce blurring caused by camera shake if motion is detected when shooting still images.	<b>6-0</b> 47
AF assist	Allows you to enable or disable the AF-assist illuminator.	<b>6</b> 48
Sound settings	Allows you to adjust sound settings.	<b>6-6</b> 48
Auto off	Allows you to set the amount of time that passes before the monitor turns off to save power.	<b>6-6</b> 49

Option	Description	
Format memory/ Format card	Allows you to format the internal memory or the memory card.	<b>6</b> 50
Language	Allows you to change the camera's display language.	<b>60</b> 51
Video mode	Allows you to adjust TV-connection settings.	<b>640</b> 51
Blink warning	Allows you to set whether or not closed eyes are detected when taking images of people using face detection.	<b>6</b> 52
Eye-Fi upload	Allows you to set whether or not to enable the function for sending images to a computer using a commercially available Eye-Fi card.	<b>∞</b> 53
Reset all	Allows you to reset the camera's settings to their default values.	<b>66</b> 54
Battery type	Change this setting to match the type of batteries that are inserted in the camera.	<b>60</b> 55
Firmware version	View the current camera firmware version.	<b>60</b> 55

## Connecting the Camera to a TV, Computer, or Printer

## **Connection Methods**

You can enhance your enjoyment of images and movies by connecting the camera to a TV, computer, or printer.

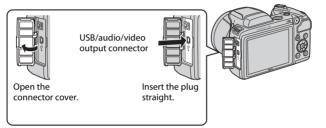

- Before connecting the camera to an external device, make sure the remaining battery level is sufficient and turn the camera off. Before disconnecting, make sure to turn the camera off.
- If the AC Adapter EH-67 (available separately) is used, this camera can be powered from an
  electrical outlet. Do not use any other make or model of AC adapter as it may cause the
  camera to heat up or malfunction.
- For information about the connection methods and subsequent operations, refer to the documentation included with the device in addition to this document.



Images and movies captured with the camera can be viewed on a TV. Connection method: Connect the video and audio plugs of the optional audio video cable to the TV's input jacks.

#### Viewing and organizing images on a computer

- You can transfer images to a computer to perform simple retouching and manage image data.
- Connection method: Connect the camera to the computer's USB port with the included USB cable.
- Before connecting to a computer, install ViewNX 2 on the computer (C 69).

#### Printing images without using a computer

- If you connect the camera to a PictBridge-compatible printer, you can print images without using a computer.
- Connection method: Connect the camera directly to the printer's USB port with the USB cable.

**F** 69

**6**12

## Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images.

Install ViewNX 2 using the included ViewNX 2 CD-ROM.



### **Installing ViewNX 2**

• An Internet connection is required.

#### **Compatible Operating Systems**

#### Windows

Windows 8.1, Windows 7, Windows Vista, Windows XP

#### Mac

OS X 10.9, 10.8, 10.7

Refer to the Nikon website for details on system requirements, including the latest information on operating system compatibility.

## **1** Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.

- Windows: If instructions for operating the CD-ROM are displayed in the window, follow the
  instructions to proceed to the installation window.
- Mac: When the ViewNX 2 window is displayed, double-click the Welcome icon.

## **2** Select a language in the language selection dialog to open the installation window.

- If the desired language is not available, click **Region Selection** to choose a different region and then choose the desired language (the **Region Selection** button is not available in the European release).
- Click Next to display the installation window.

Nikon s	Nikon ®	ViewNX2
Welcome to the world of Nilson digital photography. Please select your language from the drop-down list.		Typical Installation (Recommended Custom Installation
(indah -	and the	All necessary software will be installed, including ViewKX 2 for the transfer, trowsing, cdting, and sharing of photos. An Internet connection is required.
Region Solostion Next Ext		Installation Guide Exit

#### **3** Start the installer.

- We recommend clicking Installation Guide in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click Typical Installation (Recommended) in the installation window.

#### **4** Download the software.

- When the Software Download screen is displayed, click I agree Begin download.
- · Follow the on-screen instructions to install the software.

## 5 Exit the installer when the installation completion screen is displayed.

- Windows: Click Yes.
- Mac: Click OK.

The following software is installed:

- ViewNX 2 (consisting of the three modules below)
  - Nikon Transfer 2: For transferring images to the computer
  - ViewNX 2: For viewing, editing, and printing transferred images
  - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama photo using a series of images shot in panorama assist scene mode)

 
**6** Remove the ViewNX 2 CD-ROM from the CD-ROM drive.

#### **Transferring Images to the Computer**

#### 1 Choose how images will be copied to the computer.

Choose one of the following methods:

• Direct USB connection: Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the USB cable. Turn the camera on. To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.



- SD card slot: If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader**: Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

• When using Windows 7

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

 Under Import pictures and videos, click Change program. A program selection dialog will be displayed; select Import File using Nikon Transfer 2 and click OK.

2 Double-click Import File.

💭 🔞 e Centerfred e Nederland beed e Selos anthe	s + 100 - 10
MONEY COURS IN T	
Salaran and the sector	Most proves and video Two to prove and water here paradour to get a remptor Concernance

If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

#### Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

#### **2** Transfer images to the computer.

• Click Start Transfer.



• At default settings, all the images on the memory card will be copied to the computer.

### **3** Terminate the connection.

If the camera is connected to the computer, turn the camera off and disconnect the USB
cable. If you are using a card reader or card slot, choose the appropriate option in the
computer operating system to eject the removable disk corresponding to the memory card,
and then remove the card from the card reader or card slot.

### **Viewing Images**

#### Start ViewNX 2.

- Images are displayed in ViewNX 2 when transfer is complete.
- Consult online help for more information on using ViewNX 2.



#### Starting ViewNX 2 Manually

- Windows: Double-click the ViewNX 2 shortcut on the desktop.
- Mac: Click the ViewNX 2 icon in the Dock.



The Reference Section provides detailed information and hints about using the camera.

### Shooting

Using Panorama Assist ......

#### Playback

Editing Still Images
Connecting the Camera to a TV (Viewing Images on a TV)
Connecting the Camera to a Printer (Direct Print)
Editing Movies

#### Menu

The Shooting Menu (for 🗖 (Auto) Mode)	
The Smart Portrait Menu	
The Playback Menu	
The Movie Menu	
The Setup Menu	

#### **Additional Information**

Error Messages	
File Names	
Optional Accessories	

## **Using Panorama Assist**

Using a tripod makes the composition easier. Set Vibration reduction (+46) to Off in the setup menu when using a tripod to stabilize the camera.

Enter shooting mode  $\rightarrow$   $\square$  (shooting mode) button  $\rightarrow$   $\cancel{2}$  (second icon from the top\*)  $\rightarrow$  $\blacktriangleright \rightarrow \land \lor \rightarrow \blacksquare$  (panorama assist)  $\rightarrow \Subset$  button

\* The icon of the last scene selected is displayed.

#### 1 Use the multi selector $\mathbf{A} \mathbf{\nabla} \mathbf{\Phi}$ to select the direction in which images are joined, and press the 🛞 button.

- Apply flash mode (C 40), self-timer (C 43), macro mode (1445), and exposure compensation (1446) settings in this step, if necessarv.
- Press the 🕅 button to reselect the direction.

#### 2 Frame the first edge of the panorama scene, and take the first image.

- The camera focuses on the area in the center of the frame.
- About 1/3 of the image will be displayed as translucent.







#### **3** Shoot the next image.

 Match the outline of the next image so that 1/3 of the frame overlaps the previous image, and press the shutter-release button.

# 4 Press the 🛞 button when shooting is completed.

• The camera returns to step 1.

#### Notes About Panorama Assist

- The panorama series is terminated if the auto off function ( + 049) triggers the standby mode during shooting. To prevent this, setting a longer time for the auto off function is recommended.
- Images cannot be deleted while shooting in panorama assist mode. When shooting a new image, return to step 1 and start over again.

#### AE/AF=L (Exposure Lock) Indicator

When using panorama assist mode, all images in the panorama have the same exposure, white balance, and focus as the first image of the panorama.

When the first image is shot, AE/AF=L is displayed in the monitor to indicate that exposure, white balance, and focus are locked.







#### 🖉 Panorama Creation with Panorama Maker

Transfer images to a computer (CC 72) and use Panorama Maker to join them in a single panorama.

- Panorama Maker can be installed on a computer using the included ViewNX 2 CD-ROM (CC 69).
- For more information on using Panorama Maker, refer to the on-screen instructions and help information contained in Panorama Maker.

## **Editing Still Images**

#### **Before Editing Images**

You can easily edit images on this camera. Edited copies are saved as separate files.

• Edited copies are saved with the same shooting date and time as the original.

#### Restrictions on Image Editing

An image can be edited up to ten times.

### **D-Lighting: Enhancing Brightness and Contrast**

Press the  $\blacktriangleright$  button (playback mode)  $\rightarrow$  select an image  $\rightarrow$  MENU button  $\rightarrow$  D-Lighting  $\rightarrow$  W button

## Use the multi selector $\blacktriangle \nabla$ to select **OK** and press the @ button.

- The edited version is displayed on the right.
- To exit without saving the copy, select Cancel and press the w button.



Press the  $\blacktriangleright$  button (playback mode)  $\rightarrow$  select an image  $\rightarrow$  MENU button  $\rightarrow$  Skin softening  $\rightarrow$  W button

#### 

- The confirmation dialog is displayed with the face to which the effect was applied enlarged in the monitor.
- To exit without saving the copy, press ◀.

#### **2** Preview the result and press the **®** button.

- Skin tones of up to 12 faces, in the order of that closest to the center of the frame, are softened.
- If more than one face was processed, use 
  to display a different face.
- Press the **MENU** button to adjust the amount of effect applied. The monitor display returns to that shown in step 1.

#### Notes About Skin Softening

- Skin softening cannot be applied if no faces are detected in the image.
- Depending upon the direction in which faces are looking, or the brightness of faces, the camera may be unable to accurately detect faces, or the skin softening function may not perform as expected.







#### Small Picture: Reducing the Size of an Image

- 1 Use the multi selector ▲▼ to select the desired copy size and press the 🕲 button.
  - For images taken at an image mode setting of
     5120×2880, only 640×360 is displayed.



## 2 Select Yes and press the ® button.

 An edited copy is created (compression ratio of approximately 1:16).



#### Notes About Small Picture

Images with an aspect ratio of 1:1 cannot be edited.

## **Crop: Creating a Cropped Copy**

- 1 Move the zoom control to enlarge the image (🛄 56).
- 2 Refine copy composition and press the MENU button.
  - Move the zoom control toward T (Q) or W (➡) to adjust the zoom ratio. Set a zoom ratio at which . It is displayed.
  - Use the multi selector ▲▼◀► to scroll the image so that only the portion to be copied is visible in the monitor.
- **3** Select **Yes** and press the **(B)** button.
  - An edited copy is created.





#### 🖉 Image Size

When the image size of the cropped copy is 320 × 240 or smaller, the image is displayed at a smaller size during playback.

#### Cropping the Image in Its Current "Tall" Orientation

 
Use the **Rotate image** option (**\*3**6) to rotate the image so that it is displayed in landscape orientation. After cropping the image, rotate the cropped image back to "tall" orientation.

## Connecting the Camera to a TV (Viewing Images on a TV)


Connect the camera to a TV using the audio/video cable (🖚 60) to play back images on the TV.

#### **1** Turn off the camera and connect it to the TV.

Make sure that the plugs are properly oriented. Do not insert or remove the plugs at an
angle when connecting or disconnecting them.



 - **2** Set the TV's input to external video input.
  - See the documentation provided with your TV for details.
- 3 Hold down the ► button to turn on the camera.
  - Images are displayed on the TV.
  - The camera monitor does not turn on.




#### If Images Are Not Displayed on the TV

Make sure that Video mode (🗢 51) in the setup menu conforms to the standard used by your TV.

## **Connecting the Camera to a Printer (Direct Print)**

Users of PictBridge-compatible printers can connect the camera directly to the printer and print images without using a computer.

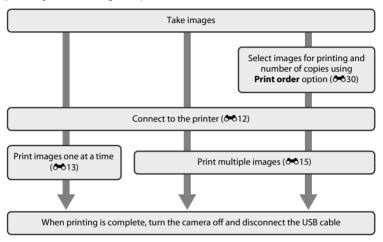

#### **Connecting the Camera to a Printer**

 
#### **1** Turn off the camera.

## **2** Turn on the printer.

Check printer settings.

### **3** Connect the camera to the printer using the USB cable.

Make sure that the plugs are properly oriented. Do not insert or remove the plugs at an
angle when connecting or disconnecting them.



**Reference Section** 

#### **4** Turn on the camera.

- The PictBridge startup screen (1) is displayed in the camera monitor, followed by the Print selection screen (2).



### **Printing Individual Images**

00 button.

- **1** Use the multi selector to select the desired image and press the 🕅 button.
  - Move the zoom control toward **W** (**EB**) to switch to thumbnail playback or T(Q) to switch to full-frame plavback.

3 Select the desired number of copies (up to nine) and press the 🕅 button.

4 Select **Paper size** and press the **(B)** button.













- To apply the paper size setting configured on the printer, select **Default** as the paper size option.
- The paper size options available on the camera vary depending on the printer that you use.

### 6 Select Start print and press the 🛞 button.

- Printing starts.
- To cancel printing, press the 🛞 button.





## **Printing Multiple Images**

1 When the **Print selection** screen is displayed, press the **MENU** button.



2 Use the multi selector ▲▼ to select Paper size and press the <sup>®</sup> button.

• To exit the print menu, press the MENU button.

 


Default

16

**3** Select the desired paper size and press the w button.

- To apply the paper size setting configured on the printer, select **Default** in the paper size option.
- The paper size options available on the camera vary depending on the printer that you use.





Select images (up to 99) and the number of copies (up to nine) of each.

- Use the multi selector ◀► to select images, and use ▲▼ to specify the number of copies to be printed.
- Images selected for printing are indicated by and the numeral indicating the number of copies to be printed. If no copies have been specified for images, the selection is canceled.



- Move the zoom control toward  ${\sf T}({\sf Q})$  to switch to full-frame playback or  ${\sf W}({\scriptsize \hbox{\rm E}})$  to switch to thumbnail playback.
- Press the 🛞 button when setting is complete.
- When the screen shown on the right is displayed, select Start print and press the B button to start printing.



#### Print all images

One copy each of all images saved in the internal memory, or on the memory card, is printed.

 When the screen shown on the right is displayed, select Start print and press the W button to start printing.



#### DPOF printing

Print images for which a print order was created using the **Print order** option (**\*\***30).

• When the screen shown on the right is displayed, select Start print and press the 🛞 button to start printing.

To view the current print order, select View images and press the 🛞 button. To print images, press the 🛞 button again.

	DPOF printing
ĸ	5 prints
	Start print
	View images
-	Cancel

#### More Information

See "Printing Images of Size 1:1" (5021) for more information.

## **Editing Movies**

The desired portions of a recorded movie can be saved as a separate file.

- 1 Play back the desired movie and pause at the start point of the portion that is to be extracted ( 64).
- 2 Use the multi selector ◀► to select the ISI control, and then press the ISI button.



3 Use ▲▼ to select the ½C control (choose start point).

- Use to move the start point.
- To cancel editing, select 
   (return), and press the 
   w
   button.



- 4 Use ▲▼ to select 🐰 (choose end point).
  - Use 🔶 to move the end point.



## 5 Use ▲▼ to select 🖆 (Save) and press the i button.

• Follow the instructions on the screen to save the movie.



## Notes About Movie Editing

- Use batteries with a sufficient amount of charge remaining to prevent the camera from turning off during editing. When the battery level indicator is 📼, movie editing is not possible.
- A movie that was created by editing cannot be trimmed again.
- The actual trimmed portion of a movie may differ slightly from the portion selected using the start and end points.
- Movies cannot be trimmed so that they are less than two seconds long.

## The Shooting Menu (for 🗖 (Auto) Mode)

## Image Mode Settings (Image Size and Quality)

Enter shooting mode  $\rightarrow$  MENU button  $\rightarrow$  Shooting menu  $\rightarrow$  Image mode  $\rightarrow$   $\bigotimes$  button

Select the combination of image size and compression ratio that is used when saving images. The higher the image mode setting, the larger the size at which images can be printed, and the lower the compression ratio, the higher the quality of the images, but the number of images that can be saved is reduced.

Compression ratio	Aspect ratio (horizontal to vertical)
Approx. 1:4	4:3
Approx. 1:8	16:9
Approx. 1:8	1:1
	Approx. 1:4           Approx. 1:8           Approx. 1:8

\* The total number of pixels captured, and the number of pixels captured horizontally and vertically. Example: 2010 5152×3864 = approx. 20 megapixels, 5152 × 3864 pixels

#### 🖉 Notes About Image Mode

- The image mode setting can also be changed in shooting modes other than 🗖 (auto) mode. The changed setting is also applied to other shooting modes.
- The setting may not be changed when using certain settings of other functions.

#### Number of Images That Can Be Saved

- The approximate number of images that can be saved can be checked in the monitor when shooting (C 20).
- Note that due to JPEG compression, the number of images that can be saved may vary greatly
  depending on the image content, even when using memory cards with the same capacity and
  the same image mode setting. In addition, the number of images that can be saved may vary
  depending on the make of the memory card.
- If the number of exposures remaining is 10,000 or more, the number of exposures remaining display shows "9999".

#### Printing Images of Size 1:1

Change the printer setting to "Border."

The images may not be printed in 1:1 ratio depending on the printer.

## White Balance (Adjusting Hue)

#### Select $\Box$ (auto) mode $\rightarrow$ MENU button $\rightarrow$ White balance $\rightarrow$ M button

Adjust white balance to suit the light source or weather conditions in order to make the colors in images match what you see with your eyes.

• Use **Auto** under most conditions. Change the setting when you want to adjust the hue of the image you are taking.

Option	Description
AUTO Auto (default setting)	White balance is automatically adjusted to suit lighting conditions.
PRE Preset manual	Use when the desired result is not achieved with <b>Auto</b> , <b>Incandescent</b> , etc. (🗢23).
豢 Daylight	White balance adjusted for direct sunlight.
♣ Incandescent	Use under incandescent lighting.
滞 Fluorescent	Use under fluorescent lighting.
Cloudy	Use when taking images under overcast skies.
🕏 Flash	Use with the flash.

Reference Section

#### Notes About White Balance

- Lower the flash when white balance is set to any setting other than  $\operatorname{Auto}$  and  $\operatorname{Flash}$  ( $\square$  5).
- The setting may not be changed when using certain settings of other functions.

#### **Using Preset Manual**

Use the procedure below to measure the white balance value under the lighting used during shooting.

 
- 1 Place a white or gray reference object under the lighting that will be used during shooting.
- 2 Use the multi selector ▲▼ to select **Preset** manual in the White balance menu, and press the <sup>®</sup> button.
  - The camera zooms in to the position for measuring white balance.



## **3** Select Measure.



## **4** Frame the reference object in the measuring window.



Measuring window

## **5** Press the 🛞 button to measure the value.

• The shutter is released and measurement is complete. No image is saved.

## Notes About Preset Manual

A value for flash lighting cannot be measured with **Preset manual**. When shooting using the flash, set **White balance** to **Auto** or **Flash**.

## **Continuous Shooting**

#### Select $\Box$ (auto) mode $\rightarrow$ MENU button $\rightarrow$ Continuous $\rightarrow$ $\otimes$ button

Option	Description
S Single (default setting)	One image is taken each time the shutter-release button is pressed.
u Continuous	<ul> <li>While the shutter-release button is held all the way down, images are captured continuously.</li> <li>The frame rate for continuous shooting is about 1 fps and the maximum number of continuous shots is about 4 (when image mode is set to 3 5152×3864).</li> </ul>
<b>BSS</b> BSS (Best Shot Selector)	While the shutter-release button is held all the way down, the camera captures a series of up to ten images and automatically saves the sharpest image. Use when shooting a stationary subject in a place where flash photography is prohibited and camera shake is likely to occur.
巴 Multi-shot 16	<ul> <li>Each time the shutter-release button is pressed all the way down, the camera captures a series of 16 images and saves it as a single image.</li> <li>The frame rate for continuous shooting is about 30 fps.</li> <li>Image mode is fixed at 5 (image size: 2560 × 1920 pixels).</li> <li>Digital zoom cannot be used.</li> </ul>

#### Notes About Continuous Shooting

- When a setting other than **Single** is selected, the flash cannot be used. Focus, exposure, and white balance are fixed at the values determined with the first image in each series.
- The frame rate for continuous shooting may vary depending upon the current image mode setting, the memory card used, or shooting condition.
- The setting may not be changed when using certain settings of other functions.

## Notes About Multi-shot 16

Smear ( $\overleftrightarrow$ :3) visible in the monitor when shooting with **Multi-shot 16** enabled is saved with images. Avoiding bright objects such as the sun, reflections of the sun, and electric lights when shooting with **Multi-shot 16** enabled is recommended.

#### **ISO Sensitivity**

Select  $\Box$  (auto) mode  $\rightarrow$  MENU button  $\rightarrow$  ISO sensitivity  $\rightarrow$  M button

Higher ISO sensitivity allows darker subjects to be captured. Additionally, even with subjects of similar brightness, images can be taken at faster shutter speeds, and blurring caused by camera shake and subject movement can be reduced.

• When higher ISO sensitivity is set, images may contain noise.

Option	Description
<b>AUTO</b> Auto (default setting)	Sensitivity is automatically selected from the range of ISO 80 to 1600.
80, 100, 200, 400, 800, 1600	Sensitivity is locked at the specified value.

#### Notes About ISO Sensitivity

The setting may not be changed when using certain settings of other functions.

#### ISO Sensitivity Display on the Shooting Screen

When Auto is selected, ISO is displayed if the ISO sensitivity automatically increases.

## **Color Options**

#### Select $\Box$ (auto) mode $\rightarrow$ MENU button $\rightarrow$ Color options $\rightarrow$ $\bigotimes$ button

Make colors more vivid or save images in monochrome.

Option	Description
𝐼 Standard color (default setting)	Use for images exhibiting natural color.
<b>⊘V</b> Vivid color	Use to achieve a vivid, "photoprint" effect.
<b>ℰ₩</b> Black-and-white	Save images in black-and-white.
<b>ØSE</b> Sepia	Save images in sepia tones.
🖉 🕻 Cyanotype	Save images in cyan-blue monochrome.

## Notes About Color Options

The setting may not be changed when using certain settings of other functions.

## **The Smart Portrait Menu**

See "Image Mode Settings (Image Size and Quality)" (+20) for information about Image mode.

#### **Skin Softening**

Enter smart portrait mode  $\rightarrow$  MENU button  $\rightarrow$  Skin softening  $\rightarrow$   $\bigotimes$  button

Option	Description
ତ On (default setting)	When the shutter is released, the camera detects one or more human faces (up to three), and processes the image to soften facial skin tones before saving the image.
Off	Turns skin softening off.

The result of skin softening effect on your subject cannot be confirmed when framing images for shooting. Check the results in playback mode, after taking images.

## **Smile Timer**

#### Enter smart portrait mode $\rightarrow$ MENU button $\rightarrow$ Smile timer $\rightarrow$ $\bigotimes$ button

The camera detects human faces and then automatically releases the shutter whenever a smile is detected.

Option	Description
ত্রাঁ On (default setting)	Enables the smile timer.
Off	Turns the smile timer off.

#### **Blink Proof**

Enter smart portrait mode  $\rightarrow$  MENU button  $\rightarrow$  Blink proof  $\rightarrow$   $\bigotimes$  button

Option	Description
<b>'ថ</b> ∕On	The camera automatically releases the shutter twice with every shot and saves one image in which the subject's eyes are open. If the camera saved an image in which the subject's eyes may have been closed, the dialog shown on the right is displayed for a few seconds. The flash cannot be used.
Off (default setting)	Turns the blink proof off.

## **The Playback Menu**

• See "Editing Still Images" (🗢 5) for information about image editing functions.

#### Print Order (Creating a DPOF Print Order)

Press the  $\blacktriangleright$  button (playback mode)  $\rightarrow$  MENU button  $\rightarrow$  Print order  $\rightarrow$  0 button

If you configure print order settings in advance, you can use them with the printing methods listed below.

- Taking the memory card to a digital photo lab that supports DPOF (Digital Print Order Format) printing.
- Inserting the memory card into a DPOF-compatible printer's card slot.
- Connecting the camera to a PictBridge-compatible printer (♣11).

# 1 Use the multi selector ▲▼ to select **Select** images and press the 🕲 button.



## **2** Select images (up to 99) and the number of copies (up to nine) of each.

- Use the multi selector ◀► to select images, and use ▲▼ to specify the number of copies to be printed.
- Images selected for printing are indicated by **4** and the numeral indicating the number of copies to be printed. If no copies have been specified for images, the selection is canceled.
- Move the zoom control toward  ${\sf T}\,({\sf Q})$  to switch to full-frame playback or  ${\sf W}\,(\textcircled{\sf E})$  to switch to thumbnail playback.
- Press the 🛞 button when setting is complete.

## **3** Select whether or not to print shooting date and shooting information.

- Select **Date** and press the 🕲 button to print the shooting date on all images.
- Select Info and press the 
   Button to print the shutter speed and aperture value on all images.
- Lastly, select **Done** and press the Ø button to complete the print order.





## Notes About Printing Shooting Date and Shooting Information

- Some printers may not be able to print the shooting date and shooting information.
- Shooting information is not printed when the camera is connected to a printer.
- The Date and Info settings are reset each time the Print order option is displayed.
- The date printed is that saved when the image was captured.
- For images taken with the **Print date** ( + 5) option enabled, only the date and time imprinted at the time of shooting are printed, even if the **Print order** date option is enabled for the images.



#### Canceling Existing Print Order

Select Delete print order in step 1 of "Print Order (Creating a DPOF Print Order)" (&30).

#### More Information

See "Printing Images of Size 1:1" ( ☎21) for more information.

## **Slide Show**

#### Press the $\blacktriangleright$ button (playback mode) $\rightarrow$ MENU button $\rightarrow$ Slide show $\rightarrow$ M button

Play back images one by one in an automated "slide show." When movie files are played back in the slide show, only the first frame of each movie is displayed.

## 1 Use the multi selector ▲▼ to select **Start** and press the <sup>®</sup> button.

- The slide show begins.
- To change the interval between images, select Frame intvl, press the W button, and specify the desired interval time before selecting Start.
- To repeat the slide show automatically, select **Loop** and press the 🛞 button before selecting **Start**.



• The maximum playback time is up to about 30 minutes even if **Loop** is enabled.

## 2 Select End or Restart.

 The screen shown on the right is displayed after the slide show ends or is paused.
 To exit the show, select and then press the W button.

To resume the slide show, select  $\blacktriangleright$  and then press the M button.



#### **Operations During Playback**

- Use ◆ to display the previous/next image. Press and hold to rewind/fast forward.
- Press the 🛞 button to pause or end the slide show.

## Protect

#### Press the $\blacktriangleright$ button (playback mode) $\rightarrow$ MENU button $\rightarrow$ Protect $\rightarrow$ M button

The camera protects selected images from accidental deletion.

Select images to protect or cancel protection for previously protected images from the image selection screen (OO35).

Note that formatting the camera's internal memory or the memory card permanently deletes protected files ( $\bigstar$  50).

#### The Image Selection Screen

When an image selection screen such as the one shown on the right is displayed while operating the camera, follow the procedures described below to select the images.




- Move the zoom control (□ 1) toward T (Q) to switch to full-frame playback or W (□) to switch to thumbnail playback.
- When selecting an image for Rotate image or Welcome screen, or when using the Print selection screen to print individual images, only one image can be selected.
   Proceed to step 3.
- 2 Use ▲▼ to select or deselect (or to specify the number of copies).
  - When an image is selected, an icon is displayed below the image. Repeat steps 1 and 2 to select additional images.



 When Selected images is selected, a confirmation dialog is displayed. Follow the instructions displayed in the monitor.



 





## **Rotate Image**

#### Press the $\blacktriangleright$ button (playback mode) $\rightarrow$ MENU button $\rightarrow$ Rotate image $\rightarrow$ 0 button

Specify the orientation in which saved images are displayed during playback. Still images can be rotated 90 degrees clockwise or 90 degrees counterclockwise.

Select an image from the image selection screen (🖚 35). When the Rotate image screen is displayed, press the multi selector **♦** to rotate the image 90 degrees.



Press the 🐼 button to finalize display orientation, and save orientation information with the image.

## Copy (Copy Between Internal Memory and Memory Card)

Press the  $\blacktriangleright$  button (playback mode)  $\rightarrow$  MENU button  $\rightarrow$  Copy  $\rightarrow$  0 button

Copy images between the internal memory and a memory card.

Use the multi selector ▲▼ to select a destination option to which images are copied and press the () button.

**2** Select a copy option and press the 🛞 button.

 
 If you choose the Selected images option, use the image selection screen to specify images (\$35).



- Only files in formats that this camera can record can be copied.
- Operation is not guaranteed with images captured with another make of camera or that have been modified on a computer.
- The Print order (🖚 30) settings configured for images are not copied.

#### Copying to a Memory Card That Contains No Images

When the camera is switched to playback mode, **Memory contains no images.** is displayed. Press the **MENU** button to select **Copy**.







## **The Movie Menu**

### **Movie Options**

Enter shooting mode  $\rightarrow$  MENU button  $\rightarrow \mathbf{R}$  menu icon  $\rightarrow$  Movie options  $\rightarrow \mathbf{W}$  button

Select the desired movie option to record.

• Memory cards (Class 6 or higher) are recommended for recording movies (219).

Option (Image size/Frame rate, File format)	lmage size	Aspect ratio (horizontal to vertical)
720 🗊 720/30p (default setting)	1280 × 720	16:9
480 a 480/30p	640 × 480	4:3

### **Autofocus Mode**

Enter shooting mode  $\rightarrow$  MENU button  $\rightarrow$   $\clubsuit$  menu icon  $\rightarrow$  Autofocus mode  $\rightarrow$   $\circledast$  button

Set how the camera focuses in movie mode.

Option	Description
<b>AF-S</b> Single AF (default setting)	Focus is locked when the ● (* movie-record) button is pressed to start recording. Select this option when the distance between the camera and the subject will remain fairly consistent.
<b>AF-F</b> Full-time AF	Camera focuses continuously. Select this option when the distance between the camera and subject will change significantly during recording. The sound of the camera focusing may be heard in the recorded movie. Use of <b>Single AF</b> is recommended to prevent the sound of the camera focusing from interfering with recording.

#### **Wind Noise Reduction**

Enter shooting mode  $\rightarrow$  MENU button  $\rightarrow$  T menu icon  $\rightarrow$  Wind noise reduction  $\rightarrow$   $\bigotimes$  button

Option	Description
ిి <b>ల్</b> On	Reduces the sound produced when wind passes over the microphone. Other sounds may become difficult to hear during playback.
Off (default setting)	Wind noise reduction is not enabled.

Set whether or not to reduce wind noise during movie recording.

## **The Setup Menu**

#### **Welcome Screen**

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Welcome screen $\rightarrow$ $\circledast$ button

Configure the welcome screen that is displayed when you turn on the camera.

Option	Description	
None (default setting)	Does not display the welcome screen.	
COOLPIX	Displays a welcome screen with the COOLPIX logo.	
Select an image	<ul> <li>Displays an image selected for the welcome screen.</li> <li>The image selection screen is displayed. Select an image (\$35) and press the button.</li> <li>Because a copy of the selected image is saved in the camera, it will be displayed when the camera is turned on, even if the original image is deleted.</li> <li>An image cannot be selected if its aspect ratio is different from that of the screen, or if the image size is extremely small after the small picture or crop function is applied.</li> </ul>	

## Time Zone and Date

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Time zone and date $\rightarrow$ $\circledast$ button

#### Set the camera clock.

Option	Description	
Date and time	<ul> <li>Select an item: Press the multi selector</li> <li>(changes between D, M, Y, h, and m).</li> <li>Edit the date and time: Press ▲▼.</li> <li>Apply the setting: Select m and press the button.</li> </ul>	
Date format	Select Year/Month/Day, Month/Day/Year, or Day/Month/Year.	
Time zone	<ul> <li>Set time zone and daylight saving time.</li> <li>When Travel destination ()→) is set after having set the home time zone ()→, the time difference between the travel destination and the home time zone is automatically calculated, and the date and time are saved for the selected region.</li> </ul>	

#### **Setting the Time Zone**

1 Use the multi selector ▲▼ to select **Time zone** and press the **(**) button.



## 

 The date and time displayed in the monitor changes depending on whether the home time zone or travel destination is selected.

**3** Press ►.

#### **4** Use **•** to select the time zone.

- Press ▲ to enable daylight saving time function, and <sup>®</sup> is displayed. Press ▼ to disable the daylight saving time function.
- Press the 🛞 button to apply the time zone.
- If the correct time is not displayed for the home or travel destination time zone setting, set the appropriate time in Date and time.









## **Monitor Settings**

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Monitor settings $\rightarrow$ $\bigotimes$ button

Option	Description	
Photo info	Set whether or not to display information in the monitor.	
Brightness	Select from five settings.	

#### Photo Info

	Shooting mode	Playback mode
Show info	2 Colle A. 4 10 2010 2010 1500	
Auto info (default setting)	Current settings and operation guide are displayed as in <b>Show info</b> . If no operations are performed for a few seconds, the information is hidden as in <b>Hide info</b> . Information is displayed again when the next operation is performed.	
Hide info		

	Shooting mode	Playback mode
Framing grid+auto info	In addition to information shown with <b>Auto info</b> , a framing grid is displayed to help frame images. The framing grid is not displayed when recording movies.	The current settings or operation guide is displayed as in <b>Auto info</b> .
Movie frame+auto info	In addition to information shown with <b>Auto info</b> , a frame is displayed before recording begins that represents the area that will be captured when recording movies. The movie frame is not displayed when recording movies.	The current settings or operation guide is displayed as in <b>Auto info</b> .

## Print Date (Imprinting Date and Time)

#### MENU button $\rightarrow$ **Y** menu icon $\rightarrow$ Print date $\rightarrow$ 🛞 button

The shooting date and time can be imprinted on the images when shooting, allowing the information to be printed even from printers that do not support date printing ( $\clubsuit$ 32).



Option	Description	
DATE Date	Date is imprinted on images.	
DATE: Date and time	Date and time are imprinted on images.	
Off (default setting)	Date and time are not imprinted on images.	

#### Notes About Print Date

- Imprinted dates form a permanent part of image data and cannot be deleted. The date and time cannot be imprinted on images after they have been captured.
- The date and time cannot be imprinted in the following situations:
  - When using Panorama assist or Pet portrait (when 🖵 Continuous is selected) scene mode
  - When shooting movies
- The imprinted date and time may be difficult to read when using a small image size.

## **Vibration Reduction**

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Vibration reduction $\rightarrow$ M button

Set to reduce the effects of camera shake while shooting.

Set Vibration reduction to Off when using a tripod to stabilize the camera during shooting.

Option	Description
🐌 On (default setting)	Vibration reduction is enabled.
Off	Vibration reduction is disabled.

#### Notes About Vibration Reduction

- After turning on the camera or after switching from playback mode to shooting mode, wait for the shooting mode screen to be displayed completely before taking images.
- Images displayed in the camera monitor immediately after shooting may be displayed blurry.
- Vibration reduction may be unable to completely eliminate the effects of camera shake in some situations.

## **Motion Detection**

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Motion detection $\rightarrow$ M button

Enable motion detection to reduce the effects of subject movement and camera shake when shooting still images.

Option	Description
ి Auto (default setting)	<ul> <li>Motion detection is enabled with some shooting modes or settings, when earlies displayed on the shooting screen.</li> <li>When the camera detects subject movement or camera shake, earlies turns green, and the ISO sensitivity and shutter speed are automatically increased to reduce blurring.</li> <li>Set ISO sensitivity (&lt;26) to Auto in (auto) mode.</li> </ul>
Off	Motion detection is disabled.

#### Notes About Motion Detection

- Motion detection may be unable to eliminate the effects of subject movement and camera shake in some situations.
- Motion detection may be disabled if the subject exhibits significant movement or is too dark.
- The images captured using motion detection may be somewhat "grainy" in appearance.

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ AF assist $\rightarrow$ M button

Enable or disable the AF-assist illuminator which assists autofocus operation.

Option	Description	
<b>AUTO</b> Auto (default setting)	The AF-assist illuminator automatically lights up when the subject is dimly lit. The illuminator has a range of about 4.5 m (14 ft) at the maximum wide-angle position and about 3.0 m (9 ft 10 in.) at the maximum telephoto position. • Note that for some scene modes, the AF-assist illuminator may not light.	
Off	The AF-assist illuminator does not light.	

## **Sound Settings**

#### MENU button $\rightarrow$ $\uparrow$ menu icon $\rightarrow$ Sound settings $\rightarrow$ $\circledast$ button

Option	Description	
Button sound	<ul> <li>When <b>On</b> (default setting) is selected, the camera produces one beep when operations are performed, two beeps when focus is acquired on the subject, and three beeps when an error occurs. The start-up sound is also produced.</li> <li>Sounds are disabled when using <b>Pet portrait</b> scene mode.</li> </ul>	
Shutter sound	<ul> <li>When <b>On</b> (default setting) is selected, the shutter sound is produced when the shutter is released.</li> <li>The shutter sound is not produced when using continuous shooting mode, when recording movies, or when using <b>Pet portrait</b> scene mode.</li> </ul>	

## Auto Off

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Auto off $\rightarrow$ M button

Set the amount of time that elapses before the camera enters standby mode (QQ 21).

Option	Description	
Auto off	Select <b>30 s</b> (default setting), <b>1 min, 5 min</b> , or <b>30 min</b> .	
Sleep mode	If <b>On</b> (default setting) is selected, the camera enters standby mode when there is no change in the brightness of the subject, even before the time selected for <b>Auto off</b> has elapsed. The camera enters standby mode after 30 seconds when <b>Auto off</b> is set to <b>1 min</b> or less, or after one minute when <b>Auto off</b> is set to <b>5 min</b> or more.	

#### Notes About Auto Off

The time that passes before the camera enters standby mode is fixed in the following situations:

- When shooting using Pet portrait auto release: 5 minutes (when auto off is set to 30 s or 1 min)
- When shooting using Smile timer: 5 minutes (when auto off is set to 30 s or 1 min)
- When a menu is displayed: 3 minutes
- When the AC Adapter EH-67 is connected: 30 minutes

## Format Memory/Format Card

#### MENU button $\Rightarrow$ $\clubsuit$ menu icon $\Rightarrow$ Format memory/Format card $\Rightarrow$ 0 button

Use this option to format the internal memory or a memory card.

Formatting the internal memory or memory cards permanently deletes all data. Data that has been deleted cannot be recovered. Make sure to transfer important images to a computer before formatting.

 Do not turn the camera off or open the battery-chamber/memory card slot cover during formatting.

#### Formatting the Internal Memory

Remove the memory card from the camera. The **Format memory** option is displayed in the setup menu.



#### **Formatting Memory Cards**

Insert a memory card in the camera. The **Format card** option is displayed in the setup menu.



#### Language

#### MENU button $\rightarrow$ **Y** menu icon $\rightarrow$ Language $\rightarrow$ $\bigotimes$ button

Select a language for display of camera menus and messages.

#### Video Mode

MENU button  $\rightarrow$  **Y** menu icon  $\rightarrow$  Video mode  $\rightarrow$  **W** button

Adjust settings for connection to a TV.

Select from NTSC and PAL.

Both NTSC and PAL are standards for analog color television broadcasting.

# **Blink Warning**

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Blink warning $\rightarrow$ W button

Select whether or not the camera detects human subjects that have blinked using face detection ( $\bigoplus$  52) when shooting in the following modes:

- 🗳 (easy auto) mode
- Portrait or Night portrait scene mode (
   32)

 
Option	Description	
On	When one or more human subjects may have blinked in an image captured using face detection, the <b>Did someone blink?</b> screen is displayed in the monitor. Check the image and determine whether or not another image should be captured.	
Off (default setting)	Blink warning is disabled.	

#### **The Blink Warning Screen**

Faces detected by the blink warning are displayed inside a border.

The operations described below are available.

- To enlarge the face: Move the zoom control toward T (Q). If more than one face is detected, use the multi selector to select the desired face.
- To switch to full-frame playback: Move the zoom control toward W ( ).



If you press the 🔞 button, or if no operations are performed for a few seconds, the camera returns to shooting mode.

#### Notes About Blink Warning

The blink warning may not function properly in some shooting conditions.

#### MENU button $\rightarrow$ $\Upsilon$ menu icon $\rightarrow$ Eye-Fi upload $\rightarrow$ B button

Select whether or not the camera's Eye-Fi card (available from third-party manufacturers) sends images to your computer.

Option	Description
Enable	Upload images created by the camera to a preselected destination.
🕷 Disable (default setting)	Images are not uploaded.

#### Notes About Eye-Fi Cards

- Note that images will not be uploaded if signal strength is insufficient even if Enable is selected.
- Remove your Eye-Fi card from the camera where wireless devices are prohibited. Signals may be transmitted even if **Disable** is selected.
- Refer to the instruction manual of your Eye-Fi card for more information. In the event of
  malfunction, contact the card manufacturer.
- The camera can be used to turn Eye-Fi cards on and off, but may not support other Eye-Fi functions.
- The camera is not compatible with the Endless Memory function. When it is set on a computer, disable the function. If the Endless Memory function is enabled, the number of images taken may not be displayed correctly.
- Eye-Fi cards are for use only in the country of purchase. Observe all local laws concerning wireless devices.
- Leaving the setting as Enable will result in the batteries being depleted in a shorter period of time.

#### Eye-Fi Communication Indicator

The communication status of the Eye-Fi card in the camera can be confirmed in the monitor ( 8, 10).

- 🕅: Eye-Fi upload is set to Disable.
- 🛜 (lights): Eye-Fi upload enabled; waiting to begin upload.
- 🛜 (flashes): Eye-Fi upload enabled; uploading data.
- 🛜: Eye-Fi upload enabled but no images available for upload.
- 🔞: An error occurred. The camera cannot control the Eye-Fi card.

### **Reset All**

#### MENU button $\rightarrow$ **Y** menu icon $\rightarrow$ Reset all $\rightarrow$ $\bigotimes$ button

When **Reset** is selected, the camera's settings are restored to their default values.

• Some settings, such as Time zone and date or Language, are not reset.

#### Resetting File Numbering

To reset file numbering to "0001", delete all images saved in the internal memory or on the memory card ( $\square$  29) before selecting **Reset all**.

### **Battery Type**

#### MENU button $\rightarrow$ **Y** menu icon $\rightarrow$ Battery type $\rightarrow$ $\bigotimes$ button

To ensure that the camera shows the correct battery level ( 20), select the type that matches the batteries currently in use.

Option	Description	
🖫 Alkaline (default setting)	LR6/L40 (AA-size) alkaline batteries	
ମ୍ଫ୍ୟୁ COOLPIX (Ni-MH)	Nikon EN-MH2 rechargeable Ni-MH (nickel metal hydride) batteries	
躍 Lithium	FR6/L91 (AA-size) lithium batteries	

#### **Firmware Version**

MENU button  $\rightarrow$  **Y** menu icon  $\rightarrow$  Firmware version  $\rightarrow$  **(B)** button

View the current camera firmware version.

# **Error Messages**

Refer to the table below if an error message is displayed.

Display	Cause/Solution	Û
Turn the camera off, remove the lens cap, and turn the camera on.	The lens cap may be attached, or a lens error occurred. Make sure that the lens cap has been removed, and turn the camera off and then on again. If the error persists, contact your retailer or Nikon-authorized service representative.	4, 20
Memory card is write protected.	The write-protect switch is in the "lock" position. Slide the write-protect switch to the "write" position.	-
This card cannot be used.	An error occurred while accessing the memory card.	14,
This card cannot be read.	<ul><li>Check that the terminals are clean.</li><li>Confirm that the memory card is correctly inserted.</li></ul>	<b>Ö</b> 19
Card is not formatted. Format card?	The memory card has not been formatted for use in the camera. Formatting deletes all data saved on the memory card. If you need to keep copies of any images, make sure to select <b>No</b> and save the copies to a computer or other medium before formatting the memory card. Select <b>Yes</b> and press the <b>18</b> button to format the memory card.	<b>ö</b> -6
Not available if Eye-Fi card is locked.	The write-protect switch of the Eye-Fi card is in the "lock" position.	-
	<ul> <li>An error occurred while accessing the Eye-Fi card.</li> <li>Check that the terminals are clean.</li> <li>Confirm that the Eye-Fi card is correctly inserted.</li> </ul>	14
Out of memory.	Delete images or insert a new memory card.	14, 29, 64


Display	Cause/Solution	
Image cannot be saved.	An error occurred while saving the image. Insert a new memory card or format the internal memory or memory card.	€50
	The camera has run out of file numbers. Insert a new memory card or format the internal memory or memory card.	€50
	The image cannot be used for the welcome screen.	<b>6</b> 40
	There is insufficient space to save the copy. Delete images from the destination.	29
lmage cannot be modified.	Select images that support the editing function.	<b>6−0</b> 5, <b>0</b> −13
Cannot record movie.	A time-out error occurred while saving the movie on the memory card. Select a memory card with a faster write speed.	60, <b>炎</b> -19
Memory contains no images.	<ul> <li>There are no images in the internal memory or on the memory card.</li> <li>Remove the memory card from the camera to play back images in the camera's internal memory.</li> <li>To copy the images saved in the camera's internal memory to the memory card, press the MENU button to select Copy in the playback menu.</li> </ul>	15 🍋 37
File contains no image data.	The file was not created or edited with this camera. The file cannot be viewed on this camera. View the file using a computer or the device used to create or edit this file.	_
All images are hidden.	There are no images available for a slide show.	<b>6-0</b> 33
This image cannot be deleted.	The image is protected. Disable protection.	<b>6-6</b> 34

Display	Cause/Solution	m
Raise the flash.	The flash is lowered. Raise the flash when shooting in <b>Night portrait</b> or <b>Backlighting</b> scene mode.	33, 34, 40
Communications error	An error occurred while communicating with the printer. Turn the camera off and reconnect the USB cable.	<b>6</b> 12
System error	An error occurred in the camera's internal circuitry. Turn the camera off, remove and reinsert the batteries, and turn the camera on. If the error persists, contact your retailer or Nikon-authorized service representative.	12, 20
Printer error: check printer status.	After solving the problem, select <b>Resume</b> and press the button to resume printing.*	-
Printer error: check paper.	Load the specified size of paper, select $\mathbf{Resume}$ , and press the $\mathfrak{W}$ button to resume printing.*	-
Printer error: paper jam.	Remove the jammed paper, select <b>Resume</b> , and press the button to resume printing.*	-
Printer error: out of paper.	Load the specified size of paper, select $\mathbf{Resume}$ , and press the $\mathfrak{W}$ button to resume printing.*	-
Printer error: check ink.	There is a problem with the printer's ink. Check the ink, select <b>Resume</b> , and press the 🛞 button to resume printing.*	-
Printer error: out of ink.	Replace the ink cartridge, select <b>Resume</b> , and press the	-
Printer error: file corrupt.	There is a problem with the image file to be printed. Select <b>Cancel</b> and press the 🔞 button to cancel printing.	-

\* See the documentation provided with your printer for further guidance and information.

# **File Names**

Images or movies are assigned file names as follows.

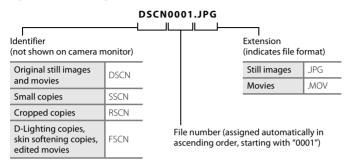

 A new folder is created each time a series of images are captured using panorama assist, and the images are saved in that folder with file numbers starting with "0001."

# **Optional Accessories**

Battery charger, rechargeable batteries*	<ul> <li>Battery Charger MH-73 (includes four EN-MH2 rechargeable Ni-MH batteries)</li> <li>Replacement rechargeable batteries: Rechargeable Ni-MH batteries EN-MH2-B4 (set of four EN-MH2 batteries)</li> </ul>
AC adapter	AC Adapter EH-67
Audio/video cable	Audio Video Cable EG-CP14
Hand strap	Hand Strap AH-CP1

\* When using EN-MH2 rechargeable Ni-MH batteries with the camera, charge the batteries four at a time using Battery Charger MH-73. Also, do not charge batteries at the same time if they have different amounts of charge remaining (2+4). EN-MH1 rechargeable Ni-MH batteries cannot be used.

Availability may vary with country or region.

See our website or brochures for the latest information.



# Technical Notes and Index

Caring for the Product	
The Camera	Žģ-2
Batteries	
Memory Cards	
Memory Cards Cleaning and Storage	ò-7
Cleaning	Q-7
Storage	ÇÖ-7
Troubleshooting	ò-8
Specifications	
Approved Memory Cards	
Index	ò <sup>-</sup> 22

# **Caring for the Product**

### The Camera

To ensure continued enjoyment of this Nikon product, observe the precautions described below in addition to the warnings in "For Your Safety" (
viii-xiv) when using or storing the device.

# Do Not Drop

The product may malfunction if subjected to strong shock or vibration.

### Handle the Lens and All Moving Parts with Care

Do not apply force to the lens, lens cover, monitor, memory card slot, or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.

# Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.

#### Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

#### Keep away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.

# Do Not Point the Lens at Strong Light Sources for Extended Periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the image sensor, producing a white blur effect in photographs.

### V Turn the Product off Before Removing or Disconnecting the Power Source

Do not remove the batteries while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.

#### V Notes About the Monitor

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99%
  of pixels are effective, with no more than 0.01% being missing or defective. Hence while these
  displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is
  not a malfunction and has no effect on images recorded with the device.
- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

# Notes About Smear

White or colored streaks may be visible when bright subjects are framed in the monitor. This phenomenon, known as "smear," occurs when extremely bright light strikes the image sensor; it is characteristic of image sensors and does not indicate a malfunction. Smear may also take the form of partial discoloration in the monitor during shooting. It does not appear in images saved with the camera except in the cases of movies and of images saved with **Multi-shot 16** selected for **Continuous**. When shooting in these modes, we recommend that you avoid bright subjects such as the sun, reflected sunlight, and electric lights.

# Batteries

Be sure to read and follow the warnings in "For Your Safety" (💭 viii-xiv) before use.

#### Notes About Using Batteries

- Used batteries may overheat. Handle with caution.
- Do not use batteries beyond their recommended expiration date.
- Do not turn the camera on and off repeatedly if discharged batteries are inserted in the camera.

# Spare Batteries

We recommend carrying spare batteries depending on where you are shooting. It may be difficult to purchase batteries in certain areas.

### Charging Batteries

If using optional rechargeable batteries, charge the batteries before taking pictures. Batteries are not charged at the time of purchase.

Be sure to read and follow the warnings noted in the operating instructions included with the battery charger.

#### **V** Charging Rechargeable Batteries

- Do not mix batteries with different amounts of charge remaining, or batteries of a different make or model.
- When using EN-MH2 batteries with this camera, charge four batteries at a time using Battery Charger MH-73. Use only Battery Charger MH-73 to charge EN-MH2 batteries.
- When using Battery Charger MH-73, only charge EN-MH2 batteries.
- EN-MH1 rechargeable Ni-MH batteries cannot be used.

# Notes About Rechargeable Ni-MH Batteries

- If you repeatedly charge rechargeable Ni-MH batteries while they still have some charge remaining, the message **Battery exhausted.** may be displayed prematurely when using the batteries. This is due to the "memory effect," in which the amount of charge the batteries can hold decreases temporarily. Use the batteries until there is no charge remaining and they will return to their normal behavior.
- Rechargeable Ni-MH batteries discharge even when not being used. We recommend charging the batteries just before using them.

# Cold Environment Usage

Battery performance decreases in cold environments. When using the camera in cold environments, try not to let the camera and batteries become too cold. The camera may not function if you use discharged batteries in cold environments. Keep spare batteries warm and alternate between two sets of batteries. Batteries that cannot be used because they have become too cold can often be used again when they have been warmed up.

# Battery Terminals

Dirt on the battery terminals can prevent the camera from functioning. Remove dirt from the terminals using a dry cloth.

### Remaining Battery Charge

If you insert discharged batteries into the camera, the camera may indicate that the batteries have adequate charge remaining. This is a characteristic of batteries.

# Recycling

Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations. Cover the battery terminals with plastic tape when recycling.

# **Memory Cards**

- Use only Secure Digital memory cards. See "Approved Memory Cards" (219) for recommended memory cards.
- Observe the precautions noted in the documentation included with your memory card.
- Do not affix labels or stickers to the memory card.
- Do not format the memory card using a computer.
- The first time you insert a memory card that has been used in another device into this camera, be sure to format it with this camera. We recommend formatting new memory cards with this camera before using them with this camera.
- Note that formatting a memory card permanently deletes all images and other data on the memory card. If there is data saved on the memory card that you wish to keep, copy that data to a computer before formatting.
- If the message Card is not formatted. Format card? is displayed when the camera is turned on, the memory card must be formatted. If there is data on the memory card that you do not want to delete, select No and press the button. Copy that data to a computer before formatting. To format the memory card, select Yes.
- Observe the following precautions while formatting the memory card, saving and deleting images, and copying images to a computer, otherwise data or the memory card itself may be damaged.
  - Do not open the battery-chamber/memory card slot cover or remove the memory card or batteries.
  - Do not turn off the camera.
  - Do not disconnect the AC adapter.

# **Cleaning and Storage**

### Cleaning

Do not use alcohol, thinner, or other volatile chemicals.

Lens	Avoid touching glass parts with your fingers. Remove dust or lint with a blower (typically a small device with a rubber bulb attached to one end that is pumped to produce a stream of air out the other end). To remove fingerprints or other stains that cannot be removed with a blower, wipe the lens with a soft cloth, using a spiral motion that starts at the center of them and working toward the edges. If this fails, clean the lens using a cloth lightly dampened with commercial lens cleaner.
Monitor	Remove dust or lint with a blower. To remove fingerprints and other stains, clean the monitor with a soft, dry cloth, being careful not to apply pressure.
Body	Use a blower to remove dust, dirt, or sand, then wipe gently with a soft, dry cloth. After using the camera at the beach or other sandy or dusty environment, wipe off any sand, dust, or salt with a dry cloth lightly dampened with fresh water and dry thoroughly. <b>Note that foreign matter inside the camera could cause damage not</b> <b>covered by the warranty.</b>

# Storage

Turn the camera off when not in use. Be sure that the power-on lamp is off before putting the camera away. Remove the batteries if the camera will not be used for an extended period. Do not store the camera with naphtha or camphor moth balls, or in any of the following locations:

- Next to equipment that produces strong electromagnetic fields, such as televisions or radios
- Exposed to temperatures below –10°C (14°F) or above 50°C (122°F)
- Places that are poorly ventilated or subject to humidity of over 60%

To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting the camera away again. For storing the batteries, follow the precautions in "Batteries" ( $\overset{\circ}{\mathcal{L}}$ 4) in "Caring for the Product" ( $\overset{\circ}{\mathcal{L}}$ 2).

# Troubleshooting

If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon-authorized service representative.

#### Power, Display, Settings Issues

Problem	Cause/Solution	
The camera is on but does not respond.	Wait for recording to end. If the problem persists, turn the camera off. If the camera does not turn off, remove and reinsert the battery or batteries or, if you are using an AC adapter, disconnect and reconnect the AC adapter. Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by removing or disconnecting the power source.	12, 20, ☎ 60
Camera turns off without warning.	<ul> <li>The camera automatically turns off to save power (auto off function).</li> <li>The camera or batteries have become too cold and cannot operate properly.</li> <li>The inside of the camera has become hot. Leave the camera off until the inside of the camera has cooled, and then try turning it on again.</li> </ul>	21 &:5 -
Monitor is blank.	<ul> <li>The camera is off.</li> <li>The batteries are exhausted.</li> <li>The camera has entered standby mode to save power. Press the power switch, shutter-release button,  a button, a button, a button, a button, a button, a button.</li> <li>The flash lamp flashes while the flash is charging. Wait for the flash to charge.</li> <li>The camera and computer are connected via a USB cable.</li> <li>The camera and TV are connected via an audio/ video cable.</li> </ul>	20 20 1, 21 42 67, 72 67, ☎10

Problem	Cause/Solution	
Monitor is hard to read.	<ul><li> Adjust the monitor brightness.</li><li> The monitor is dirty. Clean the monitor.</li></ul>	65, <b>66</b> 43 <b>0</b> 7
Date and time of recording are not correct.	<ul> <li>If the camera clock has not been set,  If ashes during shooting and movie recording. Images and movies saved before the clock is set are dated "00/00/0000 00:00" or "01/01/2014 00:00" respectively. Set the correct time and date from the <b>Time zone</b> and date option in the setup menu.</li> <li>The camera clock is not as accurate as ordinary watches or clocks. Periodically compare the time of the camera clock with that of a more accurate timepiece and reset as required.</li> </ul>	16, 65, ☎ 41
No indicators displayed in monitor.	Hide info is selected for Photo info in Monitor settings in the setup menu.	65, <b>60</b> 43
Print date not available.	Time zone and date has not been set in the setup menu.	16, 65, 🍽 41
Date not imprinted on images even when <b>Print</b> date is enabled.	<ul> <li>The current shooting mode does not support Print date.</li> <li>The date cannot be imprinted on movies.</li> </ul>	65, <b>🏍</b> 45
Screen for setting time zone and date is displayed when camera is turned on.	The clock battery is exhausted; all settings were restored to their default values.	16, 19
Camera settings reset.		
Camera becomes hot.	The camera may become hot when used for an extended period of time to shoot movies or send images using an Eye-Fi card, or when used in a hot environment; this is not a malfunction.	-
Camera makes sound.	When <b>Autofocus mode</b> is set to <b>Full-time AF</b> or while in some shooting modes, the camera may produce an audible focusing sound.	62, 🏍 39

#### **Shooting Issues**

Problem	Cause/Solution	
Cannot switch to shooting mode.	Disconnect the USB cable.	67, 72, <b>60</b> 12
No image captured when the shutter-release button is pressed.	<ul> <li>When the camera is in playback mode, press the button or the shutter-release button.</li> <li>When menus are displayed, press the MENU button.</li> <li>The batteries are exhausted.</li> <li>When the flash lamp is flashing, the flash is charging.</li> </ul>	1, 28 3 20 42
Camera cannot focus.	<ul> <li>The subject is too close. Try shooting using easy auto mode, Close-up scene mode, or macro mode.</li> <li>The subject is hard to focus on.</li> <li>Set AF assist in the setup menu to Auto.</li> <li>Turn the camera off and then on again.</li> </ul>	31, 33, 45 54 65,
Images are blurred.	<ul> <li>Use the flash.</li> <li>Increase the ISO sensitivity value.</li> <li>Enable vibration reduction or motion detection.</li> <li>Use BSS (Best Shot Selector).</li> <li>Use a tripod to stabilize the camera when shooting (using the self-timer at the same time is more effective).</li> </ul>	40 50, <b>*</b> 26 65, <b>*</b> 46, <b>*</b> 47 34, <b>*</b> 25 43

Problem	Cause/Solution	
Streaks of light or partial discoloration are visible in the monitor.	Smear occurs when extremely bright light strikes the image sensor. When shooting with <b>Continuous</b> set to <b>Multi-shot 16</b> and when recording movies, avoiding bright objects, such as the sun, reflections of the sun, and electric lights is recommended.	50, <b>&amp;€</b> 25, <b>ऄ</b> ॔-3
Bright specks appear in images captured with flash.	The flash is reflecting off particles in the air. Lower the flash.	5, 40
Flash does not fire.	<ul> <li>The flash is lowered.</li> <li>A scene mode that restricts the flash is selected.</li> <li>On is selected for Blink proof in the smart portrait menu.</li> <li>A function that restricts the flash is enabled.</li> </ul>	5, 40 47 50, <b>2</b> 9 51
Digital zoom cannot be used.	<ul> <li>Digital zoom cannot be used in the following situations.</li> <li>When Portrait, Night portrait or Pet portrait is selected in scene mode</li> <li>When smart portrait mode is selected</li> <li>When Continuous in the shooting menu is set to Multi-shot 16</li> </ul>	32 36 50, ☎25
Image mode not available. A function that restricts the Image mode option is enabled.		51
<ul> <li>Off is selected for Sound settings &gt; Shutter sound in the setup menu. No sound is produced with some shooting modes and settings, even when On is selected.</li> <li>Do not block the speaker.</li> </ul>		65, <b>**</b> 48 1
AF-assist illuminator does not light. Off is selected for the AF assist option in the setup menu. AF-assist illuminator may not light depending on the current scene mode, even when Auto is selected.		65, <b>🏍</b> 48
Images appear smeared.	The lens is dirty. Clean the lens.	<b>Ö</b> -7

Problem	Cause/Solution	
Colors are unnatural.	White balance or hue is not adjusted properly.	33, 50, <b>6</b> 22
Randomly spaced bright pixels ("noise") appear in image.	The subject is dark, and the shutter speed is too slow or ISO sensitivity is too high. Noise can be reduced by: • Using the flash. • Specifying a lower ISO sensitivity setting.	40 50, <b>∞</b> 26
lmages are too dark (underexposed).	<ul> <li>The flash is lowered or a shooting mode that restricts the flash is selected.</li> <li>The flash window is blocked.</li> <li>The subject is beyond the range of the flash.</li> <li>Adjust exposure compensation.</li> <li>Increase ISO sensitivity.</li> <li>The subject is backlit. Select <b>Backlighting</b> scene mode or raise the flash and set the flash mode setting to \$ (fill flash).</li> </ul>	5, 40, 47 24 ⋩:16 46 50, ∞26 34, 40
Images are too bright (overexposed).	Adjust exposure compensation.	46
Unexpected results when flash set to \$⊕ (auto with red-eye reduction).	<ul> <li>is used, In-Camera Ked Eye Fix may be applied to areas not affected by red-eye in rare cases. Use auto mode or any scene mode other than Night portrait, and change the flash mode to any setting other than \$</li></ul>	
Skin tones are not softened.	<ul> <li>In some shooting conditions, facial skin tones may not be softened.</li> <li>For images containing four or more faces, try using the Skin softening effect in the playback menu.</li> </ul>	53 58, <b>៚</b> 7

Problem	Cause/Solution	
Saving images takes time.	<ul> <li>It may take more time to save images in the following situations.</li> <li>When the noise reduction function is in operation, such as when shooting in a dark environment</li> <li>When the flash mode is set to for (auto with redeyer reduction)</li> <li>When the skin softening function is applied while shooting</li> </ul>	- 42 53

### **Playback Issues**

Problem Cause/Solution		
<ul> <li>This camera may not be able to play back images saved with another make or model of digital camera.</li> <li>This camera cannot play back movies recorded with another make or model of digital camera.</li> <li>This camera may not be able to play back data edited on a computer.</li> </ul>		-
Cannot zoom in on image.	<ul> <li>Playback zoom cannot be used with movies, and images with an image size of 160 × 120 or smaller.</li> <li>When viewing small images, the playback zoom ratio that is displayed may not match the actual image zoom ratio.</li> <li>This camera may not be able to zoom in on images captured with another make or model of digital camera.</li> </ul>	-
<ul> <li>Cannot edit image.</li> <li>Images with an image size of 160 × 120 or smaller cannot be edited.</li> <li>Some images cannot be edited. Images that have already been edited may not be edited again.</li> <li>There is not enough free space in the internal memory or on the memory card.</li> <li>This camera is unable to edit images captured with other cameras.</li> <li>Editing functions used for images are not available for movies.</li> </ul>		- <b>**</b> 5 - - -

Problem	Cause/Solution	
Cannot rotate image.	This camera cannot rotate images captured with another make or model of digital camera.	-
Images are not displayed on TV.	<ul> <li>Video mode is not correctly set in the setup menu.</li> <li>The memory card contains no images. Replace the memory card. Remove the memory card to play back images from the internal memory.</li> </ul>	66, <b>20</b> 51 14
Nikon Transfer 2 does not start when camera is connected to a computer.	<ul> <li>The camera is off.</li> <li>The batteries are exhausted.</li> <li>The USB cable is not correctly connected.</li> <li>The camera is not recognized by the computer.</li> <li>The computer is not set to start Nikon Transfer 2 automatically. For more information about Nikon Transfer 2, refer to help information contained in ViewNX 2.</li> </ul>	20 20 67, 72 - 74
Images to be printed are not displayed.	<ul> <li>The memory card contains no images. Replace the memory card.</li> <li>Remove the memory card to print images from the internal memory.</li> </ul>	14 15
Cannot select paper size with camera.	<ul> <li>The camera cannot be used to select the paper size in the following situations, even when printing from a PictBridge-compatible printer. Use the printer to select the paper size.</li> <li>The printer does not support the paper sizes specified by the camera.</li> <li>The printer automatically selects the paper size.</li> </ul>	67, <b>0€</b> 13, ●€15 -

# **Specifications**

#### Nikon COOLPIX L330 Digital Camera

Туре	Compact digital camera
Number of effective pixels 20.2 million	
Image sensor	<sup>1</sup> /2.3-in. type CCD; approx. 20.48 million total pixels
Lens	NIKKOR lens with 26x optical zoom
Focal length	4.0–104.0 mm (angle of view equivalent to that of 22.5–585 mm lens in 35mm [135] format)
f/-number	f/3.1–5.9
Construction	12 elements in 9 groups (1 ED lens element)
Digital zoom magnification	Up to 4x (angle of view equivalent to that of approx. 2340 mm lens in 35mm [135] format)
Vibration reduction	Lens shift
Motion blur reduction	Motion detection (still pictures)
Autofocus (AF)	Contrast-detect AF
Focus range	<ul> <li>[W]: Approx. 50 cm (1 ft 8 in.)-∞,</li> <li>[T]: Approx. 1.5 m (5 ft)-∞</li> <li>Macro mode: Approx. 1 cm (0.4 in.) (when zoom is set to middle position)-∞</li> <li>(All distances measured from center of front surface of lens)</li> </ul>
Focus-area selection	Center, face detection
Monitor	7.5 cm (3-in.), approx. 460k-dot, TFT LCD with anti-reflection coating and 5-level brightness adjustment
Frame coverage (shooting mode)	Approx. 98% horizontal and 98% vertical (compared to actual picture)
Frame coverage (playback mode)	Approx. 100% horizontal and 100% vertical (compared to actual picture)

St	orage	
	Media	Internal memory (approx. 43 MB), SD/SDHC/SDXC memory card
	File system	DCF, Exif 2.3, and DPOF compliant
	File formats	Still pictures: JPEG Movies: MOV (Video: H.264/MPEG-4 AVC, Audio: LPCM monaural)
	nage size ixels)	<ul> <li>20M (High) [5152 × 3864★]</li> <li>20M [5152 × 3864]</li> <li>10M [3648 × 2736]</li> <li>4M [2272 × 1704]</li> <li>2M [1600 × 1200]</li> <li>VGA [640 × 480]</li> <li>16:9 [5120 × 2880]</li> <li>1:1 [3864 × 3864]</li> </ul>
(S	O sensitivity tandard output ensitivity)	ISO 80-1600
E>	cposure	
	Metering mode	Matrix, center-weighted (digital zoom less than 2x), spot (digital zoom 2x or more)
	Exposure control	Programmed auto exposure and exposure compensation $(-2.0 - +2.0 \text{ EV} \text{ in steps of }^{1}/3 \text{ EV})$
Sł	nutter	Mechanical and charge-coupled electronic shutter
	Speed	<ul> <li><sup>1</sup>/1500-1 s</li> <li>4 s (Fireworks show scene mode)</li> </ul>
A	perture	Electronically-controlled ND filter (-3.3 AV) selection
	Range	2 steps (f/3.1 and f/9.9 [W])
Se	elf-timer	Approx. 10 s
FI	ash	
	Range (approx.) (ISO sensitivity: Auto)	[W]: 0.5–5.0 m (1 ft 8 in.–16 ft) [T]: 1.5–2.5 m (5 ft–8 ft 2 in.)
	Flash control	$\ensuremath{TTL}$ auto flash with monitor preflashes

Interface	Hi-Speed USB	
Data transfer protocol	MTP, PTP	
Video output	Can be selected from NTSC and PAL	
I/O terminal	Audio/video (A/V) output; digital I/O (USB) DC input connector	
Supported languages	Arabic, Bengali, Bulgarian, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Marathi, Norwegian, Persian, Polish, Portuguese (European and Brazilian), Romanian, Russian, Serbian, Spanish, Swedish, Tamil, Telugu, Thai, Turkish, Ukrainian, Vietnamese	
Power sources	<ul> <li>Four LR6/L40 (AA-size) alkaline batteries</li> <li>Four FR6/L91 (AA-size) lithium batteries</li> <li>Four EN-MH2 rechargeable Ni-MH batteries (available separately)</li> <li>AC Adapter EH-67 (available separately)</li> </ul>	
Battery life <sup>1</sup>		
Still pictures	<ul> <li>Approx. 370 shots when using alkaline batteries</li> <li>Approx. 960 shots when using lithium batteries</li> <li>Approx. 580 shots when using EN-MH2 batteries</li> </ul>	
Movies (actual battery life for recording) <sup>2</sup>	<ul> <li>Approx. 1 h 40 min when using alkaline batteries</li> <li>Approx. 4 h 40 min when using lithium batteries</li> <li>Approx. 2 h 50 min when using EN-MH2 batteries</li> </ul>	
Tripod socket	1/4 (ISO 1222)	
Dimensions (W $\times$ H $\times$ D)	Approx. 111.1 × 76.3 × 83.3 mm (4.4 × 3.1 × 3.3 in.) (excluding projections)	
Weight	Approx. 430 g (15.2 oz) (including batteries and SD memory card)	
Operating environment		
Temperature	0°C-40°C (32°F-104°F)	
Humidity	85% or less (no condensation)	

- Unless otherwise stated, all figures assume fresh LR6/L40 (AA-size) alkaline batteries and an ambient temperature of 23 ±3°C (73.4 ±5.4°F) as specified by the Camera and Imaging Products Association (CIPA).
- <sup>1</sup> Battery life may vary depending on conditions of use, such as the interval between shots or the length of time that menus and images are displayed. The included batteries are for trial use only. Figures listed for lithium batteries are measured using commercially available FR6/L91 (AA-size) Energizer(R) Ultimate Lithium batteries.
- <sup>2</sup> Individual movie files cannot exceed 4 GB in size or 29 minutes in length. Recording may end before this limit is reached if camera temperature becomes elevated.

# Specifications

- Nikon will not be held liable for any errors this manual may contain.
- The appearance of this product and its specifications are subject to change without notice.

The following Secure Digital (SD) memory cards have been tested and approved for use in this camera

 Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies. When using a memory card with a lower Speed Class rating, movie recording may stop unexpectedly.

	SD memory card	SDHC memory card <sup>2</sup>	SDXC memory card <sup>3</sup>
SanDisk	2 GB <sup>1</sup>	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB
TOSHIBA	-	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Panasonic	2 GB <sup>1</sup>	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Lexar	-	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB

If the memory card will be used with a card reader or similar device, make sure that the device supports 2 GB cards.

- <sup>2</sup> SDHC compliant. If the memory card will be used with a card reader or similar device, make sure that the device supports SDHC.
- <sup>3</sup> SDXC compliant. If the memory card will be used with a card reader or similar device, make sure that the device supports SDXC.
- Contact the manufacturer for details on the above cards. We cannot guarantee camera performance when using memory cards made by other manufacturers.

Technical Notes and Index



#### **AVC Patent Portfolio License**

This product is licensed under the AVC Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.

See http://www.mpegla.com.

#### **Trademark Information**

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mac and OS X are trademarks or registered trademarks of Apple Inc. in the U.S. and other countries.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.
- SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.
- PictBridge is a trademark.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

#### FreeType License (FreeType2)

Portions of this software are copyright © 2014 The FreeType Project (*http://www.freetype.org*). All rights reserved.

#### MIT License (HarfBuzz)

Portions of this software are copyright © 2014 The HarfBuzz Project (http://www.freedesktop.org/wiki/Software/HarfBuzz). All rights reserved.

# Index

<u>Symbols</u>	
AE/AF-L	🍋 3
Telephoto	25
Wide-angle	25
<b>Q</b> Playback zoom	56
Thumbnail playback	57
Easy auto mode	31
💈 Scene mode	32
Smart portrait mode	36
Auto mode	38
▶ Playback mode	28
	<b>6</b> •040
Apply selection button	3
Shooting mode button	3
● Movie-record button	3
▶ Playback button	3, 28
🖆 Delete button	3, 29
MENU button 3, 6, 49, 50, 58,	62, 65
🗲 (flash pop-up) button 1	, 5, 40
Flash mode	
🕉 Self-timer	
💥 Macro mode	45
Exposure compensation	46
Pelp	32
A	
AC adapter	<b>6</b> 60

AF assist	
AF-assist illuminator	
Alkaline batteries	
Aperture value	
Audio/video cable	
	<b>60</b> 10, <b>60</b> 60
Audio/video-in jack	68, 🏍 10
Auto flash	
Auto mode	
Auto off	21, 65, 🗝 49
Autofocus	
Autofocus mode	
<u>B</u>	
Backlighting 🖺	
Battery	12, 19
Battery charger	
Battery level	
Battery type	
Battery-chamber/memory	
Beach 😤	
Best shot selector	
Black and white copy 🗔	
Black-and-white	
Blink proof	
Blink warning	

Brightness	6 6 4 3
BSS	4, 🍋 25
Button sound	🍽 48

## <u>C</u>

Calendar display	57
Close-up 🗱	32, 33
Color options	50, 🍋 27
Compression ratio	🏍 20
Computer	68, 72
Connector cover	
Continuous shooting	50, 🍋 25
Сору	58, 🍽 37
Crop	
Cyanotype	
_	

### D

Date and time	16, 65, 🍽 41
Date format	17, 🍽 41
Daylight saving time	17, 🍽 42
DC input connector	1
Delete	
Digital zoom	
Direct print	68, 🏍11
D-Lighting	58, 🍽6
DPOF print	🍋 17
DSCN	🏍 59
Dusk/dawn ՝	
<u>E</u>	
Easy auto mode	

Editing movies	🍽 18
EN-MH2	🏍 60, 🍎 4
Exposure compensation	
Extension	
Eye-Fi upload	66, 🍽 53
Eyelet for camera strap	
F	
Face detection	
File name	🏍 59
Fill flash	41
Fireworks show 🕸	
Firmware version	66, 🍽 55
Flash	1, 5, 40
Flash lamp	
Flash mode	40
Flash pop-up button	
Focus	
Focus indicator	
Focus lock	
Food	32, 33
Format internal memory	66, 🏍 50
Format memory cards	15, 66, 🗢 50
Formatting	15, 66, 🏍 50
FSCN	🏍 59
Full-frame playback	
Full-time AF	62, 🏍 39
<u>H</u>	
Help	

<u>I</u>	
Identifier	🏍 59
Image mode	50, 🏍 20
Imprinting date and time	19, 🍽 45
Internal memory	15
ISO sensitivity	50, 🏍 26
J	
 JPG	🏍 59
L	
Landscape 🖬	
Language	66, 🍽 51
Lens	
Lithium batteries	13
<u>M</u>	
Macro mode	45
Memory card	14, 🔆 19
Memory card slot	14
	_
Microphone	
Monitor	3, 8, 🍎 7
	3, 8, 🏷 7 65, 🍽 43
Monitor Monitor settings	3, 8, 🌣 7 65, 🍽 43 65, 🍽 47
Monitor Monitor settings Motion detection	3, 8, & 7 65, & 43 65, & 47 65, & 59
Monitor Monitor settings Motion detection MOV.	3, 8, Ø:7 65, 0 43 65, 0 47 0 59 59
Monitor Monitor settings Motion detection MOV Movie length	3, 8, Ö:7 65, 0 43 65, 0 47 0 59 
Monitor Monitor settings Motion detection MOV Movie length Movie menu	3, 8, 0.7 65, 0.043 65, 0.047 0.59 59 62, 0.038 62, 0.038
Monitor settings Motion detection MOV Movie length Movie menu Movie options	3, 8, 0 <sup>2</sup> 7 65, 0 <sup>-0</sup> 43 65, 0 <sup>-0</sup> 47 0 <sup>-0</sup> 59 59 62, 0 <sup>-0</sup> 38 62, 0 <sup>-0</sup> 38 63

Multi selector	3
Multi-shot 16	🍋25
Museum 🏛	
N	
Night landscape 🖬	32
Night portrait 🛃	32, 33
Nikon Transfer 2	
Number of exposures remain	ning
	20, 🍋21
<u>0</u>	
Optical zoom	
Optional accessories	🏍60
<u>P</u>	
Panorama assist 🗖	32, 34, 🔶2
Panorama Maker	
Paper size	34, 71, <b>6-</b> 04 •013, <b>6-</b> 015
Panorama Maker Paper size	34, 71, <b>6-</b> 04 •013, <b>6-</b> 015
Paper size	34, 71, 0–04 –013, 0–015 32, 33
Paper size C Party/indoor 💥	34, 71,
Paper size Party/indoor 💥 Pet portrait auto release	34, 71, <b>6</b> 04 13, <b>6</b> 015 
Paper size Party/indoor 💥 Pet portrait auto release Pet portrait 😽	34, 71, 0 04 013, 0 015 
Paper size	34, 71, 0 0 4 → 13, 0 0 15 
Paper size	34, 71, 0 0 4 → 13, 0 0 15 
Paper size	34, 71, <b>*</b> 04 *013, <b>*</b> 015 
Paper size	34, 71, 004 13, 0015 32, 33 35 32, 35 32, 35 0043 68, 0011 28, 63 3, 28 58, 0030
Paper size	34, 71, 004 13, 0015 32, 33 35 32, 35 32, 35 0043 68, 0011 28, 63 3, 28 58, 0030 28
Paper size	34, 71, 0 0 4 13, 0 0 15 32, 33 35 32, 35 32, 35 0 0 43 68, 0 0 11 28, 63 3, 28 58, 0 0 30 28 56, 56

Power switch/power-on lamp 1, 20
Preset manual 🖚23
Pressing halfway 27
Print 58, 68, 🗢 13, 🗢 15, 🗢 30
Print date 19, 65, 🗢 45
Print order
Print order option 19, 🖚 31, 🏍 32
Printer
Protect
R

Rechargeable battery	🍋 60
Rechargeable nickel-metal h	nydride
batteries	
Recording movies	59
Red-eye reduction	41, 42
Reset all	66, 🏍 54
Rotate image	58, 🍽 36
RSCN	

# <u>S</u>

Scene mode	32
Self-timer	
Self-timer lamp	1, 44
Sepia	🍋 27
Setup menu	65, 🍽 40
Shooting	20, 24, 26
Shooting menu	49, 🏍 20
Shooting mode button	
Shutter sound	🏞 48

Shutter speed	
Shutter-release button	1, 26
Single AF	62, 🏍 39
Single-frame shooting	50, 🏍 25
Skin softening 50, 58,	
Sleep mode	
Slide show	58, 🍽 33
Slow sync	41
Small picture	58, 🍽 8
Smart portrait menu	49, 🍽 28
Smart portrait mode	
Smile timer	
Snow 🚨	
Sound settings	65, 🍽 48
Speaker	
Sports 💐	
SSCN	🏍 59
Standard color	🍋 27
Strap	4
Sunset 📸	
T	
Thumbnail playback	57
Time difference	
Time zone	
Time zone and date	6, 65, 🍽 41
Tripod socket	
TV	

<u>U</u>

USB/audio/video output connector

..... 1, 67, 72, 🗝 10, 🕶 11

#### V

Vibration reduction	65, 🍽 46
Video mode	
ViewNX 2	69, 70
Vivid color	🗝27
Volume	

#### W

Welcome screen	65, 🗝 40
White balance	50, 🗝 22
Wind noise reduction	62, 🏍 39
7	

### <u>Z</u>

Zoom	. 25
Zoom control 1	, 25
Zoom in	. 25
Zoom out	. 25

*

No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

CT3K01(11) 6MN33411-01

NIKON CORPORATION

© 2014 Nikon Corporation