
## Components

# SHELLY FABRIC RECLINER REGULAR

Simple Assembly Instructions - Please keep for future reference

3 5 9 8 3 2 0 3 5 7 6 3 0 4

A 1 x Seat Cushion

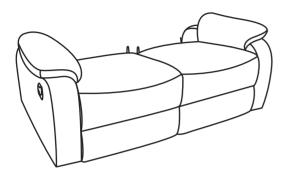

1 x Left Back Rest

© 1 x Right Back Rest






D 1 x Left Ear



(E) 1 x Right Ear



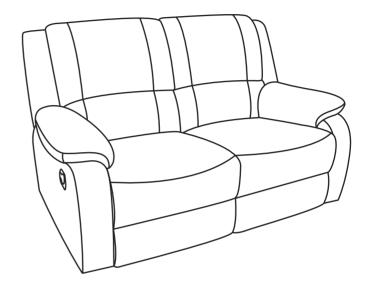

#### Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline:  $0345\ 640\ 0800$ 

- **1**. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
- 2. Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.
- **3**. Take all the fittings out of the plastic bag and separate them into their groups.
- **4**. Ensure you have enough space to lay out all the parts before assembly.
- **5**. To avoid scratching it is recommended that you assemble the unit on a soft level surface.

# **Assembly Instructions**

## **Assembly Instructions**

## Stage 1 - Fitting the Unit


## Stage 2 – Finishing the Unit

- NOTE: It would be useful to ask someone to help you at this stage.
- 1. The ear is put behind of seat cushion please get ear for assembly See fig.1.
- 2 Attach the Left Back Rest (B) and Right Back Rest (C) to the Seat Cushion (A). Engage the metal locks and push fit. You should hear them lock into position. See fig. 2.
- 3. Attach the ear D to the back cushion (B).Attach the ear (E) to the back cushion
- (C) See fig. 2.
- 4. Fit the velcro cover on the back rests onto the velcro on the seat cushion.

NOTE: Carefully line up the two side metal locks. Ensure they align correctly.



- Beware of entrapment. Keep hands and fingers clear of the tilt mechanism when operating the controls.
- Ensure that children or pets are not playing or lying in the way when the tilt mechanism is operated.
- Prevent children from playing on the furniture or with the controls.

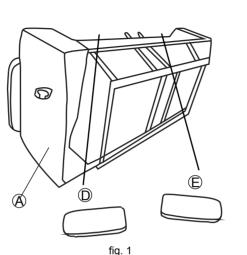

B  $(\mathbb{C})$ D 00000 A fig. 2 Metal Lock

#### **Back and Foot Rest Adjustment**

This Chair features a reclining back rest and raised foot rest. You need to be sitting in the chair to activate the features.

- 1. Pull the "Adjustment Lever" then gently lean back, the chair will recline and the foot rest will automatically lift up. See fig. 3.
- 2. Sit up and lock the foot rest. The sofa return to the normal position.

See fig. 3.

- 3. Adjust the recliner to your own requirements.
- 4. Finally carefully place the unit in the desired location. See fig. 4.

## **Care and Maintenance**

#### Safetv

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

fig. 4

#### Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.

#### Fitting

From time to time please ensure there are no loose screws on the product. If you need help or have damaged or missing parts call the Customer Helpline: 0345 640 0800

489-499 Avebury Boulevard Milton Keynes MK9 2NW, Argos Limited

