

GB

closer to nature® electric steam steriliser

Before using your steriliser, please ensure that you read these instructions thoroughly. Please read and retain this important information for future reference.

Important Instructions for setting up your steriliser before use:

TO CLEAN YOUR STERILISER BEFORE FIRST USE REFER TO PARTS GUIDE AND DIAGRAM

- Do not connect to power at this stage.
- Remove all items from inside the steriliser base. Pour exactly 80ml of water into the steriliser base.
- Assemble the white lower tray (A), central stem (C) and upper tray (B) and place in the steriliser base.
- 5 Add the lid.
- 6 Connect the lead and plug into the mains supply. The start switch and sterilising light should come on automatically. If it does not then press the switch and it will light up amber to show that sterilising has begun.
- 7 The light will switch off when sterilising has finished.
- 8 Allow to cool for 3 minutes before turning off at the mains, removing the plug and disconnecting the lead from the steriliser.
- 9 Remove lower tray, central stem and upper tray, pour away any remaining water and wipe dry Your steriliser is now ready for use.

This steriliser is designed for use with tommee tippee® closer to nature® bottles and feeding accessories (except bottle brush). The steriliser will hold up to 6 closer to nature® bottles, plus accessories

PARTS GUIDE (see diagram)

- A Removable lower tray C Central Stem
- **B** Removable upper tray
- **D** Locator for closer to nature® bottle neck **E** Locator for closer to nature® anti-colic plus valve (if sterilising closer to nature® anti-colic plus bottles)
- $\textbf{F} \quad \text{Locator for closer to nature} ^{\text{\tiny{\$}}} \, \text{screw ring and teat}$ **H** Lid
- **G** Locator for bottle hood I Sterliser base
- J Lead with plug **K** Start switch and sterilising light.
- M 80ml measurement on closer to nature® bottle

 
FOR INSTRUCTIONS ON HOW TO CLEAN AND STERILISE THE TOMMEE TIPPEE® CLOSER TO NATURE® BOTTLES, PLEASE SEE SEPARATE LEAFLET.

USING THE ELECTRIC STEAM STERILISER

 
1 Before sterilisation, wash all bottles and feeding accessories in warm soapy water or in a dishwasher (top rack only) to remove any milk $residues. \ Separate \ all \ components \ for \ washing \ and \ reassemble \ teat \ and \ screw \ ring \ for \ sterilising.$ **warning:** do not allow product to come into contact with oil based foods (e.g. oil/tomato based sauces) as staining will occur



Pour exactly 80ml of water into the sterilser base. Your closer to nature® bottles have a handy 80ml











Slot the hoods into the hood locators of the removable upper tray so that they hang over the teat and screw ring but are not fully assembled.

Assemble central stem and lower tray

Fit the removable upper tray into place.

into the steriliser base.

Place the lid onto the steriliser base.

9 Plug the lead into the mains power and switch on.

10 Press the start switch and it will light up amber. This shows that the steriliser is in its warm up phase and will automatically begin the sterilising phase when the appropriate temperature is reached .

The light will switch off when the sterilising phase has finished.

12 Allow to cool for 3 minutes before opening the steriliser.

The contents will remain sterile for 24 hours if the steriliser is unopened.

Wash your hands thoroughly before handling sterilised items. Take care as the items will be hot.



Remove the sterilised items. The teat tongs can be used to remove the small items. The lid when removed and placed flat becomes another hygienic work surface for making up feeds.

Drain and rinse unit to prevent a build up of limescale.

- · Always add 80ml of water before use. If you put too little or too much water into the steriliser it will not operate correctly.
- Do not open whilst in use as this product contains boiling water. Beware of escaping steam from the vent holes in the lid. Always allow at least 3 minutes cooling time before opening.
- · Take care when lifting the steriliser lid after use to avoid scalding
- Keep all components out of reach of children. Never place items on top of the steriliser.
- Always unplug from the mains when not in use.
- · Do not immerse the steriliser base in water.
- Children should be supervised to ensure that they do not play with this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person
- · If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- This appliance is for household use only. Do not use outdoors.

CLEANING INSTRUCTIONS

- After each use, pour away any remaining water from the Steriliser base
- widely available. Use according to the manufacturer's instructions.
- Do not use metal objects or scourers.
- $\bullet \ \ \, \text{Do not use bleach or chemical sterilising solutions/tablets in your steriliser or on products to be sterilised.}$
- Do not use abrasive or anti-bacterial materials to clean the steriliser.

PROBLEM SOLVING

WARRANTY:

PROBLEM SOLVING	
PROBLEM	CHECK
Steriliser will not work	Check the mains lead is plugged into the unit and the mains socket is switched on. Check the fuse is in the plug (in a UK plug only). Check the socket by plugging in another appliance.
Excessive steam	Items incorrectly loaded in steriliser. Refer to Instructions for Use.
Bottles come out with mark	Steriliser needs descaling. Refer to Cleaning Instructions.
Cycle takes too long to complete	Too much water in steriliser. Use exactly 80ml

CORRECT DISPOSAL OF THIS PRODUCT

please call 0500 97 98 99 or website www.tommeetippee.com

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retainer where the



product was purchased. They can tale this product for environmental safe recycling.





This product has 12 months warranty period after the date of purchase. If you have any questions

Model: 1069