 





**SNAP**  **SCREEN**<sup>®</sup>

The word 'SNAP' is in a large, bold, sans-serif font. To its right is a cartoon character with a round body, a smiling face, and two large, round eyes. The character is holding a globe and two rectangular objects with a cross-hatch pattern. Below 'SNAP' is the word 'SCREEN' in a similar bold, sans-serif font. A registered trademark symbol (®) is located to the right of 'SCREEN'.

 Instructions

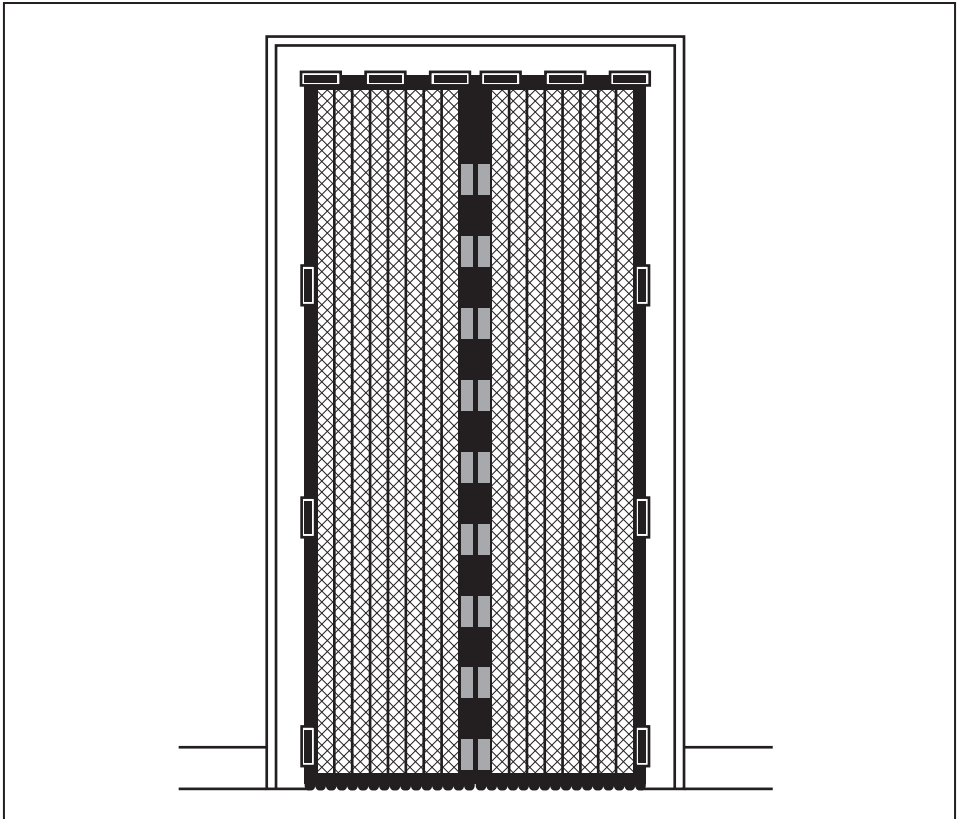

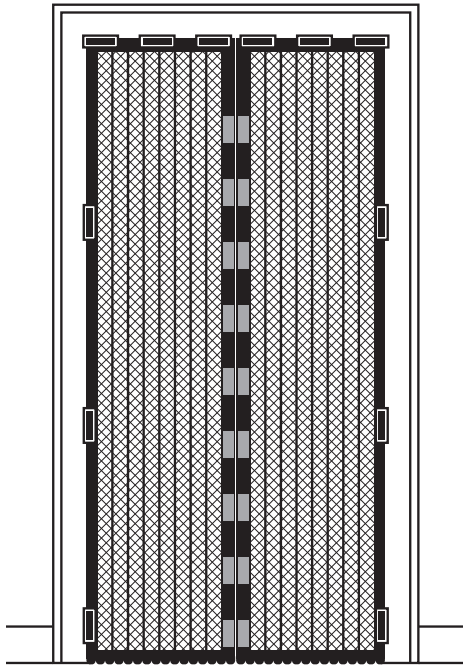

# SNAP SCREEN®

Thank you for purchasing Snap Screen® from JML. This clever and practical magnetised door screen will help you to enjoy fresh air in your home, without any flies, wasps, bees, mosquitoes, and moths getting in.

To make the best use of this product and to use it safely, please read these instructions carefully and keep for future reference.

## Contents

---

|                          |   |
|--------------------------|---|
| Safety Warnings & Advice | 3 |
| Components               | 3 |
| Before Use - Preparation | 4 |
| Hanging Snap Screen®     | 6 |
| Care                     | 6 |
| Guarantee                | 6 |



 
## Safety Warnings & Advice

- **CHOKING HAZARD** - this is not a toy; keep securing pins away from children.
- Dispose of the packaging in an appropriate manner, ensuring any plastic bags are kept away from children.
- If you have an implanted medical device, please consult your doctor before using due to the potential risk of interference caused by the magnets.
- Keep away from heated elements such as ovens, stovetops and electric heaters.
- Snap Screen® is not designed to be used as a barrier for children, pets or the weather.


**NOTE** - This product may not work properly if installed incorrectly.

Please refer to the diagrams provided for positioning instructions (page 5).

## Components

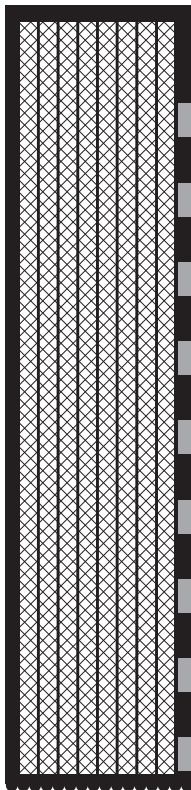

 1.

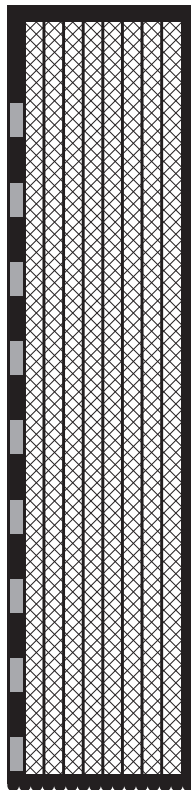

2.

12 x



3.

20 x



4.

1. Left Snap Screen® Panel
2. Right Snap Screen® Panel
3. Fibre fix strips
4. Securing Pins

# Before Use - Preparation

---

## Door Frame Preparation

1. First you must determine which side of your door Snap Screen® needs to be fitted to.
  - If your door opens inwards, Snap Screen® must be fitted to the outside of your door frame.
  - If your door opens outwards, Snap Screen® must be fitted to the inside of your door frame.
2. Ensure the surface is completely dry and free from debris before applying the fibre fix strips to the frame. To ensure the surface is clean we recommend using an alcohol wipe on UPVC and wood frames.
3. Mark the centre of the top of your door frame.  
**TIP** - Measure the full width at the top of your door to determine where the centre is and mark with a piece of tape to ensure accuracy.

## Snap Screen® Preparation

1. Position both Snap Screen® door panels on the floor parallel to each other, with the thick side of the magnets facing upwards. This side will be attached to your door frame.

**IMPORTANT** - When you lie the Snap Screen® panels on the floor, the left Snap Screen® door panel should be positioned on the right-hand side and the right Snap Screen® door panel should be positioned on the left-hand side. Please refer to the diagram on page 5.

2. Allow the magnets to snap together.
3. Identify the top of the Snap Screen®. The top of the Snap Screen® can be identified by the approx. 18cm gap between the top of the panel and the first magnet. The bottom can be identified by the decorative frill.

---

## Snap Screen® fibre fix strip positioning

1. Snap Screen® requires 3 fibre fix strips (labelled A, B, C on the diagram on the following page) to be positioned at the top of each panel and a further 3 fibre fix strips (labelled 1, 2, 3) positioned down each side.
  - Please refer to the diagram on page 5 for fibre fix strip positioning
  - It is recommended that you lay the fibre fix strips in the correct position before removing the white backing to ensure correct spacing.

### **IMPORTANT**

**Plastic frames** - it is recommended that you use the fibre fix strips only.

**Wooden frames** - a combination of fibre fix strips and securing pins (provided) can be used.

Snap Screen® should only be fixed to door frames, it should not be fixed to normal wall space as it may cause damage to the paintwork.

**NOTE** - The securing pins, if used, will leave a small hole in the wood. If the fibre fix strips are used on painted wood, they may cause a small amount of damage to the paint if later removed.

2. Once you are happy with the positioning of the fibre fix strips remove ONE side of the white backing and stick into place directly onto the Snap Screen®, applying plenty of pressure.
3. Repeat this process until all the fibre fix strips are stuck in position.

 
# Before Use - Preparation continued

## DIAGRAM

Right panel attaches to the right-hand side of your door frame.

Left panel attaches to the left-hand side of your door frame.

**NOTE** - Ensure the fibre fix strips are evenly spaced.

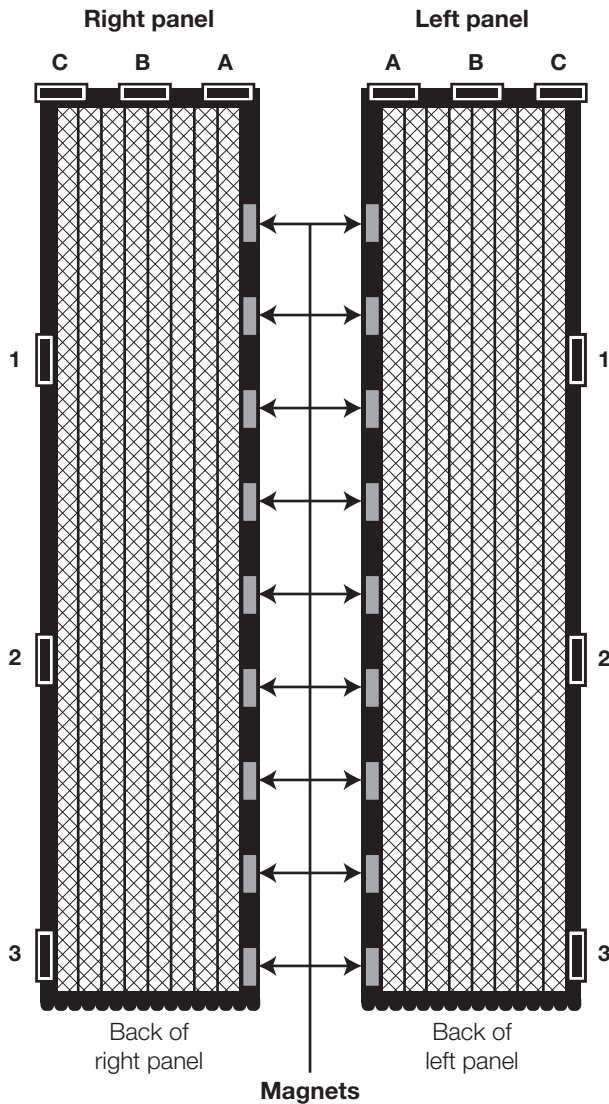

# Hanging Snap Screen®

---

1. Ensure you position the Snap Screen® high enough so the bottom does not drag on the floor.
2. Take the left Snap Screen® panel and remove the other side of the white backing from the top 3 fibre fix strips, A, B and C.
3. Align strip A (see diagram) next to the centre of the door frame and stick into position, by applying plenty of pressure ensuring it is high enough not to drag on the floor.
4. Stretch the Snap Screen® across the top of the door frame and stick strips B and C into place.
5. When you are happy the Snap Screen® is in the correct position, and at the correct height, remove the white backing from the fibre fix strips 1, 2 and 3 and stick into place down the side of the door frame by applying plenty of pressure.
6. Repeat the process, from point 2, for the right Snap Screen® panel, ensuring that the Snap Screen® magnets are able to snap closed.

**NOTE** - If the Snap Screen® panels do not snap together it may be necessary to adjust the distance between the panels.

## Care

---

**DO NOT** use any harsh chemicals to clean your Snap Screen®.

**CLEAN** your Snap Screen® using a clean cloth and warm soapy water, and allow to air dry.

**DO NOT** put your Snap Screen® in the washing machine or dry in a tumble dryer.

## Guarantee

---

This product is unconditionally guaranteed for one year against all defects of workmanship and materials. This guarantee does not affect your statutory rights. If you have any problems or queries about this product please contact JML.

**JML Customer Helpline: 0800 781 7831**

**Product codes:** V19150 / V19148  
©JohnMillsLtd/MB/09.13/ALS/C

**Distributed by JML**

JML, Unit 1 Eastside  
Port of Tyne, South Shields  
NE33 5SP

[www.jmldirect.com](http://www.jmldirect.com)  
[info@JMLgroup.co.uk](mailto:info@JMLgroup.co.uk)  
Freephone 0800 781 7831