

ARCADE GAMER PORTABLE



User Guide

AtGAMES

WARNING!

It is advisable to pack the supplied mini screwdriver into 'Hold' luggage before any future flights to avoid confiscation.

ITEM NO: GP1024

AtGAMES

© 2015 AtGames Digital Media Inc.

www.atgames.net

All rights reserved.

Made in China.

Game Software© SEGA. All rights reserved.

SEGA and the SEGA logo are either registered trademarks or trademarks of SEGA Corporation.

Distributed by AtGames under license from SEGA Corporation.

Imported by: ARGOS LIMITED

489-499 Averbury Boulevard, Saxon Gate West,
Central Milton Keynes, MK9 2NW United Kingdom.

ITEM NO.: 3811760

Game Player Appearance and Key List

The image below shows the location of the Output Jacks and Keys as well as the function of each Jack and Key. (The illustration is for reference only.)



1. Power ON/OFF

Switch to turn ON/OFF game player

2. Volume Control Switch

Rotate dial to the left/right to decrease/increase volume

3. Directional Pad (D-Pad)

Directional Pad for game playing

4. MENU

Return to game menu

5. START/PAUSE

Push to start play and push again to pause the action

6. A Key

Game Key A

7. B Key

Game Key B

8. Earphone Jack

Audio output

9. Video Out Jack

Video output

How do you play the game?

1. Slide the "ON/OFF" key to "ON" to turn on the game player. Slide the "ON/OFF" key to "OFF" to turn off the game player.

2. Press "Up" or "Down" on the D-Pad to select one of your favorite games, then press the "START/PAUSE" or "A" key to enter the selected game.

3. Press the "START/PAUSE" key to start playing game.

How do you switch back to game menu quickly while playing the game?

Press "MENU" key, and the screen will go back to the game menu page.

How to play on TV?

Connect the console to TV using an AV cable (not supplied). Configure the TV input source to AV "IN", then press the "MENU" key to display game menu on TV. The game player will detect the presence of a TV and display the game video on TV screen automatically when you press "MENU".

How do you turn off the game player?

Slide the "ON/OFF" key to "OFF" to turn off the game player.

Alex Kidd in High Tech World

High-Tech World is the greatest and wildest new video arcade around and Alex Kidd is determined to find it! His friend Paul told him about it and the map to find it but someone has scattered the map in eight pieces around the castle! In order to get to the arcade before it closes, Alex Kidd must find all eight pieces and reassemble the map before it is too late! There is no time to lose!

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Starts the game.

Pauses and un-pauses game.

A Key

Presses to attack by knife.

B Key

Presses to attack by dart if get it.

Presses to jump.

Alex Kidd in Miracle World

Radactian, a peaceful and happy city is in danger! Starting with only a piece of a map and a Sun Stone medallion, Alex Kidd must explore and face opponents in eleven unique locations to save the city. While each location has unique dangers, Alex can win prizes by beating his opponents in the mysterious game of Janken to help him complete his quest. This is Alex's greatest challenge yet!

Directional Pad (D-Pad)

Start Key (Start)

Press to select a GAME mode or an option.

Press to make Alex turn left or right.

Press to make "paper, scissor, stone".

Starts the game.

Pauses and un-pauses game.

A Key

Jumps.

B Key

Attack.

Alex Kidd: The Lost Stars

Alex Kidd, whose mission is to run through each location, knocking down enemies, and obtain the six miracle balls. These balls are hidden inside the strangest places like golden eggs, the Fantasy Zone ship, clamshells, Christmas presents, pumpkins, and desk bells. Alex must then venture through outer space to defeat the evil Ziggurat.

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Starts your engine.

Pauses and un-pauses game.

A Key

Attacks after getting S tool.

B Key

Jumps.

Assault City

Your home is under assault! Evil robots are rampaging across the city and it is up to you to stop them. Shooting the invaders with your laser weapons, you can save the future of humanity but be careful not to shoot your fellow citizens by mistake! It is all up to you!

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Shoots the enemies.

Starts game.

Pauses and un-pauses game.

A Key

Shoots.

B Key

Presses to speed up or slow down.

Astro Warrior

If the Devil Star Imperial Forces succeed, the galaxy will be lost. As their invasion looms near, it becomes clear that if they are to be stopped, it is up to you. Lead your combat team on this high flying space arcade-shooter to victory, otherwise the hope will be gone. All would be lost if it were not for the heroics of the valiant Astro Warrior!

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Starts your engine.

Pauses and un-pauses game.

A Key

Fires.

B Key

Fires.

Aztec Adventure

The Aztec Paradise lies hidden, lost in the primeval jungles of Mexico. While many have searched in hopes of recovering the legendary treasures there, no one has succeeded in making it through the dangerous jungle inhabited by the Aztec guardians. Nino the explorer courageously seeks the Aztec treasure and braves demons, monsters and spirits in this epic adventure! If you can help him find his way through the maze-like jungle and defeat the treasure's guardians, glory and riches await you in Paradise!

Directional Pad (D-Pad)

Start Key (Start)

Navigates.

Starts the game.

Pauses and un-pauses game.

A Key

Selects an item from the item display.

B Key

If you don't press A Key to select an item, press B

Key to attack with your sword.

If you do press A Key to select an item, press B Key to throw that item in the direction Niño is facing.

Baku Baku Animal

In the game Baku Baku Animal you play as the young girl Polly. You will play through and encounter many different characters, human and animal alike, that you must defeat in order to win the competition. If you succeed, then you will be the "zookeeper" for the royal family and take care of their animals. There are three available levels of difficulty to test your skill in this matching action puzzler.

Directional Pad (D-Pad)

Presses to select a GAME mode or an option.

Presses to move the food columns dropping down right beside animals.

Start Key (Start)

Starts the game.

Pauses and press again to resume play.

A Key

Arranges the items turning right.

B Key

Arranges the items turning left.

Bomber Raid

If you can pilot your bomber through the five levels in this arcade shooter, glory awaits on the other side! The enemy comes fast and hard by land, air and sea, attempting to stop you at all cost. Use your bullets and bombs to make your way to your target and gain powerful bonuses. Be sure to seek the aide of your allies, as your enemies mean business. Bombs away!

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Starts game.

Pauses and un-pauses game.

A Key

Shoots.

B Key

Bombs.

Columns

Additive and ancient, Columns is the game of a bygone era, originating with Phonoclanet merchants. Align puzzle pieces to build columns and bring them down. Easy to play, yet challenging to master, this is a game to keep you amused for hours on end. You will quickly understand why this simple puzzler has stood the test of time. Prepare to lose yourself in this game of the ancients!

Directional Pad (D-Pad)

Presses to select a GAME mode or an option.

Presses left or right to move the columns in those directions.

Presses down to increase the speed at which the columns drop.

Start Key (Start)

Starts the game.

Pauses and un-pauses game.

A Key or B Key

Presses to arrange the items.

Dragon Crystal

Dragon Crystal is a dungeon crawler with RPG elements, along the lines of classics such as Rogue or Nethack. The enemies are visible on screen, and you fight them in a fast-paced turn-based combat, moving around and pressing direction arrows to strike with the equipped weapon. Adventure through a randomly generated world which you should explore carefully—and most importantly, where you must survive!

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Starts your engine.

Pauses and un-pauses game.

A Key

Presses to cancel selected item.

B Key

Presses to cancel selected item.

Ecco: The Tides of Time

The ocean home of Ecco the Dolphin is known for its beauty and tranquility. Well, nothing lasts forever! The Vortex Queen has come from outer space and the entire ocean is at risk. In order to save the ocean and the sea creatures, Ecco faces the Tides of Time. The Tides of Time reveal the two possible futures at hand: either an ocean at peace or one dominated by the evil Vortex Queen! Restore time while you still can!

Directional Pad (D-Pad)

Controls the direction.

Presses B KEY to speed up while holding D-Pad.

Start Key (Start)

(Use sonar) Ecco's song ripples out in the direction he is facing. Sing to other beings and objects for information, to perform tasks, to repel enemies and to ward off dangers.

A Key

Exits map.

Charges schools of fish for food; charge enemies or certain barriers to destroy them in a cloud of sea foam.

B Key

Presses to increase speed.

Fantasy Zone

Spanning eight colorful planets and challenges, the Fantasy Zone is a solar system of wonder and adventure. All is not well however, as an evil force wants all the planets of the Fantasy Zone for their purpose. All you have to do is stop them! Collect all the coins to prevent the evil ones from building their forces against you and defeat your enemies on each planet to save the Fantasy Zone! You can vary the challenge by starting on a difficulty level of your choosing. This is a great game for all ages!

Directional Pad (D-Pad)

Controls the direction.

Start Key (Start)

Starts your engine.

Pauses and un-pauses game.

A Key

Fires.

B Key

Fires.

Gain Ground

The strategy of the game is based on sizing up the lay of the land, and then figuring out which fighters are best equipped to deal with it. If there are enemies perched on walls or behind grave stones, then someone with the ability to lob grenades or shoot a longbow will be needed, while open areas with enemies require characters with a faster rate of fire, better foot speed or area-effect weapons. If there are fighters in need of rescue, you'll have to take into account the number of men necessary to pull them to the exit, and whether or not you can sacrifice those men to get to them.

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Starts game.

Pauses and un-pauses game.

A Key

Presses to shoot.

B Key

Presses to attack enemies with the particular weapon belonged to particular character.

Global Defense

In Global Defense you are the lone pilot of a satellite orbiting the Earth. It is up to you to save your planet from alien invaders bent of using nuclear warheads to destroy everything in their path. Featuring shooting and strategy, you must pilot your satellite to strategically place your defense and while still leaving yourself in a position to avenge your fallen comrades. The aliens are coming at you fast and furiously. Target your enemy well; it is the only way to save the Earth from total destruction!

Directional Pad (D-Pad)

Start Key (Start)

Controls the direction.

Starts your engine.

Pauses and un-pauses game.

A Key

Presses to move the flight

B Key

Presses to shoot

Golden Axe

Yuria is a strange land, with evil oppressors. Death Adder's soldiers have invaded every village. Finally, he's kidnapped the King and his daughter, the Princess, and seized the Golden Axe. Only the strongest and craftiest warriors now have any chance of defeating him. Three warriors appear to challenge Death Adder-- Ax-Battler, the terrible Barbarian who arrives from the far plains, Tyrus-Flare, the Amazon who appears from the deep jungles to overcome the oppressors, Gilius-Thunderhead, the Dwarf who swings a deadly axe. The challenge is overwhelming: defeat all of Death Adder's soldiers and demolish Death Adder Jr., and then face their most powerful enemy, Death Adder himself. The reward is to save the lives of the King and Princess and returning peace to the Kingdom.

Directional Pad (D-Pad)	Controls the direction.
Start Key (Start)	Starts game.
	Pauses and un-pauses game.
A Key	Presses to slash.
B Key	Presses to jump.

Kung Fu Kid

A long dormant evil has awakened from its slumber: Madanda is back and badder than ever! After thousands of years, the protection your society has vowed to provide requires action. Fulfilling your oath, you must venture into Madanda's stronghold, defeat his minions and finally face Madanda himself. To allow him to win is to allow darkness to reign over your homeland. Your awesome kung fu skill is all that stand between Madanda and a horrible fate!

Directional Pad (D-Pad)	Controls the direction.
Start Key (Start)	Starts game.
	Pauses and un-pauses game.
A Key	Presses to jump.
B Key	Presses to kick.

Mean Bean Machine

Dr. Robotnik, Sonic the Hedgehog's arch enemy, decides to turn something else into robots. This time, it's the citizens of Beanville! It's up to you to save them from their doom. You drop pairs of beans into the dungeons, trying to create groups of four in matching colors in Tetris-style gameplay. You must challenge Dr. Robotnik's robots to a battle and defeat them and eventually face the evil Doctor himself!

Directional Pad (D-Pad)	Controls the direction.
Start Key (Start)	Starts your engine.
	Pauses and un-pauses game.
A Key	Fires.
B Key	Fires.

Fantasy Zone II (Opa Opa)

The Fantasy Zone is a solar system consisting of eight brightly colored, fantastic planets. Evil minions are trying to take over all of the planets in the Fantasy Zone by using misappropriated foreign currency to build their forces. It is your job to recover all of the coins and save the solar system! You need to destroy all of the creatures on each planet and collect as many of the lost coins as you can. At the end of each level boss monsters pose the ultimate challenge and must be defeated before moving on to the next world. At various points in the game you will be able to find a parts shop, which will allow you to purchase improvements to your spaceship, including better weapons and faster engines.

Directional Pad (D-Pad)	Controls the direction.
Start Key (Start)	Starts game.
	Pauses and un-pauses game.
A Key	Presses to shoot enemies.
B Key	Presses to bomb enemies.

Penguin Land

As a Penguin Mission Commander, you have faced danger and risk before. This time it's your mission to find and return three fragile penguin eggs to the safety of their home. It won't be easy though! Your journey will require you to navigate icy mazes, find secret passageways and survive ice-bound wastelands. Also, you must outsmart fearsome animal adversaries or your eggs will become omelets. Success will earn you a reward beyond measure!

Directional Pad (D-Pad)	Starts the game.
	Moves Overbite left or right.
	Rolls the Egg.
	Pushes a rock.
Start Key (Start)	Presses Start Key to freeze the screen, then press D-Key and your scanners show a map of the entire maze.
A Key	Starts.
	Jumps.
B Key	Destroys a block.
	Drops a rock.
	Passes through a tube.
	Checks map.

Putt And Putter

Putt & Putter is an isometric mini-golf game for 1-2 players. The game has different height levels. Because there are even bumpers, the game is like a mixture of a classic minigolf game, a pinball game, and the classic game "Marble Madness".

Directional Pad (D-Pad)	Press to control the ball moving directions.
Start Key (Start)	Starts the game.
A Key	Press to cancel ball moving.
B Key	Press to show ball moving path.
	Press to hit the ball to move.

Quartet

Life is never easy on the run; it does get easier when you can fly though. With your backpack at the ready you can ease your task of fighting your way through legions of enemies and searching for the power-ups. In this exciting and fast-paced side scroller, if you can survive and find the key then you can make it to the next level. Remember to avoid the inhabitants of the land! They are not friendly!

Directional Pad (D-Pad)	Moves right and left.
	Squats.
Start Key (Start)	Starts the game.
	Pauses and un-pauses the game.
A Key	Jumps.
B Key	Fires.

Ristar the Shooting Star

Greedy, an evil tyrant, even has arisen to control a solar system full of sentient beings. Yet he did not count on the intervention of the hero's son, Ristar! The inhabitants of a lush forest planet, the last planet in the tyrant's evil agenda, manage to send a call of help to the solar system ancient hero moments before being overrun.

Directional Pad (D-Pad)	Controls the direction.
Start Key (Start)	Starts your engine.
	Pauses and un-pauses game.
A Key	Extends hand to attack enemies and grab tools.
B Key	Jumps.

Snail Maze

Maze after maze await your trusty snail as you help him search for his way back home. Full of dead-ends and dangerous turns, it is sure to become more difficult the closer you get to your goal. This is entertaining fun that will last as long as you do! You had better get started; home awaits!

Directional Pad (D-Pad)	Controls the direction and pass the maze in certain time.
--------------------------------	---

Sonic Chaos

The evil maniac Dr. Robotnik has another twisted idea to take over the world! This time he wants to steal the mystical Chaos Emeralds. The Emeralds are the source of vitality for all living things. The evil Doctor has already snatched the Red Chaos Emerald, causing the other Emeralds to lose balance and fly into a parallel universe. Now South Island is sinking into the ocean. Sonic and Tails will have to use all their super speed and super stunts to stop Dr. Robotnik and restore harmony to the universe!

Directional Pad (D-Pad)	Highlights Sonic or Knuckles in Character Select screen. Controls the direction Sonic moves while running or spinning. When pressed up, makes Sonic look up when he's standing still. When pressed down, makes Sonic crouch.
Start Key (Start)	Starts the game. Pauses and un-pauses game.
A Key	Toss and jump to attack the enemy. Long press to speed toss and release the key to forward toss.
B Key	Toss and jump to attack the enemy. Long press to speed toss and release the key to forward toss.

Sonic Drift 2

With even more danger and high speed racing thrills than before, Sonic, the fastest blue hedgehog around is back! Together with six of his friends and foes Sonic will race as they do battle around the track. This is a no-holds-barred affair, combining speed and racing skills with amazing antics as they do anything and everything to win the race. Jump behind the wheel and help Sonic to victory!

Directional Pad (D-Pad)	Controls the direction. Activates Special Ability when press up. Starts the game. Pauses and un-pauses game.
Start Key (Start)	Returns to previous screen/cancels selections. Brakes.
A Key	Enters selections. Accelerates.

Sonic Spinball

The twisted Dr. Robotnik is back! And this time he's hatched an evil plan to transform all the creatures of Mobius into robots. To do this, Robotnik has designed the Volcano Veg-O Fortress, a super-efficient robot factory hidden inside an island volcano. Sonic, the world's coolest hedgehog, has to free his friends and stop Robotnik's sinister scheme, before it's too late!

Directional Pad (D-Pad)	Controls the direction Sonic moves while running or spinning. When pressed up, makes Sonic look up when he's standing still. When pressed down, makes Sonic crouch.
Start Key (Start)	Advances through Title and Scoring screens. Pauses and un-pauses game.
A Key	Controls left flipper. Makes Sonic jump when standing or running (Key B also does this). Sends Sonic into his Super Spin Dash. Hold the D-Pad in the "down" direction and press A or B Key (B Key also does this).
B Key	Controls right flipper. Makes Sonic jump when standing or running. (A Key also does this).

Sonic Triple Trouble

Chaos Emeralds hold the key to power and the evil Dr. Robotnik has achieved his goal – he has found them all! There is still a chance to prevent Robotnik from using the emeralds to fulfill his plan however: five emeralds have somehow been lost again and Sonic must find them first. Nack the Weasel joins the fun as he competes in the search. Just when Sonic thought it was safe, a race to get the emeralds is underway! It is up to you to keep these powerful jewels out of the hands of Robotnik before all is lost!

Directional Pad (D-Pad)	Highlights Sonic or Knuckles in Character Select screen. Controls the direction Sonic moves while running or spinning. When pressed up, makes Sonic look up when he's standing still. When pressed down, makes Sonic crouch.
Start Key (Start)	Starts the game. Pauses and un-pauses game.
A Key	Toss and jump to attack the enemy. Long press to speed toss and release the key to forward toss.
B Key	Toss and jump to attack the enemy. Long press to speed toss and release the key to forward toss.

Super Columns

Columns is a colorful game of block stacking fun. Match groups of three common colors as they drop and they will be removed from the game area. Allow them build into towering columns and you lose! It is you against the blocks in this sparkling puzzler. Addictive and fast paced with multiple game play versions, this is game for everyone to enjoy, solo or in two player mode!

Directional Pad (D-Pad)	Press to select a GAME mode or an option. Press left or right to move the columns in those directions. Press down to increase the speed at which the columns drop.
Start Key (Start)	Starts the game. Pauses and un-pauses game.
A Key or B Key	Press to arrange the items.

Tails Adventures

Although Sonic and Tails the Fox are the best of friends, there are times when even they have to a break. For these quiet times, Tails likes to retreat to Tails Island, a beautiful tropical island. While sleeping one day on a tree stump in the forest, the robot ducks, a conquering race of ducks with a clown as a leader, began to burn down the Poloi Forest. Seeing the devastation, Tails quickly grabs some bombs and heads out to confront these evil mallards and to save not only his home and his island, but the planet itself!

Directional Pad (D-Pad)	Controls the direction.
Start Key (Start)	Starts game. Pauses and un-pauses game. Changes the tools.
A Key	Uses tools.
B Key	Jumps. Presses again while hero is on the air to make him fly.

The Ninja

Live the excitement and history of feudal Japan as the mighty warrior Kazamaru as you battle the evil emperor Gokuro and his powerful Ohkami ninjas! Gokuro has imprisoned the princess somewhere in his castle and you must use all your martial arts skills to search its many areas to free her. If you can defeat the army on ninjas along the way, you will still have to face Gokuro himself to win her freedom!

Directional Pad (D-Pad)	Controls the direction.
Start Key (Start)	Starts the game. Pauses and un-pauses game.
A Key	Attacks where Kazamaru faces.
B Key	Attacks upward.