 
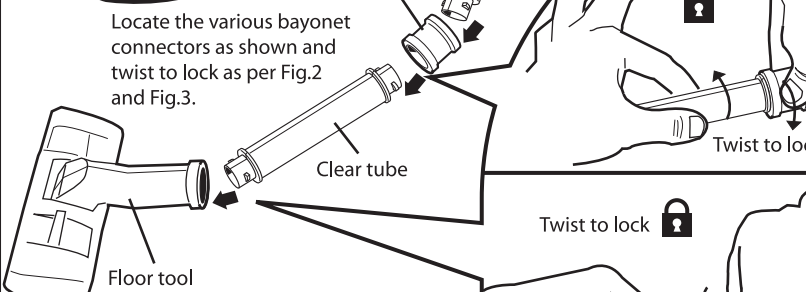 




Accessories/ Tools are located underneath the black hat.
To remove black hat, pull both **Tabs A** outwards and lift hat off.
To replace hat onto unit, make sure both **Tabs A** are in their open position. Locate hat onto body with **Henry/ Hetty** wording directly above **eyes**, push both **Tabs A** into body to secure into position.

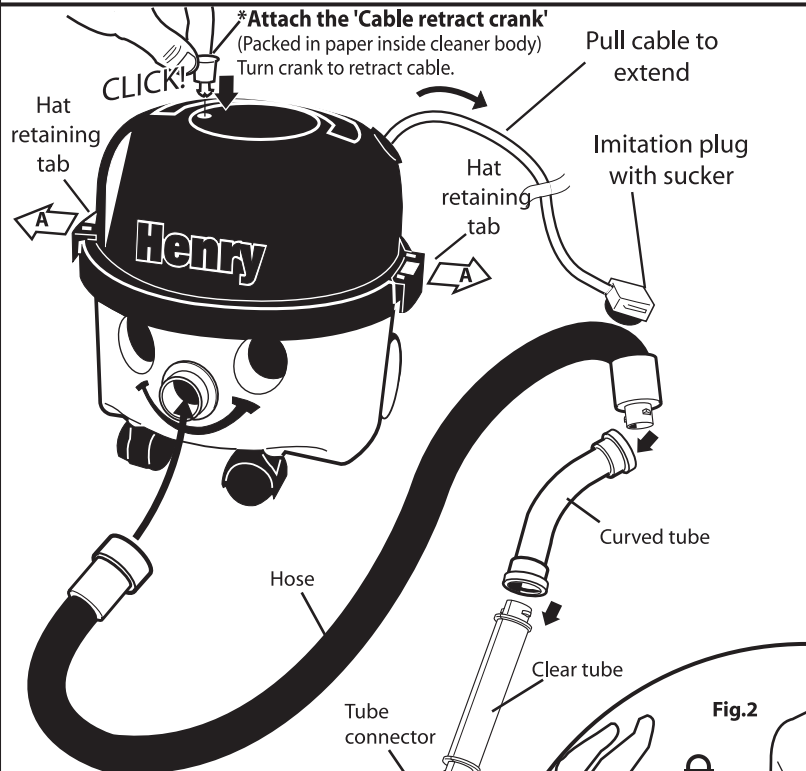

WARNING:
STRANGULATION HAZARD - Long Hose and cord.
CHOKING HAZARD - Small parts.
Not suitable for children under 3 years.
Be careful during use due to posing a potential hazard; The toy vacuum is an imitation of real product; The toy vacuum shall be kept out of the reach of very young children. TO BE USED UNDER THE DIRECT SUPERVISION OF AN ADULT.

How does it work?

  
Locating Accessories/ Tools inside Cleaner's body:

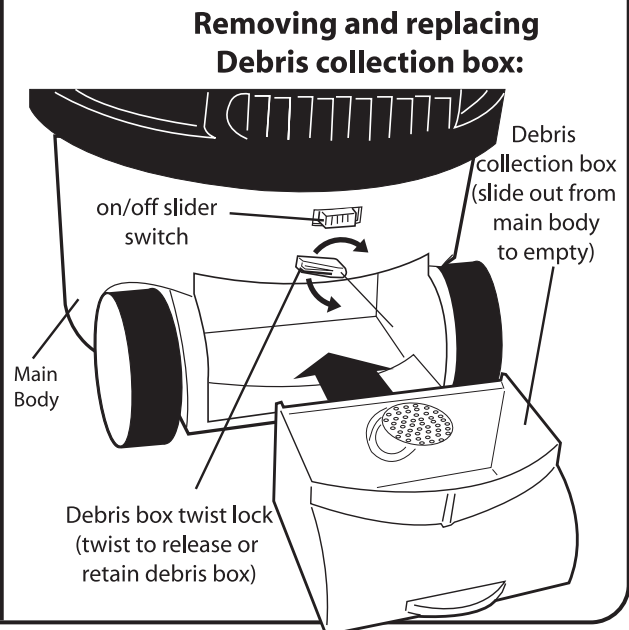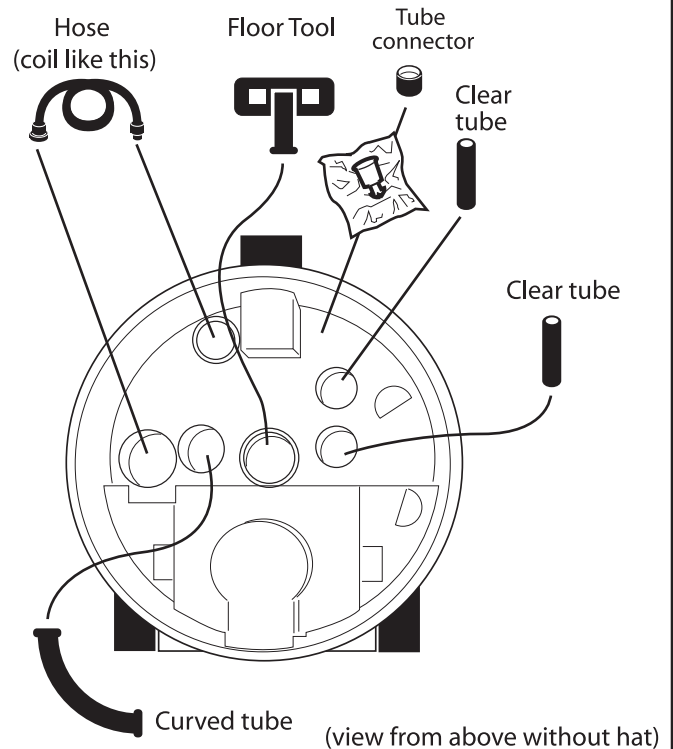

Installing Batteries (ADULTS ONLY)

Remove the battery compartment cover (positioned underneath item) by unfastening the pozi-screw.
Install 4 x "C" LR14/ E93/ AM2 batteries ensuring they are placed with the polarities matching the diagram located on the battery compartment (Fig 1).
The use of alkaline Batteries is recommended for maximum performance.
Replace the battery cover and fasten the pozi-screw.

 This symbol indicates that this product should not be treated as normal household waste. It should be recycled, so please take it to an approved collection facility

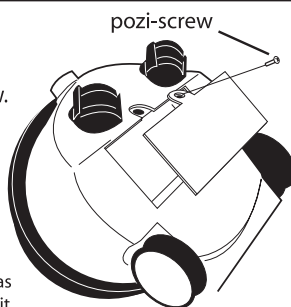

Battery Notice

Install the batteries correctly observing the polarity (+) and (-) signs to avoid leakage.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Different types of batteries or new and used batteries are not to be mixed.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

 


FIG 1



BS 5665



EN 71

