


Hayward - Centre Shelf TV Unit

Assembly Instructions - Please keep for future reference

391/6469

414/2995

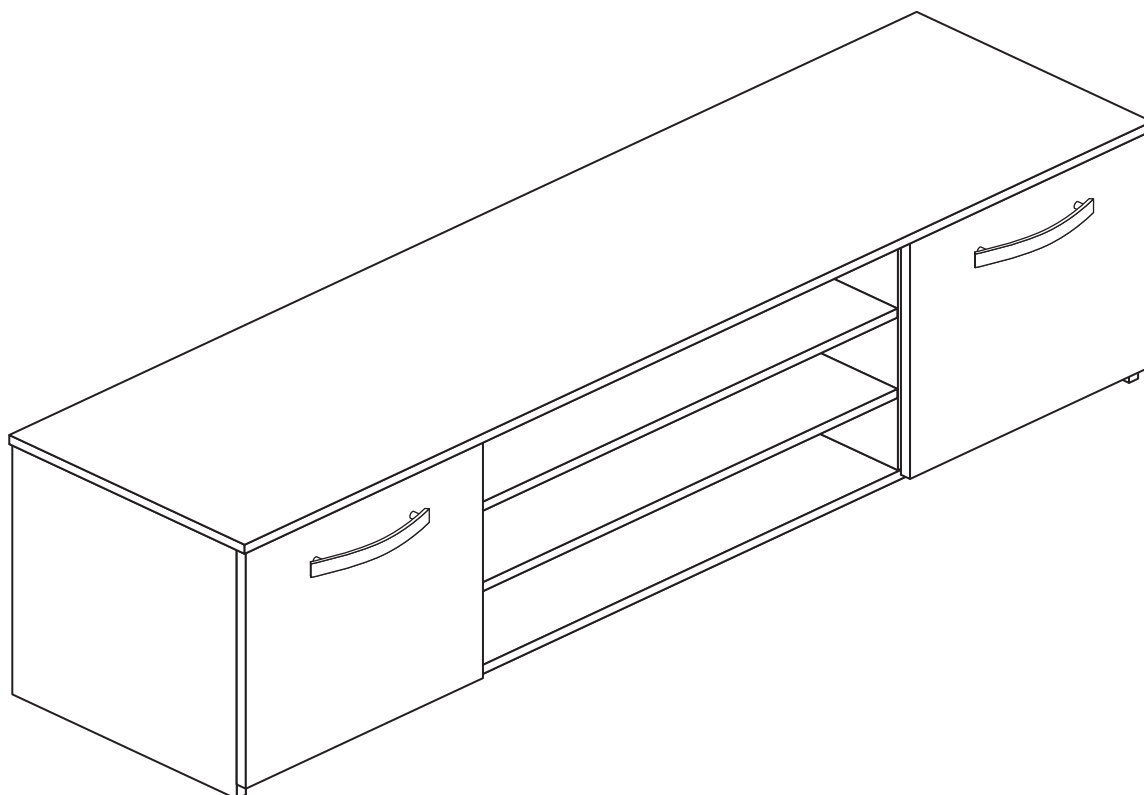

Dimensions

Width - 150cm

Depth - 38.9cm

Height - 43.1cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 32kgs. Please lift with care.
 - Check you have all the components and tools listed on pages 2 and 3.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Parts of the assembly will be easier with 2 people.
 - Make sure you have enough space to layout the parts before starting.
 - Do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
-
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
 - **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).
 - Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)


Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020


Please check you have all the panels listed below

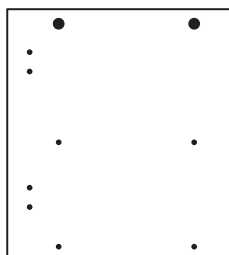


1 Left Side (DF3075)
(41.6 x 37.1cm)

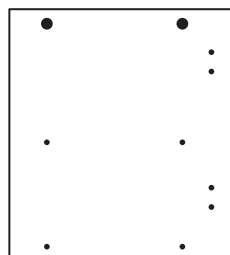


2 Right Side (DF3076)
(41.6 x 37.1cm)

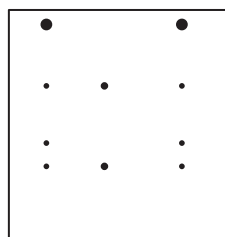


3 Left Divider (DF3077)
(38.5 x 36.8cm)

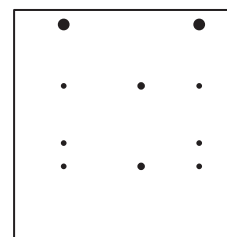


4 Right Divider (DF3078)
(38.5 x 36.8cm)

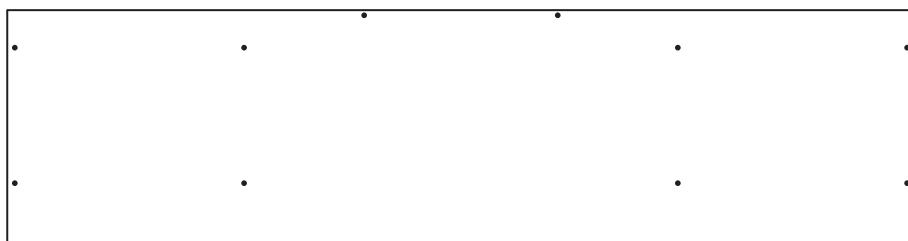


5 Top (DF4016)
(150 x 38.9cm)

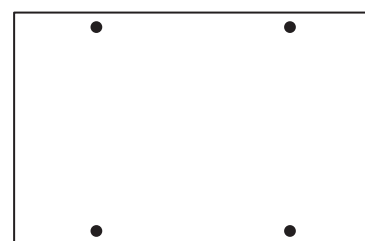


6 Back Support (DF3744)
(38.5 x 59.2cm)

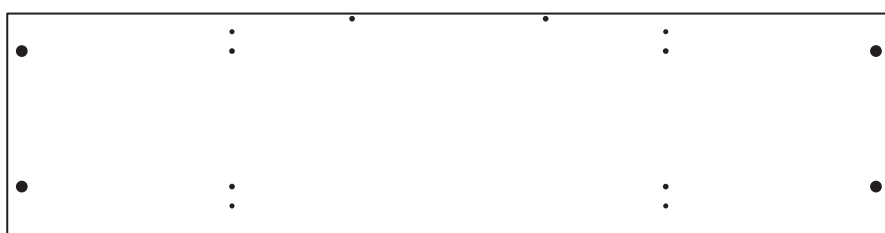


7 Base (DF4017)
(146 x 37cm)

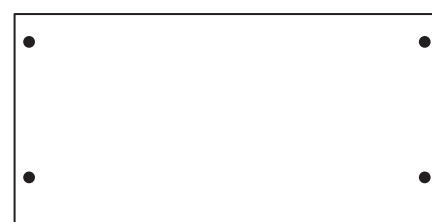

 
8 Fixed Shelf (DF4018)
(70.2 x 35.1cm) x 2




9 Loose Shelf (DF3084)
(36.4 x 36.7cm) x 2

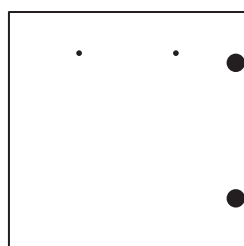

10 Left Door (DF4822)
(39.2 x 39.2cm)

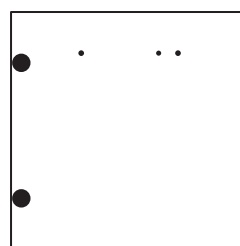

11 Right Door (DF3083)
(39.2 x 39.2cm)

 

12 Back (X411-390)
(41.1 x 39cm) x 2



Components - Fittings















If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

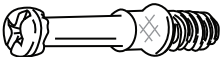Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

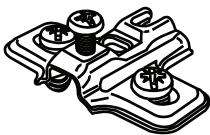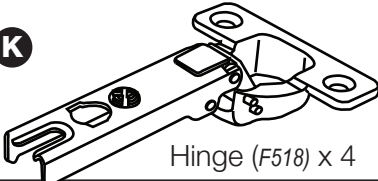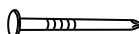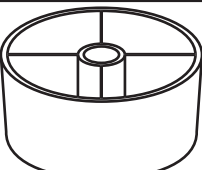A  Metal dowel (F901) x 24	B  Large locking nut (F900) x 24	C  Wooden dowel (F22) x 4
D  Shelf stud (F110) x 8	E  40mm Screw (F910) x 4	F  25mm Screw (F50) x 4
G  19mm Screw (F461) x 4	H  13mm Screw (F63) x 8	I  Plastic Nail (F91) x 4
J  Hinge plate (F523) x 4	K  Hinge (F518) x 4	L  Nail (F51) x 20
M  Feet (F854) x 4	N  Handle (F306) x 2	

 Tools required



Spirit level



Cross-head screwdriver



Scissors




Hammer




Eye protection (when using a hammer or drill)



Square

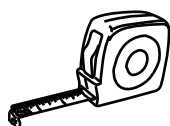


Rule

 

Bradawl

Ruler - Use this ruler to help correctly identify the screws

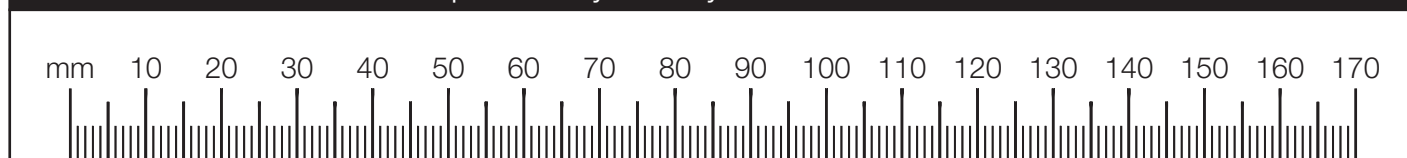

Assembly Instructions

Step 1

Prepare the left divider


a: Insert 2 large locking nuts **B** into the left divider **3**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.


Turn the left divider over

b: Screw 4 metal dowels **A** into the left divider **3**.

Note: Tighten the metal dowels up fully against the panels.

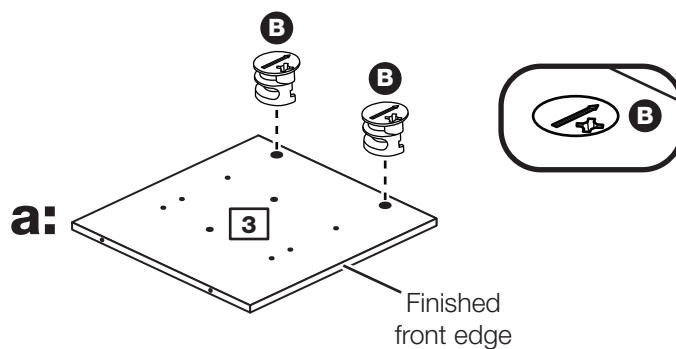

Turn the left divider over

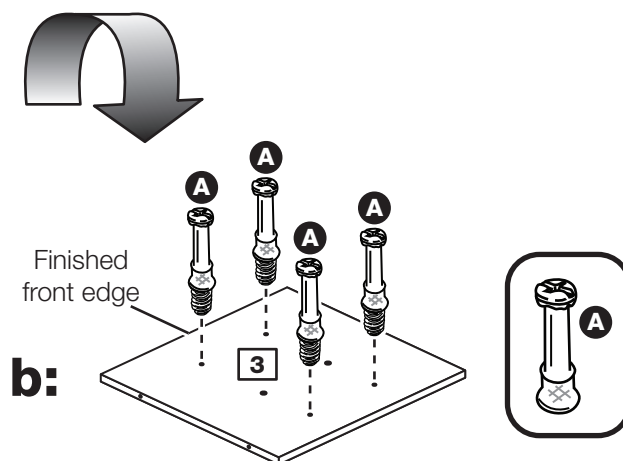


Step 2

Prepare the right divider


a: Insert 2 large locking nuts **B** into the right divider **4**.

Turn the right divider over

b: Screw 4 metal dowels **A** into the right divider **4**.

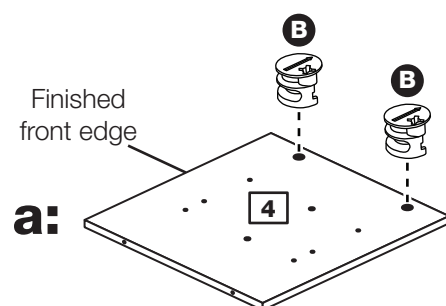

Turn the right divider over

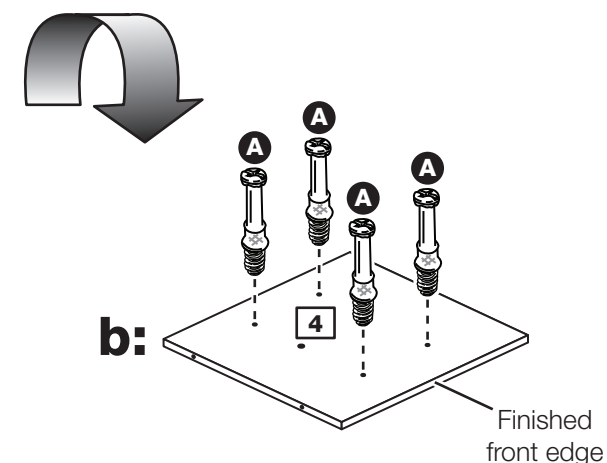

Assembly Instructions


Step 3

Prepare the 2 fixed shelves

Insert 4 large locking nuts **B** into each of the 2 fixed shelves **8**.

Tap 2 wooden dowels **C** into each of the 2 fixed shelves **8**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

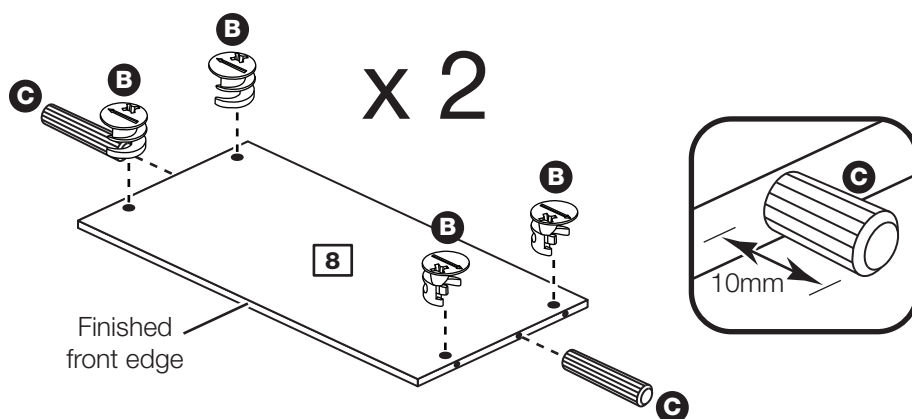


Step 4

Fit a fixed shelf to the right divider

Push a fixed shelf **8** onto the right divider **4**.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the fixed shelf **8**.

Note: Turn the large locking nuts **B** as far as they will go - more than 1/2 a turn.

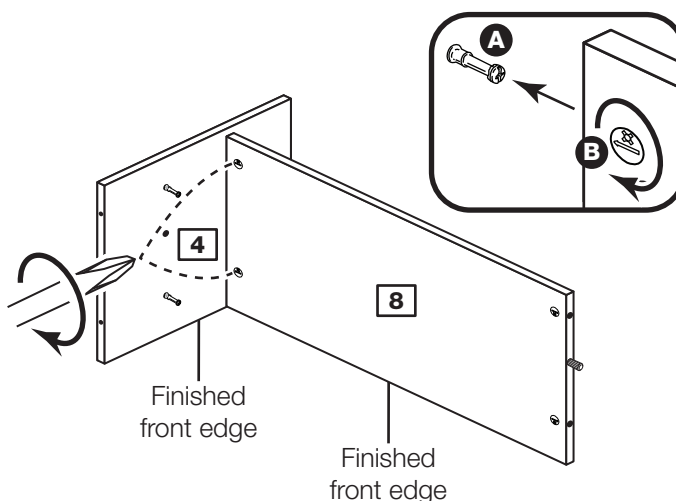


Step 5

Fit the other fixed shelf

Push the fixed shelf **8** onto the right divider **4**.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the fixed shelf **8**.

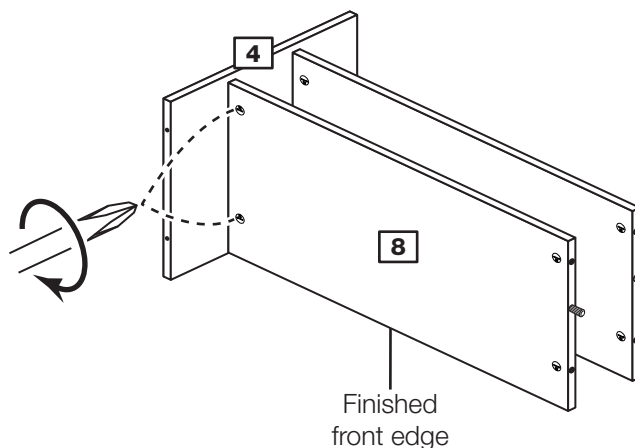


Assembly Instructions

Step 6

Fit the left divider

Push the left divider **3** onto the fixed shelves **8**.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to each fixed shelf **8**.

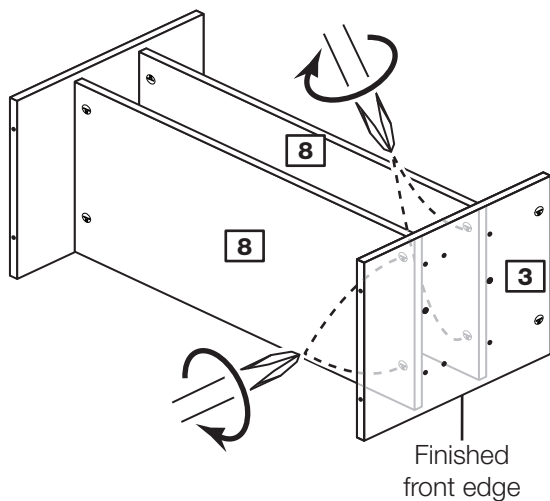

Step 7


Prepare the base

a: Insert 4 large locking nuts **B** into the base **7**.


Screw the 4 feet **M** into the mark holes in the base **7** using screws **F**.

Turn the base over

b: Screw 2 metal dowels **A** into the base **7**.

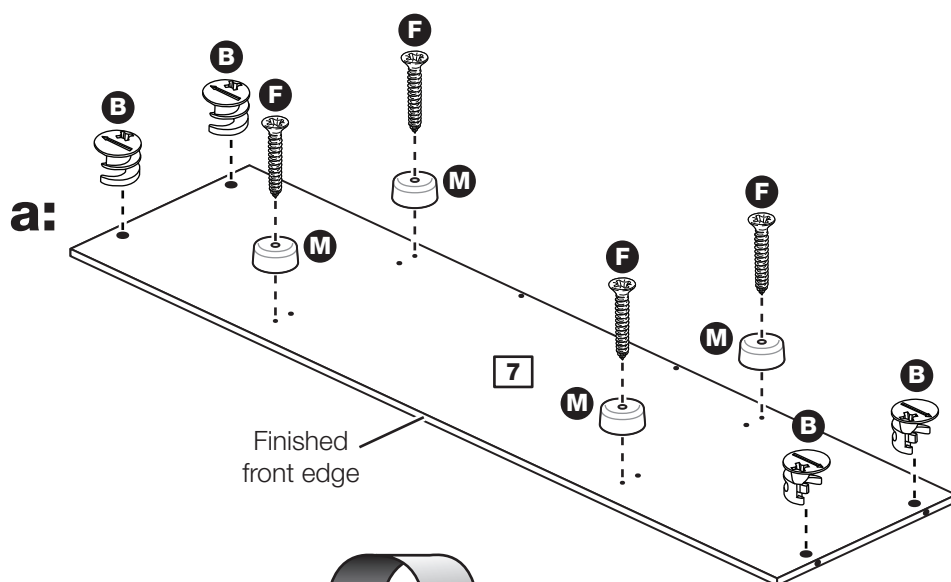

Turn the
base over

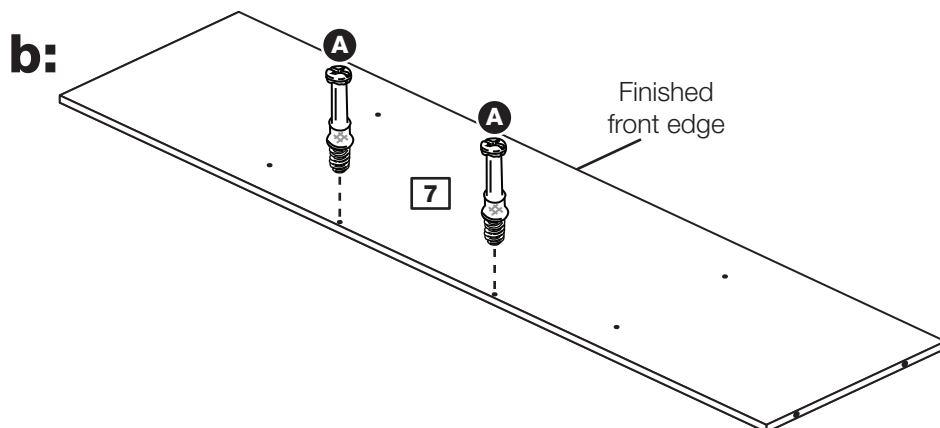


Assembly Instructions

Step 8

Fit the base


Attach the base **7** to the dividers **3** and **4** using 4 screws **E**.

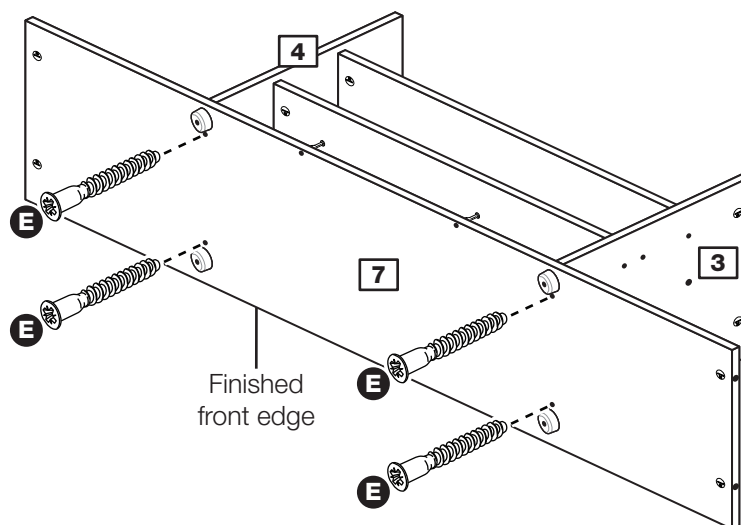

Step 9

Prepare the back support

Insert 4 large locking nuts **B** into the back support **6**.

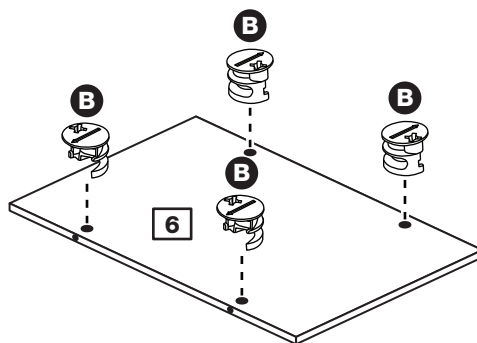


Step 10

Fit the back support

Push the back support **6** onto the base **7**.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the back support **6**.

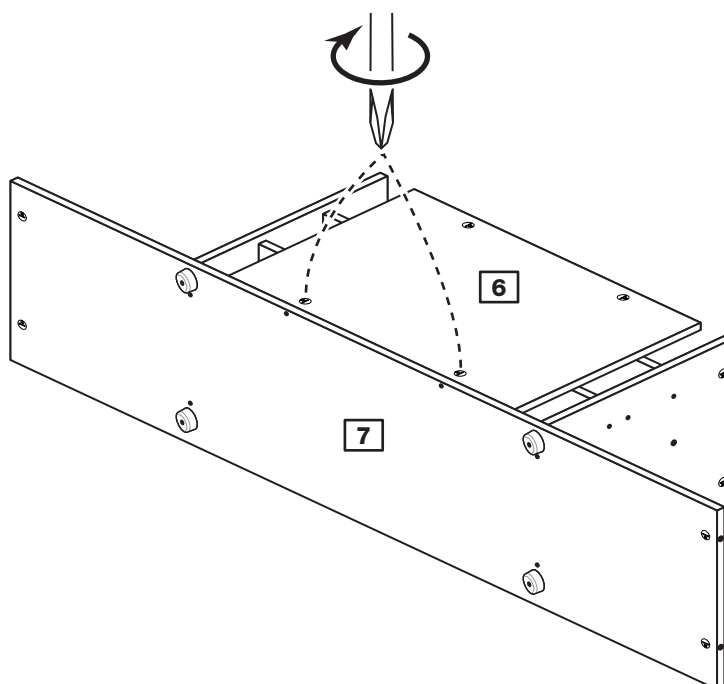

Assembly Instructions


Step 11

Prepare the left side

Screw 2 metal dowels **A** into the left side **1**.

Insert 2 large locking nuts **B** into the left side **1**.

Fit 2 hinge plates **J** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

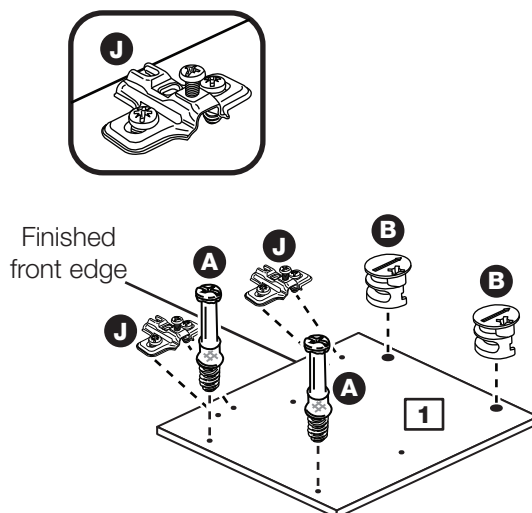


Step 12

Prepare the right side

Screw 2 metal dowels **A** into the right side **2**.

Insert 2 large locking nuts **B** into the right side **2**.

Fit 2 hinge plates **J** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

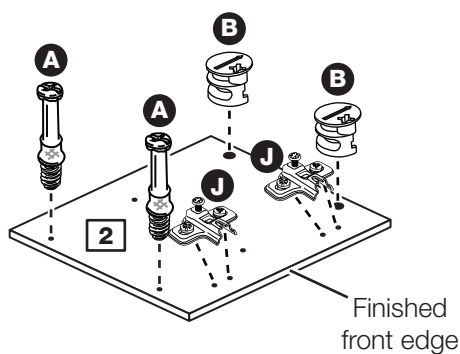


Step 13

Fit the side panels

Push the left side **1** and right side **2** onto the base **7**.

Use a screwdriver to tighten the 4 large locking nuts **B** fitted to the base **7**.

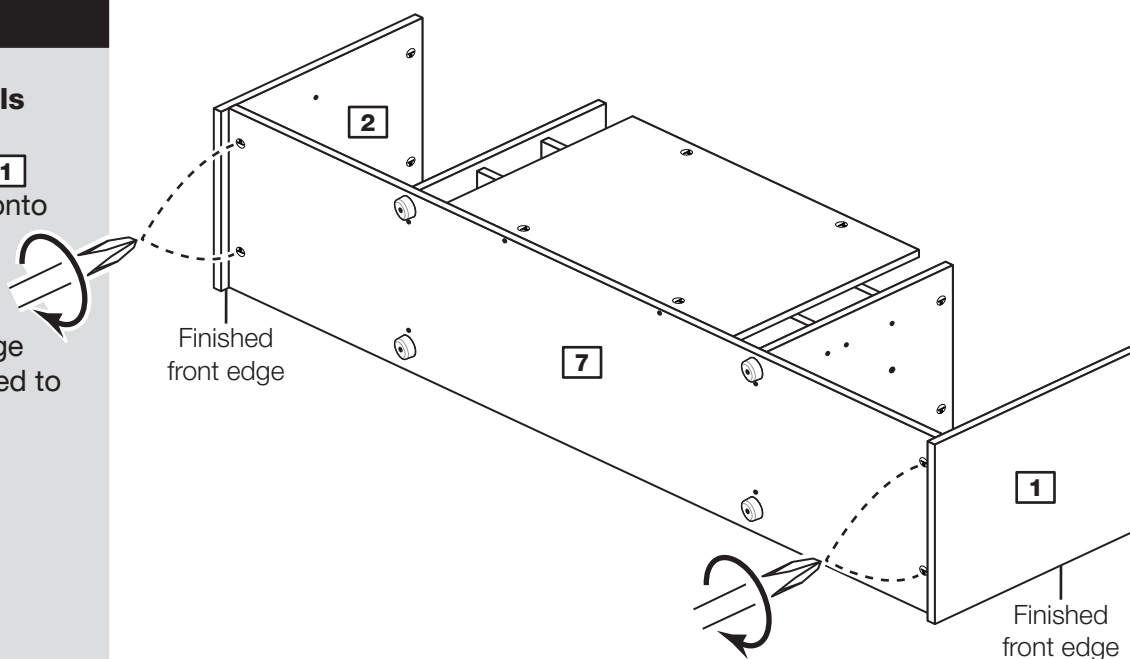


Assembly Instructions

Step 14

Prepare the top

Screw 10 metal dowels **A** into the top **5**.

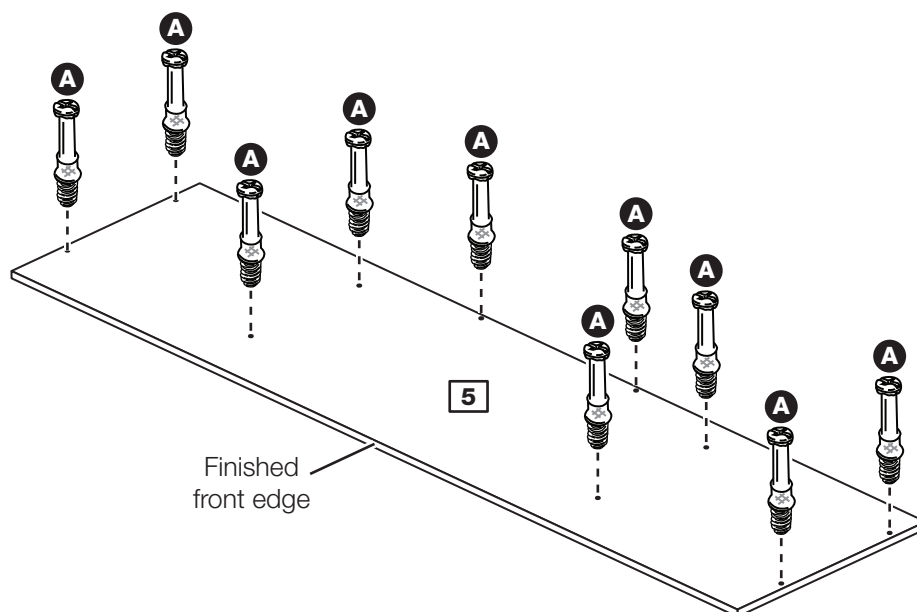


Step 15

Fit the back support

Note: To make it easier to fit the top, place polystyrene blocks from the packaging underneath the side and divider panels to raise the assembly.

Push the top **5** onto the assembly.

Use a screwdriver to tighten the 10 large locking nuts **B** fitted to the left side **1**, right side **2**, left divider **3**, right divider **4** and the back support **6**.

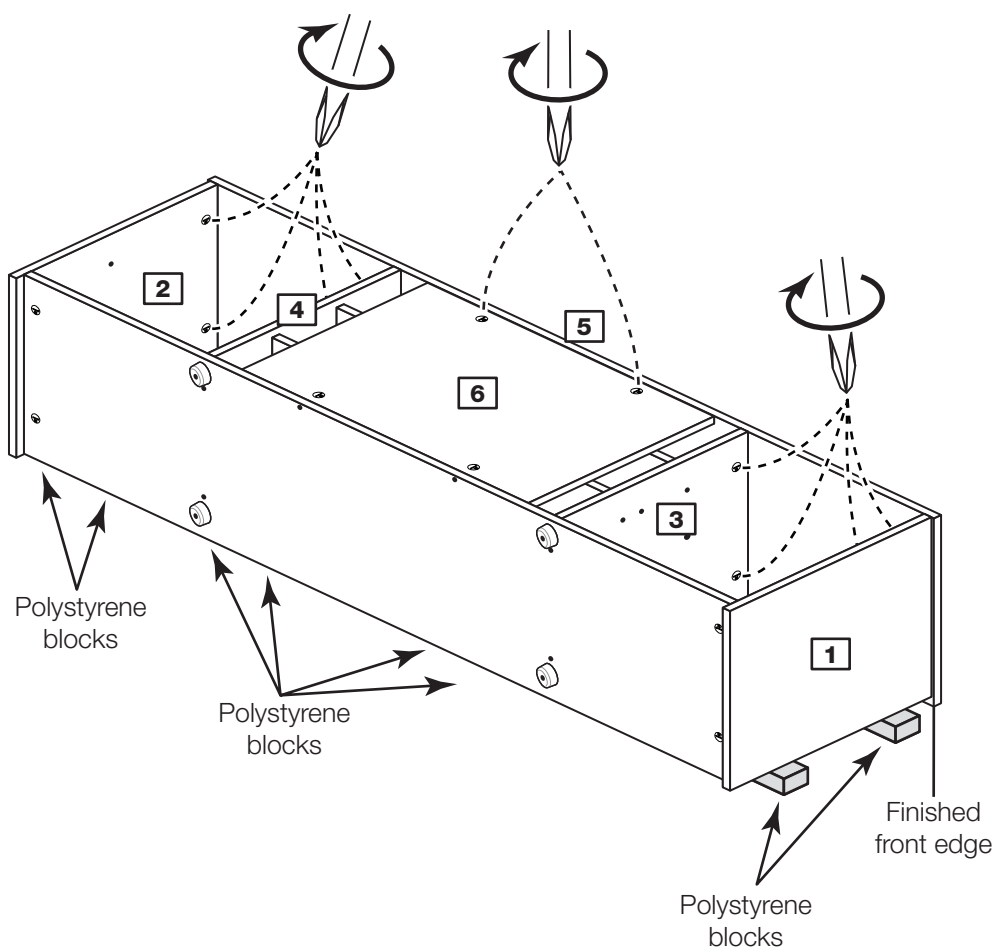

Step 16

Fit the back


a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the 2 backs **12** onto the unit.

Nail **L** around the outside edges of the 2 backs **12**.

Note: Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

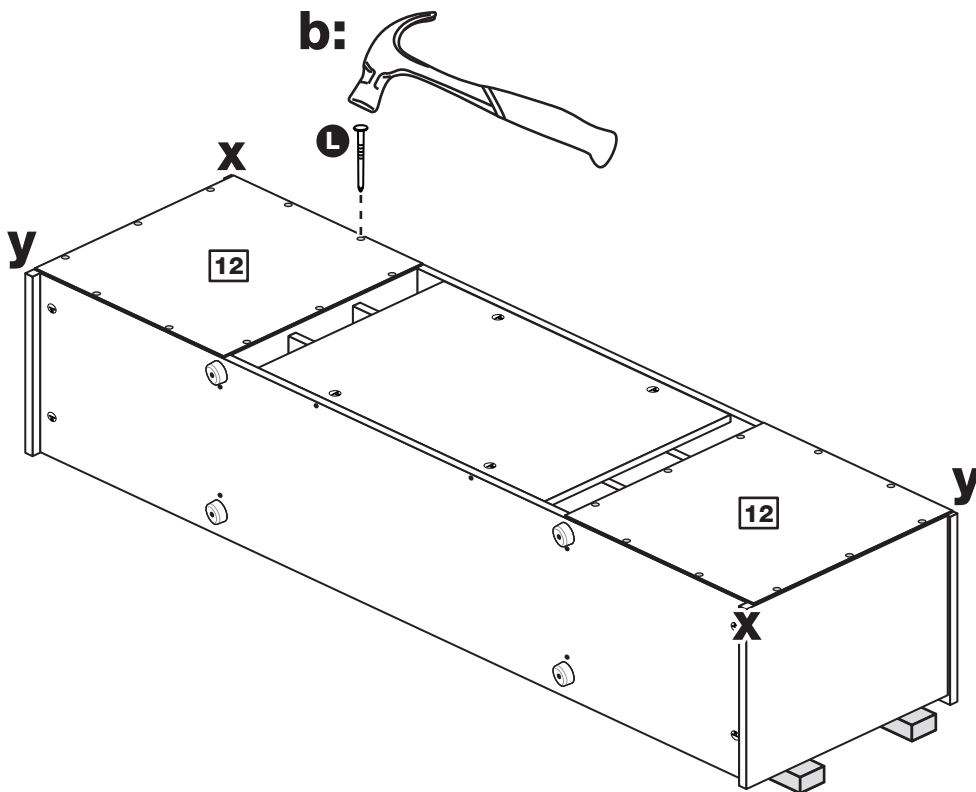

Step 17


Fit the 4 plastic nails

Tap 2 plastic nails **1** into the bottom edge of each of the sides **1** and **2**.

Stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.

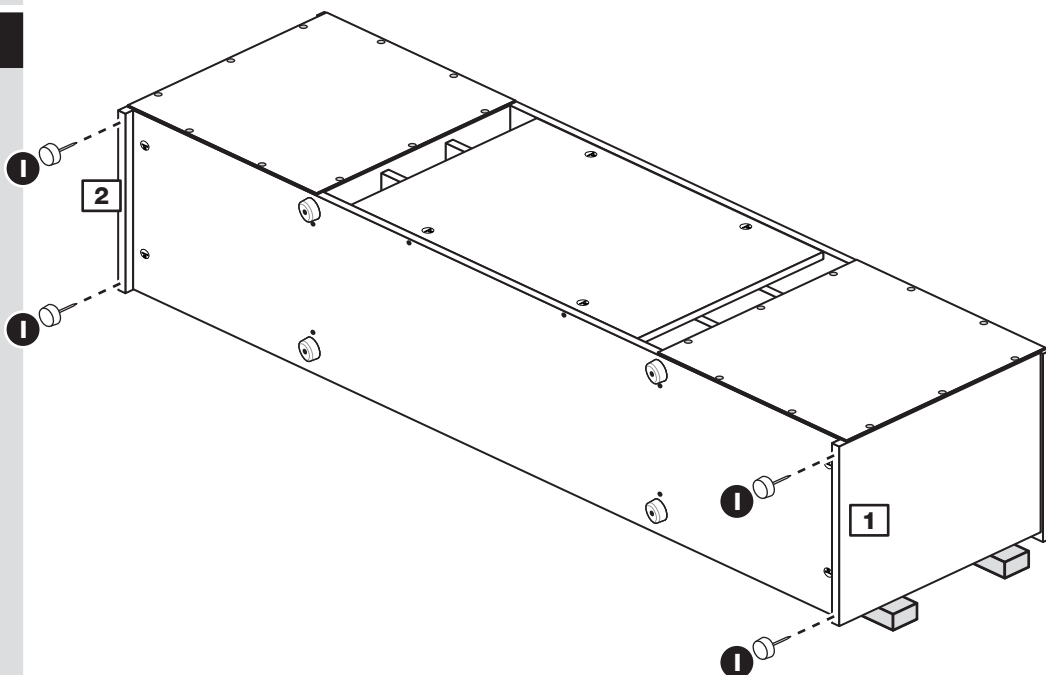


Assembly Instructions

Step 18

Fit the shelf studs


For each of the 2 loose shelves **9**, insert 4 shelf studs **D**.

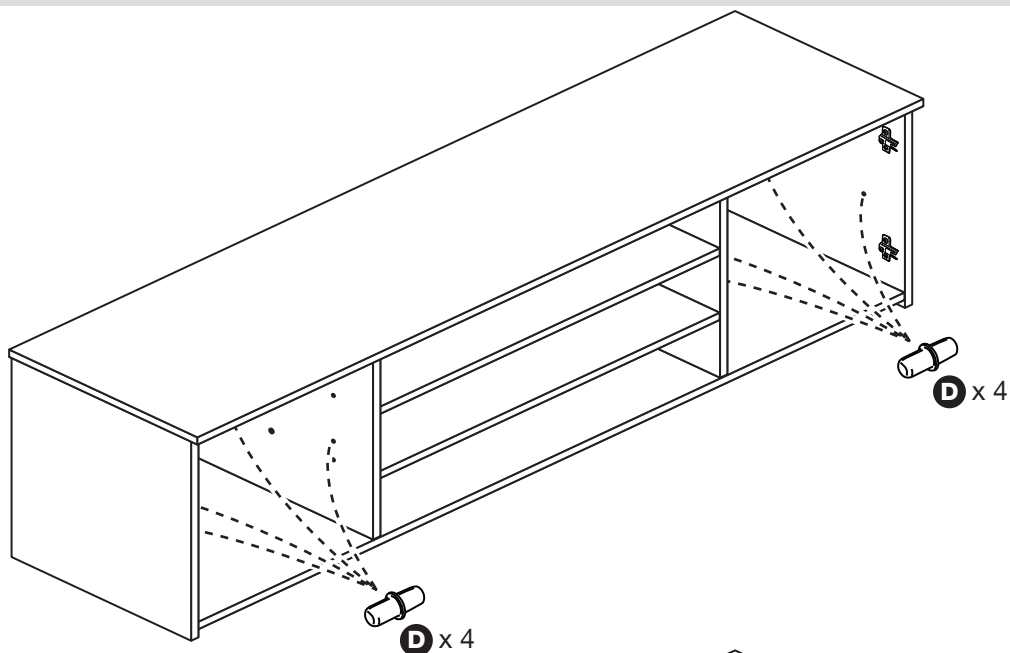

Step 19

Fit the 2 loose shelves

Lower the 2 loose shelves **9** down onto the shelf studs **D**.

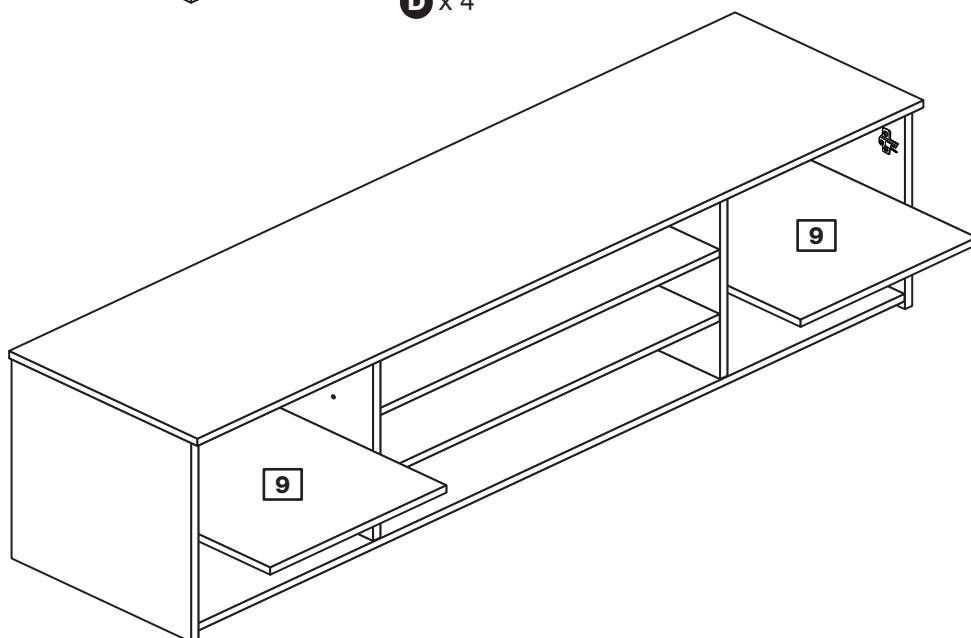


Step 20

Prepare the 2 doors

Push fit 2 hinges **K** into each of the doors **10** and **11**.

Secure each hinge with 2 screws **H**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

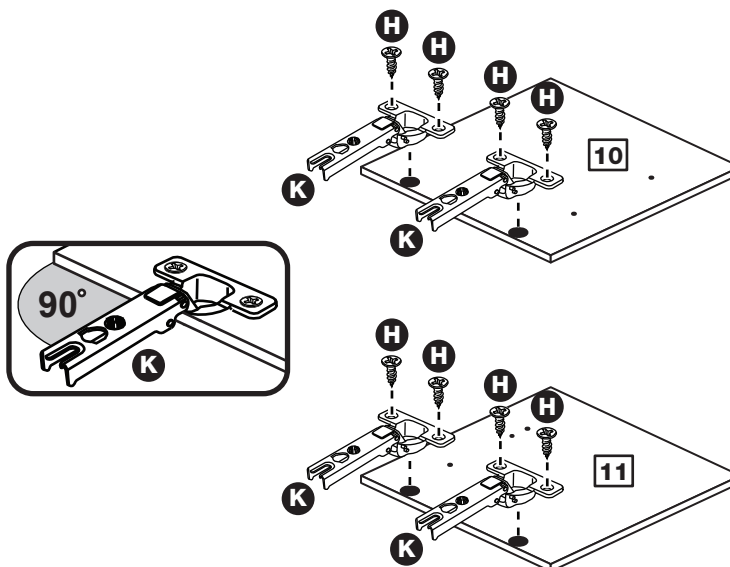

Assembly Instructions

Step 21

Fit doors and handles

Note: The easiest way to attach each door **10** and **11** is to fit the top hinge first, then align and fit the other hinges.



a: Push the hinge **K** onto the front part of the hinge plate **J**.
The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **K** FLAT against the hinge plate **J** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **K** must be flat against the hinge plate **J** prior to any adjustment.

d: The hinge **K** must NOT be AT AN ANGLE to the hinge plate **J** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **N** to each door **10** and **11** using screws **G**.

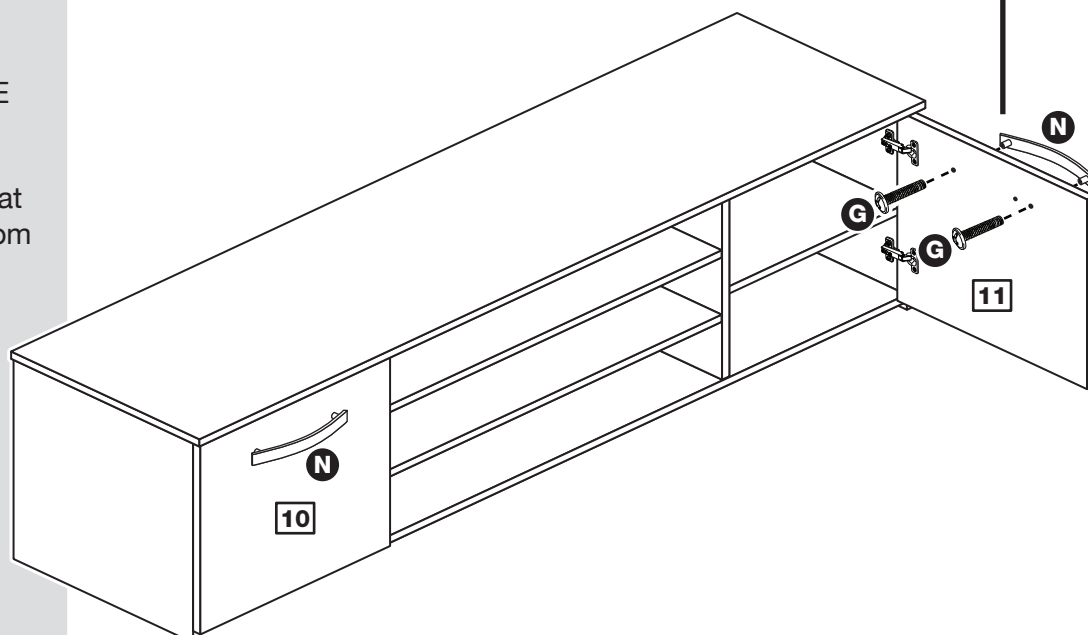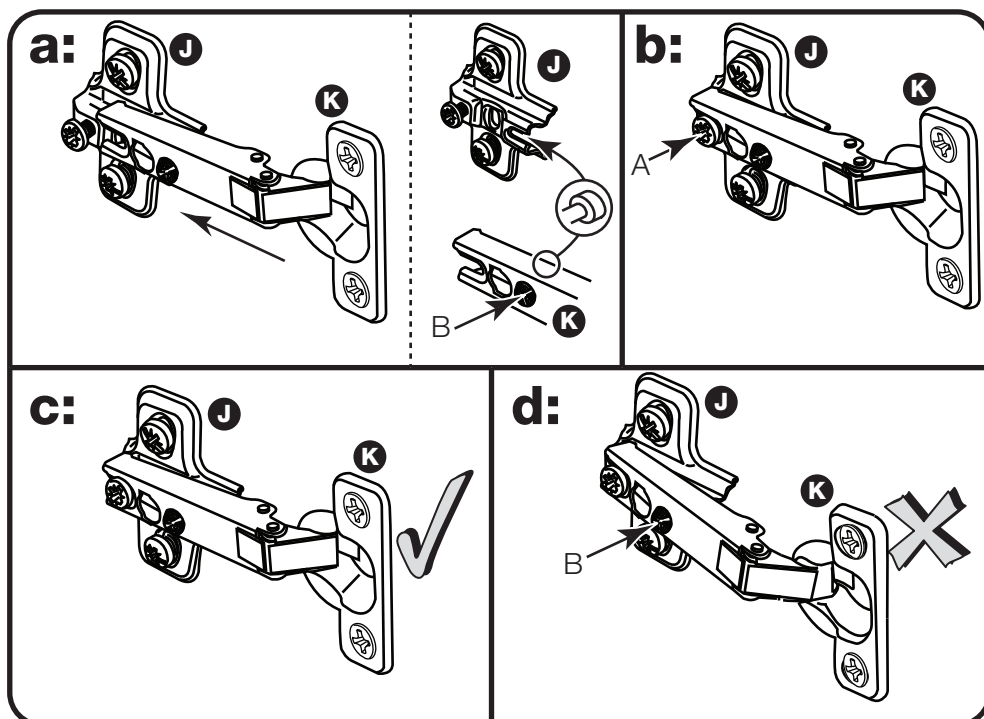

Assembly Instructions

Step 22

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.


To move door 'out' loosen screw C. To move door 'in' tighten screw C.

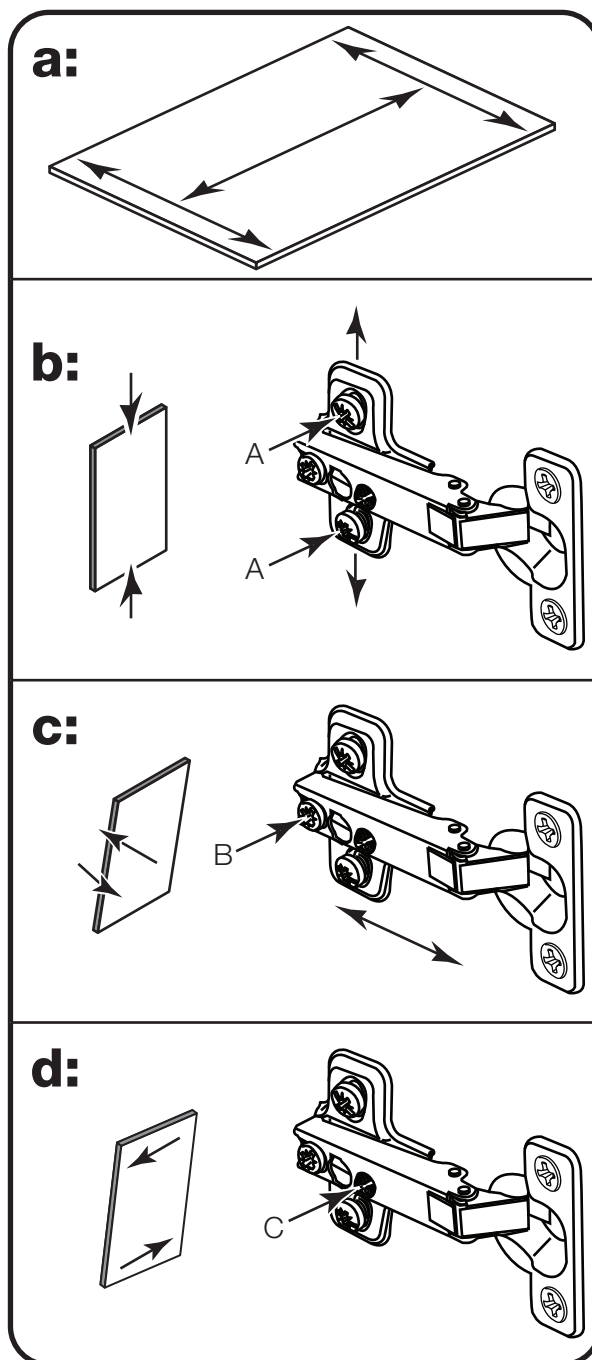

Assembly Instructions

Step 23

Assembly is complete

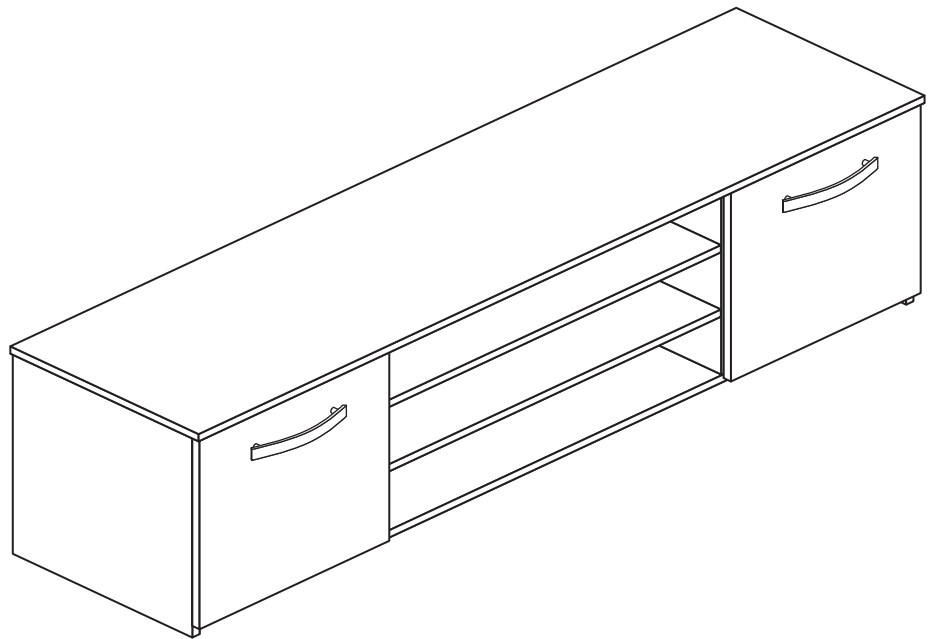

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

