
BASIC RANGE FLOOR CABINET DOOR

Assembly Instructions- please keep for future reference

392/2068

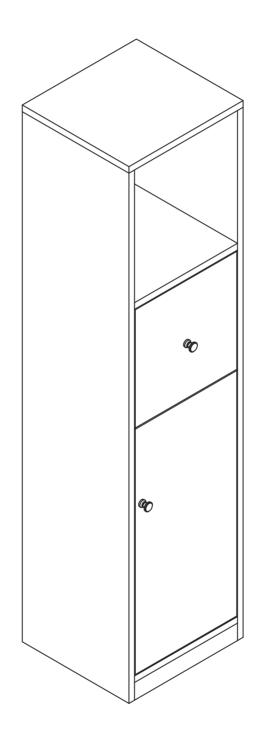

Dimensions

Width - 30cm Depth - 28cm Height - 120cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3..

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• We do not recommend the use of power drill/drivers for inserting screws, as this could damage

the using. Only use hand screwdrivers

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

Please check you have all the panels listed below

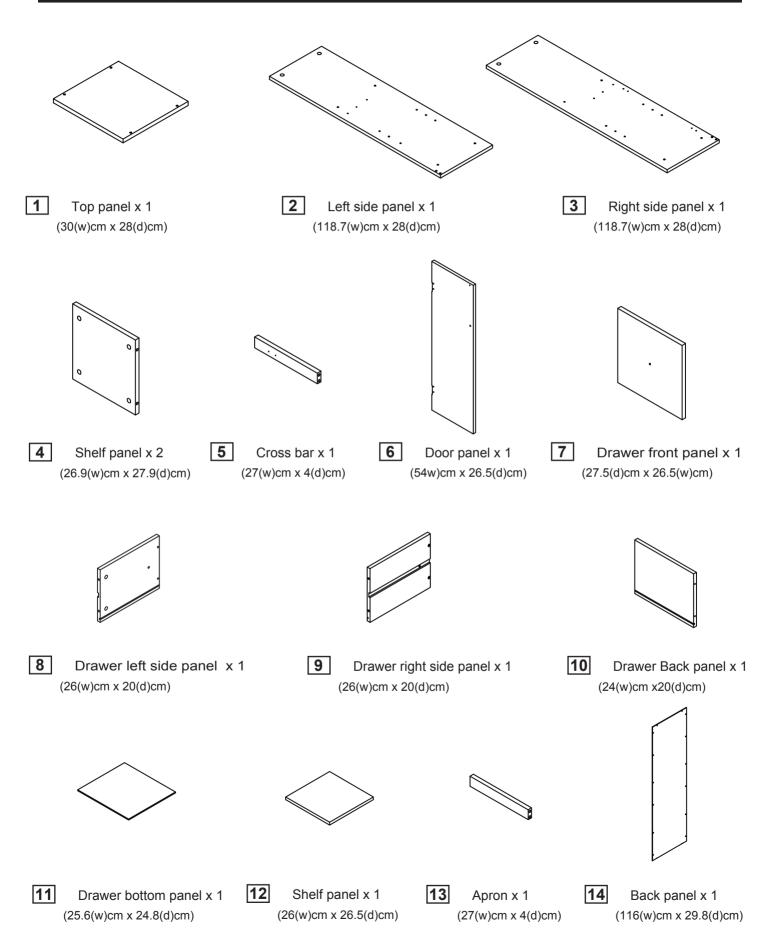

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

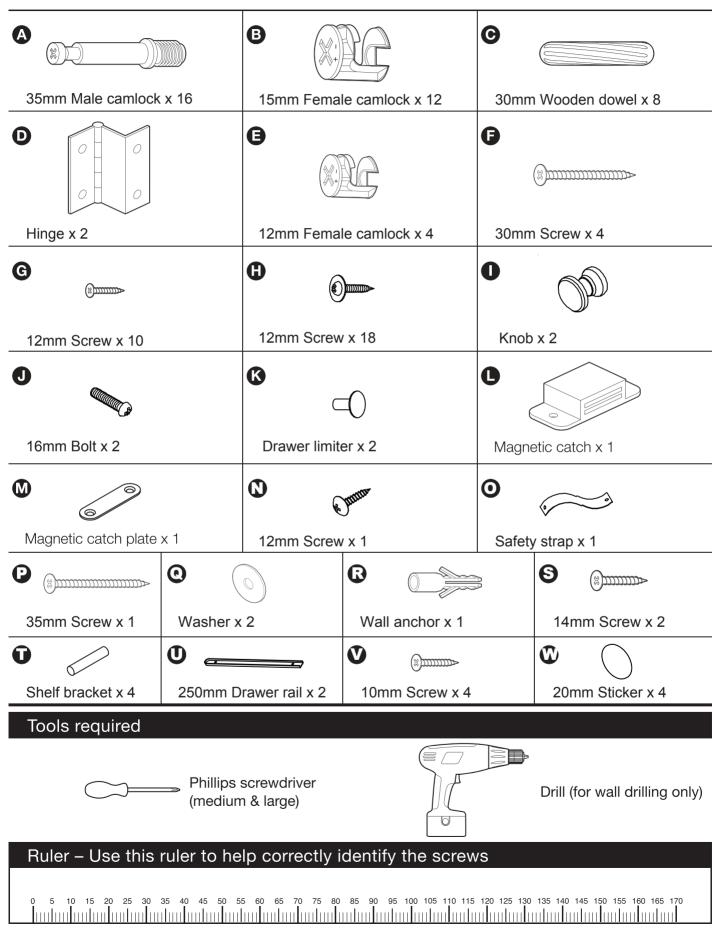

Using Camlocks

 
Step 1

 
Connect the male camlock as directed in the assembly instructions using a screwdriver.

Step 2

Insert the female camlock as shown in the instructions.


Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

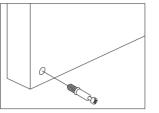

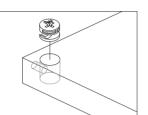

Step 3

 Push the male camlock into the entry hole.

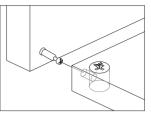


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

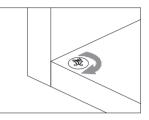


Step 1


Insert 8 x male camlock into inside of left side panel 2 and right side panel 3 as shown. Fix 2 x drawer rail **U** to inside of left side panel 2 and right side panel 3 using 4 x screw **V** as shown.

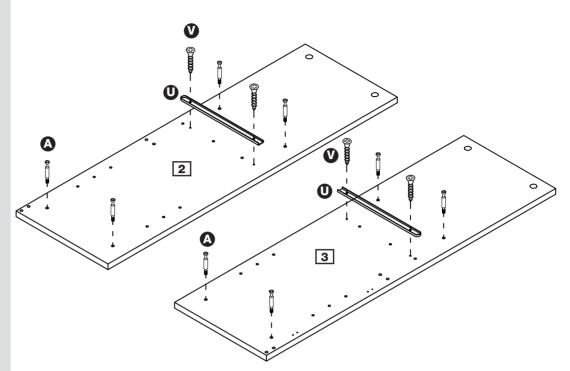

Step 2


Insert 8 x male camlock (A) into underside of top panel [1] and drawer front panel [7] as shown.

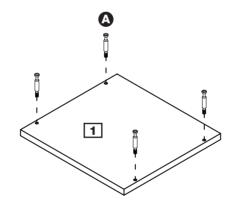

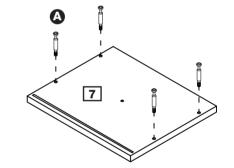

Step 3

Fix 1 x magnetic catch to underside of cross bar 5 using 2 x 14mm screw S as shown.

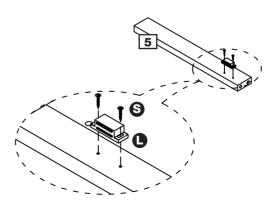

Step 4

Insert 2 x 30mm wooden dowel **C** into right end of cross bar **5** and attach it to right side panel **3** as shown.

Insert 2 x 30mm wooden dowel **G** into right end of apron **13** and attach it to right side panel **3** as shown.

Attach 2 x shelf panel 4 to right side panel 3 using 4 x 15mm female camlock 3 as shown. Tighten female camlocks with a screwdriver.


Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

Step 5

Insert 4 x 30mm wooden dowel **G** into right end of cross bar **3** and apron **13** as shown. Attach left side panel **2** to assembled part using 4 x 15mm female camlock **3** as shown. Tighten female camlocks with a screwdriver.


Step 6

Attach top panel 1 to assembled part using 4 x 15mm female camlock B as shown. Tighten female camlocks with a screwdriver.

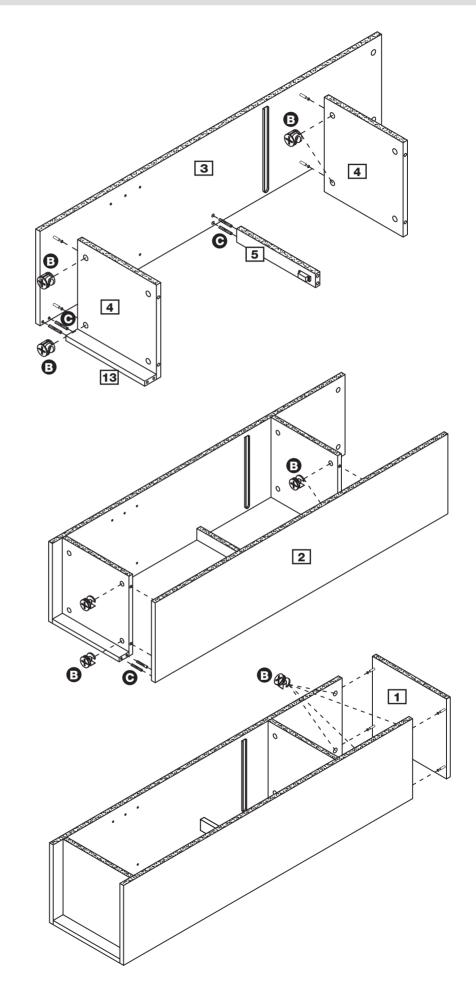

Step 7

Attach back panel **14** to assembled part using 18 x 12mm screw **1** as shown.

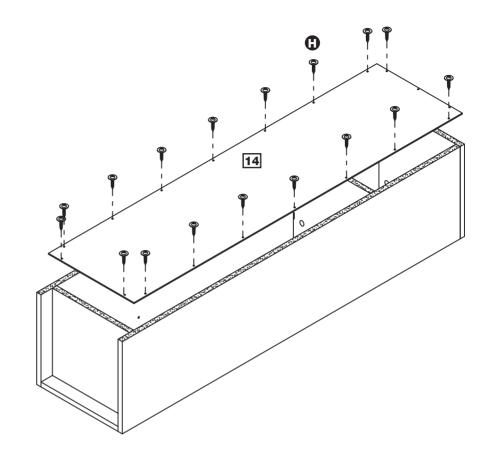


Step 8

Attach drawer left side panel **8** and drawer right side panel **9** to drawer back panel **10** using 4 x 30mm screw **a** shown.

Insert drawer bottom panel 11 into the grooves of drawer left side panel Band drawer right side panel P, and slide it into the groove of the drawer back panel $\fbox{10}$ as shown. Attach the drawer front panel $\fbox{7}$ to the assembled part of drawer using 4 x 12mm female camlock E as shown.

Tighten female camlocks with a screwdriver.


Attach 1 x knob \bigcirc to the drawer front panel \bigcirc using 1 x bolt \bigcirc as shown.

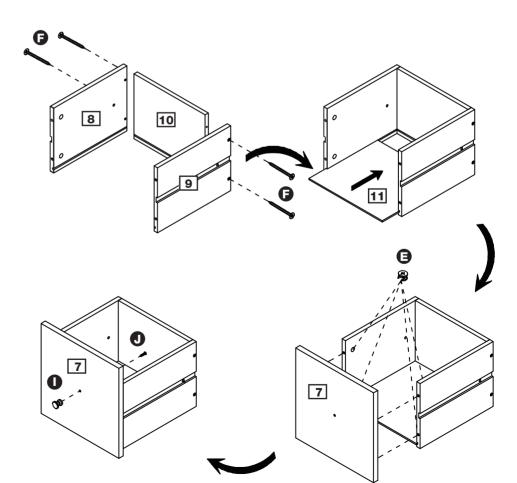

Step 9

Insert the assembled drawer into the chest and make sure 2 x drawer rail **U** inserted into the grooves of the drawer side panel 8 and 9, then insert 2 x drawer limiter **K** into the holes of the drawer side panel 8 and 9 as shown. Insert 4 x shelf bracket into inside of the left side panel **2** and the right side panel 3, then put shelf panel 12 on them as shown.

Gently tighten the upper 4×6 female camlocks and paste 4×20 mm sticker 0 over the holes of them as shown.

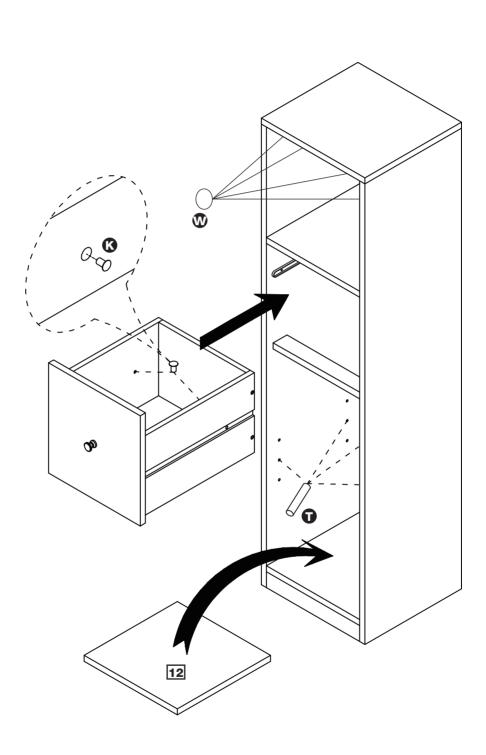

Step 10

Fix unit to wall using 1 x 12mm screw (), 1 x safety strap (), 2 x washer (), 1 x 35mm screw () and 1 x wall plug () as shown.

Note: see the back cover for more information on wall mounting and the suitable use of the supplied rawl plugs.



Warning: Before drilling, check wall for hidden pipes and cables.

Fix 1 x magnetic catch plate to the door panel 6 using 2 x 12mm screw 6 as shown. Fix 1 x knob to the door panel 6 using 1 x bolt as shown. Attach the door panel 6 to the right side panel 3 using 2 x hinge D and 8 x 12mm screw G as shown.




The unit is

Warning:

heavy; seek assistance from another person.

Assembly complete.

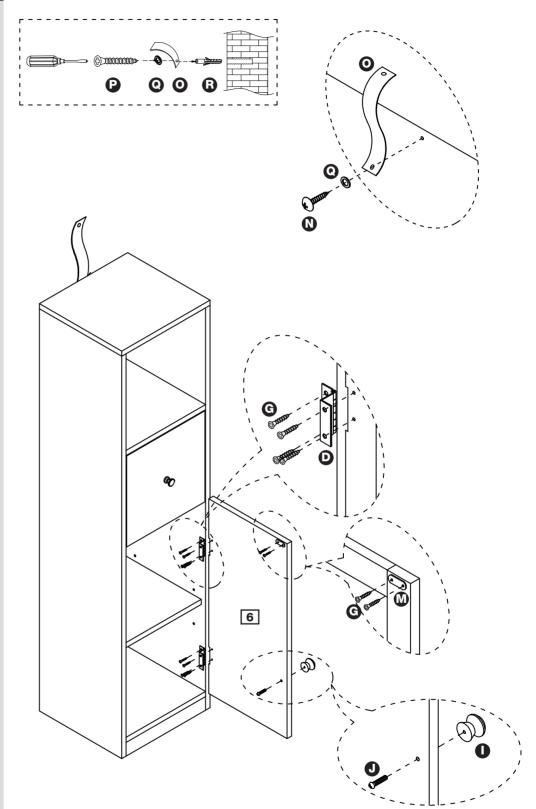

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800** Argos LTD. 489-499 Avebury boulevard, Central Milton Keynes, MK9 2NW

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



 
- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.


Types of walls

No.1 "General Purpose" wall plug

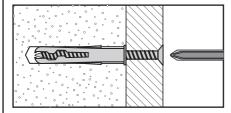

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

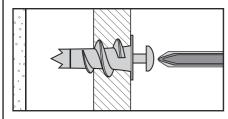

For use when attaching light loads onto plasterboard partitions.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

 
Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.3 "Cavity Fixing" wall plug

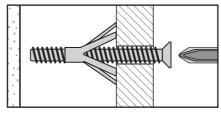


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing – Heavy Duty"


wall plug

 No.5 "Hammer Fixing" wall plug

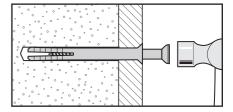


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug – heavy loads

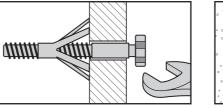

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 Safety: always check the fitting and location to ensure your safety in and around the home.

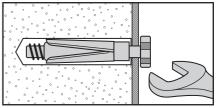

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800