
Suki TV Unit

Assembly Instructions - Please keep for future reference

609/7426

392/4970

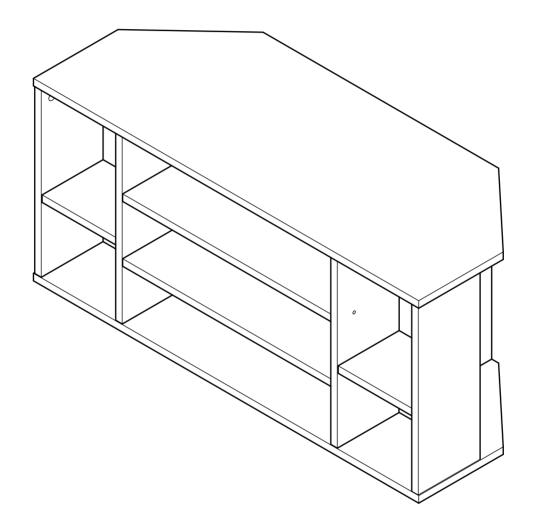

Dimensions

Width - 92cm

Depth - 37cm

Height - 43cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 6400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below



1 Top panel (91.6 x 36.8cm)




2 Bottom panel (91.6 x 36.8cm)

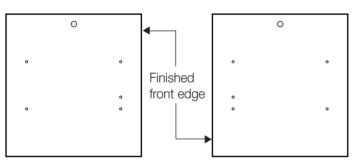


Middle right panel (36.7 x 38.6cm)

Middle left panel (36.7 x 38.6cm)

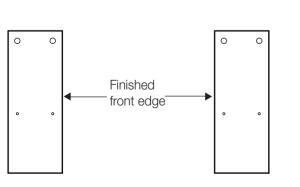


5 Right side panel (14.7 x 38.6cm)

6 Left side panel (14.7 x 38.6cm)

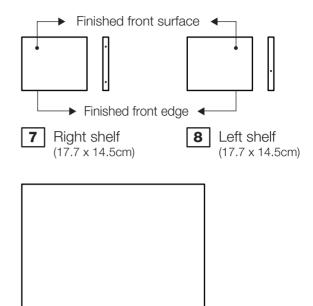

9 Middle shelf x 2 (49.6 x 36.6cm)

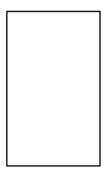 

10 Back panel x 2 (19.2 x 38.6cm)





Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

A (====================================		G
30mm Dowel x 8	50mm Screw x 18	Foot x 4
		6
39mm Locking pin x 6	Nail x 6	15mm Locking nut x 6
G		
Glue x 1		

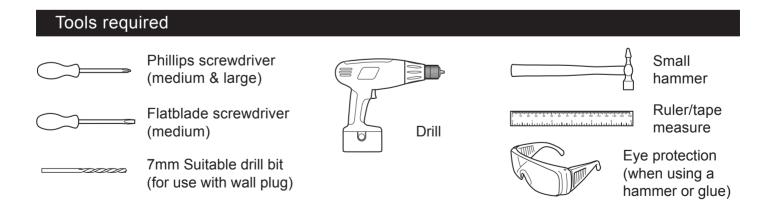

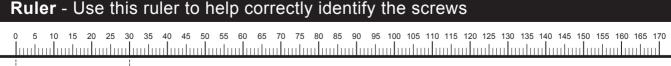 


The screws length is measured from the head to the point (30mm screw shown).

Step 1


Fitting dowels

a: Insert Dowels (A) into the Middle right panel (3) and Middle left panel (4).

a:

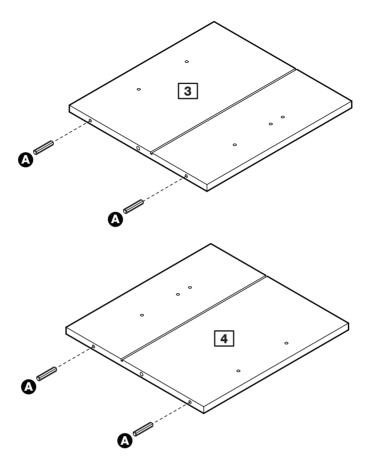

b: Insert Dowels (A) into the Right shelf (7) and Left shelf (8).

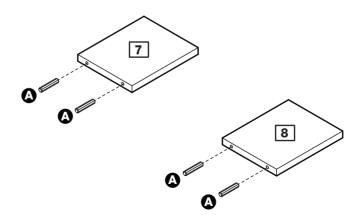


Step 2


Attaching left and right shelves

a: Use Screws **3** to fix Middle left panel **4** onto the Left shelf **8**.

a:

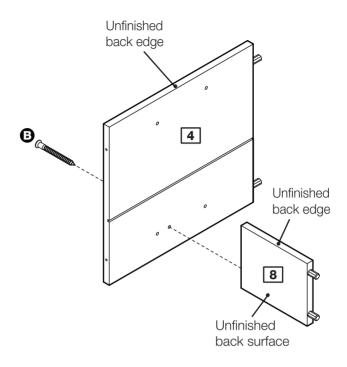

b: Use Screws **3** to fix Middle right panel **3** onto the Right shelf **7**.

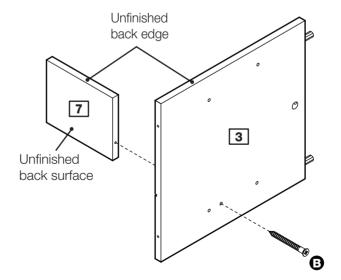


Step 3


Attaching middle shelves

a: Use Screws **3** to fix Middle shelves **9** onto the unit.

a:

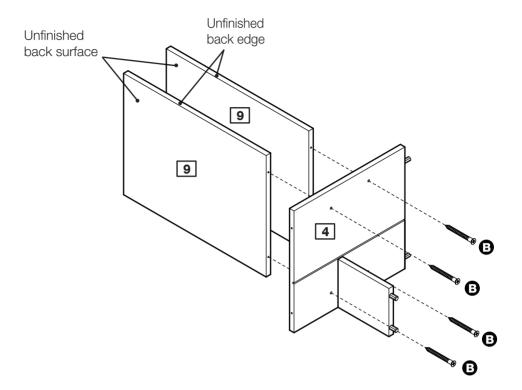

b: Use Screws 3 to fix Middle right panel 3 onto the unit.

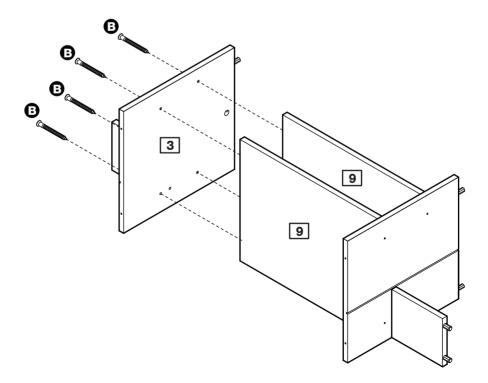


Step 4


Attaching side panels

a: Position Left side panel 6 onto the unit.

a:

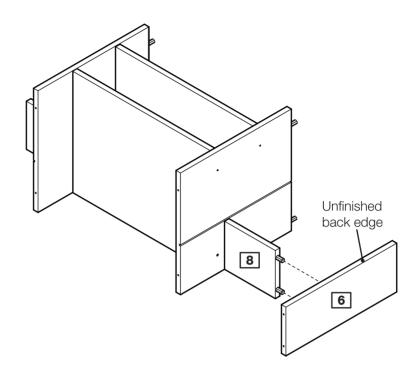


b: Position Right side panel 5 onto the unit.

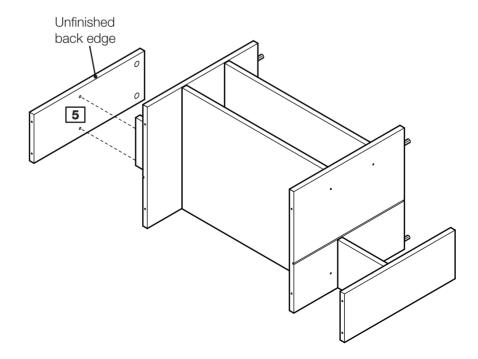

Step 5

Attaching bottom panel

Use Screws **B** to fix Feet **C** onto the unit.

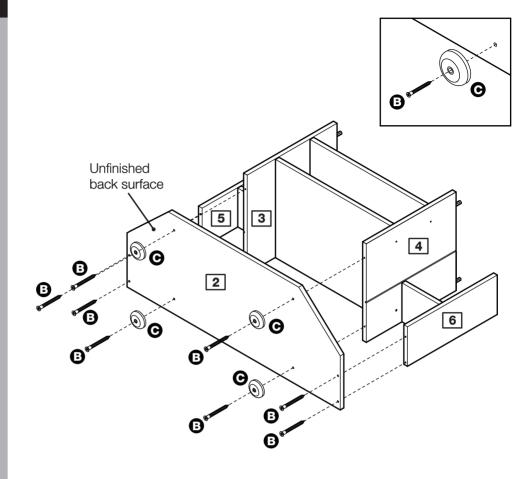


Step 6

Inserting back panels

a: Place a small amount of Glue into the grooves of Middle right panel and Middle left panel 4.

a:

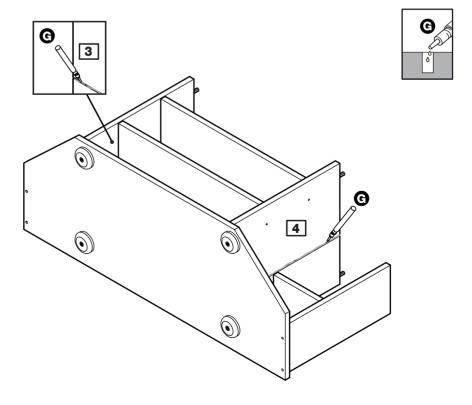


Continued on next page.

Step 6 - continued

b: Carefully slide Back panels 10 into the grooves.

b:

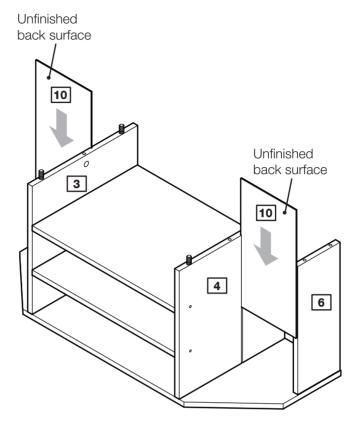

Step 7


Attaching top panel

a: Screw Locking pins **b** into the Top panel **1**.

Note: Insert locking pins as far as shown.

Do not over tighten.

a:

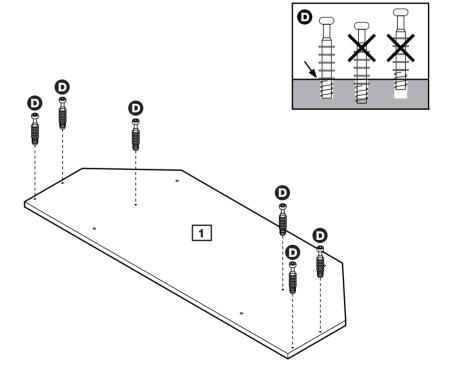


Continued on next page.

Step 7 - continued

b: Position Top panel 1 onto the unit.

Insert 6 Locking nuts (a) into the unit.

Use a screwdriver to turn Locking nuts **(F)** clockwise to lock.

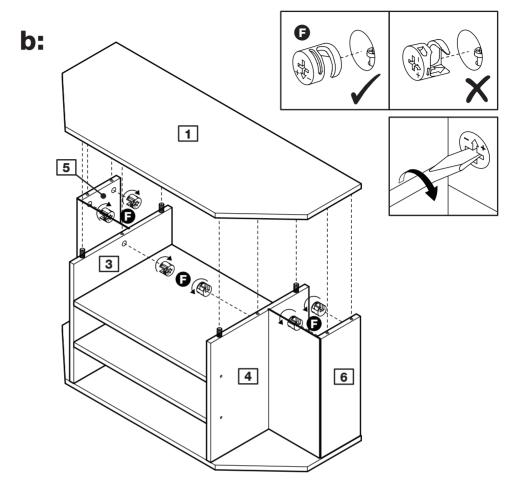

Step 8


Fixing back panels

Attach Back panels 10 onto the unit using Nails **3**.



Important:

The unit **MUST** be 'square' when back is attached.

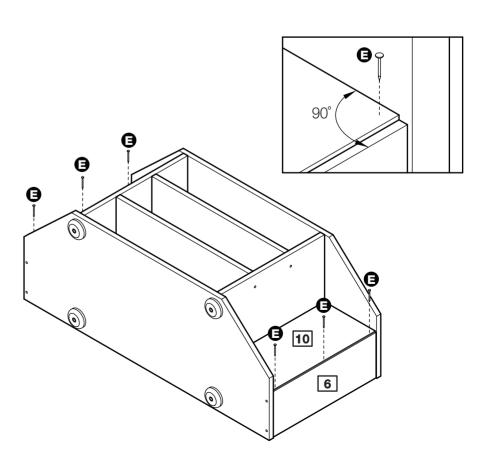


Step 9

Finishing the unit

Note: It would be useful to ask someone to help you at the stage.

With help, place the unit in the intended position.

Note: Before use allow the glue to dry for 24 hours and make sure the unit is secure.

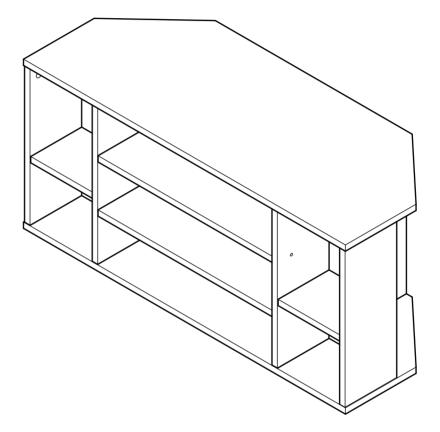

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline**: **Argos = 0345 6400800**