
Sicily1 Door 3 Drawer Sideboard

Assembly Instructions - Please keep for future reference

392/7537

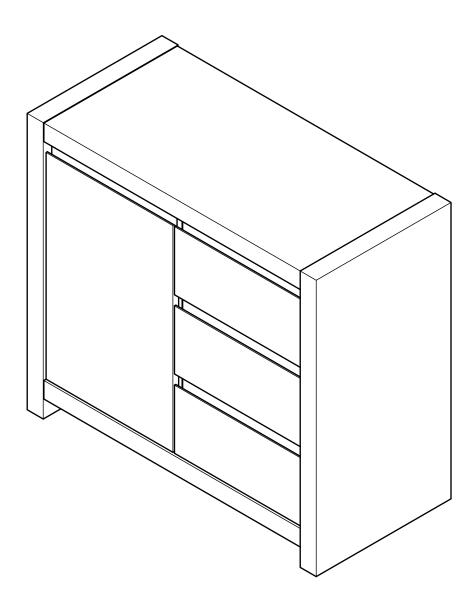

Dimensions

Width - 90cm Depth - 40cm Height - 80cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800

▲ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts. • Regularly check and ensure that all bolts and fittings are tightend properly.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800**

Please check you have all the panels listed below

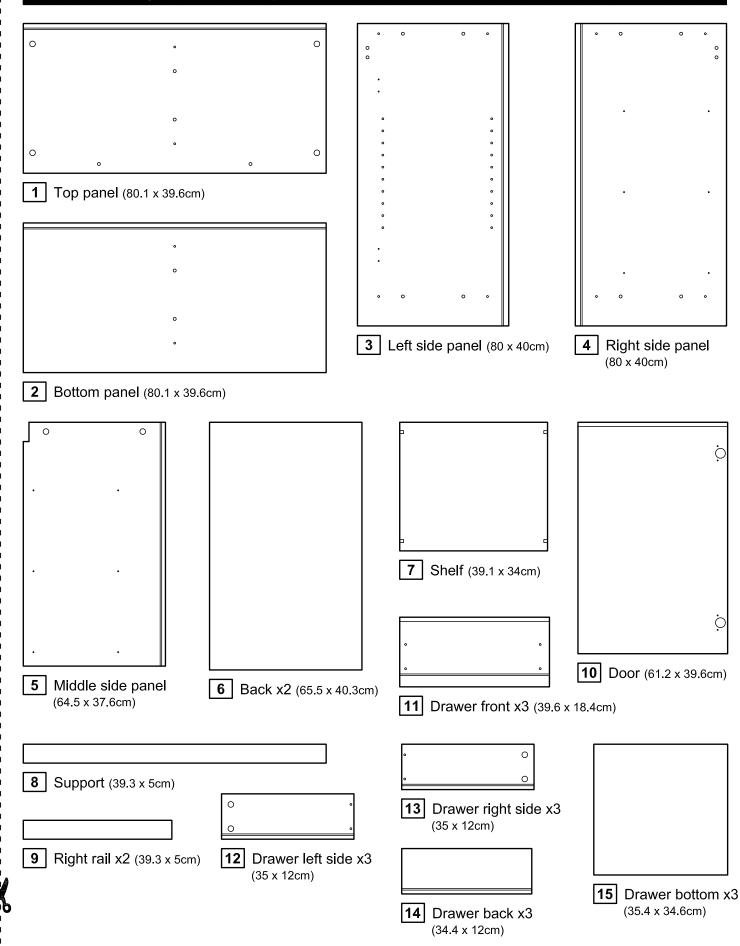


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

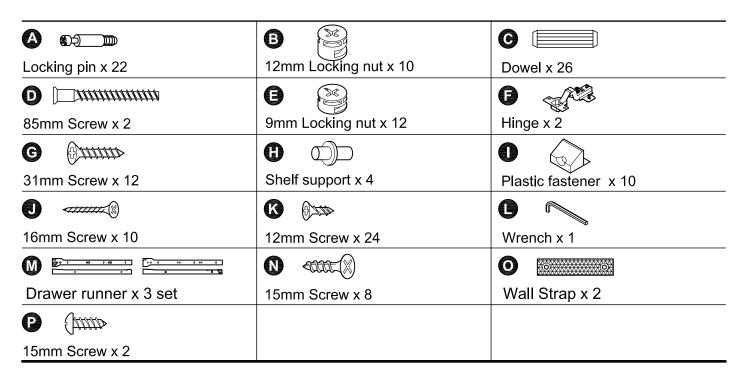

Tools required

Phillips screwdriver (medium & large)


Ruler - Use this ruler to help correctly identify the screws
0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170
The screws length is measured from the head to the point (30mm screw shown).

Step 1

Fitting drawer runner

a: Use screws (to fix drawer runners (onto the middle side 5 and right side 4.


b: Screw locking pins (A)
into side panels (3) and
(4). Insert locking pins as far as shown.

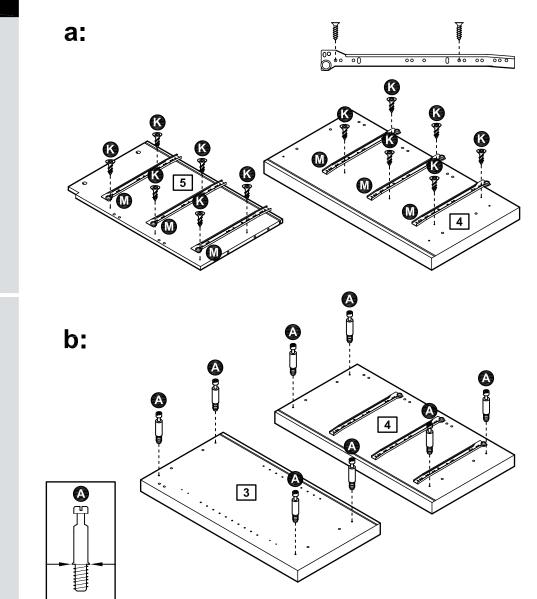



Step 2

Fitting middle part

a: Insert dowels G into middle side panel 5, support 8 and right rail
9.

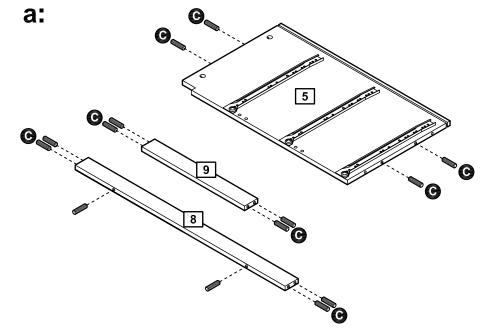

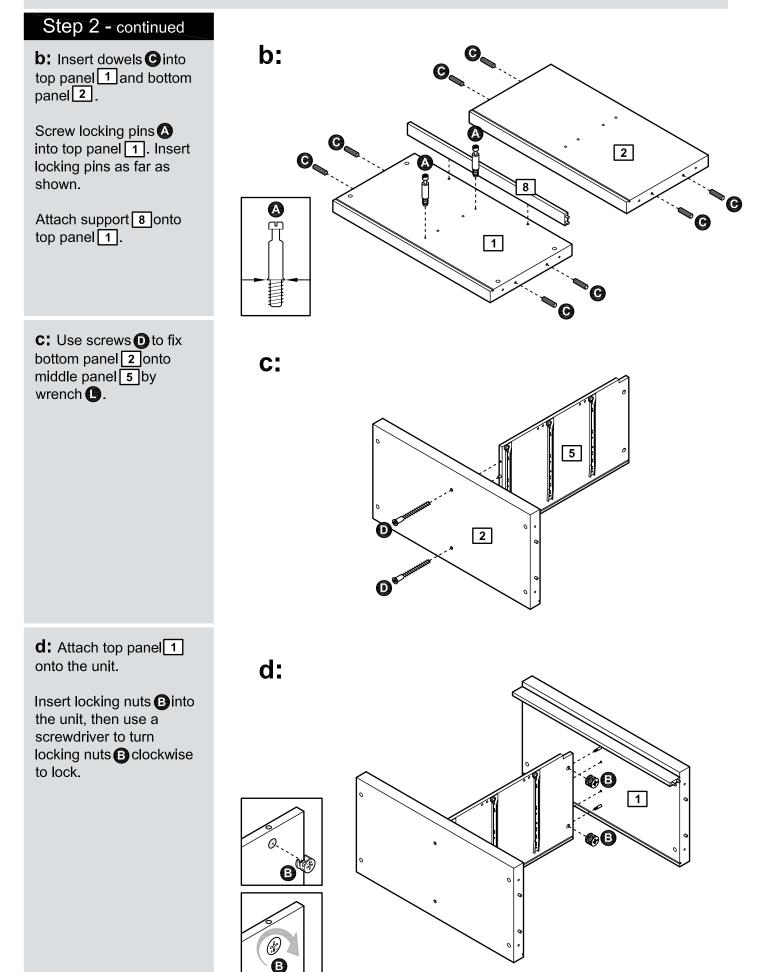


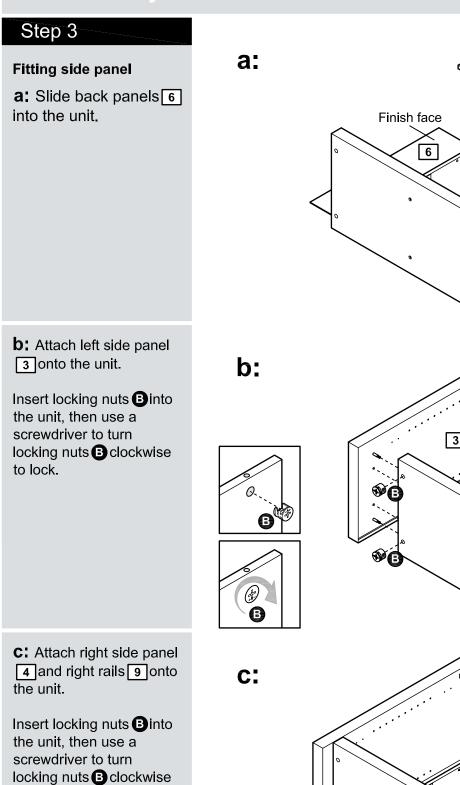

0.

B

to lock.

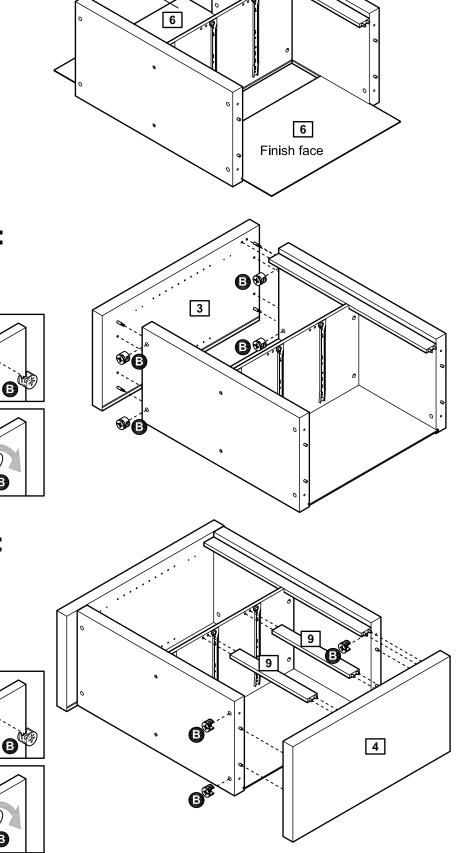

6

a:

a:

Step 4

Fitting shelf

a: Place shelf supports **()** into the unit.

NOTE: Adjust the shelf supports to the desired height.


Slide shelf 7 into the unit.


Step 5

Fitting the door

a: Use screws **N** to fix hinges **F** onto door **10**.

Attach door 10 to the assembled unit with screws N using a screwdriver to tighten.

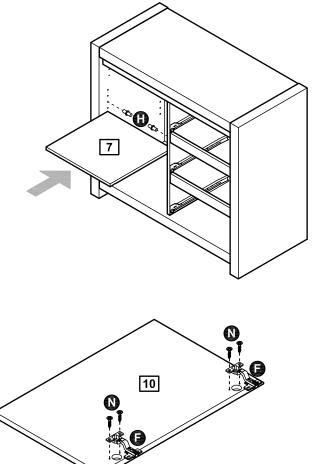

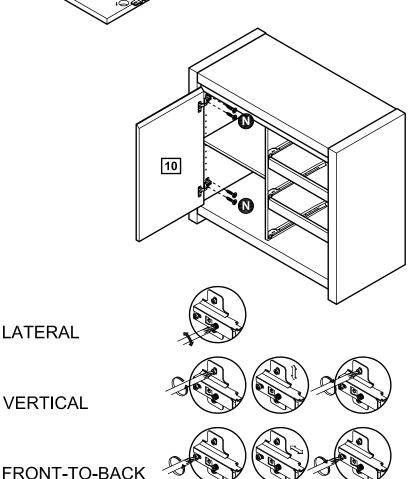

a:


Step 6

 
Fitting the drawer

a: Use screws **G** to fix drawer side 12 and 13 onto drawer back 14.

b: Screw locking pins (A) into drawer front [11]. Insert locking pins as far as shown.

Slide drawer bottom 15 into the unit.

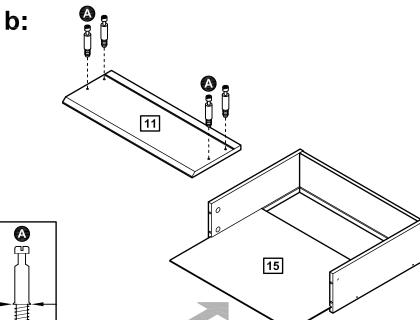





C:

C: Attach drawer front **11** onto the unit.

Insert locking nuts into the unit, then use a screwdriver to turn locking nuts Clockwise to lock.

Use screws (to fix drawer runners (onto the unit.

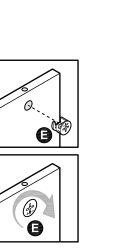

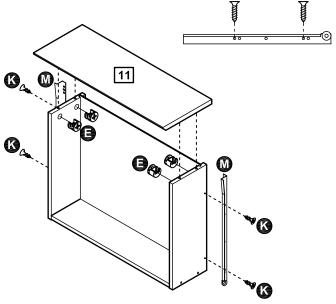


a:

b:

Step 7

Finish the unit

a: Slide the drawers into the unit.

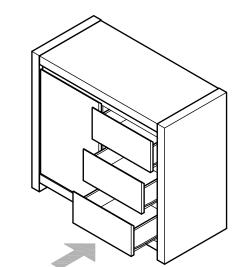

b: Insert plastic fasteners **1** into the back panel grooves and secure with screws **1**, tighten with a screwdriver.

Use screws P to fix wall straps O to the back of top panel.

Secure the other ends of strap to the wall using appropriate screws, washers and wall plugs for your wall type.

WARNING:

Ensure the area to be drilled is free from hidden electrical wires and water or gas pipes.

NOTE:

Wall fixings are not included. Please source suitable wall fixings for your wall type, if in doubt consult a qualified tradesperson.

Assembly is complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

 
Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2**: Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3**: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4**: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5**: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.


Types of walls

No.1 "General Purpose" wall plug



Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

 
No.2 "Plasterboard" wall plug



For use when attaching light loads on to plasterboard partitions.




You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

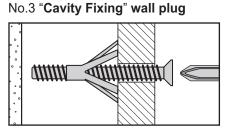

For use with plasterboard partitions or hollow wooden doors.

 
No.4 "Cavity Fixing-Heavy Duty" wall plug



For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: Always check the ftting and location to ensure your safety in and around the home.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.