


# Ashdon Table

Assembly Instructions - Please keep for future reference

392/8701

427/0795

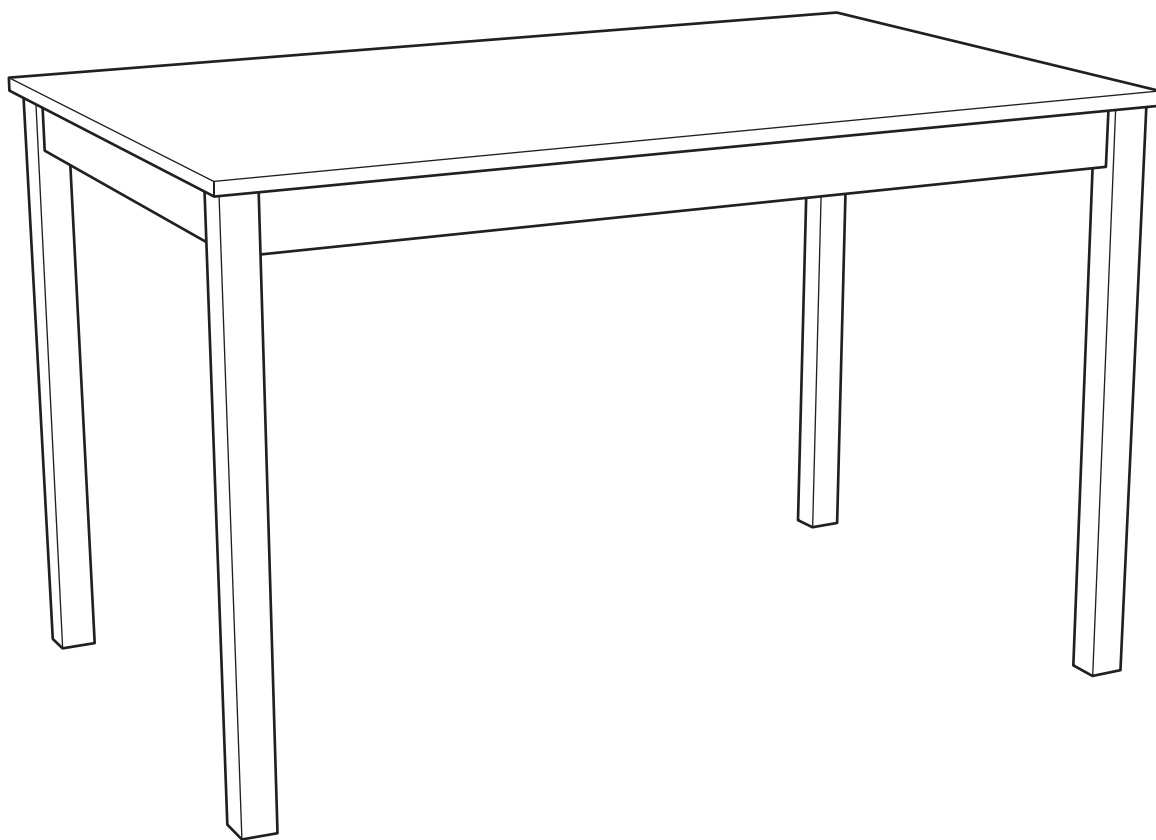

## Dimensions

Width - 149.8cm

Depth - 72.5cm

Height - 75cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos = 0345 640 0800**



# Safety and Care Advice

## Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Unit weight: 18 kgs.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.

# Components - Parts

If you have damaged or missing components, call the  
Customer Helpline: Argos = 0345 640 0800

Please check you have all the parts listed below



**1** Table top  
(149.8 x 72.5 x 10.5cm)

 







**2** Leg x 4  
(72 x 6.5/6.5cm)

# Components - Fittings

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  Stud bolt x 8	<b>B</b>  Insert nut x 4	<b>C</b>  Nut x 8
<b>D</b>  Washer x 8	<b>E</b>  Spring Washer x 8	<b>F</b>  Spanner x 1

## Tools required



Flathead screwdriver

# Assembly Instructions

## Step 1

### a: Attaching insert nut


Position the leg **2** as shown and insert the insert nut **B** into hole on the top of leg.

### b: Attaching bolt

Align the fixing holes on the insert nut by turning it using a flathead screwdriver.

Then fix bolt **A** into the insert nut on leg **2** as shown.

*Repeat this step to assemble the other legs.*

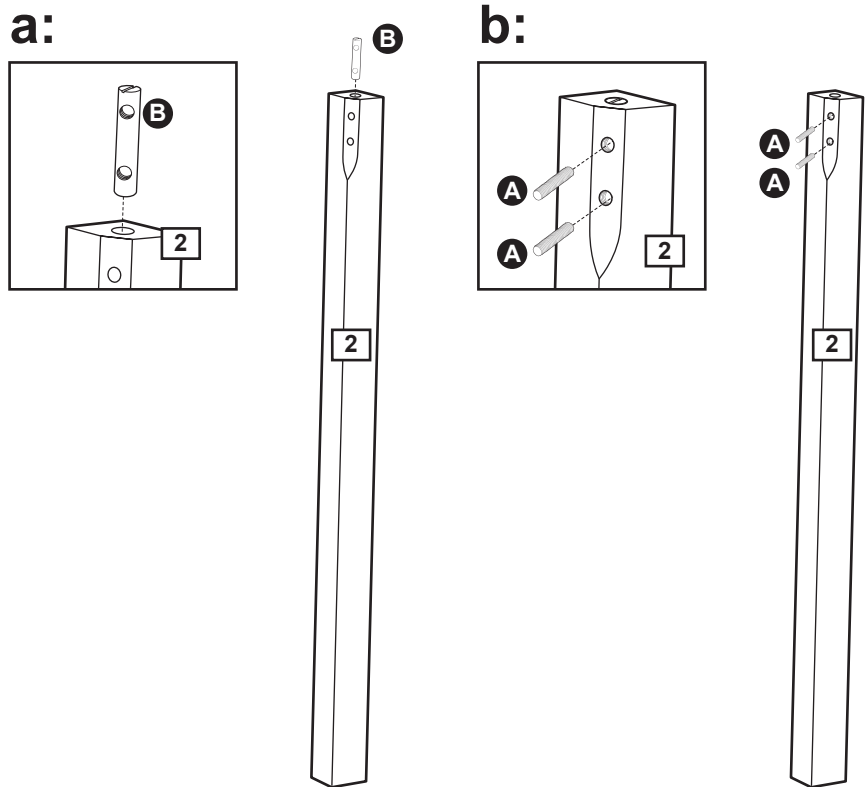

## Step 2

### Attaching legs


Place the table top **1** on a flat protected surface.

Position the legs **2** on the table top **1** as shown. Insert the bolts on the legs into holes on table top and fix using nuts **C**, washers **D** and spring washers **E**.

Tighten nuts using spanner **F**.

Carefully turn over the table by holding the legs and place on a firm surface. At least 2 people are required to lift this table.

**Assembly is complete.**

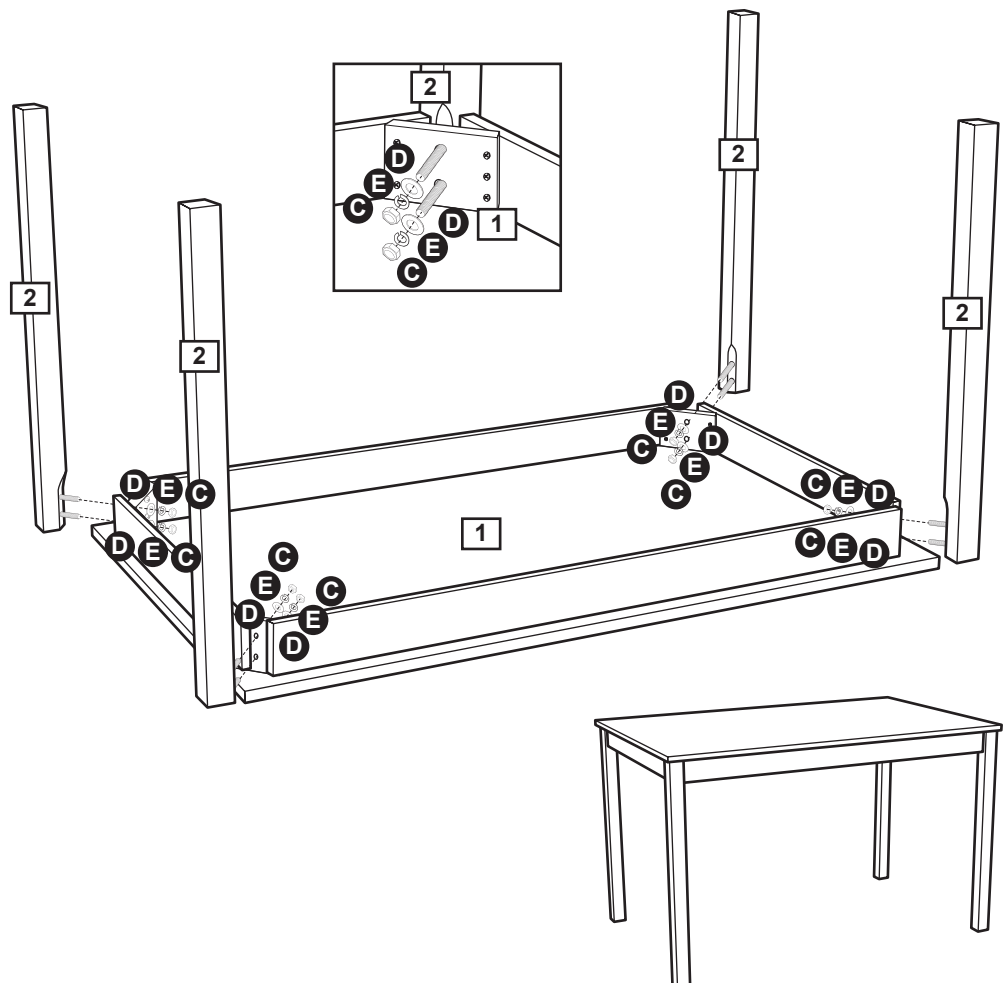

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos = 0345 640 0800**

## Dear Customer

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct itself once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.