
BASIC CABINET DRAWERS AND SHELVES

Assembly Instructions- please keep for future reference

395/8953

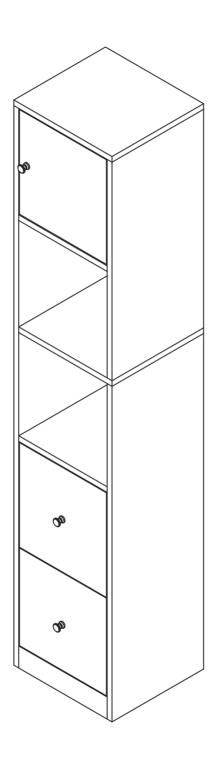

Dimensions

Width - 30cm

Depth - 28cm

Height - 150cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3..
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws, as this could damage

the using. Only use hand screwdrivers

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels


Please check you have all the panels listed below

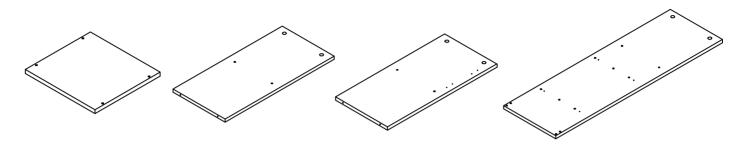

  - **1** Top panel x 1 (30(w)cm x 28(d)cm)
- (57(w)cm x 28(d)cm)
- Upper left side panel x 1 3 Upper right side panel x 1 3 (57(w)cm x 28(d)cm)
 - Lower left side panel x 1 (89.5(w)cm x 28(d)cm)

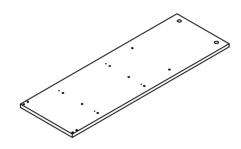










   - Lower right side panel x 1 (89.5(w)cm x 28(d)cm)
- 6 Shelf panel x 1 (30(w)cm x 28(d)cm)
- Shelf panel x 2 (27.9(d)cm x 27(w)cm)
- 8 Cross bar x 2 (27(w)cm x 4(d)cm)












   - (27.5(d)cm x 26.5(w)cm)
- 9 Drawer front panel x 2 10 Drawer left side panel x 2 11 Drawer right side panel x 2 12 Drawer back panel x 2 (26(w)cm x 20(d)cm)
 - (26(w)cm x 20(d)cm)
- (24(w)cm x 20(d)cm)










- **13** Drawer bottom panel x 2 (25.6(w)cm x 24.8(d)cm)
- 14 Upper back panel x 1 (59(w)cm x 29.8(d)cm)
- 15 Lower back panel x 1 (87.7(w)cm x 29.8(d)cm)
- 16 Door panel x 1 (27.5(d)cm x 26.5(w)cm)

Components - Fittings If you have damaged or missing components, call the Customer Helpline: 0345 640 0800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

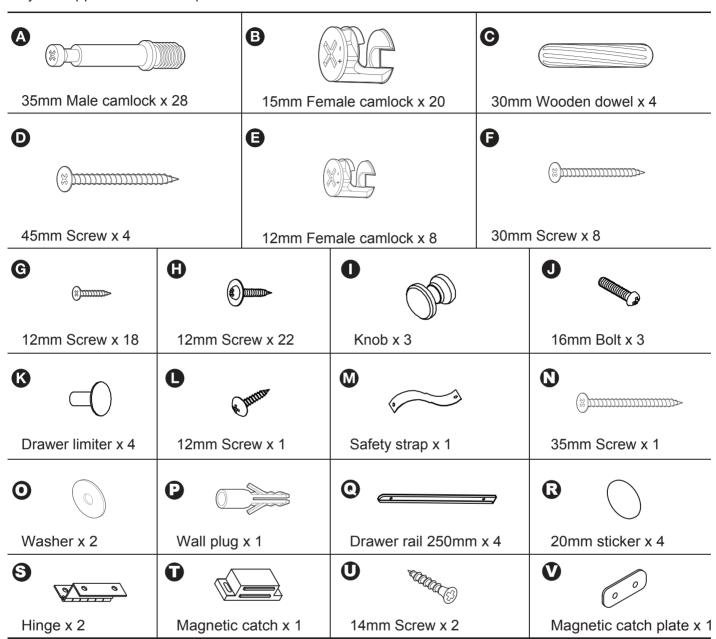

Tools required





Drill (for wall drilling only)

 
Ruler - Use this ruler to help correctly identify the screws

10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170 lantankantankantankantankantankantankantankantankantankantankantankantankantankantankantankantankantankantank

Using Camlocks

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.



Step 2


Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.



Step 3

Push the male camlock into the entry hole.

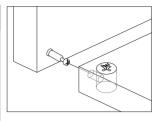


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

 The joint is now secure.



Step 1

Insert 16 x male camlock

into top panel , shelf
panel 6, 2 x drawer front
panel 9 as shown.


Step 2

Insert 4 x male camlock

into upper left side
panel 2 and upper right
side panel 3 as shown.

Step 3

Insert 8 x male camlock into lower left side panel 4 and lower right side panel 5 as shown. Fix 4 x drawer rail 9 to them using 8 x 12mm screw 6 on them as shown.

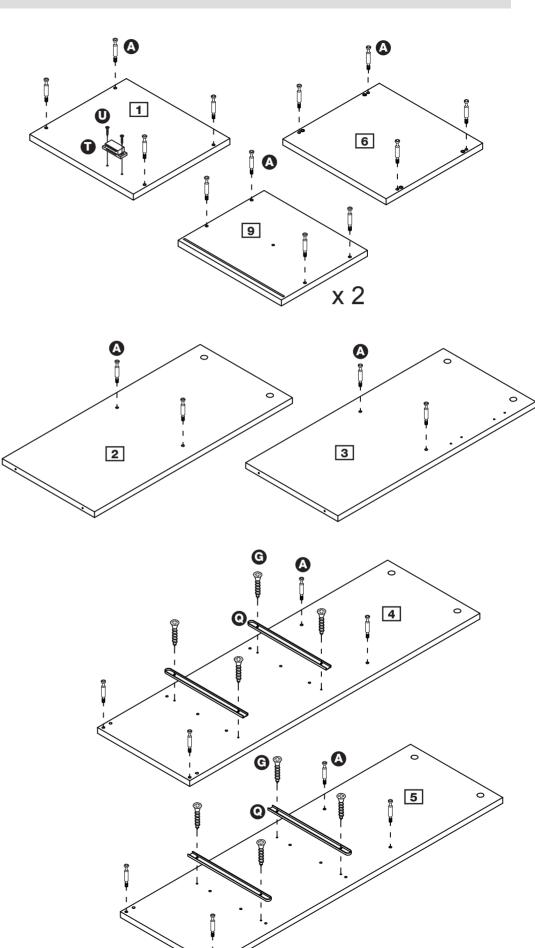

Step 4

Attach shelf panel 7 to upper right side panel 3 using 2 x 15mm female camlock 3 as shown.

Tighten female camlocks with a screwdriver.

Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

Step 5

Attach upper left side panel 2 to shelf panel 7 using 2 x 15mm female camlock 3 as shown.


Tighten female camlocks with a screwdriver.


Step 6


Attach top panel 1 to the upper left side panel 2 and the upper right side panel 3 using 4 x 15mm female camlock 3 as shown.

Tighten female camlocks with a screwdriver.

Attach shelf panel 6 to the the upper left side panel 2 and the upper right side panel 3 using 4 x 45mm screw 2 as shown.

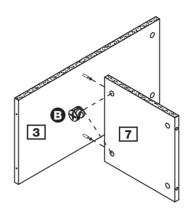

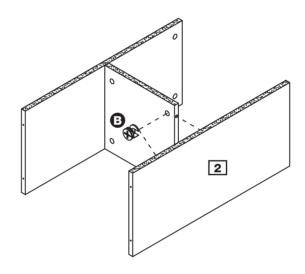

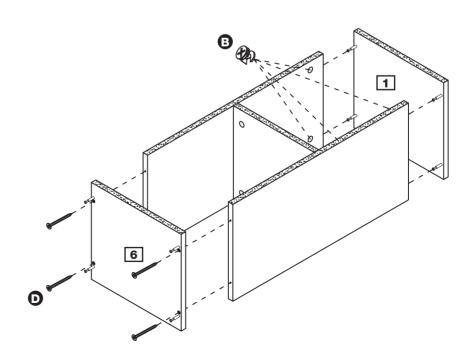

Step 7

Attach 1 x shelf panel 7 to lower right side panel 5 using 2 x 15mm female camlock **B** as shown.

Tighten female camlocks with a screwdriver.

Insert 2 x wooden dowel

into 2 x cross bar

and attach them to the lower right side panel

using 2 x 15mm female camlock

as shown.

Tighten female camlocks

with a screwdriver.

Step 8

Insert 2 x wooden dowel into 2 x cross bar as shown.


Attach lower left side panel 4 to assembled part using 4 x 15mm female camlock 3 as shown.

Tighten female camlocks with a screwdriver.

Step 9


Connect the assembled upper part to the assembled lower part using 4 x 15mm female camlock 3 as shown.

Tighten female camlocks with a screwdriver.

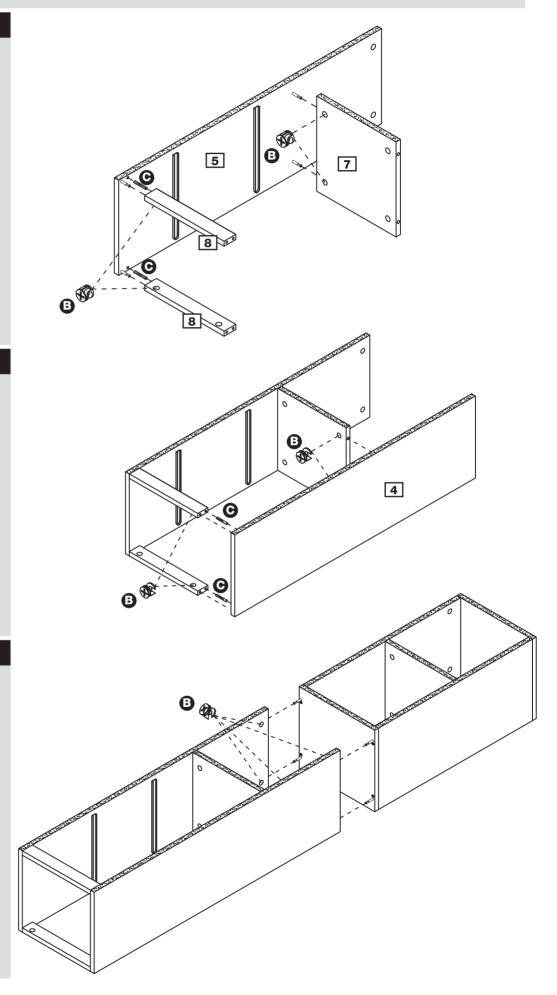

Step 10

Attach upper back panel 14 and lower back panel 15 to the assembled part using 22 x 12mm screw 1 as shown.

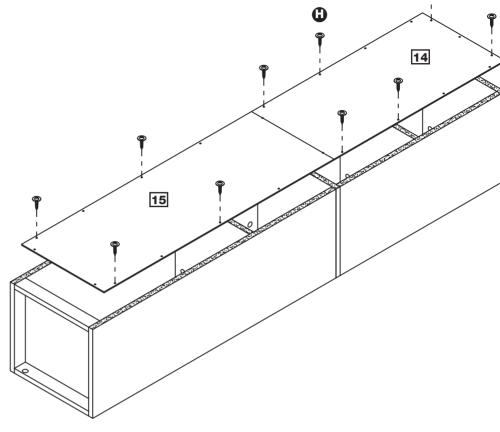

Step 11


Attach 1 x drawer left side panel 10 and 1 x drawer right side panel 11 to 1 x drawer back panel 12 using 4 x 30mm screw as shown.

Insert 1 x drawer bottom panel 13 into the grooves of the drawer left side panel 10 and the drawer right side panel 11, and slide it into the groove of the drawer back panel 12 as shown.

Attach 1 x drawer front panel 9 to the assembled part of drawer using 4 x 12mm female camlock as shown.

Tighten female camlocks with a screwdriver.

Attach 1 x knob 1 to the drawer front panel 9 using 1 x bolt 1 as shown. Repeat above steps to assemble the other drawer.

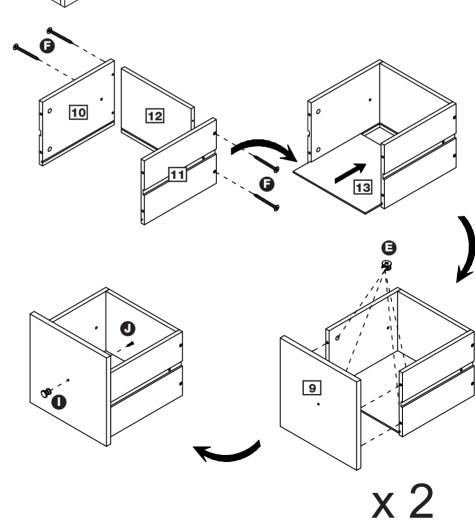

Step 12

Fix unit to wall using 1 x 12mm screw , 1 x safety strap , 2 x washer , 1 x 35mm screw and 1 x wall plug as shown.

Note: see the back cover for more information on wall mounting and the suitable use of the supplied rawl plugs.



Warning: Before drilling, check wall for hidden pipes and cables.

Fix 1 x magnetic catch plate ① to the door panel 16 using 2 x 12mm screw ② and fix 1 x knob① to it using 1 x bolt ② as shown.

Attach the door panel 16 to the upper right side panel 3 using 2 x hinge 3 and 8 x 12mm screw 6 as shown.


Insert the assembled drawers into the chest and make sure 4 x drawer rail ② inserted into the grooves of the drawer side panel 10 and 11, then insert 4 x drawer limiter ③ into the holes of the drawer side panel 10 and 11 as shown.

Gently tighten the middle 4 x female camlocks and paste 4 x 20mm sticker
 over the holes of them as shown.



Warning:
The unit is
heavy; seek
assistance from
another person.

Assembly complete.

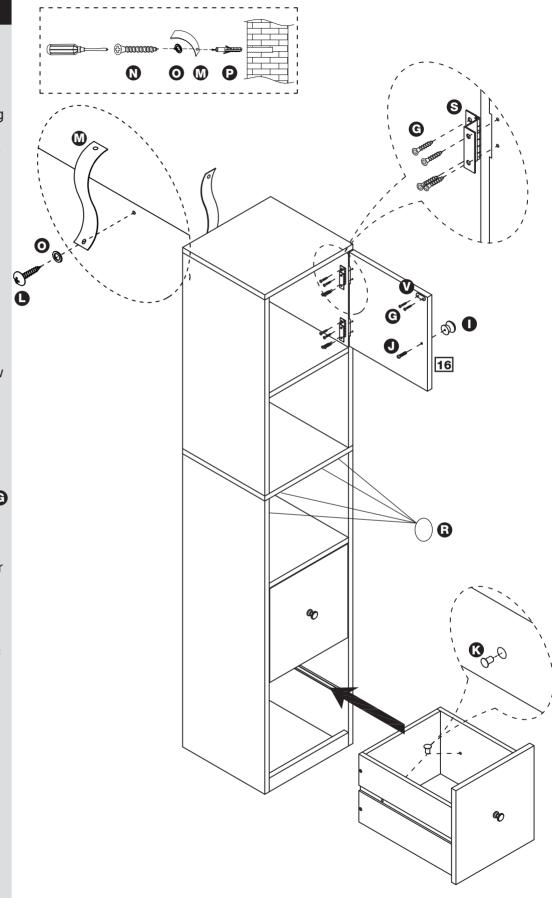

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**Argos LTD. 489-499 Avebury boulevard, Central Milton Keynes, MK9 2NW

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product. e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- always use a larger screw and wall plug if you are 1: General rule: /! not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

 No.5 "Hammer Fixing" wall plug




For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

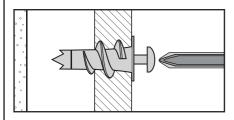


For use when attaching light loads onto plasterboard partitions.

 No.4 "Cavity Fixing - Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.6 "Shield Anchor" wall plug heavy loads



For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & **Maintenance**

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800