 


Chequer Corner TV Unit

Assembly Instructions - Please keep for future reference

399/9015

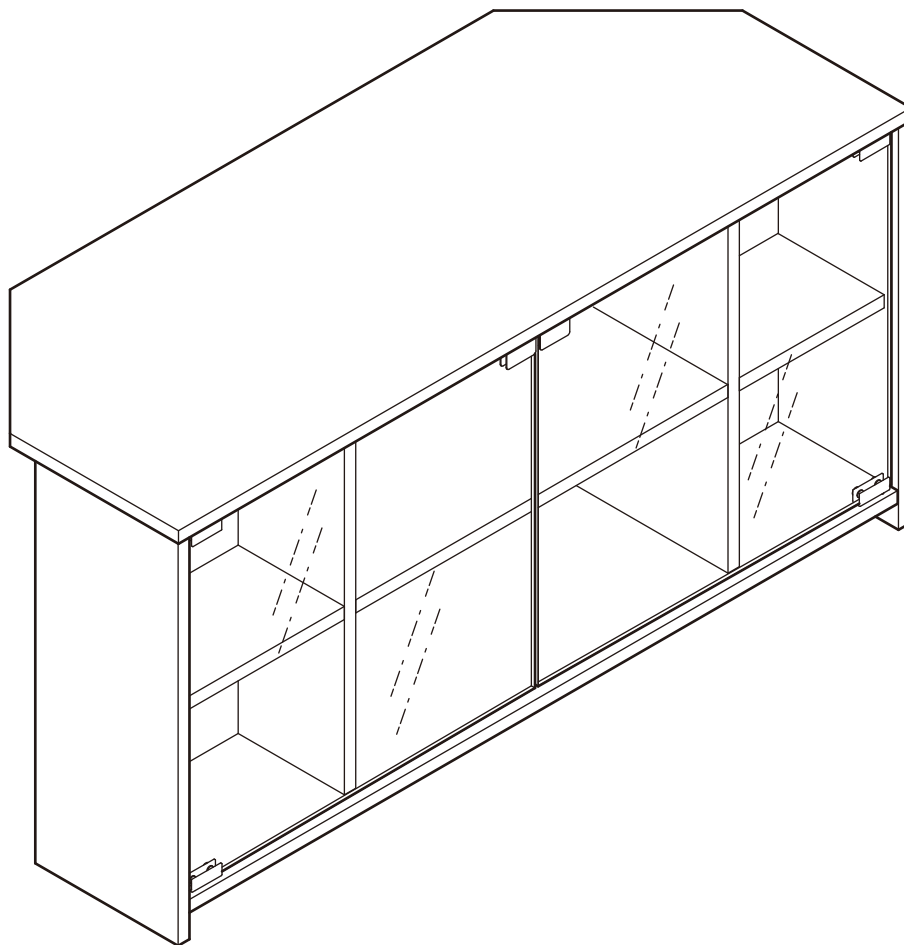

Dimensions

Width - 100cm

Depth - 40.5cm

Height - 49.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Regularly check and ensure that all bolts and fittings are tightend properly.

Glass safety

- Keep these instruction for future reference.
- Imported by:
Argos Ltd.
489-499 Avebury Boulevard.
Saxon Gate West.
Central Milton Keynes.
MK9 2NW
- If the glass is chipped or broken, stop using product and consult the Manufacturer or Supplier.
- Batch No. & Date of manufacturer: Please refer to the label stick on product back panel.
- Type of glass used: 5mm toughened glass

 
Warnings

- (a) Do not place very hot or very cold items on the glass surface(s) unless adequately thick table mats are used to prevent such items from coming into contact with the glass.
- (b) Do not sit or stand upon the glass surface(s).
- (c) Do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.
- (d) When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary, do not use washing powders or any other substance containing abrasives since these substances scratch glass.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below

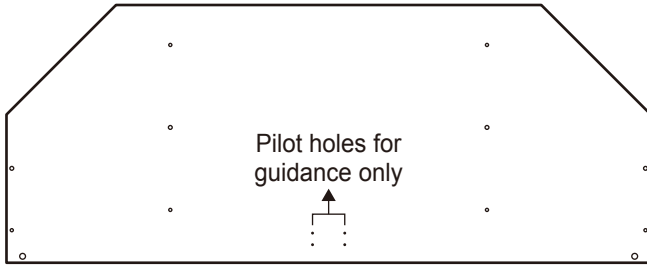


1 Top panel (100 x 40cm)

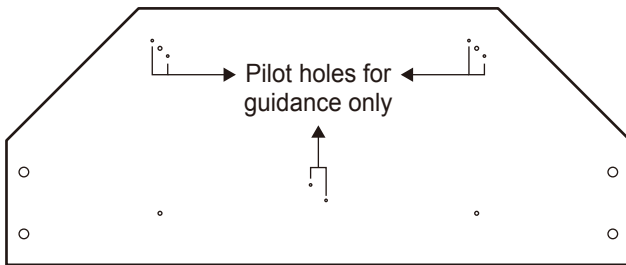 


2 Bottom panel (96.8 x 39.8cm)

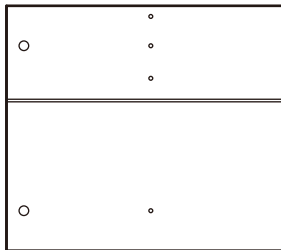 


3 Middle Left panel
(43 x 38cm)

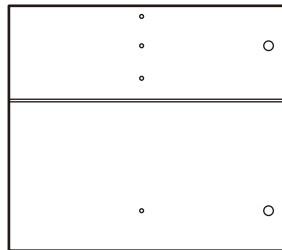 

4 Middle right panel
(43 x 38cm)

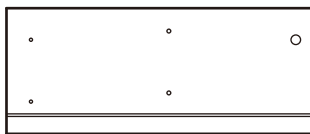 

5 Left panel
(47.6 x 19.5cm)

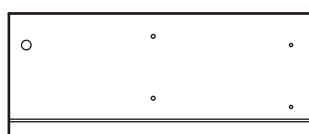 


6 Right panel
(47.6 x 19.5cm)



7 Middle shelf panel
(47.6 x 37.9cm)



 
8 Shelf panel x 2
(23 x 14.5cm)

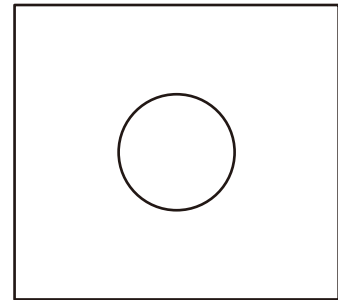

9 Large back panel
(50.3 x 45.7cm)



 10 Small back panel x 2
(23.7 x 43cm)

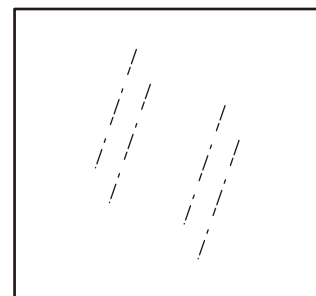








 

 





11 Door x 2 (47.9 x 42.1cm)




Components - Fittings

Please check you have all the fittings listed below

  Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  30mm Dowel x 12	B  50mm Screw x 8	C  39mm Locking pin x 10
D  14mm Screw x 6	E  (This screw is included in the door magnet bag) 15mm Screw x 4	F  15mm Locking nut x 10
G  Foot x 3	H  Door magnet x 1	I  Hinge plug x 4
J  Nail x 14	K  Foam pad x 2	L  Small foam pad x 4
M  Top hinge x 2	N  Bottom hinge x 2	O  Door push x 2

 Tools required




Phillips screwdriver
(medium & large)



Flatblade screwdriver
(medium)



 7mm Suitable drill bit
(for use with wall plug)

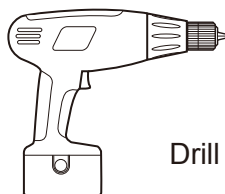


Drill



Small
hammer




 Ruler/tape
measure



Eye protection
(when using a
hammer or glue)

 Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (30mm screw shown).

 
Assembly Instructions

Step 1


Attaching the middle shelf panel

a: Insert Dowels **A** into the Middle right panel **4** and Middle left panel **3**.


Use Screws **B** to fix the Middle right panel **4** and Middle left panel **3** onto the Middle shelf panel **7**.

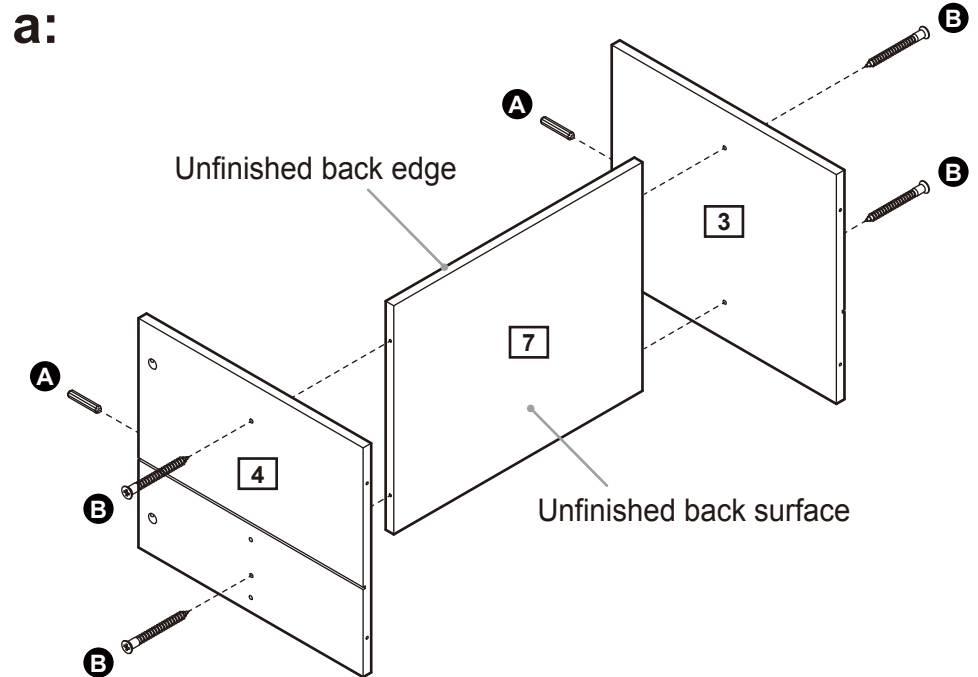

 b: Insert Dowels **A** into Shelf panel **8**.

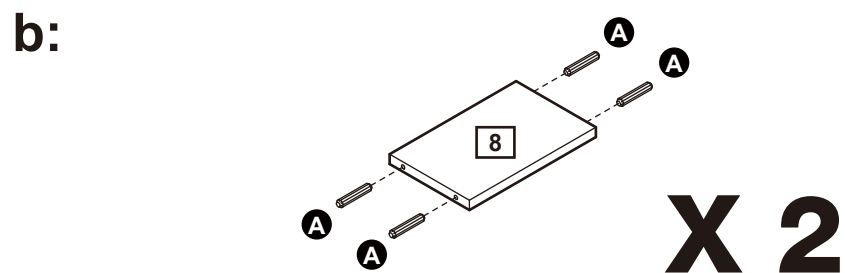

 c: Position Shelf panels **8** onto the Middle right panel **4** and Middle left panel **3**.

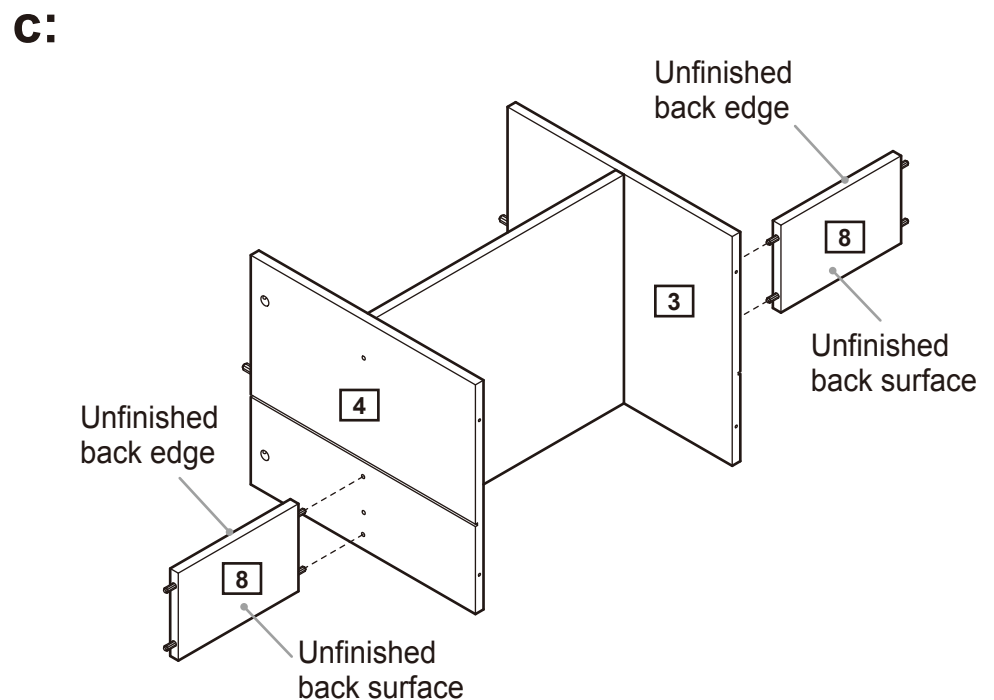


Assembly Instructions

Step 2

Attaching bottom panel

 Use Screws **B** to fix Bottom panel **2** onto the Middle right panel **4** and Middle left panel **3**.

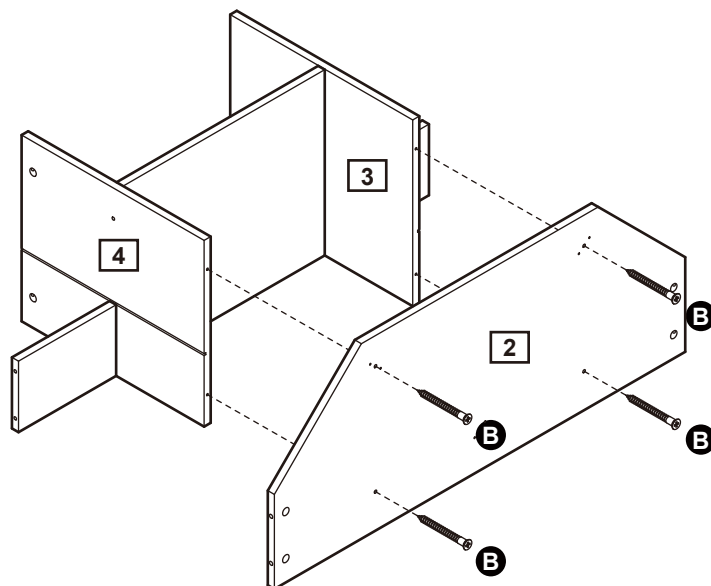


Step 3

Attaching right panel and left panel

a: Insert Dowels **A** and Screw Locking pins **C** into the Right panel **6** and Left panel **5**.

Note: Insert Locking pins as far as shown. **Do not over tighten.**

 a:

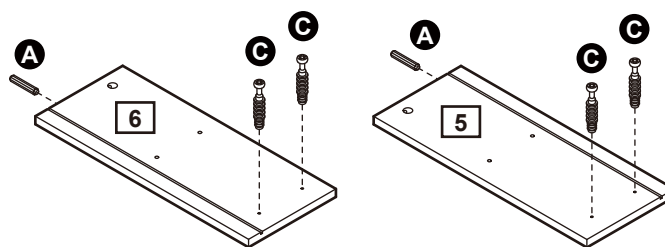



b: Position the Right panel **6** and Left panel **5** onto the unit.

Insert 4 Locking nuts **F** into the unit.

Use a screwdriver to turn Locking nuts **F** clockwise to lock.

Use Screws **D** to fix Foot **G** onto the unit.

  b:

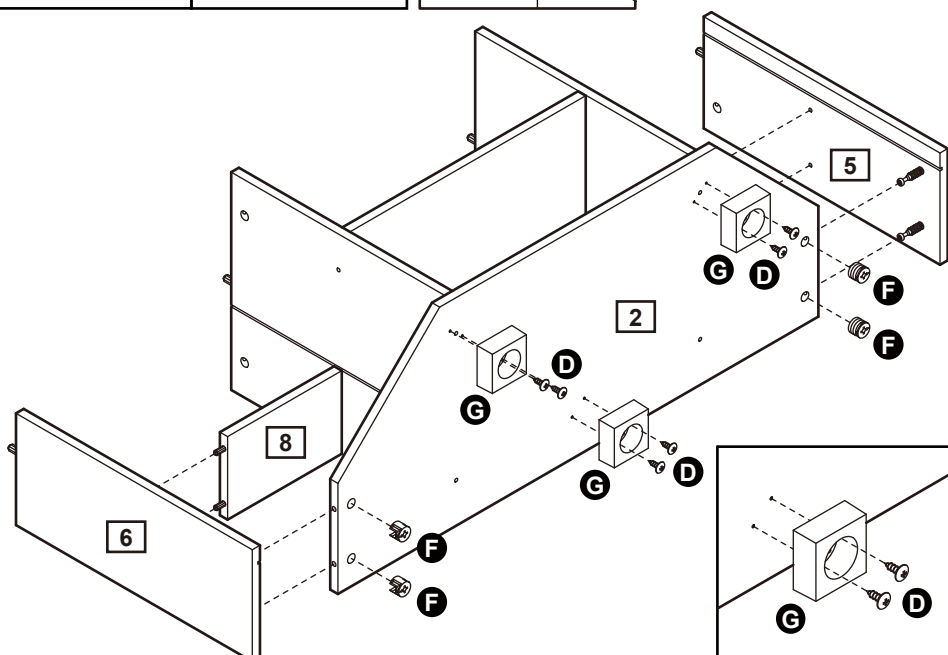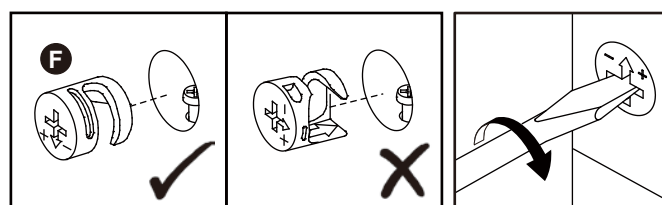


Assembly Instructions

Step 4

Attaching small back panels

 Slide small back panels **10** into the unit.

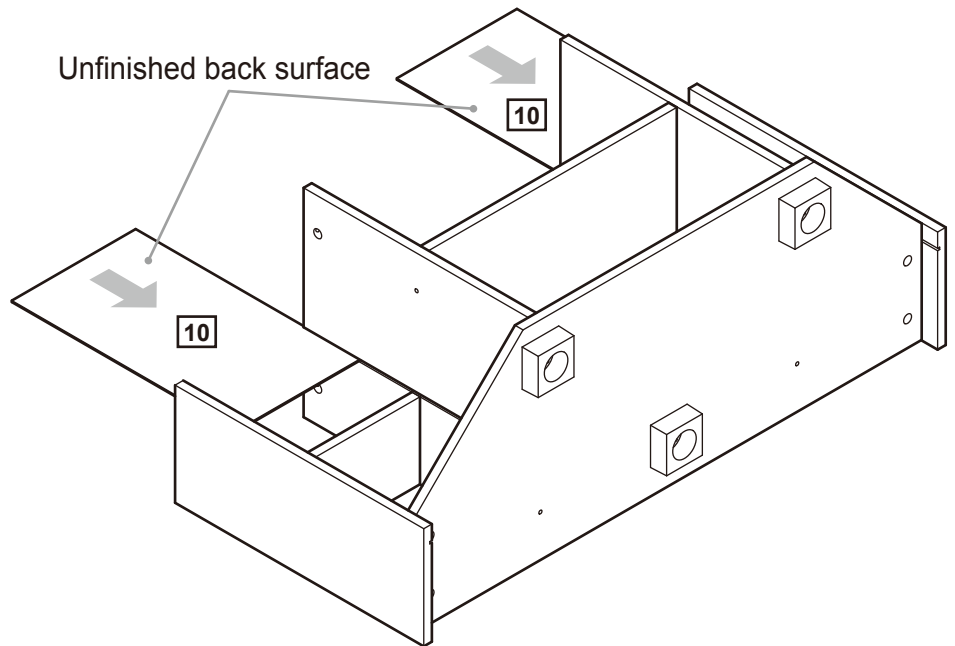

Step 5

Attaching top panel

a: Use Screws **E** to fix the Door magnet **H** onto the Top panel **1**.

 
 
 
 
Insert Hinge plugs **I** into the Top panel **1**.

Screw Locking pins (6 pcs) **C** into the Top panel **1**.

Note: Insert Locking pins as far as shown.

Do not over tighten.

a:

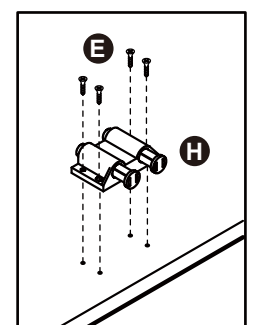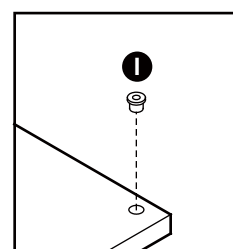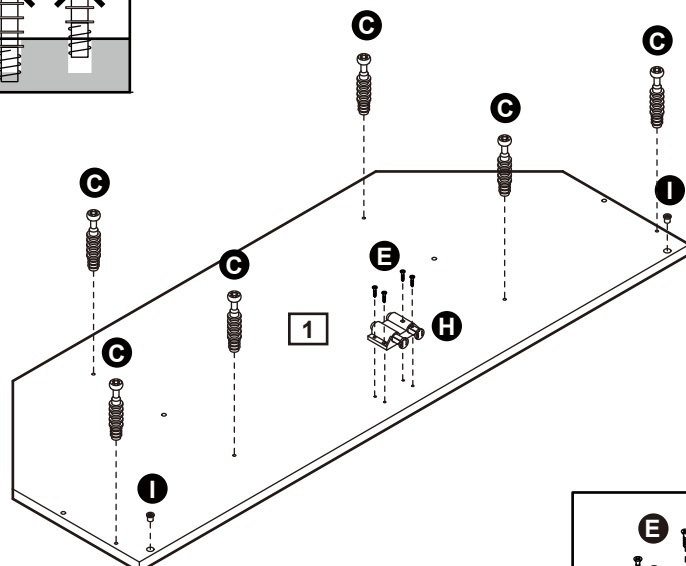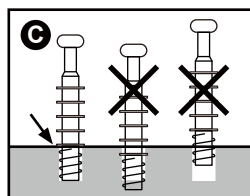

Continued on next page.

Assembly Instructions

Step 5 - continued

 
 
 
 
 
b: Carefully locate the Top panel **1** onto the unit.

Insert 6 Locking nuts **F** into the unit.

Use a screwdriver to turn Locking nuts **F** clockwise to lock.

Insert Hinge plugs **I** into the Bottom panel **2**.

b:

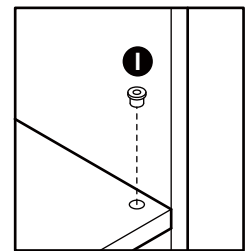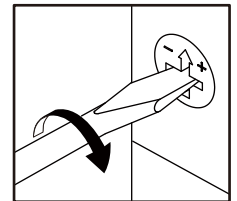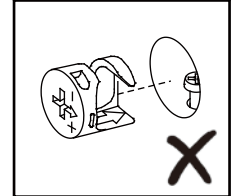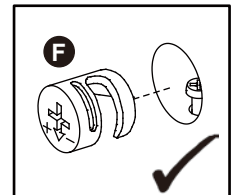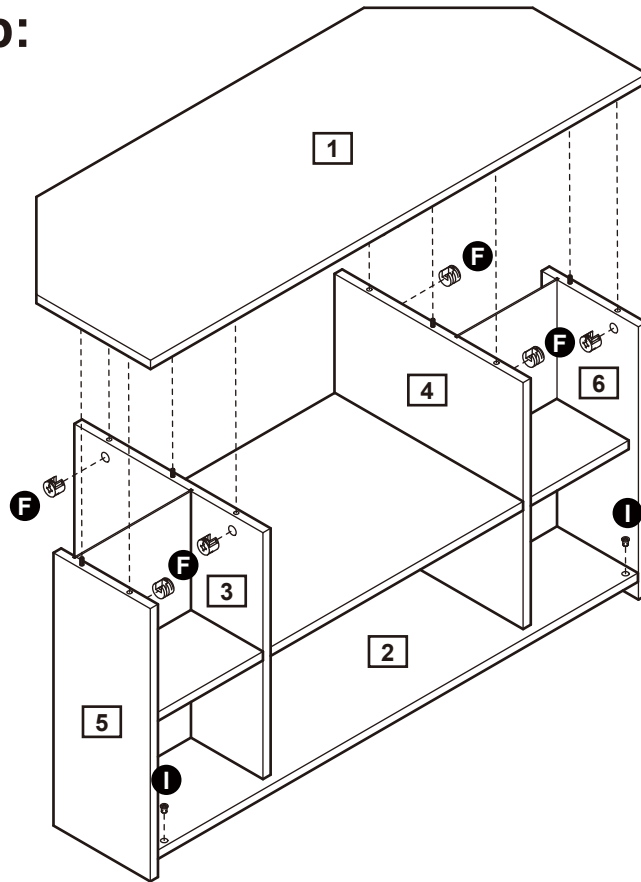




Step 6

Fixing large back panel

Attach large back panel **9** using nails **J**.



   Important:
The unit **MUST**
be 'square' when
back is attached.

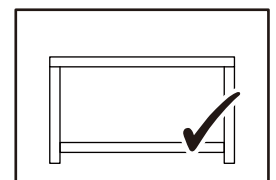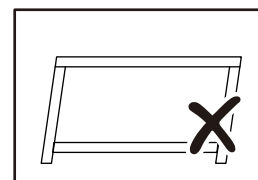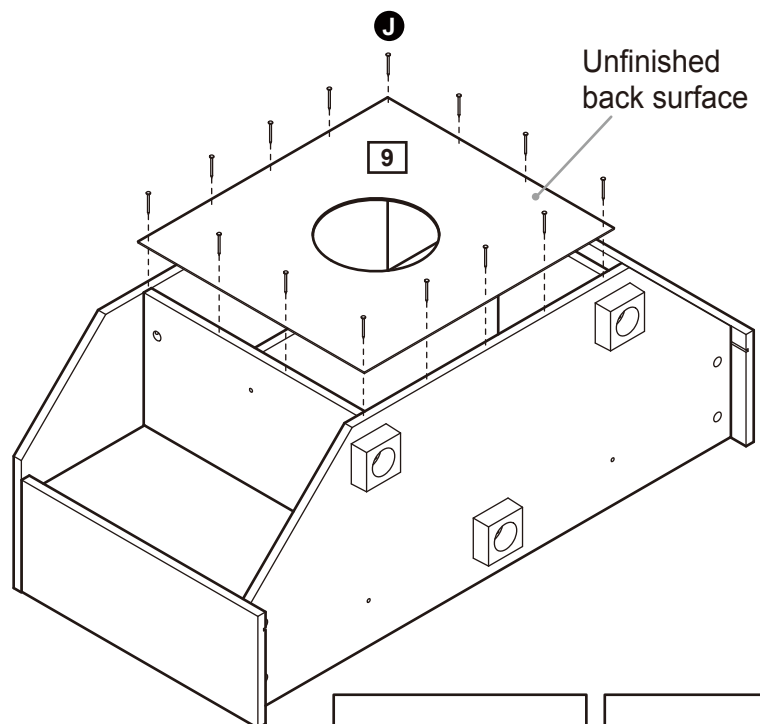


Assembly Instructions

Step 7


Fitting the glass doors

 a: Tear off the protective backing from the Foam pad **K** and Small foam pad **L**.

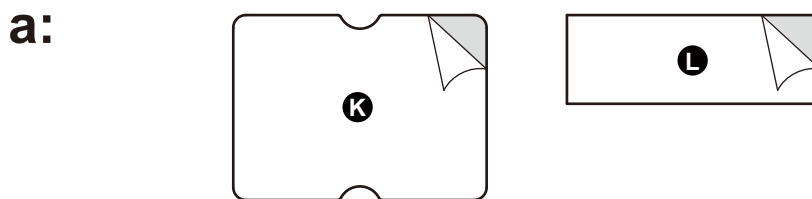

b: Carefully stick the Foam pad **K** onto the Glass door **11** so that it wraps over Glass door. Locate the Door push **O** over the top of the Foam pad and Glass door.

 
Carefully stick the Small foam pads **L** onto the Glass door **11**. Then slide the Bottom hinge **N** onto the Glass door **11**, and tighten the screws to fix position.

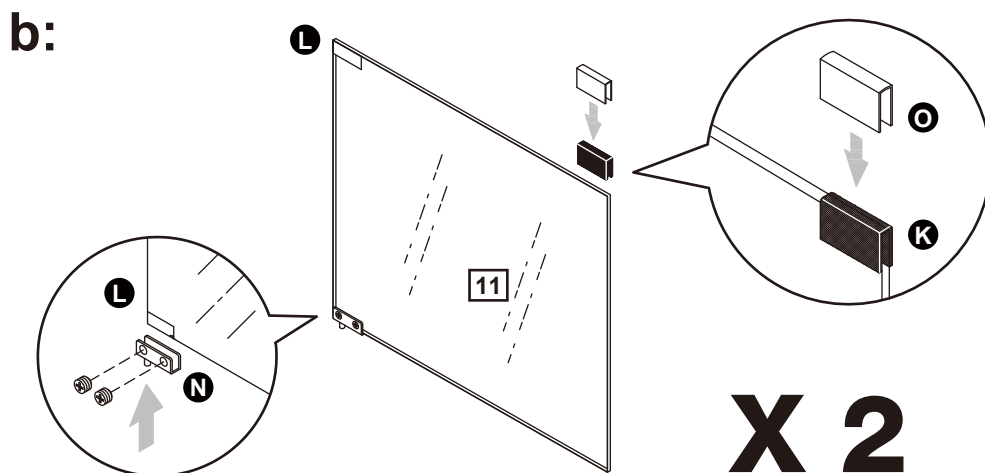

c: Insert the Top hinges **M** into the Hinge plug **I**.

Carefully locate the Bottom hinges **N** into the Hinge plugs **I**.

 Carefully slide the Glass doors **11** into the Top hinges **M**, ensuring they are parallel with they unit. Then tighten the screws to fix in position.

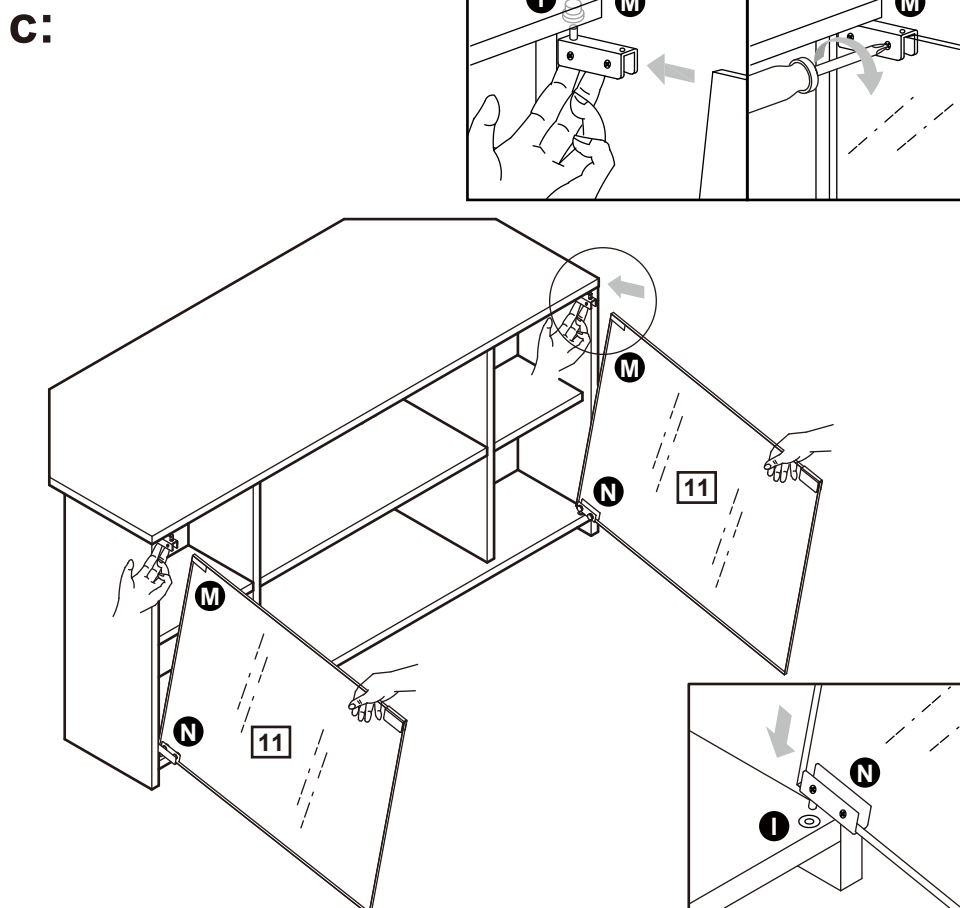


Assembly Instructions

Step 8

Finishing the unit

Note: It would be useful to ask someone to help you at this stage.

 With help, place the unit in the intended position.

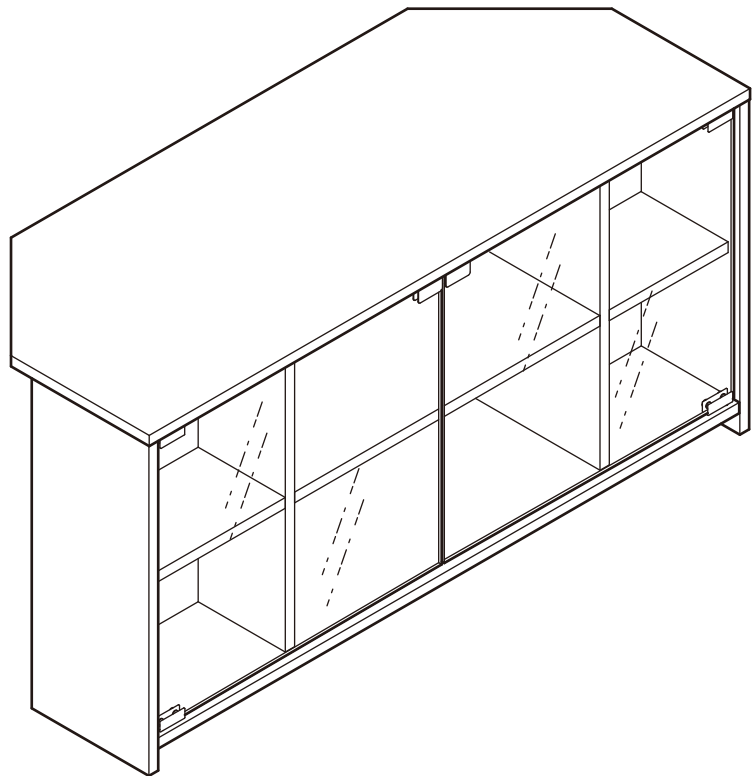

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800