
Eden - TV Unit

Assembly Instructions - Please keep for future reference

397/6540

399/9204

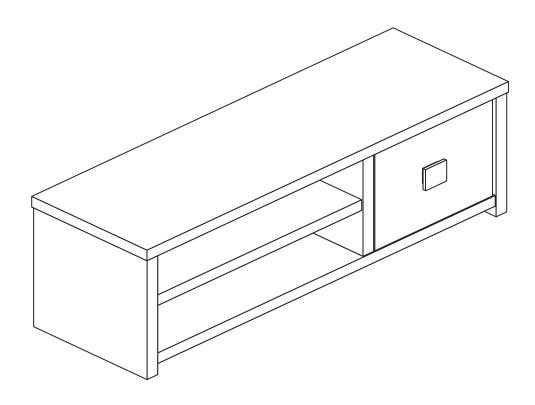

Dimensions

Width - 119.5cm

Depth - 38.5cm

Height - 47cm



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- *Warning:* This unit weighs approximately 17kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Safety note: If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

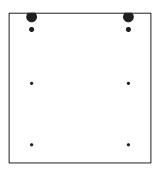


Left End (DF3439) (396 x 375mm)

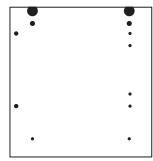


Right End (DF3440) (396 x 375mm)

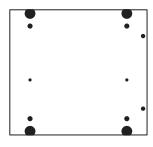


3 Divider (*DF1190*) (331 x 363mm)

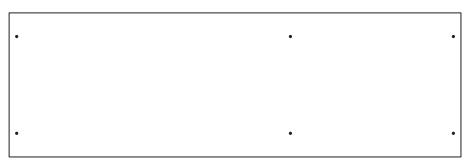


Top (DF3441) (1195 x 381mm)

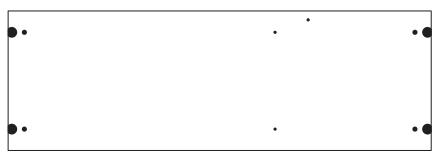


5 Base (DF3442) (1119 x 369mm)

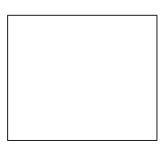

6 Back (DF1517) (395 x 331mm)

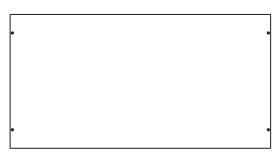

7 Shelf (*DF3443*) (689 x 354mm)

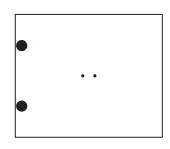

8 Door (*DF1191*) (325 x 389mm)




Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

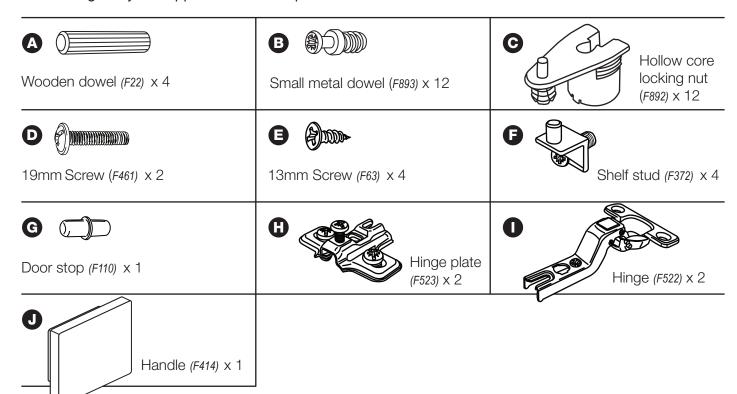

Tools required

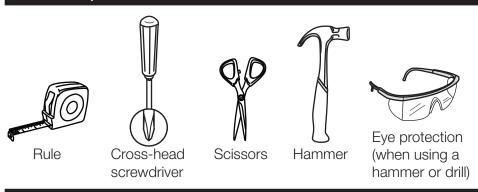

 

If you have damaged or missing components, call the Assembly Instructions Customer Helpline: 03456 400800 quoting the reference numbers below

Step 1

Prepare the base

Push 4 hollow core locking nuts **©** into the base 5, making sure that they are flush against the panel's surface.


Using a hammer, tap in the pin on the hollow core locking nut **C**.

Note: The pin should be tapped in flush with the top surface of the hollow core locking nut **C**.

Turn the base over

Screw 2 small metal dowels **B** into the base 5.

Note: Tighten metal dowels up fully against the panels.

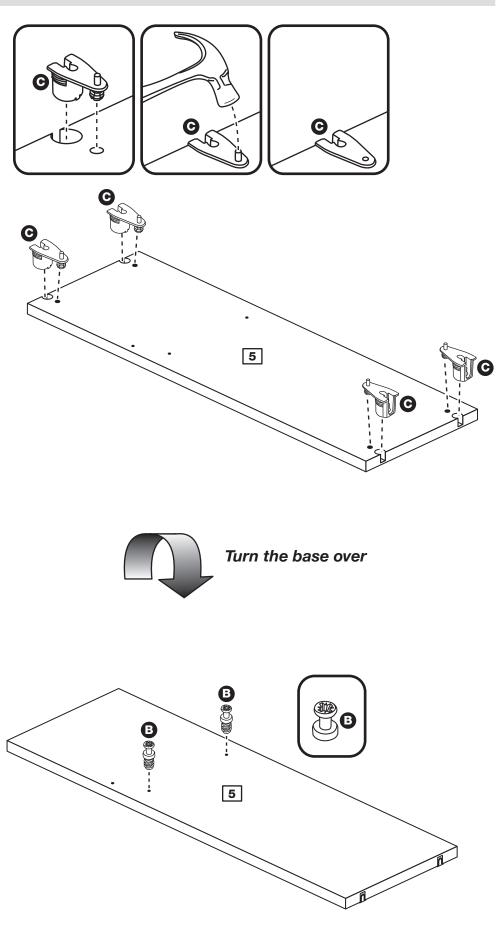

Step 2


Prepare the left end

Push 2 hollow core locking nuts **©** into the left end **1**, making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **©**.

Screw 2 small metal dowels **B** into the left end **1**.

Push 2 shelf studs **(F)** into the left side **(1)**.

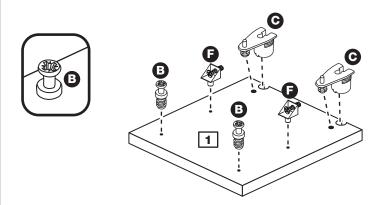

Step 3

Fit the left end to the base


Push the left end 1 onto the base 5.

The 2 small metal dowels

B fitted to the left end

1 must slide into the
top of the 2 hollow core
locking nuts G fitted to
the base 5.

Insert a screwdriver into the 2 hollow core locking nuts **©** and turn the nuts inside as far as they will go.

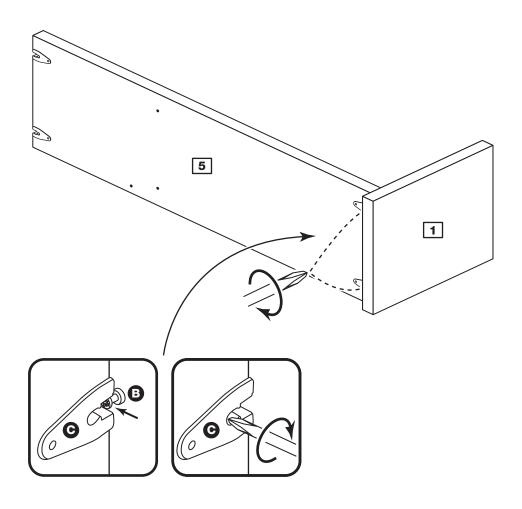

Step 4


Prepare the divider

Push 2 shelf studs **(F)** into the divider **(3)**.

Turn the divider over

Push 4 hollow core locking nuts **©** into the divider **3**, making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **©**.

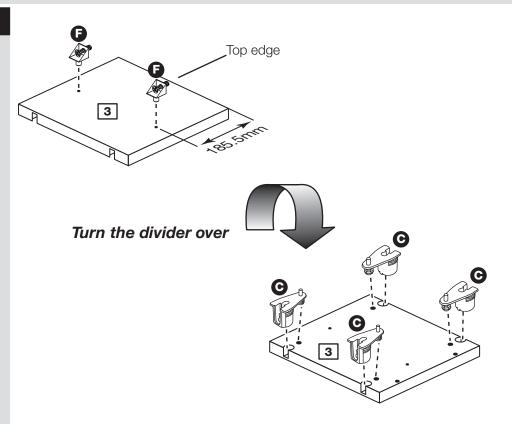

Step 5

Fit the divider


Push the divider 3 onto the base 5.

The 2 small metal dowels

B fitted to the base 5

must slide into the top of
the 2 hollow core locking
nuts 6 fitted to the
divider 3.


Insert a screwdriver into the 2 hollow core locking nuts **©** and turn the nuts inside as far as they will go.

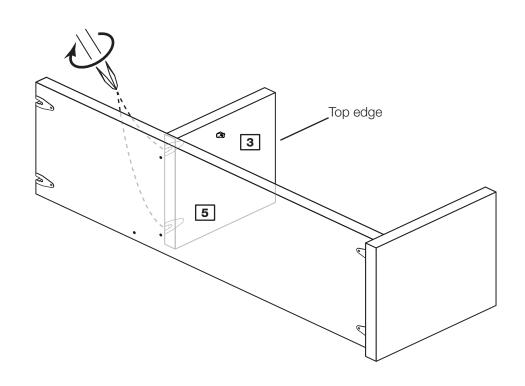

Step 6

Prepare the top

Screw 6 small metal dowels **B** into the top **4**.

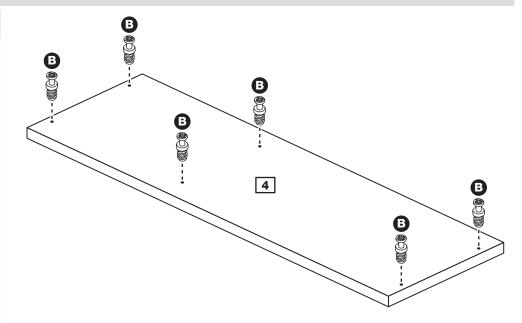

Step 7


Fit the top

Push the top 4 onto the left side 1 and divider 3.

The 4 small metal dowels

B fitted to the top 4
must slide into the top of
the 4 hollow core locking
nuts 6 fitted to the left
side 1 and divider 3.

Insert a screwdriver into the 4 hollow core locking nuts **©** and turn the nuts inside as far as they will go.

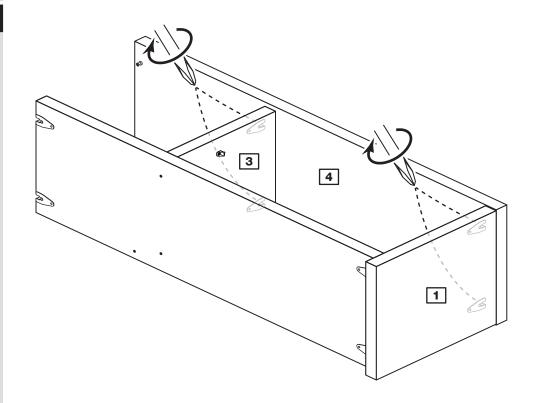


Step 8

Prepare the back

Tap 4 wooden dowels **A** into the back **6**.

Note: Wooden dowels must not stick out from the edge by more than 10mm or they may damage other panels.

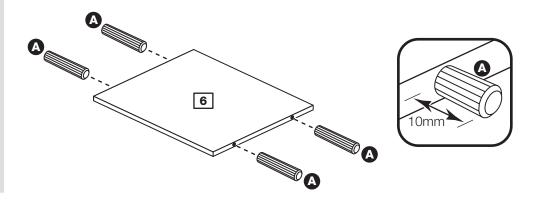

Step 9


Prepare the right end

Push 2 hollow core locking nuts **©** into the right end **2**, making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **©**.

Screw 2 small metal dowels **B** into the right end **2**.

Fit 2 hinge plates **(+)** onto the right end **(2)**, making sure that the slot is facing towards the finished front edge.

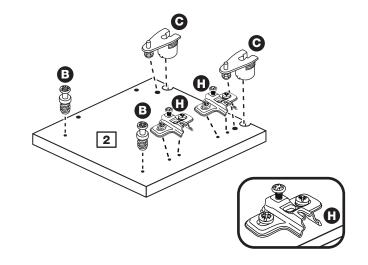


Step 10

Fit the back

Carefully stand the unit upright and push the back 6 into the divider 3.



Warning: The unit is heavy. Lift with care.

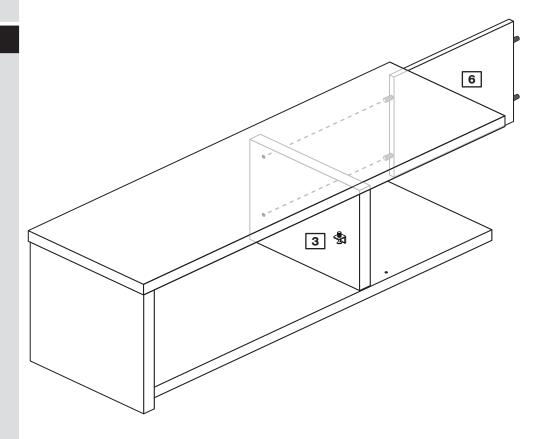


Step 11

Fit the right end

Push the right end 2 onto the top 4, base 5 and back 6.

Insert a screwdriver into the 2 hollow core locking nuts ② on the right end ② and turn the nuts inside as far as they will go.

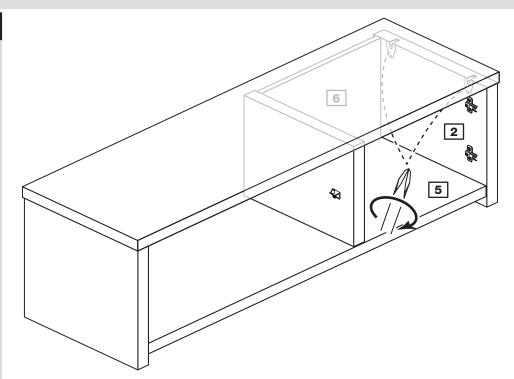


Step 12

Secure the right end to the base

Carefully lay the unit back down onto its front edges.

Insert a screwdriver into the 2 hollow core locking nuts **©** on the base **5** and turn the nuts inside as far as they will go.

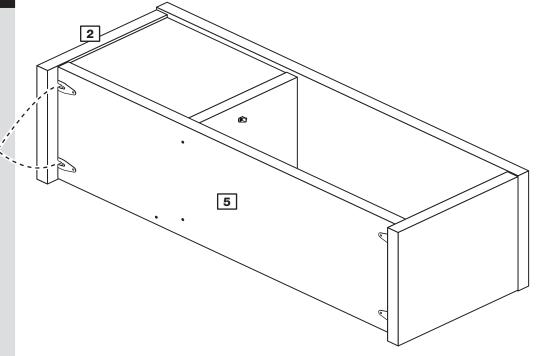

Step 13

Fit the shelf


Carefully stand the uit upright again and lower the shelf 7 down onto the 4 shelf studs 6.

Tighten the screws in the shelf stude **(F)** up into the shelf **(7)**.

Step 14

Fit the door stop

Push the door stop **G** into the base **5**.

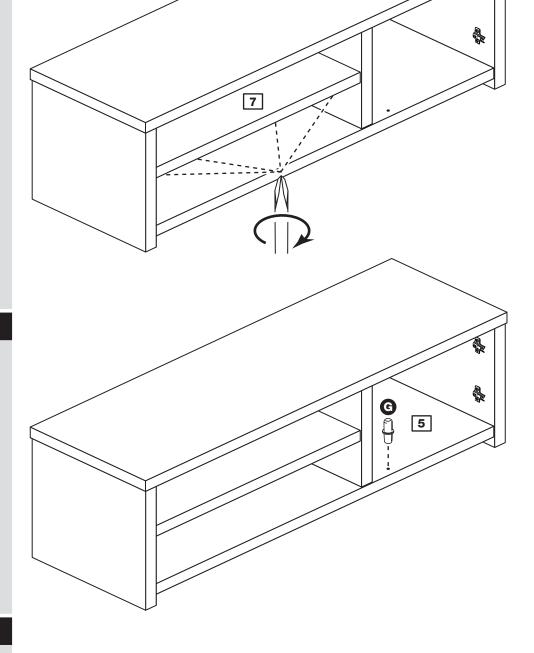


Step 15

Prepare the door

Push fit 2 hinges into the door 8.

Secure each hinge with 2 screws **(E)**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

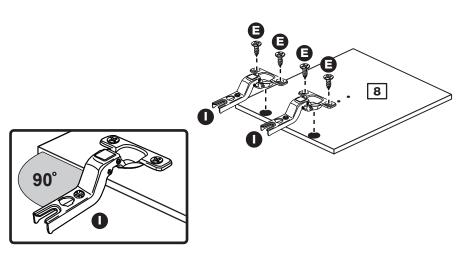

Step 16

Fit the door

Note: The easiest way to attach the door 8 is to fit the top hinge first, then align and fit the other hinge.

onto the front part of the hinge plate **(H)**. The recess at the bottom of screw B goes into the slot in the hinge plate.


b: Keep the hinge **1** FLAT against the hinge plate **1** as you slide it across as far as it will go. Tighten screw A.


C: The hinge I must be flat against the hinge plate I prior to any adjustment.

d: The hinge must NOT be AT AN ANGLE to the hinge plate when assembled. This would

indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure.

Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

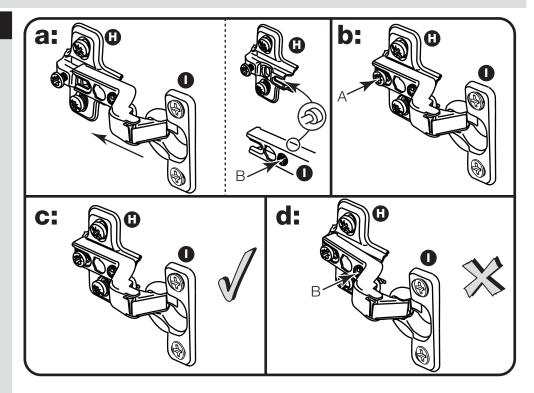


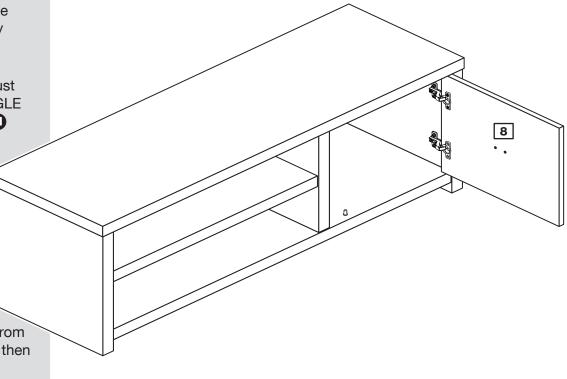

Step 17

Fit the handle

Attach the handle **1** to the door **8** using 2 screws **D**.

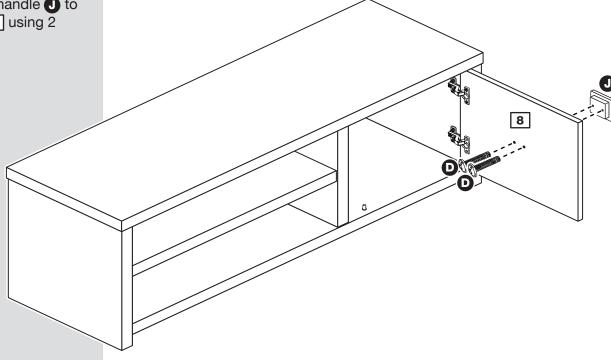

Step 18

Adjust the door if needed

a: Before adjusting the door, use a spirit level to check the top (or base) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

C: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.


d: Sideways adjustment.

To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

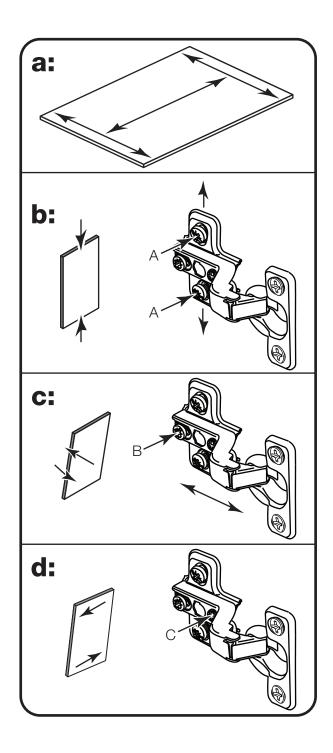

Step 19

Assembly is complete

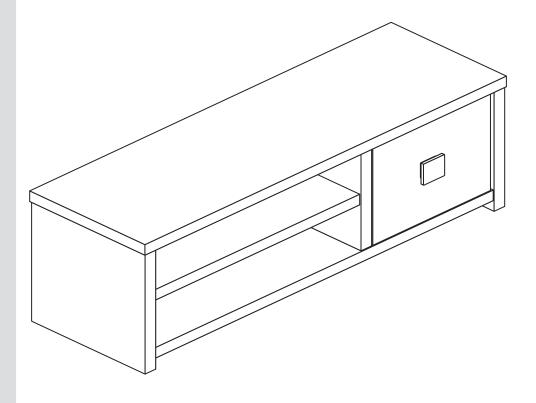

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800** and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW