 



**vtech**<sup>®</sup>  
Baby

# User's Manual

## Push & Ride Alphabet Train

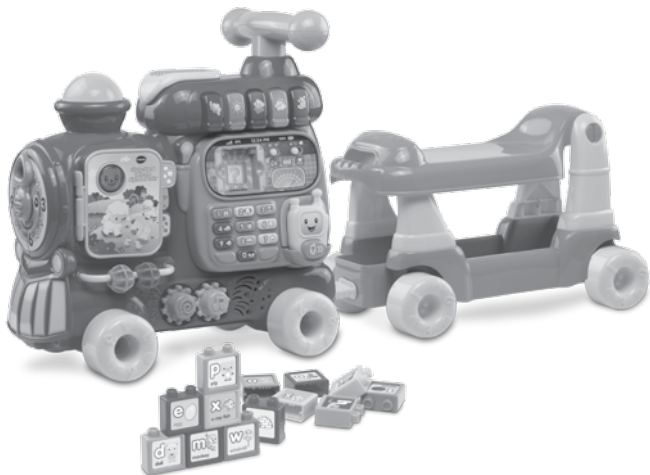

© 2015 VTech  
Printed in China  
91-003052-001 

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*

 


To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Push & Ride Alphabet Train** learning toy!

The **VTech® Push & Ride Alphabet Train** will take your child on a journey through phonics, letters, numbers, music and more! Entertaining sound effects, dancing lights and fun melodies reward your child's curiosity while taking baby on the ride of a lifetime!

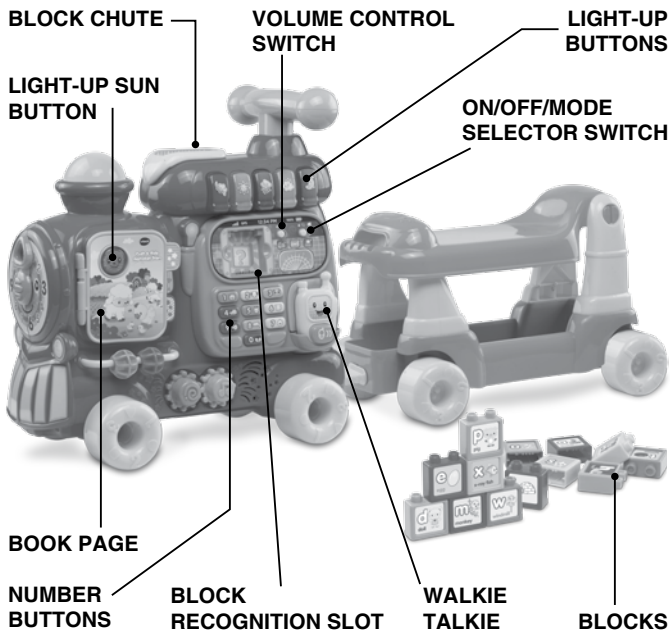


# INCLUDED IN THIS PACKAGE

- One user's manual



 
One engine

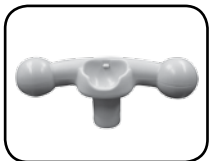

One engine handle



 One walkie talkie and  
walkie talkie holder

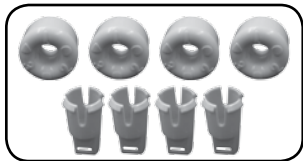

Four engine wheels and  
four axel covers



 
One carriage  
front support



One soft hinge



One carriage bottom

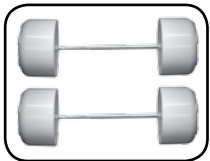


Four carriage wheels  
with axel trees



One carriage seat  
with back support



 13 double sided  
letter blocks

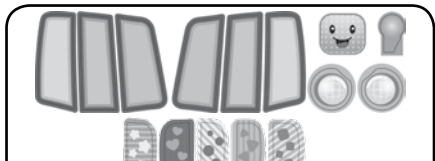


Two sheets of labels



# GETTING STARTED
 
## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover below the walkie talkie on the side of the engine. Use a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

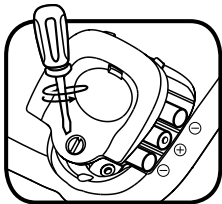

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

## ASSEMBLY INSTRUCTIONS

With the **VTech® Push & Ride Alphabet Train** safety comes first. To ensure your child's safety, adult assembly is required.


1. To assemble the engine wheels, insert the axels into the sockets on the body of the engine until you hear them click into place. Insert the wheels onto the axels until you hear them click into place. Once you have installed the wheels, they cannot be removed.

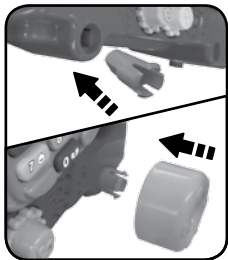


2. Insert the walkie talkie holder into the the slot below the battery cover until you hear it click into place. Once you have installed the walkie talkie holder, it cannot be removed.



 
3. Position the handle so that the curved part of the handle faces the back of the engine. Insert the handle into the hole on the top of the engine. Push down on the handle until you hear it click into place. Once you have installed the handle, it cannot be removed.

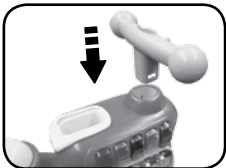

 4. Insert the seat front support piece into the front of the carriage until you hear it click into place. Next, insert the back support with the seat into the back of the carriage until you hear it click into place. Once you have assembled the carriage, it cannot be taken apart.

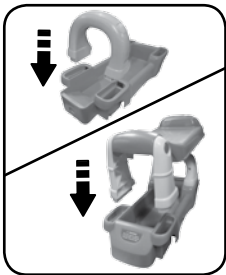


 5. Position the soft hinge so that the large hole is facing up. Insert the hinge into the hole at the front of the carriage until you hear it click into place. Once you have attached the hinge to the carriage, it cannot be taken apart.

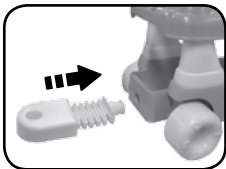




 
6. Insert the carriage wheels with axels into the bottom of the carriage until you hear them click into place. Once you have installed the carriage wheels, they cannot be removed.

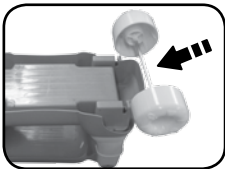

 7. To attach the carriage to the engine, insert the soft hinge into the slot on the back of the engine. You will hear the soft hinge click into position, which lets you know the carriage is attached correctly.

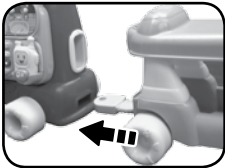

 8. To detach the carriage from the engine, press and hold the blue button under the bottom of the engine, pull the hinge out of the slot.

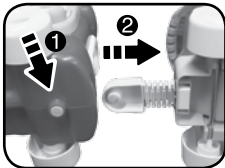




**WARNING:** Not to be used by children over 36 months.  
Insufficient strength. 20 Kilograms Max.

Regularly check for signs of wear or tear on the snap in or locking devices. If damaged do not use until repaired or replaced. Only to be used under the direct supervision of a competent adult.



## PRODUCT FEATURES
 
### 1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** (  ) or the **TRAVEL MODE** (  ) position. To turn the unit off, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (  ) position.



## 2. VOLUME CONTROL SWITCH

Slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** (  ) or **HIGH VOLUME** (  ) position.



## 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Push & Ride Alphabet Train** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button, opening the book, inserting a block into the slot or inserting the walkie talkie.

 
## ACTIVITIES

1. Slide the **on/off/mode selector switch** to choose a mode of play. You will hear a song, a playful sound and a phrase in both modes. The lights will flash with the sounds.
2. Place the blocks into the **block recognition slot** to learn letters and objects in both modes. The lights will flash with the sounds.
3. Press the **number buttons** to learn numbers in the learning mode and learn animals in the travel mode. Insert the walkie talkie into the slot to hear fun phrases to encourage imaginative play. The lights will flash with the sounds.



4. Drop the blocks into the **block chute** to hear the blocks counted in the learning mode and hear playful sounds in the travel mode. The lights will flash with the sounds.

**Note: The block chute will not work in direct sunlight.**

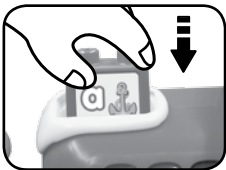


5. Open and close the **book** to hear fun phrases and sounds in the learning mode and melodies in the travel mode. The lights will flash with the sounds.




6. Press the **sun button** to hear songs and music in the learning mode and short tunes and animal sounds in the travel mode. The lights will flash with the sounds.



 7. Press the **light-up buttons** to learn about colours in the learning mode and weather in the travel mode. The lights will flash with the sounds.

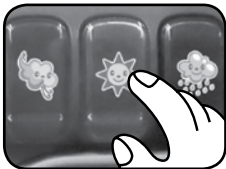

 8. Push the train to activate the motion sensor. You will hear fun train sounds and melodies. The lights will flash with the sounds.

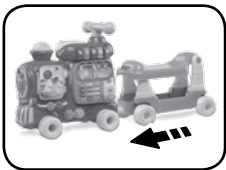

## ATTENTION!

**This toy should be played with in a safe area indoors.**

**Please ensure young children are supervised by an adult. Please also ensure your child is positioned correctly on the seat when the product is being used as a ride-on toy.**

**This toy should be used with caution to avoid falls or collisions that could cause injury to your child or others.**

## MELODY LIST

1. One Man Went to Mow
2. I've Been Working on the Railroad
3. Alphabet Song
4. Good Morning Merry Sunshine
5. Mulberry Bush
6. Oh Susanna
7. Farmer in the Dell
8. Sailing Sailing
9. Pop! Goes the Weasel
10. Polly Put the Kettle On

## **SING-ALONG SONG LYRICS**

### **SONG 1**

Welcome aboard!

I'm happy you are here!

Load your blocks and we'll have fun,  
Chugging through the big wide world!

### **SONG 2**

Chugg, chugg, chugging,  
Rain or shine.

I hope you enjoy your ride.

Toot! Toot!

### **SONG 3**

Yeehaw, we're at the farm,  
There's so much that we can see!

### **SONG 4**

We're at the beach, just you and me,  
There's so much that we can see!

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## **TROUBLESHOOTING**

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.

2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

**IMPORTANT NOTE:**

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1  
LED PRODUCT**

**WARNING:**  
Adult assembly required.



## PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).  
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

