

 
Instruction Manual

SP-1323



Bluetooth speaker

Premium stereo Bluetooth speaker

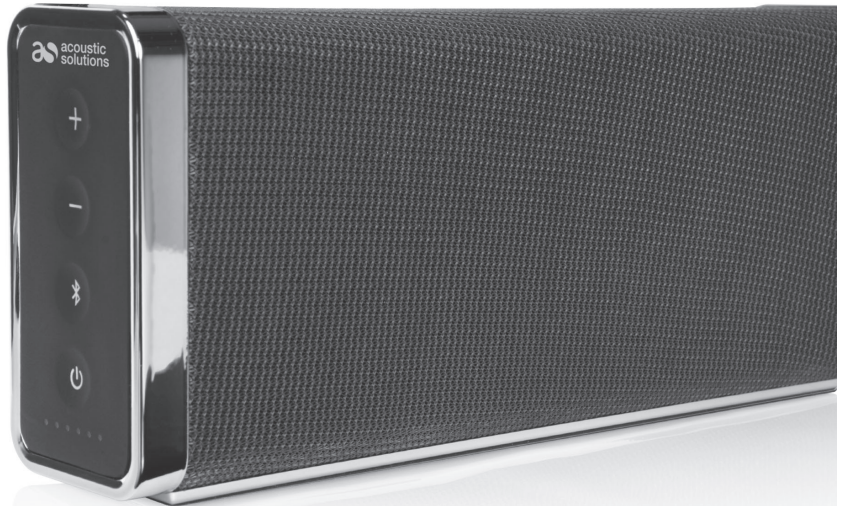

Important - Please read these instructions fully before installing or operating

These instructions contain important information which will help you get the best from your speaker and ensure safe and correct installation and operation.

Table of content

For your safety	2
Box contents	2
Introduction	3
Funtions and controls	3
NFC connection	4
Bluetooth connection	4
AUX IN connection	4
Charging	4
Warning tones	4
Specifications	4
Troubleshooting	5
Guarantee	6

For your safety

1. Naked flame sources, such as lighted candles, should not be placed on or near the apparatus.
2. Do not place the product in closed bookcases or racks without proper ventilation.
3. The mains plug is used as the disconnect device and should always remain readily accessible in case fast disconnection should be necessaryl remain.
4. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
5. Do not expose the unit to dripping or splashing liquids or allow place objects filled with liquids, such as vases, to be placed on or near the unit.
6. Do not connect the FM antenna to an outside aerial.
7. The unit should not be exposed to direct sunlight, very high or low temperatures, moisture, vibrations or placed in dusty environment.
8. Do not use abrasives, benzene, thinners or other solvents to clean the surface of the unit. To clean, wipe with a mild non-abrasive detergent and a clean soft cloth.
9. Never attempt to insert wires, pins or other such objects into the vents or openings in the unit.
10. This product has built in batteries - do not be expose to excessive heat such as direct sunlight or heaters.
11. This product must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.some of the materials can be reused.
13. For indoor use only
14. Do not open. No user replaceable parts inside, refer servicing to qualified service personnel.

Box contents

- 1x SP-1323 Bluetooth speaker
- 1x Micro USB charging cable
- 1x User manual



 
Introduction

The quickest and easiest way to pair the speaker with your Bluetooth device (such as a phone) is to use the NFC function (providing your device is NFC enabled). Simply switch on speaker and device ensure NFC is activated on your device. Touch the device against the NFC sensor area (1) on the top of the speaker (in the case of smart phones the NFC location is normally in the centre of the back of the phone) Your device should now be paired. If your device has no NFC function, turn on the bluetooth speaker, after 10 seconds, the speaker will enter pairing mode automatically, place your audio device in Bluetooth mode and make it discoverable, "SP-1323" should appear on your device, select it to connect and you're ready to listen to your favourite music.


The speaker can connect wirelessly from up to 10 metres away, and it works with most Bluetooth-enabled Smartphones, tablets, notebooks, and desktop computers, including iPad, iPhone, and other audio devices. A USB to micro-USB cable (included) makes it easy to charge your speaker. Just simply connect to any USB socket on your computer or AC adapter, to the Micro-USB socket on the back of the speaker to start charging.

Your Brick speaker uses a Class D digital amplifier with high efficiency and low power consumption characteristics with a stand-alone bass unit with which provides an incredibly rich bass sound.

Functions and controls

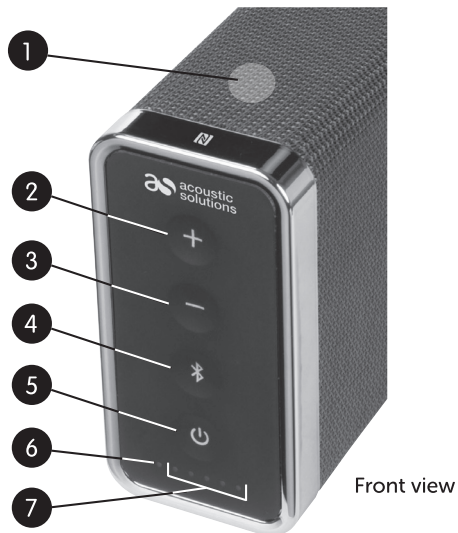

 1. NFC sensor area
2. Volume +
3. Volume -
4. Play, Pause, Pair, Answer/Refuse call function
5. Power On/Off

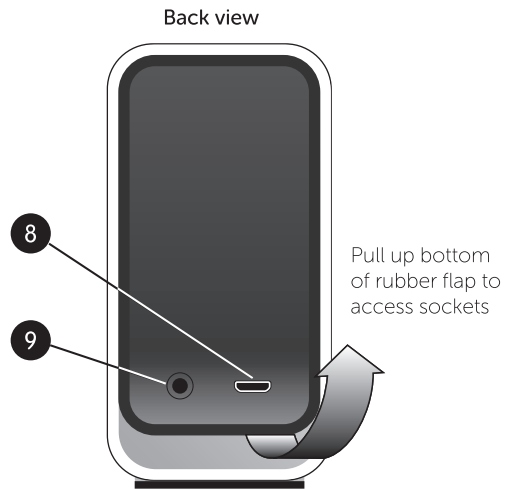

6. LED mode indicator
7. Battery / charging / volume indicators
8. Micro USB charging socket
9. AUX IN 3.5mm socket

Press 2 & 3 to adjust Volume +/-: the LEDs (7) indicate the volume level during volume adjustment.

To Play/Pause/Disconnect: Press (4) once to play or pause music streaming, hold down (4) for 2 seconds to disconnect.

To power On/Off: Press and hold down button (5) for 3 seconds, press button (5) once to display the current power level indicated by LEDs (7).

The blue LED indicator (6) will flash slowly when bluetooth is in standby mode or Bluetooth is disconnected and will flash fast once paired, and it will shine a blue continuously when an AUX-IN connection is made.

The white LED indicators will flash while charging and shine solid white when fully charged.



Connections

NFC connection for NFC enabled audio sources

Switch on the speaker and your Bluetooth device. Ensure NFC is activated on your device. Touch the device against the NFC sensor area (1) on the top of the speaker (in the case of smart phones the NFC location is normally in the centre of the back of the phone).

Bluetooth connection for non NFC enabled audio sources

Turn on the bluetooth speaker, after 10 seconds, the speaker will enter pairing mode automatically and the blue LED will flash slowly, place your audio device in Bluetooth mode and make it discoverable, "SP-1323" should appear on your device, select it to connect, and the blue LED will flash fast when pairing is complete. You are now ready to listen to your favourite music.

AUX IN connection for non Bluetooth audio sources

Almost any audio device with an in-line audio output can be connected to your speaker via the stereo 3.5mm audio socket (9) on the back of your speaker. As soon as the audio device and speaker is connected the speaker will automatically switch to the AUX IN mode and the blue LED will shine continuously.

Charging

A USB to micro USB cable is supplied to charge the built in lithium batteries in your speaker.

Using the charging cable supplied, connect the micro USB plug to the back of your speaker and the standard USB plug to a 5VDC / 2.1 A USB output on a computer or USB charger. While charging the white LEDs (7) will flash and when the speaker is fully charged they will shine solid white .

Warning tones

1. A prompt tone will sound when power is switched on/off, and when the speaker is reconnected and disconnected.
2. A "Blip" tone will sound if the volume is turned up to its highest limit.
3. A "Blip" tone will sound when the battery is low and the volume will be reduced automatically.
If the speaker is not put on charge the "Blip" tone will sound twice more and then the speaker will automatically turn off.

Specifications

Wireless range:	10m
Connections:	NFC, Bluetooth and AUX IN
Playtime per charge:	6-8 hours
Recharge:	via micro USB (cable included)
Bluetooth version:	4.0, A2DP/AVRCP
Speaker power:	2 x 4W main units + 10W subwoofer total 18W RMS
Input:	5VDC/2A
Battery type:	Lithium-ion rechargeable
Battery capacity:	5200mAh / 3.7V
Dimensions:	240 x 50 x 100mm
Weight:	930gms



Troubleshooting

Q1 The sound is low or completely silent.

A1 Make sure your audio device is charged.

A2 Make sure the connection (either Bluetooth or AUX) is fully functioning and secure. If you are using the AUX port check the cable is connected properly.

A3 Check the speaker and audio device volume and that an audible music track is playing.

Q2 My device cannot find the speaker.

A1 Ensure the Bluetooth is on and not hidden on your audio device and that the speaker is not paired to another device.

Q3 Volume is low.

A1 Adjust volume on your Bluetooth device as well as on the speaker for optimum volume and sound quality.





PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be either replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provision:

- The guarantee does not cover accidental damage, misuse, cabinet parts knobs or consumable items.,
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW



Waste electrical and electronic products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.



