
Washington - 2 Door 1 Drawer

Assembly Instructions - Please keep for future reference

411/3883

414/9015

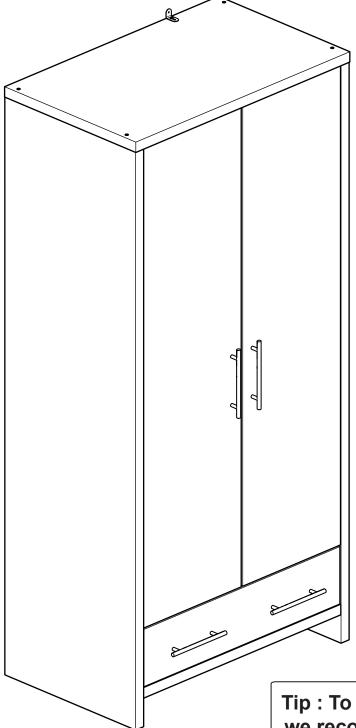

Dimensions

Width - 90.2cm Depth - 55.3cm Height - 193.4cm

411/3883 SMOKEY OAK 414/9015 WARM OAK Tip: To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos 03456 400 800**





Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



•To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Warning: Only use a manual screwdriver to attach the hinges.

 Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below.

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fi ttings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline**: **03456 400 800**


Please check you have all the panels listed below

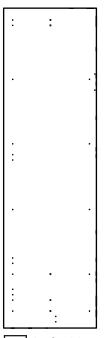


1 Left side (55.1 x 190cm) P8320

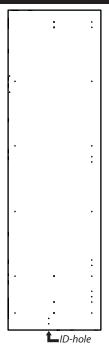


Right side (55.1 x 190cm) P8319

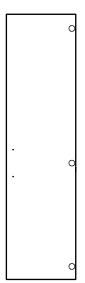


3 Left door (41.2 x 157.5cm) P3709

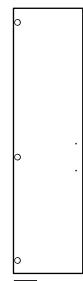

Right door (41.2 x 157.5cm) P3708

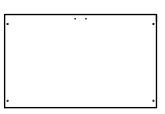

5 Top (90.2 x 55.3cm) P8152

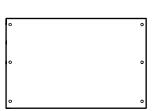


7 Horizontal (83.2 x 53.3cm) P1871



Plinth back (83.2 x 15.6cm) P4673



8 Bottom (83.2 x.55cm) P8153

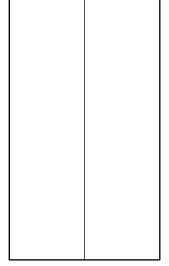

9 Foldy back (89.4x161.6cm) BO2574



(83.2 x 9.2cm)

0 0

P7052

Left drawer side (35 x 14cm) LA1614



Drawer bottom (79.3 x 34.2cm) BO2573

14 Drawer back (78.3 x 14cm) LA1651



Drawer front (82.6 x 18.9cm) P4118




Right drawer side (35 x 14cm) LA1615


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

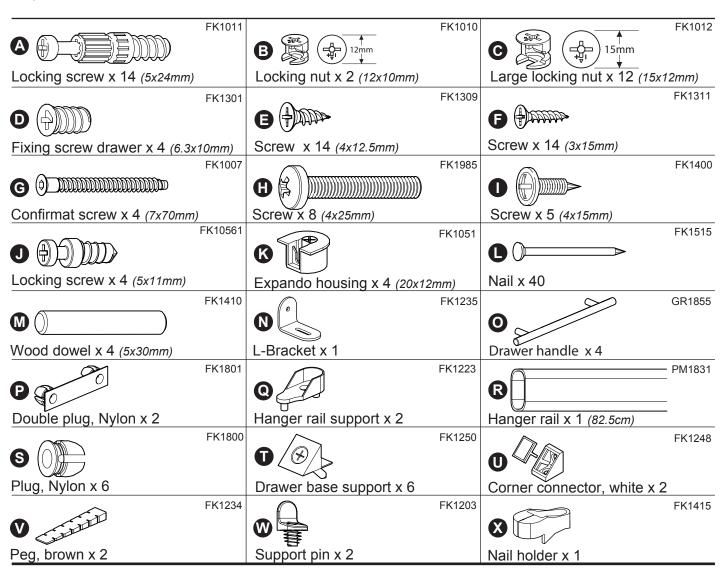

Tools required

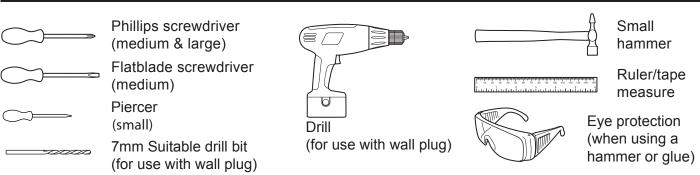

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (30mm screw shown).

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

FK12791	FK1278	PM1515 LA
	2	AA (6000 000 000 000 000 000 000 000 000 0
Hinge back x 6	Hinge door x 6	Runner left part A x 1
PM1515 LB	PM1515 RA	PM1515 RB
AB _⊚ · · · · · ==	AC	AD
Runner left part B x 1	Runner right part A x 1	Runner right part B x 1
ZF99936	FK1004	FA1510
Wall plug (6mm) & parkerscrew x 1	Allen key x 1 (3mm)	Glue x 1

Step 1

a: Press the Nylon plug **S** firmly into left side 1.


Screw 11mm locking screw 1 into left side 1.

Note: Insert 11mm locking screw **1** as far as shown. **Do not over tighten.**

Press the double nylon plug P firmly into left side 1.

Screw hinge back **Y** onto left side 1.


b: Attach hanger rail support **Q** using screw **E** left side **1**.

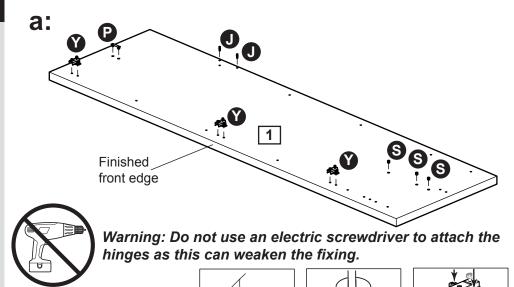

b:

Finished front edge

C: A A A Finished front edge

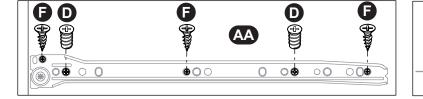

Attaching runners

C: Fix runner left part A AA on left side 1 as shown usesing fixing screw drawer 1 into left side 1.

Note: look carreful for the right postion.

Insert 15mm screw **6** as shown into left side **1** to fix runner left part A AA.

Screw 24mm locking screw A into left side 1.

Note: Insert 24mm locking screw **A** as far as shown. **Do not over tighten.**

a:

Step 2

a: Press the Nylon plug **S** firmly into right side **2**.


Screw 11mm locking screw 1 into right side 2.

Note: Insert 11mm locking screw **1** as far as shown. **Do not over tighten.**

Press the double nylon plug P firmly into right side 2.

Screw hinge back **Y** onto right side 2.

b: Attach hanger rail support **Q** using screw **E** right side **2**.

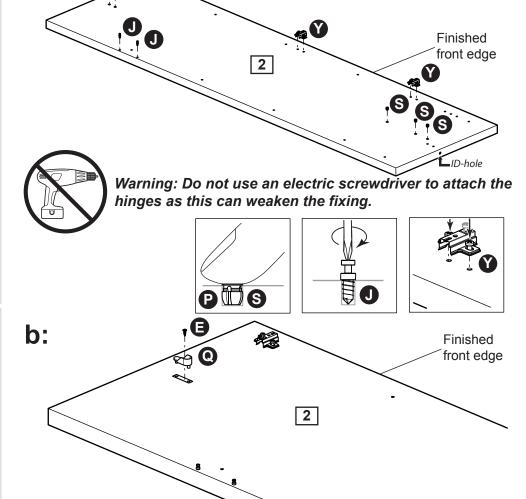

Attaching runners


C: Fix runner right part A AC on right side 2 as shown usesing fixing screw drawer 1 into right side 2.

Note: look carreful for the right postion.

Insert 15mm screw **f** as shown intoright side 2 to fix runner right part A **AC**.

Screw 24mm locking screw (A) into right side (2).

Note: Insert 24mm locking screw **A** as far as shown. **Do not over tighten.**

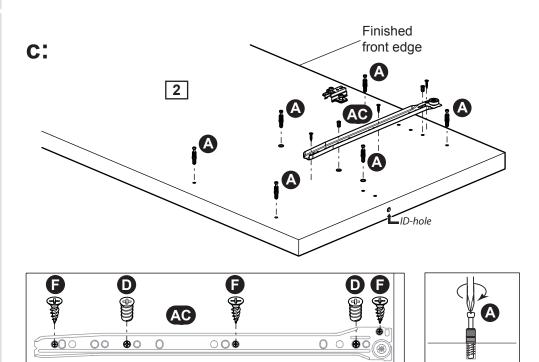

Step 3

Insert Support pin **W** into top 5. Let the flat side of support pin **W** face the same side as the finished front edge of top 4.

Do not overtighten.

Step 4

Insert expando housing (§) into Plinth back [6].

Step 5


Insert large locking nuts (sinto horizontal [7].

Make sure the 'arrow' on large locking nuts **©** points towards the hole in the edge of horizontal **7**.

Step 6

Insert large locking nuts **(**into bottom [8].

Make sure the 'arrow' on large locking nuts **©** points towards the hole in the edge of bottom **8**.

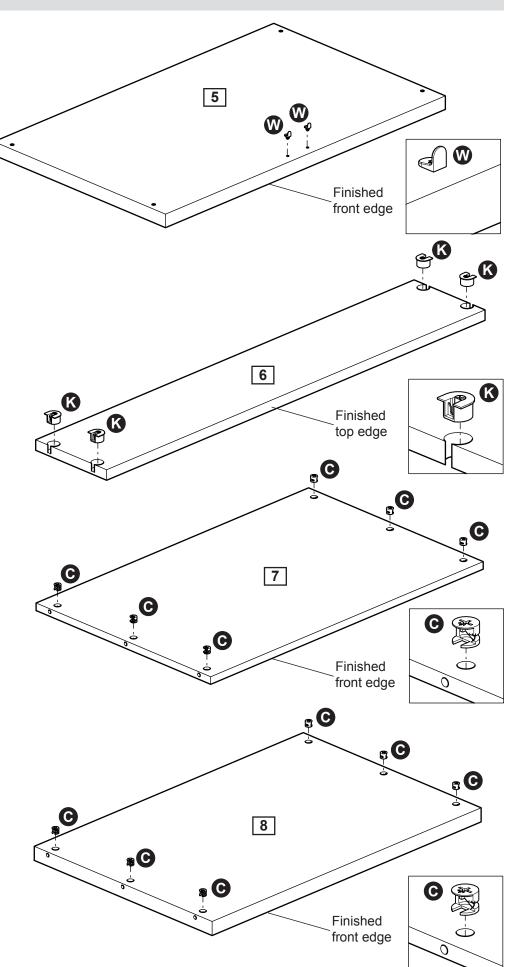

Step 7

Put drop of glue AG into the 4 holes of plinth 10.

Insert wood dowel **(M)** into the 4 holes of plinth [10].

Step 8

Attaching panels

Put drop of glue AG into the 2 holes of left side 1 and the 2 holes of right side 2.

Position left side 1 and right side 2 onto horizontal 7, bottom 8 and plinth 10.

Use a screwdriver to turn locking nuts **©** clockwise to lock.

Step 9


Attaching panels

Attach top 5 with 4x confirmat screw 6 onto left side 1 and right side 2. Use allen key AF.

Position plinth back 6 onto left side 1 and right side 2.

Use a screwdriver to turn Expando housing (K) clockwise to lock.

Mount corner connector **U** with 2 screws **f** on plint 10 and bottom 8.

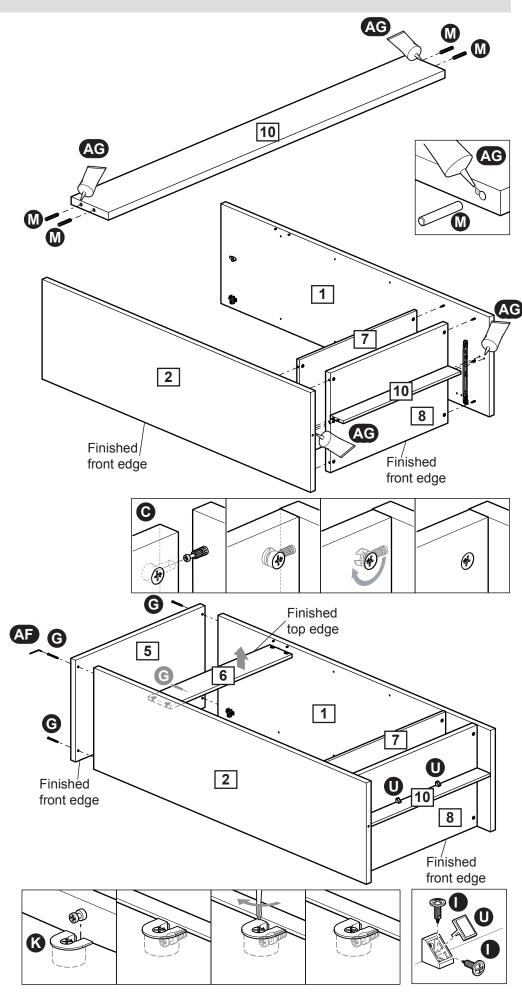

Step 10

Fitting back panel

Attach foldy back 9 to the back with the coloured surface facing the inside using nails .


Use nail holder & to hold the nails vertical and at correct distance as you secure the foldy back 9.

Nails should be spaced about 150mm apart.



Important:

Furniture MUST be 'square' when back is attached.

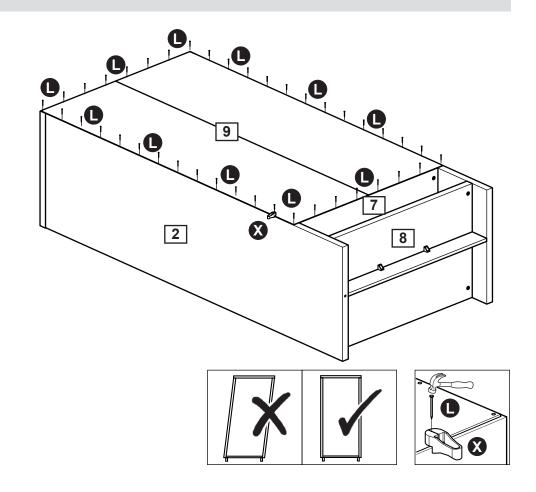


Step 11

Fitting hinges to doors

Fix three hinge door **2** to left door **3** and right door **4** using screws **E**.



Warning: Do not use an electric screwdriver to attach the hinges as this can weaken the fixing.

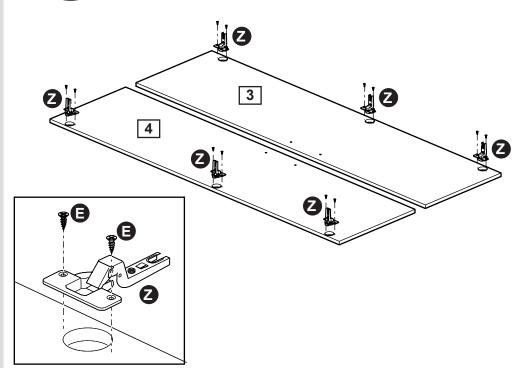

Step 12

Hanging doors

a: With help, slot hinge door **2** onto hinge back **Y**.


b: Tighten hinge door screw to lock hinges in postion.

Repeat **a** and **b** for other door.

For adjusting the hinges see 'adjustment' on page 'hinge adjustment'.

C: Fix drawer handle **O** onto left door **3** and right door **4** using screw **H**.

d: Inserting hanger rail Insert hanger rail **R** into hanger rail support **Q**.

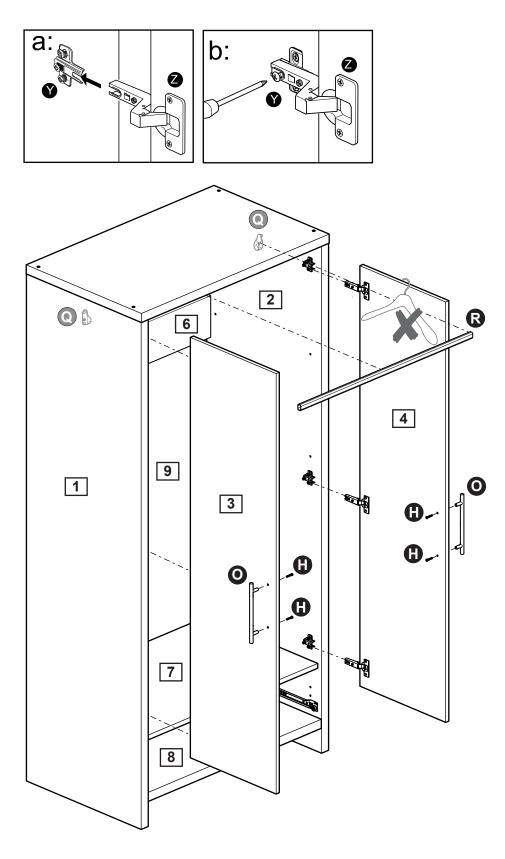

Step 13

Preparing drawer

Insert locking nuts **B** into left drawer side 13 and right drawer side 15.

Make sure the 'arrow' on locking nuts **B** points towards the hole in the edge of left drawer side 13 and right drawer side 15.

Put drop of glue AG into the 3 holes of left drawer side 13 and right drawer side 15.

Attach left drawer side 13 and right drawer side 15 onto drawer back 14.

Insert drawer bottom 11.

Step 14

Screw 24mm locking screw **A** into drawer front 12.

Note: Insert 24mm locking screw **A** as far as shown. **Do not over tighten.**


Step 15

Position drawer front 12 onto drawer.

Use a screwdriver to turn locking nuts **B** clockwise to lock.

Note: look carefully to the positions of drawer front 12.

Fix drawer handles **O** onto drawer front 12 using screw **H**.

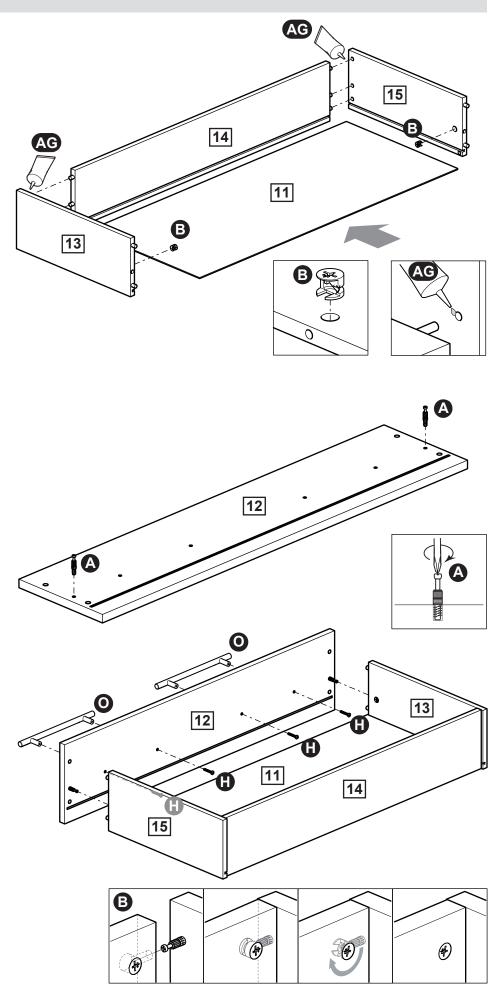

Step 16

Turn over drawer.

a: Fix runner left part B AB on left drawer side 13 as shown using screw **f**.

Fix runner right part B AD on right drawer side 15 as shown using screw **f**.


b: Fix runner left part B AB and runner right part B AD using screw **f**.

Slide drawer base support in corner as shown and fix them, using the attached screw.

Step 17

Inserting drawers as shown.

For adjusting the drawers see 'adjustment' on page 'drawer adjustment'.

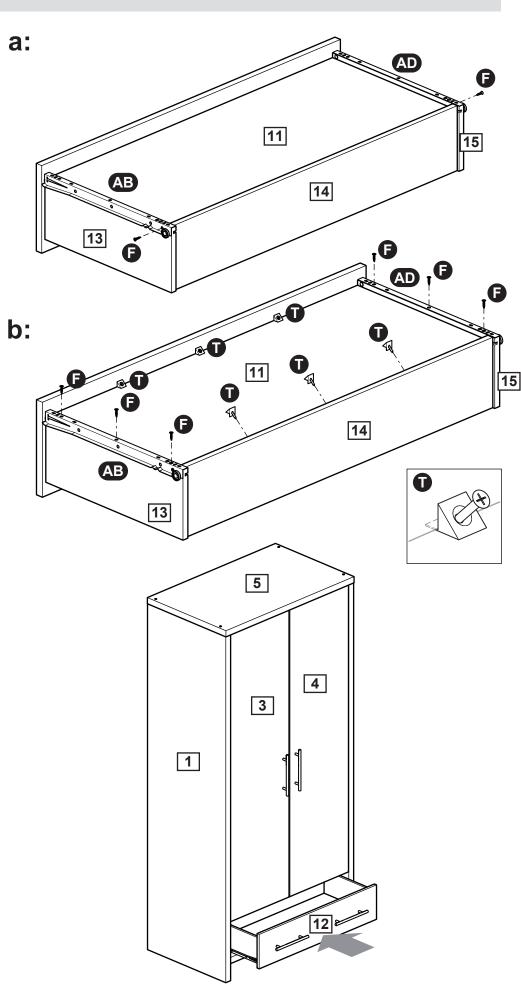

Step 18


a: Position L-bracket N on top 5 as shown, fix using screw 1.

Note: there is no pre-drilled hole for screw **1**.

Use wall plug & parker screw AE to fix on the wall, please see page 'Wall Mounting & Fixings' for more information.

b: Before adjusting the doors, use a spirit level to check if the base of this unit is level front-to-back and side-to-side in the three positions shown.

Use peg ♥ to square your furniture. Knock peg ♥ in, as far as you require, under the end of the side of the forniture. Then snap off flush with the side.

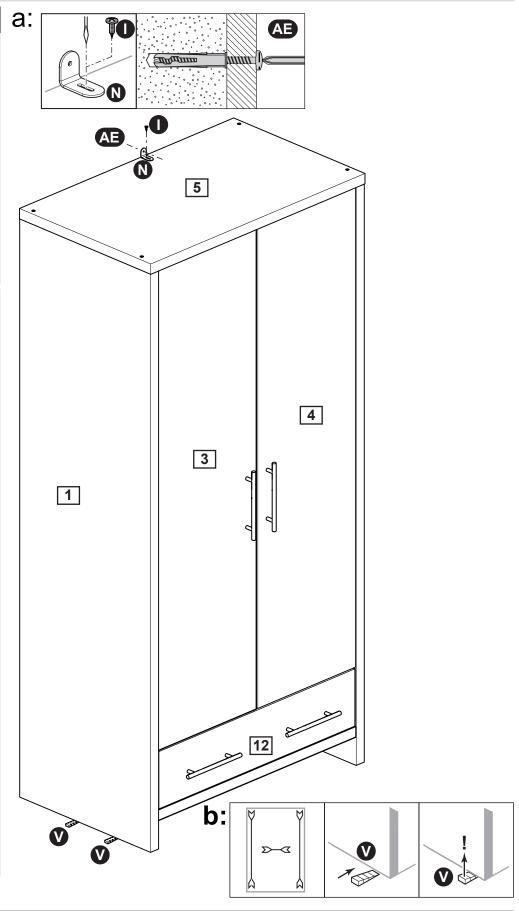

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline**: **Argos 03456 400 800**

A Guide to - Hinge adjustment

Adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.


Once doors are aligned, re-tighten.

b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.

C: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

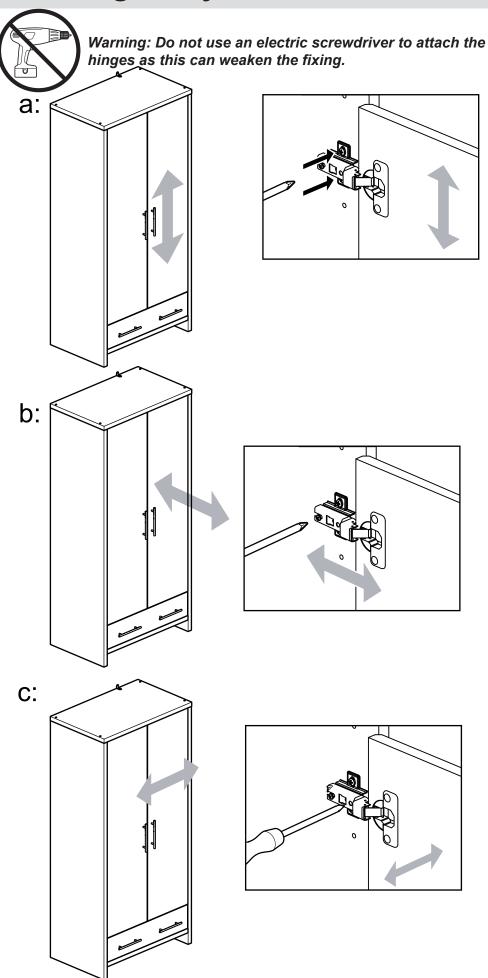

A Guide to - Drawer adjustment


Adjustment

Note: Each drawer can be adjust for approximately 1mm up or down on each site of the drawer.

Remove drawer, adjust the wheel from runner left part A and runner right part A as shown.

Insert drawer.

Repeat above steps until the desired result is achieved.

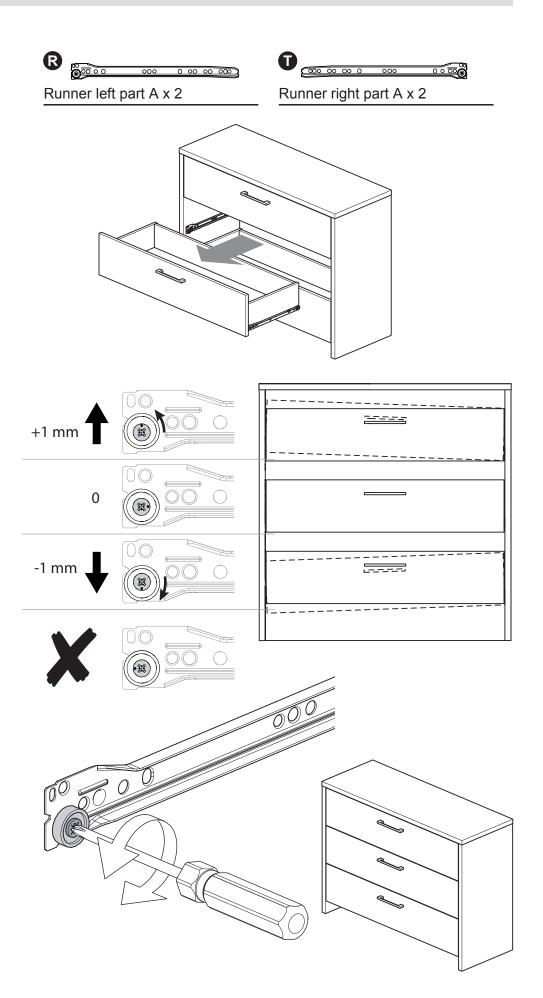

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

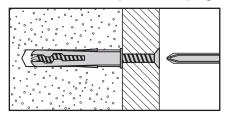


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

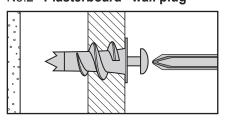


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

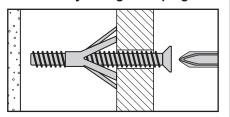

For use with plasterboard partitions or hollow wooden doors.


No.4 "Cavity Fixing-Heavy Duty" wall plug

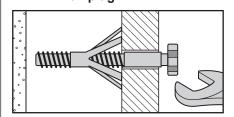

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: Always check the fitting and location to ensure your safety in and around the home.

No.5 "Hammer Fixing" wall plug

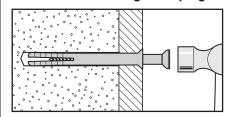

For use with walls stuck with plasterboard. The hamemr fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

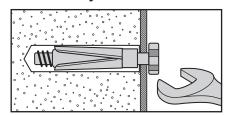

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.