




# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
[www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)  
Register online now!  
See back for details

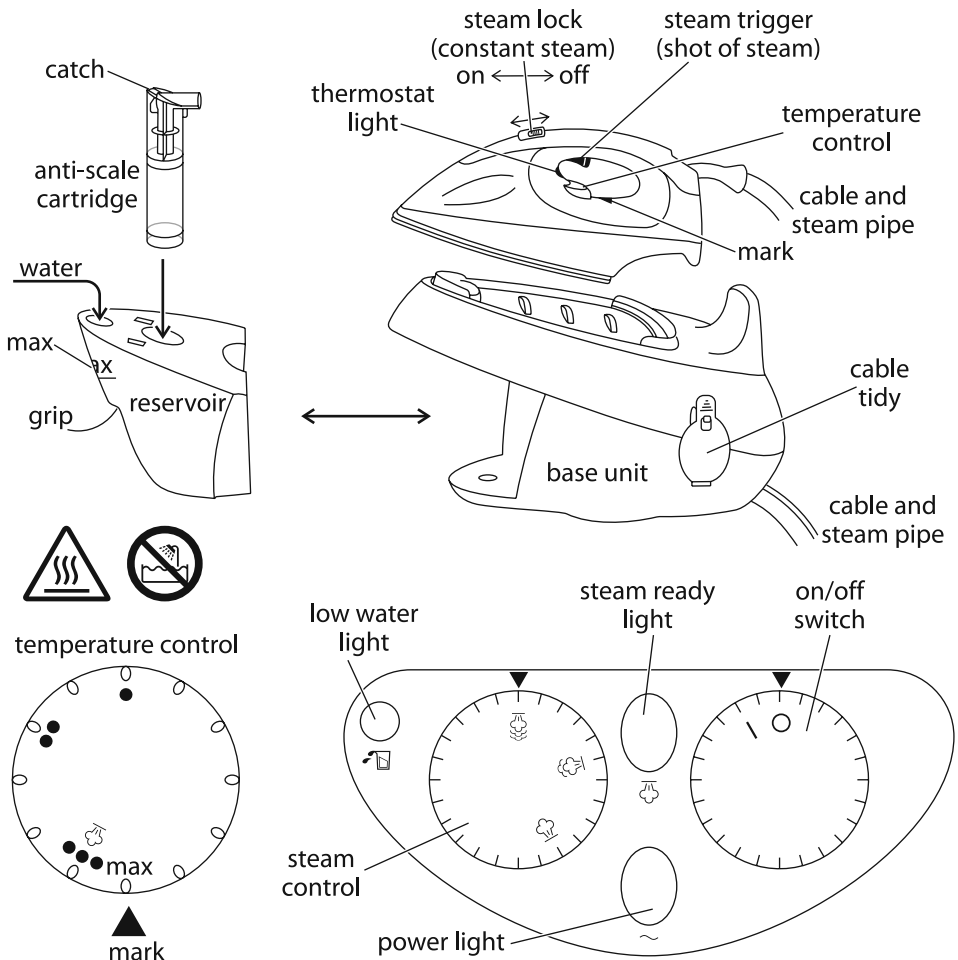

Read the instructions, keep them safe, pass them on if you pass the iron on.


**STOP IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the iron and cable out of reach of children under 8 years.
- 2 Unplug the iron before filling, before cleaning, and after use.

- 3 Sit the base unit on a stable, level, heat-resistant surface, preferably a purpose-built “steam generator” type ironing board.
- 4 Rest the iron only on the base unit.
- 5 Use the iron only on a stable surface.
- 6 Don't leave the iron unattended while plugged in or standing on the ironing board. It could be knocked over.
- 7 Don't use the iron if it's dropped, damaged, malfunctions or leaks.
- 8 If the cable is damaged, return the iron, to avoid hazard.

 The surfaces of the appliance will get hot.

 Don't put the iron in liquid, don't use it in a bathroom, near water, or outdoors.

9 Don't iron clothing while it's being worn – you'll burn or scald the wearer.

10 Don't touch the soleplate, and keep away from the steam coming from it.

11 Don't sit the base unit on a soft, carpeted, or upholstered surface, as this may block the vents underneath the base unit.

12 Don't fit any attachment or accessory other than those we supply.

13 Don't use the iron for any purpose other than those described in these instructions.

14 Take care not to scratch the soleplate – avoid buttons, zips, etc.

15 The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working, and must be returned for repair.

### **household use only**

#### **REMOVE ALL PACKAGING**

- Remove any labels, stickers or packaging from the iron and soleplate.

#### **CURE THE ELEMENT**

- Before using the iron for the first time, or if it's not been used for a long time, iron a scrap piece of cotton (an old towel is ideal) to remove any accumulated residues.
- Don't worry if the iron smokes a bit at first, it'll stop as the residues evaporate.

#### **WATER**

- 1 Use ordinary tap-water – the anti-scale cartridge will soften the water.
- 2 If the anti-scale cartridge needs replacing, and you don't have a replacement, you should use distilled water while you're waiting for the replacement to be delivered.
- 3 If you buy distilled water, check that it's marketed as suitable for irons.
- 4 Don't add anything to the water, and don't use water with anything added to it.
- 5 When the water is converted to steam, chemicals, perfume, and other additives will coat the inside of the steam chamber, shortening the life of the iron.

#### **FILLING**

6 Switch off before filling.

7 Remove the reservoir:

- a) put the fingers of one hand into the grip under the front of the reservoir
- b) steady the base unit with the other hand
- c) pull the reservoir out of the base unit

8 Pour water into the front hole in the top of the reservoir, up to, but not over **max**.


- 9 Replace the reservoir:
  - d) slide the reservoir into the base unit
  - e) prime the iron before use – see below

## 👁️ SWITCH ON

- 10 Sit the iron on top of the base unit.
- 11 Put the plug into the power socket (switch the socket on, if it's switchable).
- 12 Set the off/on switch to |. The power light will glow.
- 13 Set the steam control to the steam level you want (☁️ = low, ☁️☁️ = medium, ☁️☁️☁️ = high).
- 14 When the steam ready light glows, the boiler is ready to make steam (2-3 minutes).
- 15 It'll then cycle on and off as the boiler works to maintain the temperature.
- 16 If the temperature control on the iron is set above room temperature, the thermostat light on the iron will glow, to show that the soleplate is heating up.
- 17 It'll go out when the soleplate reaches the temperature set by the temperature control, then cycle on and off, as the thermostat works to maintain the temperature.

## 👁️ PRIMING

- 18 Prime the iron after filling the reservoir, to get water and steam through the system.
- 19 Check that the steam lock is off, hold the iron below the level of the base unit, and squeeze the steam trigger.
- 20 You'll hear the pump as it pushes water through the system, then, after 30 seconds or so, it'll start to quieten, and steam will come out of the soleplate.

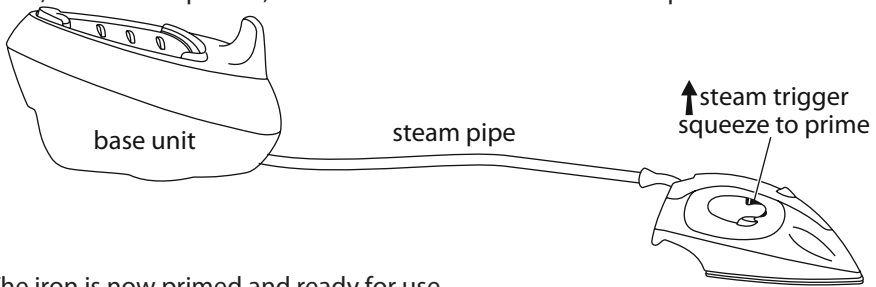

- 21 The iron is now primed and ready for use.

## 👁️ PREPARATION

- 22 Check for textile care symbols (☒ ☐☐☐☐).
- 23 Iron fabrics needing low temperatures ☐☐ first, then those that need medium temperatures ☐☐☐, and finish with those needing high temperatures ☐☐☐☐ (or max).

## 👁️ SET THE TEMPERATURE

- 24 Turn the temperature control to bring the setting you require next to the mark.

### temperature setting guide

#### label marking

- ☐☐ cool – nylon, acrylics, polyester
- ☐☐☐ warm – wool, polyester mixtures
- ☐☐☐☐ hot – cotton, linen
- ☐☐☐☐☐ denim/jeans
- ☒ do not iron

 
#### temperature setting

- 
- 
- 
- MAX

- \* If the instructions on the fabric label differ from this guide, follow the instructions on the label.

- 25 If the soleplate is at a lower temperature than the one you've set, the thermostat light on top of the iron will glow, to let you know that the soleplate is heating up.
- 26 When the soleplate reaches operating temperature, the thermostat light will go out, then cycle on and off as the thermostat works to maintain the temperature

## STEAM IRONING

27 Set the temperature control to  or higher – otherwise the steam might condense on the soleplate, giving you water, instead of steam.

★ When you first want steam, you must prime the pump (opposite page).

### **shot of steam**

28 Squeeze the **steam trigger** to produce steam, release it to stop.

### **constant steam**

29 If you want constant steam, slide the **steam lock** forward – slide it back to return to normal.

30 Don't let the reservoir empty in use, or you'll have to prime it again when you refill it.

★ Steam may still escape from the iron after you release the steam button. This is normal, don't worry about it.

## DRY IRONING

31 You can dry iron by just not pressing the steam button, but if you want to make sure you don't press it accidentally, then you should iron with an empty reservoir.

32 Do your dry ironing first, then switch off, fill the reservoir, and do your steam ironing.

## VERTICAL STEAMING

 
33 Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.

34 Check that there's adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.

35 Check that there's nothing behind the fabric that may be damaged by the steam.

36 Check that pockets, turn-ups, and cuffs are empty.

37 Check that the steam ready light is glowing.

38 Check that the temperature control is at  or higher.

39 Wait till the thermostat light goes out, then start steaming.

40 Hold the iron close to (but not touching) the fabric.

★ Hold it well away for delicate fabrics.

41 We recommend using the steam trigger to produce steam for smaller areas, as it gives you better control.

42 For larger areas, you may find it easier to use the steam lock.

## NO WATER

43 When the water level gets low, the low water light will glow.

44 Fill the reservoir (see "filling", on page 4), then prime the iron again.

## AFTER USE

45 Sit the iron on top of the base unit and turn the temperature control to ●.

46 Set the off/on switch to ○. The power light will go off.

47 Unplug the base unit (switch the socket off first, if it's switchable).

48 Top up the reservoir a) this'll give you a head start next time you use the iron

b) it'll help to avoid inadvertently running out of water

49 Let the iron cool down completely before cleaning it, moving it, or storing it away.

## HOLIDAYS

50 If you leave the iron for more than a week, empty the reservoir, to avoid mould.

## CARE AND MAINTENANCE

51 Unplug the base unit, and let it and the iron cool down fully.

52 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

53 Remove spots from the soleplate with a little vinegar.

54 Take care not to scratch the soleplate.

55 Coil the cable and steam pipe loosely together.

56 Hang the top of the coil from the cable tidy.

## THE ANTI-SCALE CARTRIDGE

57 To reduce scale build-up, you must change the anti-scale cartridge regularly. How often depends on the hardness of your water, and how much you use the iron.

58 An average user, steam ironing for 2 hours a week, should change the cartridge every 4 to 6 weeks in a soft water area, or 2 to 3 weeks in a hard water area.

## WHAT TO WATCH FOR

59 Keep an eye on the steam output. If this reduces substantially, then it may be time to replace the anti-scale cartridge.

60 Look out for flecks of scale on your clothes. If scale is getting through the iron, it's time to replace the anti-scale cartridge.

## CHANGING THE ANTI-SCALE CARTRIDGE

61 This is best done when refilling the reservoir, as you'll have to top up the reservoir after fitting the new cartridge anyway.

62 After removing the reservoir from the base unit, simply lift out the old anti-scale cartridge, drop in the new one, then top up the reservoir.

## REPLACEMENT ANTI-SCALE CARTRIDGES

63 Have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

64 Ring 0845 658 9700, or email [service@russellhobbs.com](mailto:service@russellhobbs.com), for prices, then purchase replacements using VISA or MASTERCARD.

## DESCALING THE BOILER

65 Descale the boiler every time you replace the anti-scale cartridge.

66 Leave it for a minimum of 4 hours to cool down completely (overnight is best).

67 Mix 1 tablespoon of white vinegar and 2 tablespoons of warm water in a jug.

68 It's best to do this on top of a towel on the work surface in the kitchen, as you're likely to spill a bit, and you'll need access to water and a sink (or a basin).

69 Remove the reservoir (you're going to turn the base unit upside down).

70 Set the iron down on the work surface – take care not to scratch the soleplate.

71 Turn the base unit upside down.

72 Use a coin or screwdriver to turn the cover 90° anti-clockwise to unlock it.

73 Move the cover sideways to expose the drain.

74 Use the hexagonal wrench to unscrew the drain cap.

75 Turn the base unit over, and empty the boiler into the sink.

76 Turn the base upside down again, and pour the vinegar/water mix into the hole.

77 Replace the drain cap and shake the base unit from side to side.

78 Leave it for half an hour, then unscrew the cap again.

79 Turn the base unit over, and empty the boiler into the sink.

80 Now rinse, to remove scale and vinegar:


a) turn it upside down, fill with water

b) turn it back, and empty it into the sink

81 Repeat point 80 till the water that comes out is clear, free of scale particles, and doesn't smell of vinegar.

82 Finally, replace the cap, replace the cover, turn the cover 90° clockwise to lock it closed, turn the base unit upright, and store it away.

\* Products returned under guarantee with faults due to scale will be subject to a repair charge.

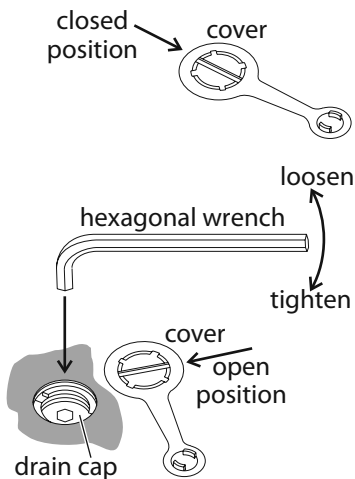



## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [support@russellhobbs.com](mailto:support@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)



## GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



## ONLINE/SPARES

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products and/or spares



## REGISTER ONLINE FOR –



£10,000 prize draw,

EXTRA year guarantee,

FREE rewards gallery

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.