



# Instruction Manual

414/7433




# DAB/FM Micro Hi-Fi

## Contents

Important safety information .....	3	Audio mode.....	15
Instructions for use .....	5	Storing an FM station preset .....	15
Check the package contents .....	5	Tune to an FM station preset.....	16
Where to put your Micro.....	5	FM display information .....	16
Setting up .....	5	Using the CD Player .....	17
Your DAB/FM Micro Hi-Fi .....	6	CD mode.....	17
Using your Micro .....	8	Play a CD.....	17
Switch on.....	8	CD controls .....	17
Switch off.....	8	Programmed play mode.....	18
Set the time and date .....	8	Repeat and Random modes .....	18
Change the mode.....	9	Remove the CD.....	19
Adjusting the volume.....	9	Bluetooth mode .....	20
Mute .....	9	Bluetooth (BT) mode .....	20
Backlight .....	9	NFC touch point.....	20
Headphone socket .....	9	Connecting or 'Pairing' with your Micro .....	20
Using the DAB Radio .....	10	Listening to Music/Audio using Bluetooth .....	21
Radio aerial .....	10	Delete all paired Bluetooth device records from your Micro.....	21
DAB radio mode .....	10	Aux in mode.....	22
Changing DAB stations .....	10	Troubleshooting .....	23
Scanning for DAB stations.....	10	Factory reset .....	25
Prune DAB stations .....	11	General information .....	26
Storing a DAB station preset .....	11	Product guarantee .....	27
Tune to a DAB station preset.....	11		
DAB display information.....	12		
Dynamic range control (DRC).....	13		
Using the FM Radio .....	14		
Radio aerial .....	14		
FM Radio mode .....	14		
Tuning to an FM station .....	14		
Changing the scan setting .....	14		

# Important safety information

Your DAB/FM Micro Hi-Fi should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Do NOT store in dusty or dirty areas.
- Disconnect your Micro from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Micro, before you change or disconnect the power supply.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do NOT use your Micro near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.
- Do NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
-  This is a CLASS-1 laser product. Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure. Do NOT open the cover and do NOT repair yourself. Refer servicing to qualified personnel.



- CAUTION: Never touch or look into the optical lens within the CD compartment.
- Do NOT place foreign objects into the CD compartment.
- The underneath and sides of this product may become warm after a long period of use. This is normal.
- If the Micro will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged and the battery is removed from the remote control.
- Only use recommended batteries or those of the same equivalent type.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove the battery from the Remote control if it will not be used for an extended period of time.
- Do not attempt to recharge non-rechargeable batteries.
- Dispose of old batteries carefully.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.



# Instructions for use

## Check the package contents

The package contains:

- 1 x DAB/FM Micro Hi-Fi with an attached mains power lead and plug
- 2 x Separate speakers (1 x Left and 1 x Right)
- 1 x Remote control
- 1 x Instruction manual

## Where to put your Micro

It is important that you consider carefully in advance where your Micro and speakers will be situated and make sure that they are:


- on a flat and stable surface
- Note: Never place your Micro directly onto antique or polished surfaces.
- within 1.4 metres of a power socket. Please ensure that the mains power lead and speaker cables are not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/Computer), which is about 10 metres or less (33 feet or less) in line of sight.
- where you can fully extend the radio aerial
- away from bright sunlight or heat sources, such as a radiator
- not in a humid or very damp place such as a bathroom

## Setting up


1. Connect the speakers to the Left and Right speaker sockets on the back of the Micro.
2. Fully extend the radio aerial on the back of the Micro to receive the best possible radio reception and sound quality.
3. Plug the mains power plug into the mains power wall socket and switch on. Your Micro will now be in 'Standby' mode.
4. Pull out the safety strip on the remote control to activate the battery.

# Your DAB/FM Micro Hi-Fi

Front View

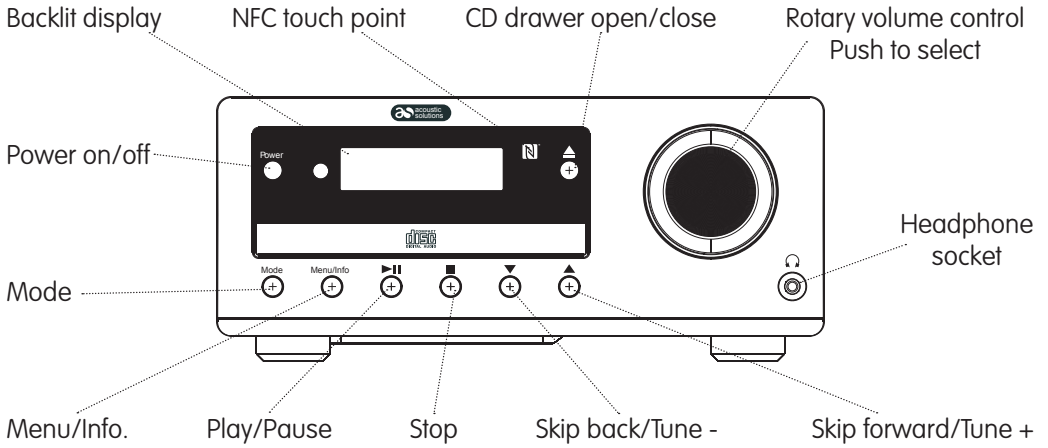


Back view

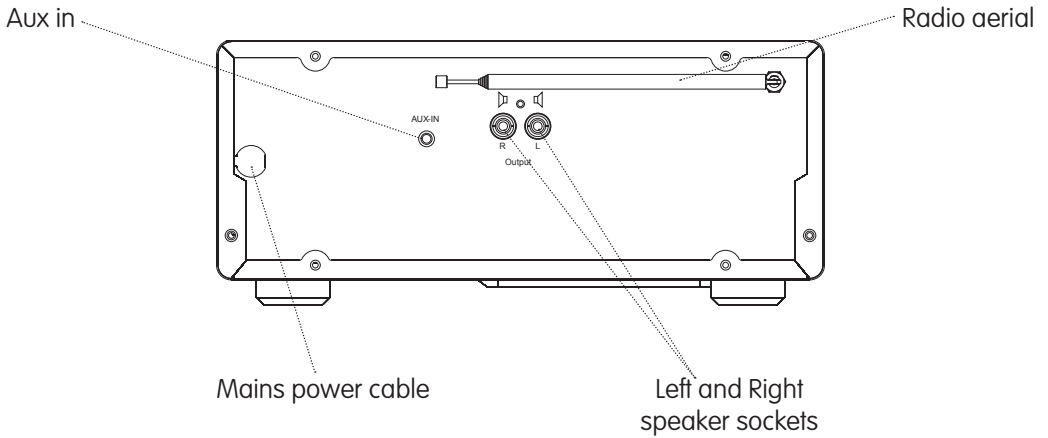

# Your DAB/FM Micro Hi-Fi

## Remote control

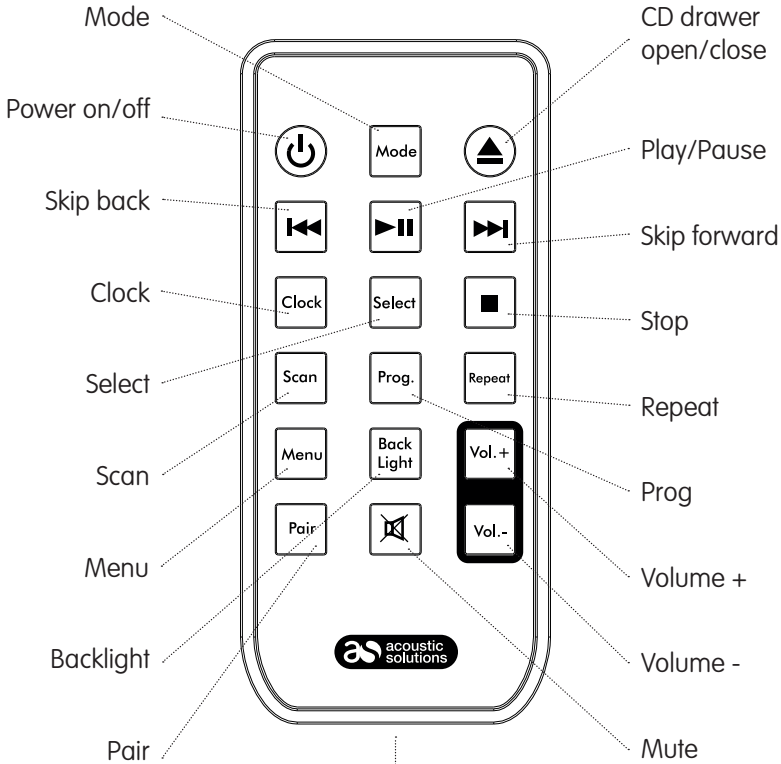

Battery compartment (at base)  
1 x CR2025 battery required (Supplied)

### Notes:

The remote signal may not be received if there is an obstacle between the remote and the Micro.

Direct sunlight or other bright light sources shining on the remote sensor to the right of the Micro display, may affect the performance of the remote control.

# Using your Micro

## Switch on

Press and release the 'Power' button on the Micro or the  button on the remote control to Switch on .


The first time you use the Micro or if the DAB station list is empty, your Micro will automatically begin to scan for DAB radio stations.

DAB/FM Radio, CD, Bluetooth and AUX modes are available.

Please check the display, which will confirm the mode.

Note: Always make sure that the radio aerial is fully extended when listening to the radio, to ensure the maximum signal strength and the best possible sound quality.

## Switch off










Press and release the 'Power' button on the Micro or the  button on the remote control to go to Standby mode. 'Good-bye', followed by the time and date, will be displayed.

To completely power off the Micro, switch off the mains power at the wall socket.

## Set the time and date

The first time you listen to DAB radio on your Micro, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour clock; which is in line with daylight saving, so there is no need to set the time and date manually. If you do wish to set the time and date manually, you can do this when your Micro is in standby mode.

In Standby mode:

1. Press and hold the  button on the Micro, until 'Time setup <Set clock>' is displayed. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
2. 'Set clock' is displayed and the hour digits will flash. Use the  or  buttons on the Micro or the  and  buttons on the remote control to display the correct hour in 24 hour clock. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
3. The minutes will flash. Use the  or  buttons on the Micro or the  and  buttons on the remote control to display the correct minutes. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.





4. 'Time setup <Set clock>' is displayed again. If you wait a few seconds the Micro will return to the Standby display.

Alternatively, you can use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to scroll to the other options available of '<Set date>' or '<Set 12/24 hour>'. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control, together with the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to modify the settings and confirm as required.

## Change the mode

Press and release the 'Mode' button on the Micro or on the remote control to change the mode.


DAB/FM Radio, CD, Bluetooth and AUX modes are available.

Please check the display, which will confirm the mode.

## Adjusting the volume

Turn the rotary volume control on the front of the Micro to adjust the volume. Turn clockwise to increase the volume and anti-clockwise to decrease the volume. You can also adjust the volume using the 'Vol+' and 'Vol-' buttons on the remote control.

## Mute

Press and release the  button on the remote control to mute the sound. 'MUTE ON' will flash in the display.

Press and release the  button again to turn this feature off and unmute the sound.

## Backlight

You can change the brightness of the display backlight. There are 3 settings available.

In Standby mode:

Press and release the ►► Play/Pause button on the front of the Micro to change the backlight setting or the 'Backlight' button on the remote control.


In Power on mode:

Press and release the 'Backlight' button on the remote control.

## Headphone socket

You can connect headphones with a 3.5mm plug (not included) to the socket on the front of the Micro. When you have headphones connected the Micro speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.

 To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.



# Using the DAB Radio

## Radio aerial

Please make sure that the radio aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to a DAB radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

## DAB radio mode

Check that your Micro is in DAB radio mode. If you are not already in DAB mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in DAB mode (check the display).

The first time you use the Radio or if the station list is empty, your Micro will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your Micro will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

## Changing DAB stations

In DAB mode:

1. Press and release the ▲ or ▼ buttons on the front of the Micro or the ►► and ◀◀ buttons on the remote control to move through the available stations.
2. When the station that you would like to listen to is displayed press the rotary volume control on the Micro to 'Select' or press 'Select' on the remote control. There will be a short delay whilst your Micro tunes to your selected station.

## Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your Micro.

If you have moved your Micro to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

In DAB mode:

1. Press and release the ►|| button on the Micro or the 'Scan' button on the remote control to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

## Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

1. Press and hold the 'Menu' button on the Micro or on the remote control. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to <Prune>. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
2. 'Prune? <No> Yes' is displayed. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to 'Yes'. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to prune the station list. Stations with a '?' prefix will now no longer be displayed. Press and release the 'Menu' button on the Micro or on the remote control to exit the Menu.

## Storing a DAB station preset

Your Micro can store up to 10 DAB radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the DAB radio station that you wish to preset.
2. Press and hold the ■ button on the Micro or the 'Prog.' button on the remote control for approximately 2 seconds until 'Preset Store' is displayed.
3. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to the preset location that you would like to store the radio station to (1-10).
4. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

Note: If there is already an existing DAB station stored under a preset, it will be overwritten when you store the new station.

## Tune to a DAB station preset

In DAB mode:

1. Press and release the ■ button on the Micro or the 'Prog.' button on the remote control. 'Preset Recall' is displayed together with the number of the current preset location.
2. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to the Preset location and station that you would like to listen to (1-10).
3. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The Micro will instantly tune to that station and begin to play.

Note: If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed, then the Micro will revert to the previously selected radio station after a few seconds.

## DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- **Dynamic Label Segment (DLS)**  
This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
  - **Signal Strength**  
An empty  will appear on the second line of the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.
  - **Program Type (PTY)**  
Such as 'Rock', 'Pop', 'Talk' or 'News'
  - **Multiplex Name**  
Displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.
  - **Channel and Frequency**  
e.g.: 12B 225.648 MHz
  - **Signal error**  
This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your Micro to improve reception.
  - **Signal information**  
The data rate at which the signal is being transmitted.
1. Repeatedly press and release the 'Menu' button on the Micro or on the remote control to cycle through the different information options.

## Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC off: No compression. This is the default setting.
  - DRC low: Medium compression.
  - DRC high: Maximum compression.
1. Press and hold the 'Menu' button on the Micro or on the remote control. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to <DRC>.
  2. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The current DRC setting will have an '\*' next to it.
  3. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move through the options and press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to confirm.
  4. Press and release the 'Menu' button to exit the Menu.

# Using the FM Radio

## Radio aerial

Please make sure that the radio aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to an FM radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

## FM Radio mode

Check that your Micro is in FM radio mode. If you are not already in FM mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in FM mode (check the display). When your Micro is in FM mode it can receive Radio Data System or 'RDS' information if this is being transmitted by the broadcaster. RDS information will often include the station name, detail about the programme and the current time.

If you were listening to an FM station when you switched the Micro to standby, then this station will be automatically selected when you switch the Micro back on.

## Tuning to an FM station

In FM mode:

1. Press and release the **▶||** button on the Micro or the 'Scan' button on the remote control to scan up the frequency band. Press and hold the **▶||** button on the Micro or the 'Scan' button on the remote control to scan down the frequency band.

Your Micro will search for the next available station and then stop on that station.

2. Press and release the **▲** or **▼** buttons on the Micro or the **▶▶** and **◀◀** buttons on the remote control to fine tune each frequency in 0.05MHz steps, if necessary.

Note: If reception is still poor check that the aerial is fully extended or try moving the Micro to another location.

## Changing the scan setting

In FM mode:

1. Press and hold the 'Menu' button on the Micro or on the remote control. <Scan setting> is displayed. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.

There are now two different options to choose from and the current setting will have an '\*' next to it.



- Strong stations

The scan will only stop when a strong signal strength is received which should also result in a better audio quality.

It is possible that the station you are scanning for may be missed using this option.

- All stations

The scan will stop for every station it receives, even if the signal strength is poor.

2. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to and choose from the two options available. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to confirm.
3. Press and release the 'Menu' button to exit the Menu.

## Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

Note: You may wish to select 'Stereo' if you are listening to your Micro using headphones.

1. Press and hold the 'Menu' button on the Micro or on the remote control. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to <Audio setting>. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. There are now two different options of 'Forced mono' and 'Stereo allowed' and the current setting will have an "\*" next to it.
2. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to and choose from the two options available. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to confirm.
3. Press and release the 'Menu' button to exit the Menu.

## Storing an FM station preset

Your Micro can store up to 10 FM radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the FM radio station that you wish to preset.
2. Press and hold the ■ button on the Micro or the 'Prog.' button on the remote control for approximately 2 seconds until 'Preset Store' is displayed.
3. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to the preset location that you would like to store the radio station to (1-10).
4. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).






Note: If there is already an existing FM station stored under a preset, it will be over written when you store the new station.





## Tune to an FM station preset

In FM mode:

1. Press and release the  button on the Micro or the 'Prog.' button on the remote control. 'Preset Recall' is displayed together with the number of the current preset location.
2. Use the  or  buttons on the Micro or the  and  buttons on the remote control to move to the Preset location and station that you would like to listen to (1-10).
3. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The Micro will tune to that station and begin to play.

Note: If no FM station has been stored under the preset button, 'Preset Empty' will be displayed, then the Micro will revert to the previously selected radio station after a few seconds.

## FM display information

When listening to an FM station you can change the information that will appear on the second line of the display. There are several different types of information that are sent by the broadcaster.

- Radiotext (RT)  
This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
  - Program Type (PTY)  
Such as 'Rock', 'Pop', 'Talk' or 'News'
  - Station name or frequency  
Such as BBC R4 or 92-95MHz
  - Audio mode  
The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'. Please refer to 'Audio Mode' on page 15.
1. Repeatedly press and release the 'Menu' button on the Micro or on the remote control to cycle through the different information options.





# Using the CD Player

## CD mode

Check that your Micro is in CD mode. If you are not already in CD mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in CD mode (check the display). 'Load...', followed by 'NO DISC' will be displayed. If there is a CD in the compartment, after a short delay, the first track will begin to play and 'T-01' will be displayed.



## Play a CD

Your Micro will play Audio CDs as well as the following CD types:

CD-Recordable (CD-R)

CD-Rewritable (CD-RW)

It is not possible to play DVD or computer CDs.


1. Press and release the  button on the front of the Micro or on the remote control to open the CD drawer. 'OPEN' will be displayed.
2. Place an audio CD, label side up, onto the CD drawer. Please ensure that you place the CD into the recessed section and that it sits flat.
3. Press and release the  button on the front of the Micro or on the remote control to close the CD drawer. 'Load...' will be displayed and after a short delay the first track will begin to play. 'T-01' and the elapsed time of the track will be displayed.

Note: If there is no CD in the compartment, 'NO DISC' will be displayed.



## CD controls

You can use the following controls on your Micro in CD mode.

- Play

Press and release the  button on the Micro or on the remote control. The first track will begin to play and the track number and the elapsed time of the track will be displayed.

- Pause

Press and release the  button on the Micro or on the remote control. The elapsed time of the track will flash in pause mode. Press and release the  button again to continue to play the track/CD.

- Next track:

Press and release the  button on the Micro or the  button on the remote control.

- Previous track:

Press and release the  button on the Micro or the  button on the remote control.



- Fast forward within a track:  
Press and hold the ▲ up arrow button on the Micro or the ►► button on the remote control.
- Fast backward within a track:  
Press and hold the ▼ down button on the Micro or the ◀◀ button on the remote control.
- Stop  
Press and release the ■ button on the Micro or on the remote control.

## Programmed play mode

In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 20 tracks in total.

Note: To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. Press and release the 'Menu' button on the Micro or press and release the 'Prog.' button on the remote control to enter CD programmed play mode. 'P01 00' will be displayed.
2. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to go to the track number that you would like to program to play first. Press and release the 'Menu' button on the Micro or the 'Prog.' button on the remote control to confirm.
3. 'P02 00' will now be displayed and you can select the second track that you would like to programme. Continue to select each track as in Step 2 above, up to a total of 20 tracks. Press and release the 'Menu' button on the Micro or the 'Prog.' button on the remote control again to confirm the last track in the programmed play mode list.  
Note: If you try to store more than 20 tracks, 'PROG FULL' will be displayed.
4. Press and release the ►► button on the Micro or on the remote control to play the programmed tracks.
5. To exit programmed play mode, press and release the ■ button twice on the Micro or on the remote control.

## Repeat and Random modes

Press and release the 'Repeat' button on the remote control. 'RPI' is displayed. Continuously press and release the 'Repeat' button to cycle through the available options of :

- 'Repeat' (current track) 'RPI' is displayed.
- 'Repeat all' (all the tracks on the CD) 'ALL' is displayed.
- 'Random' (random play order) 'RDM' is displayed.

Press and release the 'Repeat' button one more time to turn off Repeat and Random modes.



## Remove the CD

Press and release the ▲ button on the front of the Micro or on the remote control to open the CD drawer. 'OPEN' will be displayed.

Put your fingers around the outside edge of the CD and lift off of the CD drawer.

Press and release the ▲ button on the front of the Micro or on the remote control to close the CD drawer. 'NO DISC' will be displayed.

Note: If you stop or pause playing a CD for 30 minutes, your Micro will go to Standby mode automatically.

### Caring for compact discs

- Do NOT touch the playback side of the CD.
- Do NOT attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

# Bluetooth mode

## Bluetooth (BT) mode

Check that your Micro is in Bluetooth mode. If you are not already in BT mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in BT mode (check the display). 'Search' will flash in the display. If a device has not been 'paired' or connected with your Micro 'Search' will continue to flash. If you have previously 'paired' or connected a device with your Micro, after a few seconds 'Connected' will be displayed.

## NFC touch point

Your Micro has an NFC touch point to enable quick and easy Bluetooth pairing with other NFC enabled devices.

In Bluetooth (BT) Mode:

1. When 'Search' is flashing in the display, just touch your other NFC enabled device to the NFC touch point logo on the front of your Micro. When pairing is complete 'Search' will stop flashing in the display and 'Connected' will be displayed.

Note: The Bluetooth name of your Micro is 'AS HiFi'.

2. To disconnect an NFC bluetooth connection, just touch your other NFC enabled device to the NFC touch point logo again. After disconnection, 'Search' will flash in the Micro display again.

## Connecting or 'Pairing' with your Micro

In Bluetooth (BT) Mode:

1. 'Search' will flash in the display.
2. On the device that you would like to connect to your Micro via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Micro will be displayed as 'AS HiFi'. Select the device name to begin pairing.
5. When pairing is complete 'Search' will stop flashing in the display and 'Connected' will be displayed.
6. Now that you have paired your device with the Micro, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.

7. Your device will remain paired with the Micro unless you decide to disconnect or 'unpair' it.

Note: If your device should become unpaired for any reason, follow the steps above to 'pair' it again.

You can press and release the **▶||** button on the Micro or the 'Pair' button on the remote control to restart the Bluetooth pairing process.

## Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Micro speakers. Adjust the volume on the connected device and/or your Micro.

Notes:

If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select 'AS HiFi' to reconnect.

Alternatively, you can press and release the 'Pair' button on the remote control to restart the Bluetooth pairing process (see page 20).

2. You can use the controls on your paired Bluetooth device as well as those on the front of the Micro or on the remote control when listening to music via Bluetooth.

Controls available on your Micro and the remote control are:

- Play/Pause  
**▶||** Press and release to play/pause.
- Skip back  
**▼** Press and release to skip back to the previous track.
- Skip forward  
**▲** Press and release to skip forward to the next track.

## Delete all paired Bluetooth device records from your Micro

1. Press and hold the **■** button on the Micro or on the remote control to delete all the Bluetooth device records from your Micro. 'Search' will then flash in the display. See page 20 to connect or 'pair' a new device with your Micro.

# Aux in mode

## Aux in mode

Check that your Micro is in Aux in mode. If you are not already in Aux in mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in Aux in mode (check the display).

Using a 3.5mm audio input connection cable (not included), Aux in allows for a quick and easy connection to an external sound source.

1. Connect one end of the 3.5mm audio connection cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket on the back of your Micro.
2. Press the 'Play' button on your external device to start playback through the Micro speakers..
3. To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Micro.

Note: It is recommended that you unplug the Audio cable from the Aux in socket after you have finished listening to your external device.

# Troubleshooting

If you are experiencing problems with your Micro, there are some quick and easy checks that you can do, which may help to solve the problem.

Problem	Solution
No sound / power:	<ul style="list-style-type: none"><li>• Adjust the volume using the rotary control on the Micro or the 'Vol +' and 'Vol -' buttons on the remote control.</li><li>• Check that the speakers are plugged fully home into the sockets on the back of the Micro.</li><li>• Check that the mains power wall socket is switched on and that the Micro is not in Standby mode.</li><li>• You may have headphones connected. Either use the headphones to listen to your Micro or unplug the headphones.</li><li>• Check that you are trying to use the function buttons for the mode that you are in.</li><li>• If you are using a Bluetooth connected device or an external sound source via Line in. Increase the volume on the secondary device and on the Micro.</li></ul>
Radio reception is poor:	<ul style="list-style-type: none"><li>• Fully extend the radio aerial to get the best reception and sound quality.</li><li>• Retune the radio station/s, see pages 10 and 14.</li><li>• Try moving your Micro to another location to see if reception improves.</li><li>• Check that you do not have other electrical equipment too close to your Micro, causing interference.</li><li>• Visit <a href="http://www.digitalradionow.com">www.digitalradionow.com</a> for information about DAB reception in your area.</li></ul>
The function buttons do not respond:	<ul style="list-style-type: none"><li>• Check that mains power wall socket is switched on and that the Micro is not in Standby mode.</li><li>• Check that you are trying to use the function buttons for the mode that you are in.</li><li>• Unplug the mains power. Leave the Micro for 3 minutes and then reconnect the power.</li></ul>



## Problem

CD does not play:

## Solution

- Check that you are in CD mode. Press and release the 'Mode' button on the Micro or on the remote control to change the mode (check the display).
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Micro or may skip or not rotate correctly.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode. Press and release the 'Mode' button on the Micro or on the remote control to change the mode (check the display).
- Ensure that you are within range of the Micro for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Micro and Bluetooth device away from other Bluetooth devices/electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.







## Factory reset

You can reset your Micro and restore all of the original factory settings.

Note: All of your settings, including the radio station list, any radio presets and paired Bluetooth device records will be deleted when you reset the Micro


In DAB mode:

1. Press and hold the 'Menu' button on the Micro or on the remote control. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to <System>. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
2. <Factory Reset> is displayed. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
3. 'Factory Reset? <No> Yes' is displayed. Use the ▲ or ▼ buttons on the Micro or the ►► and ◀◀ buttons on the remote control to move to 'Yes'. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
4. Your Micro will now reset, after a short delay, 'Waiting', followed by Scanning... will be displayed. The Micro will then automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed. When the scan is complete your Micro will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.




# General information



This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.



This symbol  indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available. Never throw batteries in a fire or attempt to open the outer casing

Argos hereby declares that this product is in compliance with the essential requirements and all other relevant provisions of Directive 1999/5/EC (R&TTE).

Argos Ltd

489-499 Avebury Boulevard

Milton Keynes

MK9 2NW





## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.

The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.,  
489-499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW



**CE**

May 15 / Issue:1

