

130.00 mm

challenge[®]

Instruction Manual-Please keep for future reference

1.6KW Halogen Heater



BW-610S

IMPORTANT SAFETY INSTRUCTIONS

We recommend this product is not used by children. Please read all instruction before use and save for future reference.

WARNING: In order to avoid overheating, do not cover the heater.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room in their own, unless constant supervision is provided.

- 1) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. If the plug is damaged, see plug replacement section.
- 2) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 3) Do not look at the heating lamps for prolonged periods as this may cause irritation or damage to the eyes and should be avoided. Do not look at the heating lamps for prolonged periods as this might cause irritation or damage to the eyes and should be avoided.
- 4) Do not cover the heater or obstruct the grilles.
- 5) Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- 6) Do not use outdoors.

1

- 7) Do not place the heater on carpets having a very deep pile.
- 8) Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains, furniture or combustible materials as this could create a fire hazard.
- 9) Do not position the heater in front of, or immediately below, a wall socket.
- 10) Do not insert objects into any opening on the heater as this may cause electric shock or overheating.
- 11) Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- 12) Always unplug the heater when not in use or when moving it from one location to another.
- 13) Do not operate or leave the heater running when it is unattended.
- 14) Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- 15) Prevent water from getting into the unit including when it is in storage.
- 16) **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- 17) If the heater is damaged or faulty a qualified service engineer must repair it.
- 18) Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 5 years shall only switch on the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 5 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- 19) **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

2

CONTENTS

Know Your Machine	4
Assembly Instruction	5
• Fitting the Feet	5
Operation	6
Maintenance	7
Specifications	7

3

KNOW YOUR MACHINE



1 x Base



Fittings

2 x Screw



4



ASSEMBLY INSTRUCTION

Fitting the Feet

1. To fit the stand, fit the heater on its back (figure 1).
2. Feed the mains lead and plug through the stand.
3. Slide the stand over the boss so the mains lead is in the cut-out in the stand.
4. Secure the stand to the base of the heater with two screws.
5. Put the mains cable in the cable grip. Place the mains cable into the cut-out in the stand (figure 2).
6. Return the heater to the upright position.

When moving the heater, make sure it is unplugged from the mains supply and use the grip handle.


For your safety, the heater has a safety tilt switch in the base, which switches the heater off if it is knocked over. For this to work the heater must be standing on a firm and level surface.

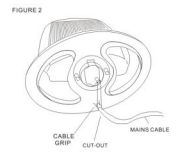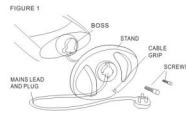

5

OPERATION

NOTE: It is normal when the heater is turned on for the first time or when turned on after having not been used for a long period of time it may emit some odour. This will disappear when the heater has been on for a short while.

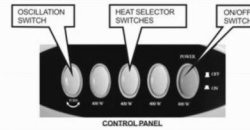

Turning On

The heater has four 400W lamps that in total can provide a heat output of 1600W. One of these is switched on when the orange colored POWER (on/off) switch is operated. Pressing this button again will turn the heater off.

Heat Selection

When the POWER switch is on, any or all of the three additional heat selector switches may be pressed to turn on the other lamps to provide an additional 400W, 800W or 1200W of heat output.

Note: - It is necessary for the POWER switch to be ON before the other lamps can be turned on.

Oscillation Mode

When the oscillation switch is pressed the main body of the heater will oscillate to distribute the heat around the room.

Note: - It is necessary for the POWER switch to be ON before the heater will oscillate.

WARNING: DO NOT move/store this heater immediately after switching off until it has completely cooled down. This can protect the tubes to avoid damage after use and prevent you from burning yourself and help to prolong tube life.

6

MAINTENANCE

Cleaning the Heater

Always unplug the heater from the wall socket and allow it to cool down before cleaning.

- Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

Storing the Heater

When the heater is not used for long periods of time it should be protected from dust and stored in clean dry place.

SPECIFICATIONS

CHALLENGE 1.6KW Halogen Heater

Model: BW-610S
Max. Power: 1600W
Power Range: 400/800/1200/1600W
Voltage: 220-240V~50Hz

Plug Replacement

If you need to replace the fitted plug


WARNING: Never connect live or neutral wires to the earth terminal of the plug. Only fit an approved 13 Amp BS1363A plug and the correct rated fuse. If in doubt, consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured as follows:
Blue-Neutral
Brown-Line
Yellow and Green-Earth

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal, which is marked with N or coloured Blue.
The wire which is coloured Brown must be connected to the terminal which is marked L or coloured Brown.
The wire which is coloured Yellow and Green must be connected to the terminal indicated E or Symbol.

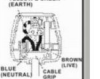

7



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be repaired, refunded or replaced free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by transport.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the accidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 490 Ansbury Boulevard
Central Milton Keynes
MK9 2NW



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH GENERAL HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

8

9

10

190.00 mm