

# COOKWORKS

Black blender

## INSTRUCTION MANUAL




## **IMPORTANT SAFETY INSTRUCTIONS**

- Always turn off and unplug the blender from the mains socket when not in use, before assembling, disassembling or cleaning.
- Ensure the blender is correctly assembled before operating.
- Avoid contacting moving parts.
- Never use this appliance to blend anything other than foods.
- Do not use the blender to blend or chop hot food or liquids as there is a danger of scalding or damage to the appliance.
- Under no circumstances fill the jug with hot liquid during operation or cleaning. Hot liquid can cause the jug to shatter, danger of injury.
- Always operate the blender with the blender jug lid and inner cap in place.

- Do not use attachments other than those provided with the blender.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
  - -staff kitchen areas in shops, offices and other working environments;
  - -by clients in hotels, motels and other residential type environments;

- - bed and breakfast type environments;
- - farm houses.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not allow children to use the blender without supervision.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Unplug from outlet when it is not in use, before putting on or taking off parts, before moving the appliance or adding the food , and before cleaning.

## OVERVIEW

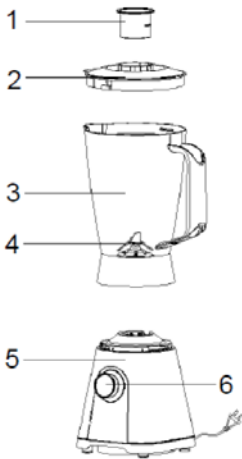

1. Measuring cup
2. Lid
3. Blender Jug
4. Blades
5. Motor base
6. 2-Speed control knob plus Pulse function

## BEFORE FIRST USE

Before using your blender for the first time, remove all packaging material and labels.

Wash the lid, measuring cup and blender jug in warm soapy water. Rinse and dry thoroughly.

Clean the motor base with a damp cloth. Dry thoroughly.

## OPERATION

Do not operate the blender continuously for periods longer than 2 minutes on any speed setting. Allow the blender to cool to the room temperature before commencing.

1. Place the motor base on a stable, level surface.
2. Mount the blender jug onto the motor base.
  - Make sure that the arrow on the blender jug is aligned with the unlock symbol on the motor base.



3. Turn the blender jug anticlockwise until it is fixed properly.
  - The arrow on the blender jug will be aligned with the lock symbol on the motor base.
4. Plug the blender into the mains socket. Your blender is now ready to be used.
5. Add all necessary ingredients to the blender jug. Do not overfill the jug.
  - Do not exceed 1.5 litres.
  - Cut all food into small cubes (2-3 cm square) to achieve an even result.

**NOTE:** If mixing hard and soft foods together, begin with the hard foods and then add soft foods. Blend until you have reached the desired consistency and even texture.

6. Place the lid onto the jug and then turn it clockwise until it locks in position.
  - Make sure that the spout cover on the lid aligns with the spout on the jug.
7. Line up the lugs on the measuring cup with the grooves in the lid. Push the measuring cup down and twist it anticlockwise to lock it into position.
  - During processing, you may add more ingredients by twisting and removing the measuring cup from the lid. Refit the measuring cup after adding ingredients.
  - It is recommended that the measuring cup can be used for drip feeding oil into the jug when making mayonnaise.
8. Switch on the blender by turning the speed control knob to the desired speed setting.
  - The speed can be changed at any time during the blending process.
  - The pulse function will stay on as long as the speed control knob is kept at the Pulse position.
  - It is suggested to start blending on speed 1 setting and then increase to speed 2 setting if necessary to blend until desired

consistency is reached.

**NOTE:**

During the blending process, ingredients may stick to the sides of the blender jug. To push the food back on the blades, turn off the blender. Remove the lid and use a plastic spatula (not supplied) to scrape down the sides of the jug. Replace lid before recommencing blending. If the blades become stuck, immediately turn off and unplug the blender from the mains socket. Remove the jug from the motor base and remove the lid. Use a plastic spatula to dislodge the ingredients from the blades. Replace lid before recommencing blending.

**Guide for using the blender**

<b>Processing Task</b>	<b>Food</b>	<b>Suggested Speed</b>	<b>Suggested Processing Procedure</b>
<b>Aerating</b>	Milkshakes, Smoothies	2, Pulse	Use chilled milk. Blend until desired consistency is achieved. The maximum quantity of ingredients: 600g The maximum processing time: 30 seconds
<b>Mixing</b>	Batters, Cakes	1, 2, Pulse	Process ingredients until just combined. <b>DO NOT OVER PROCESS.</b> The maximum quantity of ingredients: 900g The maximum processing time: 90 seconds
<b>Pureeing</b>		2, Pulse	Blend until smooth. <b>Note:</b> Ensure that stones are removed from fruits as these

	<p style="text-align: center;">Soups, Vegetables, Fruits</p>		<p>can cause harm to the blades.</p> <p>The maximum quantity of ingredients: 1500g (During pureeing, the recommended ratio of ingredients to water is 2:3. The maximum quantity of ingredients and water is 600g and 900ml respectively.)</p> <p>The maximum processing time: 90 seconds</p>
--	--	--	--

**ATTENTION!** The processing times will vary according to the quantity of ingredients in the jug.

9. To stop the blending, turn the speed control knob to the 0 position.
10. After use, ensure the blender is switched off by turning the speed control dial to the 0 position and then unplug the blender from the mains socket.

## **CLEANING AND MAINTENANCE**

Warning: Always turn off and unplug the appliance before cleaning.

- Remove the jug from the motor base.
- Remove the lid and measuring cup from the jug.
- Wash them in warm soapy water. Rinse them thoroughly.

- Clean the motor base with a damp cloth.
- DO NOT immerse the motor base in water.
- Dry the entire appliance with a dry cloth before replacing.
- Do not use chemical cleaners or abrasives product for cleaning.



# SPECIFICATIONS

Ratings: 220V-240V~ 50Hz


400W

## Connection to Power

- Before connecting, check that the voltage indicated on the appliance corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- **WARNING: This appliance must be earthed.** This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

**For your own safety read the following instructions carefully before attempting to connect this unit to the mains.**

You should only plug the appliance into a 220V-240V AC, 50Hz supply.

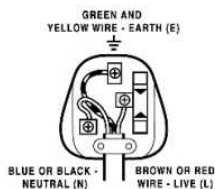

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL  
BROWN = LIVE  
GREEN + YELLOW = EARTH

Connecting it to other power sources may damage the appliance.

## IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



**Caution**  
**To prevent electric shock disconnect from the mains before removing the cover**

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. ( $\perp$ ).

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

## Disposal Information



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.



## Guarantee

This product is guaranteed against manufacturing defects for a period of

1 year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd  
489 – 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW