


COOKWORKS

SIGNATURE

4 SLICE TOASTER

INSTRUCTION MANUAL



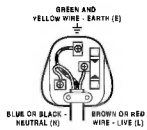

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



Caution
To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. (⏚).

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

IMPORTANT SAFETY WARNINGS

- Read all the instructions carefully before using.
- To protect against electric shock, do not immerse the toaster in water or any other liquid.
- Never leave the toaster unattended while in use.
- Never insert metal objects into toasting slots to avoid hazard.
- Never attempt to remove bread that has become jammed in the toasting slots without first removing plug from socket.
- Extra care and supervision must be taken when using the appliance near children or when being used by children.
- Keep the power cord away from hot surface.
- Bread may burn. Therefore toaster must not be used near or below curtains and other combustible materials. They must be watched.
- Never attempt to touch the internal parts with knife or sharp tool as it may cause damage to heating elements.
- If your toaster is dropped, it should not be used until examined by an authorised service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The toaster is intended for household use only.
- Please retain this instruction manual for further reference.

PRODUCT DESCRIPTION

- A – housing
- B – toasting lever
- C – toasting slot
- D – browning selection knob
- E – cancel button
- F – reheat button
- G – defrost button
- H – crumb tray



BEFORE USING YOUR TOASTER

Before using your toaster for the first time. Set the browning knob at maximum setting and activate the toaster without bread for two times. This will prevent the unpleasant smells when toasting bread.

USING YOUR TOASTER

1. Set the browning knob at a desired setting for your bread type.
2. Setting 1 for lightly toasted bread and setting 7 for dark toasted bread.
3. Put slice of bread into the toasting slot. Your toaster can toast up to four slices of bread.
4. Press down the control lever and toasting process begins.
5. The bread will pop up when the toasting is finished and the toaster will be switched off automatically.
6. If the bread starts smoke before it has popped up, stop the toaster by pressing the Cancel button.

Press the Cancel button any time if you wish to terminate the toasting process.

High lift function

After the bread completed toast, lift toasting lever button, the bread easy to take after lift.

Reheat button:

1. Insert two or four slices bread
2. Press the bread carriage lever down until it locks into position.
3. Press the reheat button, the LED will illuminate next to the reheat button.
4. When the cycle is complete, the bread carriage lever will raise the toasted item.
5. If you wish to stop the reheat before it is completed, press the cancel button.

Defrost button:

NOTE: The defrost button is designed to first defrost and then toast the bread, extending the toasting cycle.

1. Turn the browning control knob to the desired toasting level.
2. Press the bread carriage lever until it locks into position.
3. Press the defrost button, the LED next to the defrost button will illuminate.
4. When the cycle is complete, the bread carriage lever will raise the toasted item.
5. If you wish to stop the defrost before it is completed, press the cancel button.

DO NOT LEAVE UNATTENDED WHILE IN USE

HINTS:

- If the toast is too dark, use a lower toast setting.
- Dry bread will require a lower setting than normal.
- Thick bread, fresh or whole wheat bread will require a higher setting than normal.
- Remove any loose fruit before toasting to prevent pieces falling into the toaster or sticking to the heating element and cause damage.
- Never force bread into the toasting slot. Bread should fit freely between the bread guards.
- Uneven toasting is usually due to bread slices of uneven thickness.

CLEANING

1. Make sure the plug is removed and the appliance is completely cooled down before cleaning.
2. Crumbs can be easily removed by sliding out the crumb tray from the bottom of the toaster.
3. Clean the outer surface with a soft damp cloth only.
4. Always ensure the toaster is completely cooled down before storing.

CONNECTION TO POWER

- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 230V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW