

# COOKWORKS

## GLASS BLENDER INSTRUCTION MANUAL



CE

**XJ-10402**


## IMPORTANT SAFETY WARNINGS

- **READ ALL THE INSTRUCTIONS CAREFULLY BEFORE USING AND PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FURTHER REFERENCE.**
- Allow all liquids to cool to room temperature before placing in the blender.
- To protect against the risk of electric shock **DO NOT IMMERS** the appliance, cord set or the plug in water or any other liquid.
- **Do not leave the appliance unattended.** Do not use the appliance for other than its intended use.
- **WARNING: DO NOT BLEND HOT LIQUIDS.**
- This appliance is designed for indoor and intended domestic use only. **Do not use outdoors.**
- The appliance must always be unplugged when not in use and before cleaning or maintenance.
- Avoiding contacting moving parts. Keep hands, hair, clothing as well as spatulas and other utensils away during operation to prevent injury and/ or damage to the appliance.
- **Blender blades are sharp. Handle it carefully to avoid cuts and injuries.**
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used only when the blender is not running.
- Ensure switch off the unit after each use. Make sure the motor stops completely before disassembled.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electrical shock or injury.
- Never blend more than the maximum capacity stated in the recommended speed chart.
- To ensure long life of your blender, do not run it for longer than 60

seconds. Stop and cool for 15 minutes between blending cycles.

- Misuse of your blender can result in injury.
- Do not allow cord to hang over edge of table or counter, or touch hot surfaces.
- Do not place unit on or near a gas or electric burner or a heated oven.
- Do not use appliance for mixing paints or other flammable liquids or in a location contaminated with flammable gases or vapours.
- To clean, wipe exterior with a damp cloth.
- Do not use abrasive cleaners or scouring pad on appliance.
- Do not operate any appliance with a damaged cord or plug, or if appliance malfunctions or is damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- **Children should be supervised to ensure that they do not play with the appliance. Close supervision is necessary when any appliance is operated near children.**
- This appliance is intended for household use ONLY and not for commercial or industrial use.

# KNOW YOUR APPLIANCE

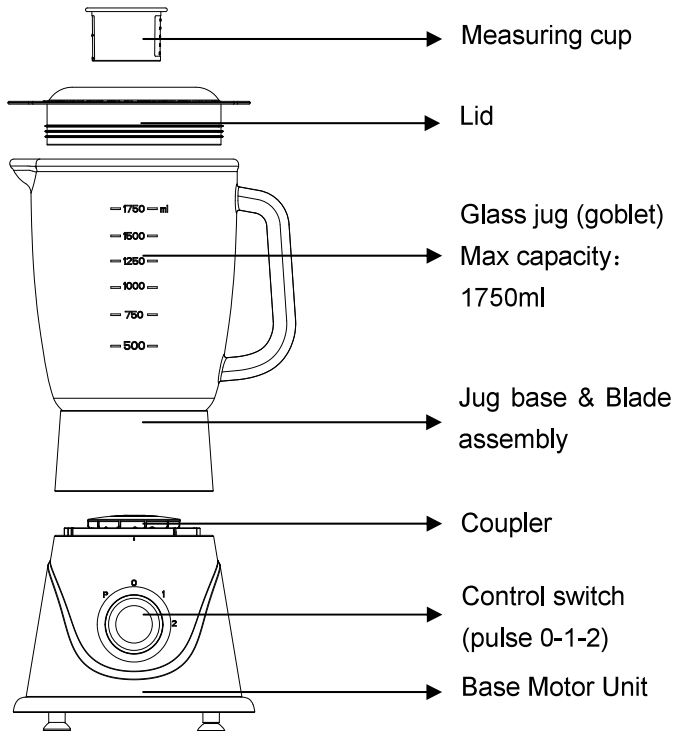


**WARNING:** The Jug Base and Blade Assembly are permanently fixed to the glass jug at ex-factory. DO NOT ATTEMPT TO REMOVE THE JUG BASE FROM THE GLASS JUG. It would damage the product permanently.

## SAFETY LOCK SYSTEM


This appliance is equipped with a safety lock system which will prevent the motor starting without proper installation of the goblet.

To activate the system, you have to carry out the following:

- Check the “unlock” position of the alignment indicators mark.
- Place the goblet unit onto the motor housing correctly.
- Turn the goblet clockwise until the alignment marks on the base of the goblet and on the motor housing are in line at the “LOCK” position.
- The goblet unit must be correctly engaged onto the motor unit to ensure the safety lock system is activated.

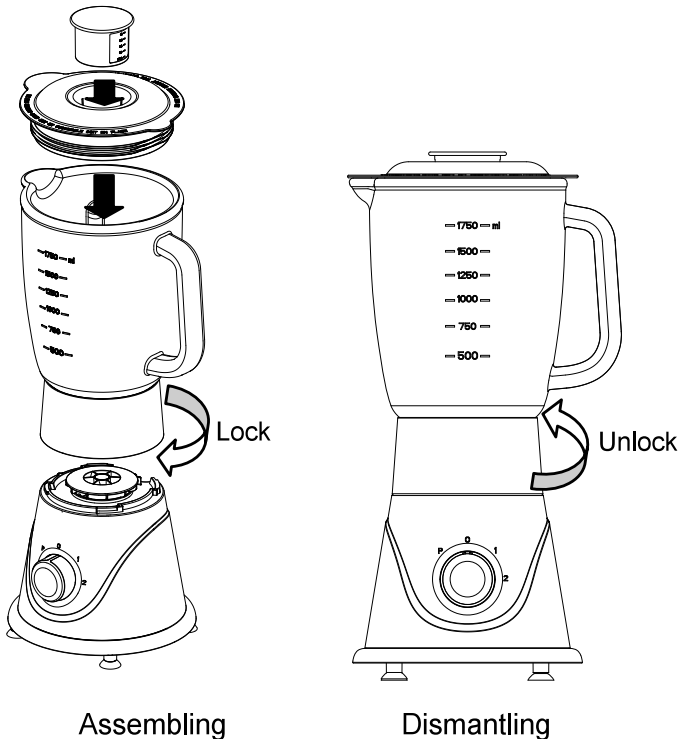

## ALIGNMENT INDICATORS

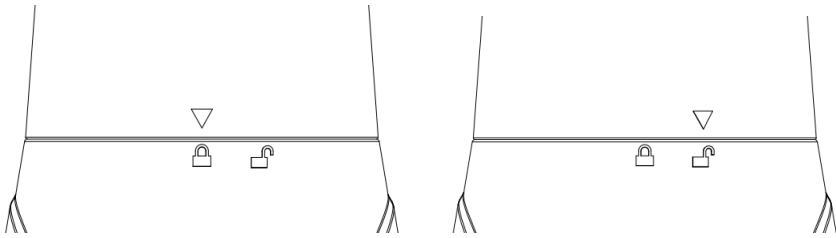

**LOCK** ← → **UNLOCK**

Turn clockwise to lock the goblet onto the motor unit

## BEFORE USING FOR THE FIRST TIME

1. Use your blender for soups, sauces, drinks, pâtés, mayonnaise, dressings etc.
2. **WARNING: This appliance is NOT designed for blending foods without liquid. It must be operated with liquids added.**
3. Check that the voltage of the appliance corresponds to the voltage at your house.
4. Wash the jug in warm soapy water and rinse well.
5. The jug assembly should be firmly in place and locked on motor base before operating.
6. Be sure the unit is “off” and plug the cord into a standard electrical outlet.
7. **WARNING: The Jug base and blade assembly are permanently fixed to the glass jug. DO NOT ATTEMPT TO REMOVE THE BASE FROM THE GLASS JUG.**

## Recommended Speed Chart

speed	usage/food items	max. quantity
<b>1</b>	Frothing milk	1 litre
	Light mixes e.g. batters, milkshakes, scrambled egg	1 litre
<b>2</b>	Soups & drinks Thicker mixes e.g. pâtés	1.5 litres
	Mayonnaise	3 eggs + 450ml oil
	Smoothie drinks Place the fresh fruit and liquid ingredients in first (includes yoghurt, milk and fruit juices) Then add ice or frozen ingredients (includes frozen fruit, ice or ice cream)	800ml liquid
<b>pulse</b>	Operates the motor in a start/stop action. The pulse will operate for as long as it is held in position.  Ice crushing - operate the pulse in short bursts until crushed to the desired consistency.	6 cubes

## OPERATION GUIDE

1. Turn the switch to off position "0". Plug the power cord into a suitable socket. To avoid the contents from overflowing use the capacity guide on the goblet wall. Do not exceed maximum capacity stated in the recommended speed chart. **DO NOT BLEND HOT LIQUIDS.** Place the lid securely onto the goblet. Turn the blender switch to position 1 or 2 for a few seconds. Switch back to "0". Check the food.
2. Use the pulse setting for greater control in short blending jobs, switch must be held in pulse position for blender to run. To prevent over blending of foods, you can use the pulse option. Blender will stop as soon as switch is released.
3. Ingredients, liquid can be added while blending through the filler cap hole or you can remove the lid insert to allow dry foods to be added through the larger hole. Take care not to overload the cutter blades. Ensure that the food to be blended is not too thick or frozen.

### NOTE:

- **DO NOT OPERATE THE BLENDER WITHOUT THE LID AND THE FILLTER CAP IN PLACE. NEVER IMMERSSE THE BASE UNIT IN WATER.**
- **TO ENSURE LONG LIFE OF YOUR BLENDER, DO NOT RUN IT FOR LONGER THAN 60 SECONDS. STOP AND COOL FOR 15 MINUTES BETWEEN BLEDNING CYCLES.**
- **TO AVOID MACHINE OVER-HEATING, SWITCH OFF AS SOON AS YOU'VE GOT THE RIGHT CONSISTENCY.**



## IMPORTANT HINTS

- **TO ENSURE LONG LIFE OF YOUR BLENDER, DO NOT RUN IT FOR LONGER THAN 60 SECONDS. STOP AND COOL FOR 15 MINUTES BETWEEN BLENDING CYCLES.**
- Switch off as soon as you've got the right consistency.
- The machine won't work if the jug is fitted incorrectly to the motor unit.
- The lid must be in place when blending.
- The lid must be fitted securely to ensure no liquid spilling out from the spout whiling blending,
- Switch off before you scrape food inside of the jug with a long handled spatula. **SHARP BLADE. NEVER PUT YOUR HAND INTO AN OPERATING JUG.**
- When making mayonnaise, put all the ingredients, except the oil, into the blender. Remove the filler cap. Then, with the appliance running, add the oil slowly through the hole in the lid.
- Thick mixtures, e.g. pâtés and dips, may need scraping down. If the mixture is difficult to process, add more liquid.
- **Do not switch on your blender if the jug is empty. The cutter bearing would be damaged if run at "No Load".**
- Cut cooked meats into one centimeter before adding into jug. Please do not add raw meats.
- Do not use the blender jug for storing beverages or foods.
- For best circulation of foods that are to be blended with liquid, pour the liquid into the Jug first, then add solids.
- Some of the tasks that cannot be performed efficiently with a Blender are: beating egg whites, whipping cream, mashing potatoes, grinding meats, mixing dough, and extracting juices from fruits/vegetables.
- The following items should never be placed in the unit as they may cause damage: dried spices and herbs (ground alone), bones, large pieces of solidly frozen foods.

## CLEANING

- **Always switch off, unplug and dismantle before cleaning.**
- Never let the power unit, cord or plug get wet.
- Don't wash any parts in your dishwasher.
- The pulse button allows you to clean the blender and the blade easily, rapidly and in complete safety.
- Pour a little lukewarm water into the jug.
- Turn to pulse function for a few seconds.
- Remove the jug and rinse under running water.
- Wipe and clean the motor housing with a damp cloth. Never immerse in water.
- **Don't touch the sharp blades** – brush them clean using hot soapy water, then rinse thoroughly under the tap. Don't immerse the blade unit in water.
- Do not use rough scouring pads or cleansers on parts or finish.

## STORING


The appliance should not be stored while hot or plugged in. When not in use, allow the appliance to cool, then put it back into the box and store out of reach of children in safe, dry place.

## CONNECTION TO POWER

- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

**For your own safety read the following instructions carefully before attempting to connect this unit to the mains.**

You should only plug the appliance into a 220V-240V AC, 50-60Hz supply. Connecting it to other power sources may damage the appliance.

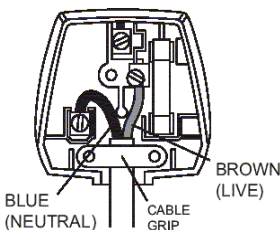

**The wires in this mains lead are coloured in accordance with the following code:**

**BLUE = NEUTRAL  
BROWN = LIVE**

# IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



**Caution : To prevent electric shock disconnect from the mains before removing the cover**

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- **No connection is to be made to the earth terminal of the plug.**

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

## DISPOSAL INFORMATION



THIS MARKING INDICATES THAT THIS PRODUCT SHOULD NOT BE DISPOSED WITH OTHER HOUSEHOLD WASTES THROUGHOUT THE EU. TO PREVENT POSSIBLE HARM TO THE ENVIRONMENT OR HUMAN HEALTH FROM UNCONTROLLED WASTE DISPOSAL, RECYCLE IT RESPONSIBLY TO PROMOTE THE SUSTAINABLE REUSE OF MATERIAL RESOURCES. TO RETURN YOUR USED DEVICE, PLEASE USE THE RETURN AND COLLECTION SYSTEMS OR CONTACT THE RETAILER WHERE THE PRODUCT WAS PURCHASED. THEY CAN TAKE THIS PRODUCT FOR ENVIRONMENTAL SAFE RECYCLING.

## **GUARANTEE**

This product is guaranteed against manufacturing defects for a period of 1 year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store.

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd  
489 – 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW