# REMINGTON®

**Groom Kit** 



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.



#### ♠ IMPORTANT SAFETY INSTRUCTIONS

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- An appliance should never be left unattended when plugged into a power outlet, except when charging.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- Make sure the power plug and cord do not get wet.
- Do not plug or unplug the appliance with wet hands. 5
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 7 Do not twist or kink the cable, or wrap it round the appliance.
- Store the product at a temperature between 15°C and 35°C.
- Do not use attachments other than those we supply.
- 10 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.



- 11 Always remember to turn on the groomer before you insert it into your nose or ear to avoid injury.
- 12 This appliance should be supplied with approved safety isolating adaptors VD040010J / HK28G-3.6-100 (Europe), BD040010J / HK28B-3.6-100 (UK) with the output capacity of 3.6-4Vdc: 100mA
- 13 This appliance is not intended for commercial or salon use.



### KEY FEATURES

- 1 On/off switch
- 2 Groomer
- 3 Wide trimmer
- 4 Detail trimmer
- 5 Minifoil shaver
- 6 Nose, ear, eyebrow trimmer
- 7 Attachment guide combs
- 8 Adjustable comb for wide trimmer
- 9 Charging indicator
- 10 Stand (not shown)
- 11 Adaptor (not shown)

#### GETTING STARTED

#### ★ CHARGING YOUR APPLIANCE

- Before using your groomer for the first time, charge for 14-16 hours.
- Ensure the product is switched off.
- Connect the adaptor to the product and then to the mains.

#### ★ CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED will illuminate
Fully charged	LED will remain illuminated

- Run time from fully charged is up to 40 minutes.
- Your appliance cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- Fully recharge your appliance for 16 hours when you would like to use it
  again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

## ♠ INSTRUCTIONS FOR USE

- ❖ Please note that this product is for cordless use only and cannot be used when connected to the mains.
- Switch the product on by sliding up the on/off switch.

#### ★ TO ATTACH AND REMOVE THE TRIMMING ATTACHMENTS

- Note: Always ensure the groomer is switched off before changing any attachments.
- To attach place the desired trimming head on top of the groomer and rotate clockwise to lock into place
- To remove rotate the trimmer head anti-clockwise until it unlocks and then lift off the groomer.

# ☆ ATTACHING AND REMOVING FIXED GUIDE COMBS ON THE WIDE TRIMMER BLADE

#### ★ To Attach

With the trimmer blade facing away from you, slide the guide comb on top
of the trimmer blade and click into position.

#### ★ To Remove

 With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

#### ★ ATTACHING AND REMOVING ADJUSTABLE COMB ON THE WIDE TRIMMER BI ADE

- To attach line up the comb rails and slot on the groomer until firmly secured.
- Pressing the adjustment button on the back of the comb will alter the cutting length increment, this is indicated on the comb.
- To remove press and hold the adjustment button and push the comb up and off the groomer.

#### **★** BEFORE YOU BEGIN

- · Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

#### ★ TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the wide trimmer blade.
- Place either the adjustable comb or a fixed comb on the trimmer blade, select the desired length and switch on.
- Start trimming under the chin, following the jawbone line. Work towards the ear and upper beard line using an upward motion.

#### ★ TO TRIM EDGE OF BEARD OR MOUSTACHE

- Attach the wide trimmer blade.
- Hold the groomer with the cutting blade facing you, perpendicular to your skin.
- Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/ moustache line.

#### ★ TO TRIM SIDEBURNS

- Hold the groomer with the cutting blade facing you.
- Select the desired length on the adjustable comb or select the desired guide comb.

 Move the groomer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

#### ★ TRIMMING THE NAPE OF YOUR NECK

- · Attach the trimmer blade.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the
  cutting unit facing up, and move the trimmer up the length of the neck until
  it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

#### ★ USING THE MINI FOIL SHAVER

- · Hold the groomer so the mini foil shaver gently touches your face.
- Use short, well-controlled movements to shave around your beard/ moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.
- Note: The mini foil shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

#### **★** TO REMOVE HAIR FROM NOSF AND FAR

- · Attach the nose, ear, eyebrow attachment.
- Insert the groomer's cutting unit gently into the nostril or ear.
- Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

#### **★ TO REMOVE HAIR FROM FYERROWS**

- · Attach the nose, ear, eyebrow attachment.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely lower onto the skin and move over desired area.

#### ★ USING THE DETAIL ATTACHMENT

- Hold the groomer with the surface (back side) of the blade guides against the skin.
- Do not use the detail attachment head with the blades perpendicular to the skin.

- Use motions similar to using a wet blade to provide the closest trim.
- Note: The detail trimmer has Trim Shave Technology which trims hair to 0.2mm giving you that shaven look without the irritation wet blade shaving causes.
- The plastic in front of the blades helps to stretch the skin to achieve the close cut.

#### **➡** TIPS FOR BEST RESULTS

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.
- Since all hairs do not grow in the same direction, you may want to try
  different trimming positions (i.e. upwards, downwards or across) for better
  results.

#### CARE FOR YOUR GROOMER

 Care for your product to ensure a long lasting performance. We recommend that you clean your groomer after each use.

#### ★ AFTER EACH USE

- Brush any accumulated hairs from the groomer and attachment heads.
- The easiest and most hygienic way to clean the groomer is by detaching the head from the groomer body and rinsing the head with warm water.
- · The groomer body should not be rinsed.
- Place one or two drops of cutter oil or sewing machine oil on the blades.
- Turn the groomer on to distribute the oil evenly, wipe off any excess oil.

# **BATTERY REMOVAL**

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- · Ensure the trimmer is discharged of all power.
- Remove the attachment head from the appliance.
- · Using a small screwdriver, pry off the front housing carefully.
- · Open the rear housing to expose the printed circuit board.
- Cut the wires which connect the battery to the circuit board and remove the battery.
- · The battery is to be disposed of safely.

#### Æ ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



#### SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

#### SERVICE CENTRE

#### **United Kingdom**

Tel 0800 212 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 OHS, UK

www.reminaton.co.uk

#### Ireland

Tel 142 951 40

Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

# **Ø** REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery. Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

# Model No. PG6130

15/UK/ PG6130 T22-0003103 Version 02 /15
Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS

www.remington.co.uk © 2015 SBI