

Bluetooth Bookshelf

B100



instruction manual



IMPORTANT SAFETY INFORMATION



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with a slightly damp cloth.

Do not block any ventilation openings.

Install in accordance with the manufacturer's instructions.

Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

To reduce the risk of fire or electrical shock, do not do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

No naked flame sources such as candles should be placed on the product.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

ELECTRICAL INFORMATION

Use only power supplies listed in the instruction.

Mains Supply: The mains operating voltage of this unit is marked on a rating plate on the back of the unit. The means of disconnecting this appliance from the mains supply is the mains plug. This should be unobstructed and readily operable at all times.



This appliance complies with the following EU directives: 2006/95/EC Low voltage directive, 2004/108/EC EMC directive, 2002/96/EC WEEE directive.



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the

recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

CONTENTS

Safety information.....	2
Accessories.....	3
Location.....	3
Mains plug information.....	3
Panels instruction.....	4
Connect the speaker.....	4
Connect the power.....	4
General operation.....	5
Bluetooth operation.....	5
USB charging port.....	5
External input.....	5
Trouble shooting.....	6
Specifications.....	6
Care and maintenance.....	6
Contact details.....	6
Guarantee	

PRELIMINARIES

ACCESSORIES

- * Audio cable
- * Speaker cable
- * Power cable
- * Instruction manual

LOCATION

Place the unit on a dry stable surface away from heat and damp and where it is unlikely to fall or be knocked over.

 


NOTE: This unit is designed to enter **STANDBY** mode automatically after **15 MINUTES** (approximately) of inactivity.

Press the **STANDBY** button to wake the unit.


UK MAINS PLUG INFORMATION

For your convenience a mains plug with a fuse (3 Amp) has been fitted to this appliance. For your safety, please observe the following information.

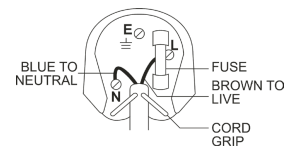


- The unit is designed to operate on AC mains supply 220-240 volts, 50Hz.
- The wires in the mains lead are colored in accordance with the following code:
BLUE - NEUTRAL
BROWN - LIVE
- Under no circumstances should the Neutral or Live wires be connected to the " E " (Earth) terminal.

PANELS INSTRUCTION

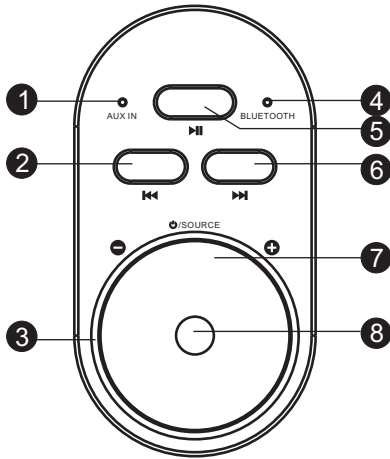

1. AUX IN INDICATOR
2. PREVIOUS
3. WORKING INDICATOR
4. BLUETOOTH INDICATOR
5. PLAY/PAUSE
6. NEXT
7. VOLUME KNOB
8. STANDBY/SOURCE

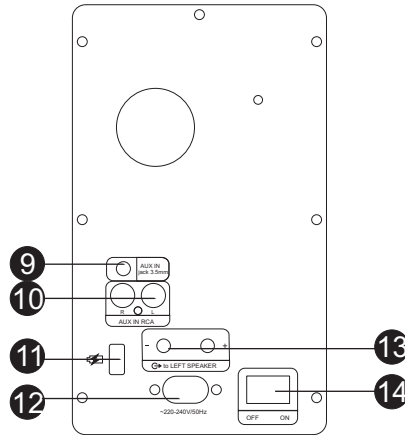


9. AUX IN 3.5mm
10. AUX IN RCA
11. USB PORT
12. POWER SUPPLY
13. SPEAKER CONNECTORS
14. POWER ON/OFF

PREPARATION FOR USE

SPEAKERS

Placing & connecting the speakers

- Unwrap the speaker wires.
- Place the speakers preferably at the same height, and with at least 150mm between each speaker.
- Connect the LEFT speaker plugs to the rear of the RIGHT speaker according to the "-" "+" symbols.

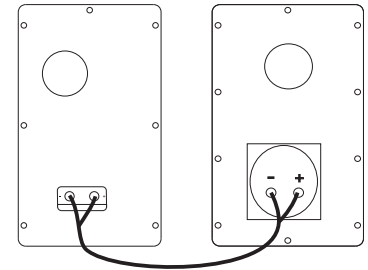

CONNECTING MAINS POWER

- Check the voltage marked on the rear rating plate is the same as the voltage in your area.
- Connect the mains plug to the wall socket and switch the mains power **ON**.
- Press the **POWER ON/OFF** button on the main speaker to power **ON** the unit.

GENERAL OPERATION

Standby mode

Press and hold the **STANDBY** button for 3 seconds to put the system into standby mode. To resume the normal operation, press this button again for 3s.

Note: While in working condition, it lights blue.

Mode selection

Press the **SOURCE** button to switch to different modes.

Adjust the volume

Rotate the **VOLUME KNOB** to adjust the volume to the comfortable level.

Play/Pause

Press the **PLAY/PAUSE** button to pause the playing, press again to resume.

Previous & Next

Press the **PREVIOUS/NEXT** button to skip to the previous or next track.

BLUETOOTH OPERATION

Enter the Bluetooth mode

Press the **SOURCE** button to enter the Bluetooth mode, the indicator flashes green.

Pairing the devices

1. Start the Bluetooth function on the device such as the mobile phone.
2. Place the device into Bluetooth search mode. The phone will begin searching for the speaker.
3. Select the **B100** from the search list on the phone.
4. If prompted, input 0000 as password.
5. When connecting successfully, the indicator lights green steadily.
6. Then you could select the track you want to play.

USB CHARGING PORT

The **USB port** on the rear panel of the speaker is for USB charging only, nor for playback via USB.

Connect the USB port with any devices which are charged through USB connector.

EXTERNAL INPUT

Connect the external devices

Use the audio cable to connect the external device to the **AUX IN jack 3.5mm** or the **AUX IN RCA** sockets on the rear of the unit.


Enter the AUX IN mode

Press the **SOURCE** button to enter the **AUX IN** mode. The Line in indicator lights orange.

Adjust the volume

You can only rotate the **VOLUME KNOB** on the speaker to adjust the volume level, but control the playback by your external audio device.

Note: If the **AUX IN jack 3.5mm** and the **AUX IN RCA** sockets are connected at the same time, the unit will prefer to play the audio with the Aux In jack 3.5mm.

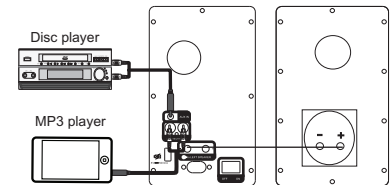

TROUBLE SHOOTING

If you're experiencing problem with your apparatus, there are some quick and easy checks you can do to help to solve problems.

- **The unit does not work.**

Correctly plug the mains into the power supply?
Does the socket that is being used have power?
Power off the unit then power on again.

- **No sound from speakers.**

Is the volume control set at minimum?

- **Bluetooth not connected.**

Check if the BT device is in searched mode.
Disconnect the paired device and connect again.
Turn up the volume of the connected device.
If the device is out of the Bluetooth range (10m), please put the device within the Bluetooth range and manually make connection again if the devices are disconnected.

SPECIFICATIONS

Supply Voltage, Mains.....220-240V~50Hz
Max. Power Consumption.....40W
Bluetooth range.....10 meters

CARE AND MAINTENANCE

AFTER USING YOUR SPEAKER

- Set to Standby.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).
- Avoid leaving batteries fitted if you leave the radio unattended for long periods. They may leak and damage the speaker.

CARE AND CLEANING

All care and cleaning operations should be carried out with the unit unplugged from the mains power. Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

CONTACT DETAILS

In the unlikely event of difficulties with your appliance, please contact the retailer if the machine is still under guarantee. Customer helpline: 0870 600 3030



Through the process of continuous improvement, Argos Limited reserves the right to change or alter specifications without prior notice.

Product Guarantee: This product is guaranteed against manufacturing defects for a period of

1 Year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorized modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store.

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Limited
489 - 499 Avebury Boulevard
Central Milton Keynes MK9 2NW