





HOOVER



USER MANUAL

PRINTED IN P.R.C.
48014372/01

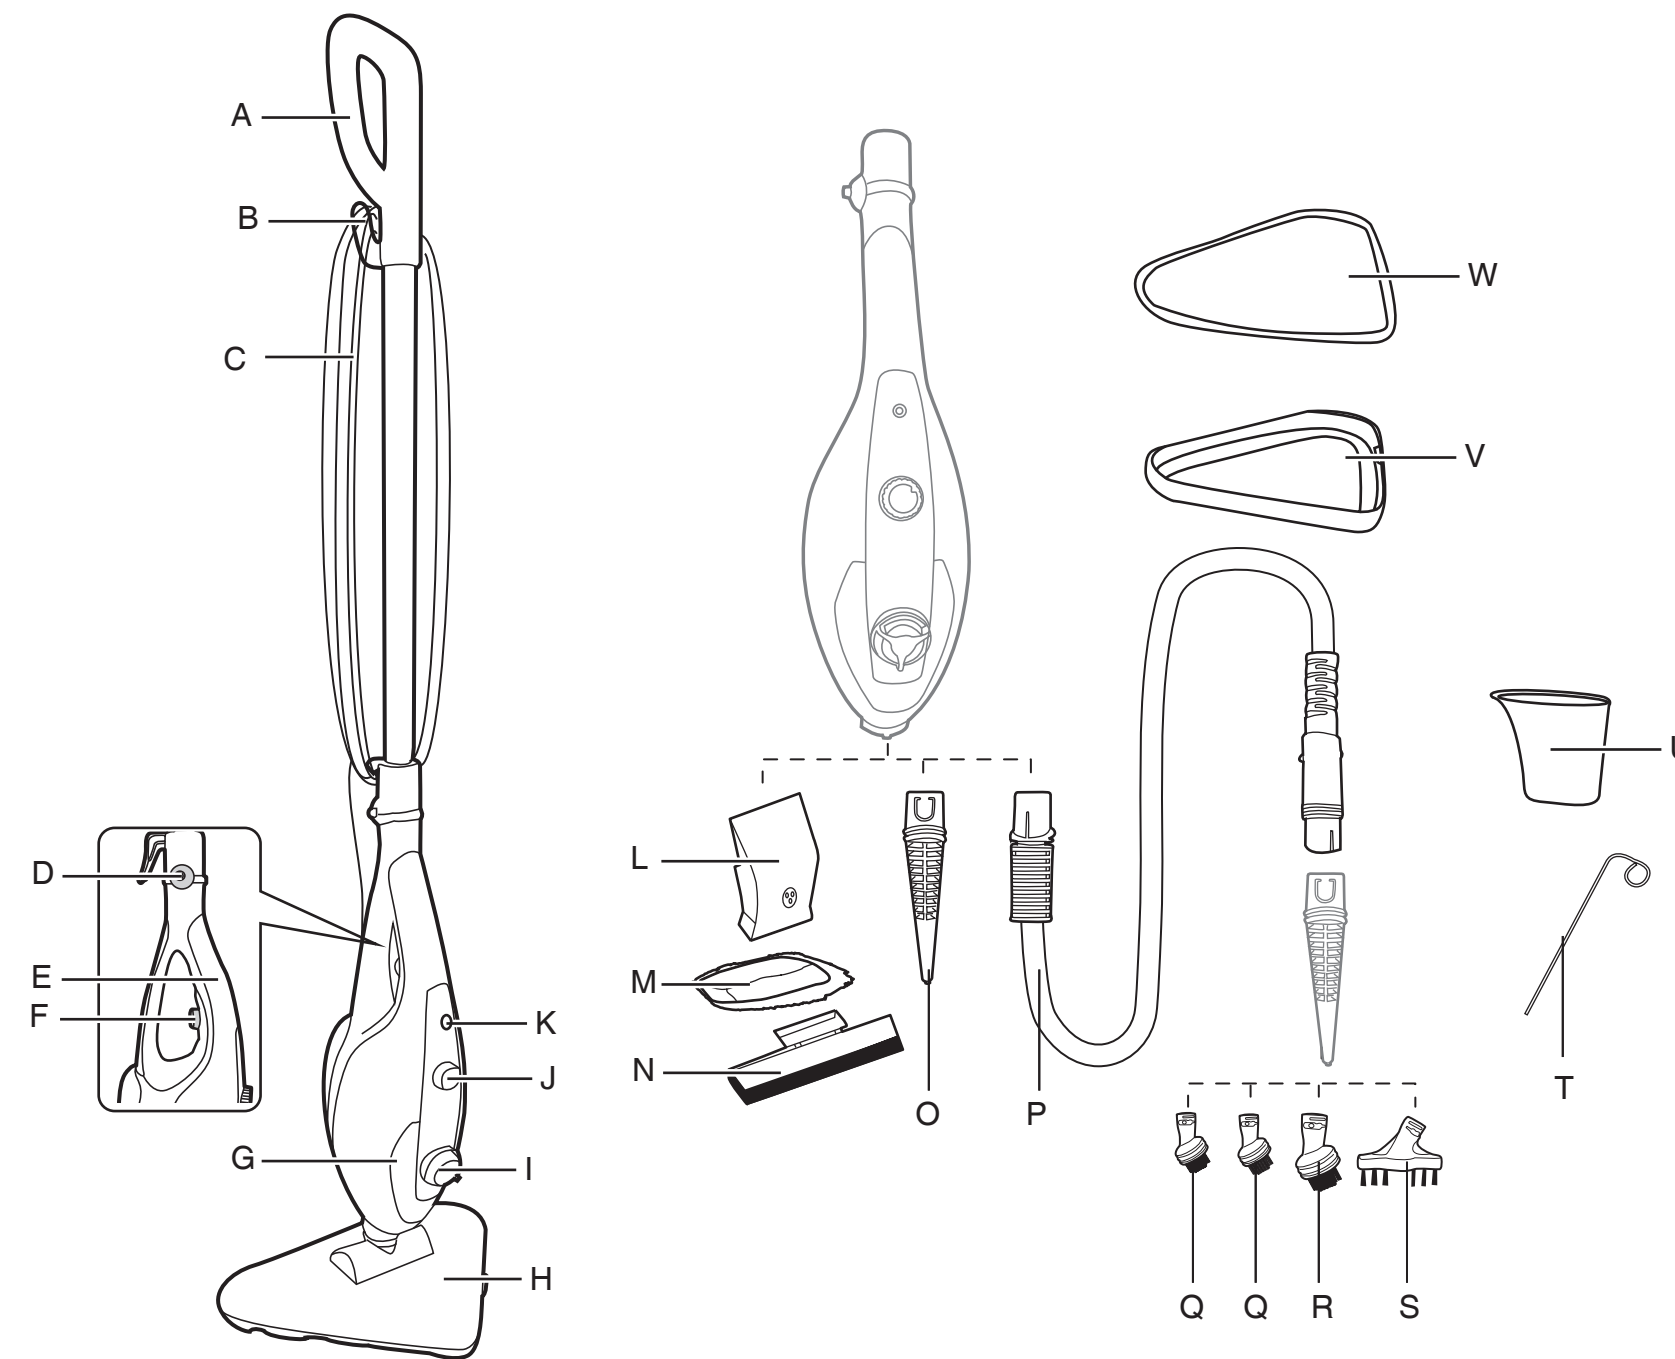

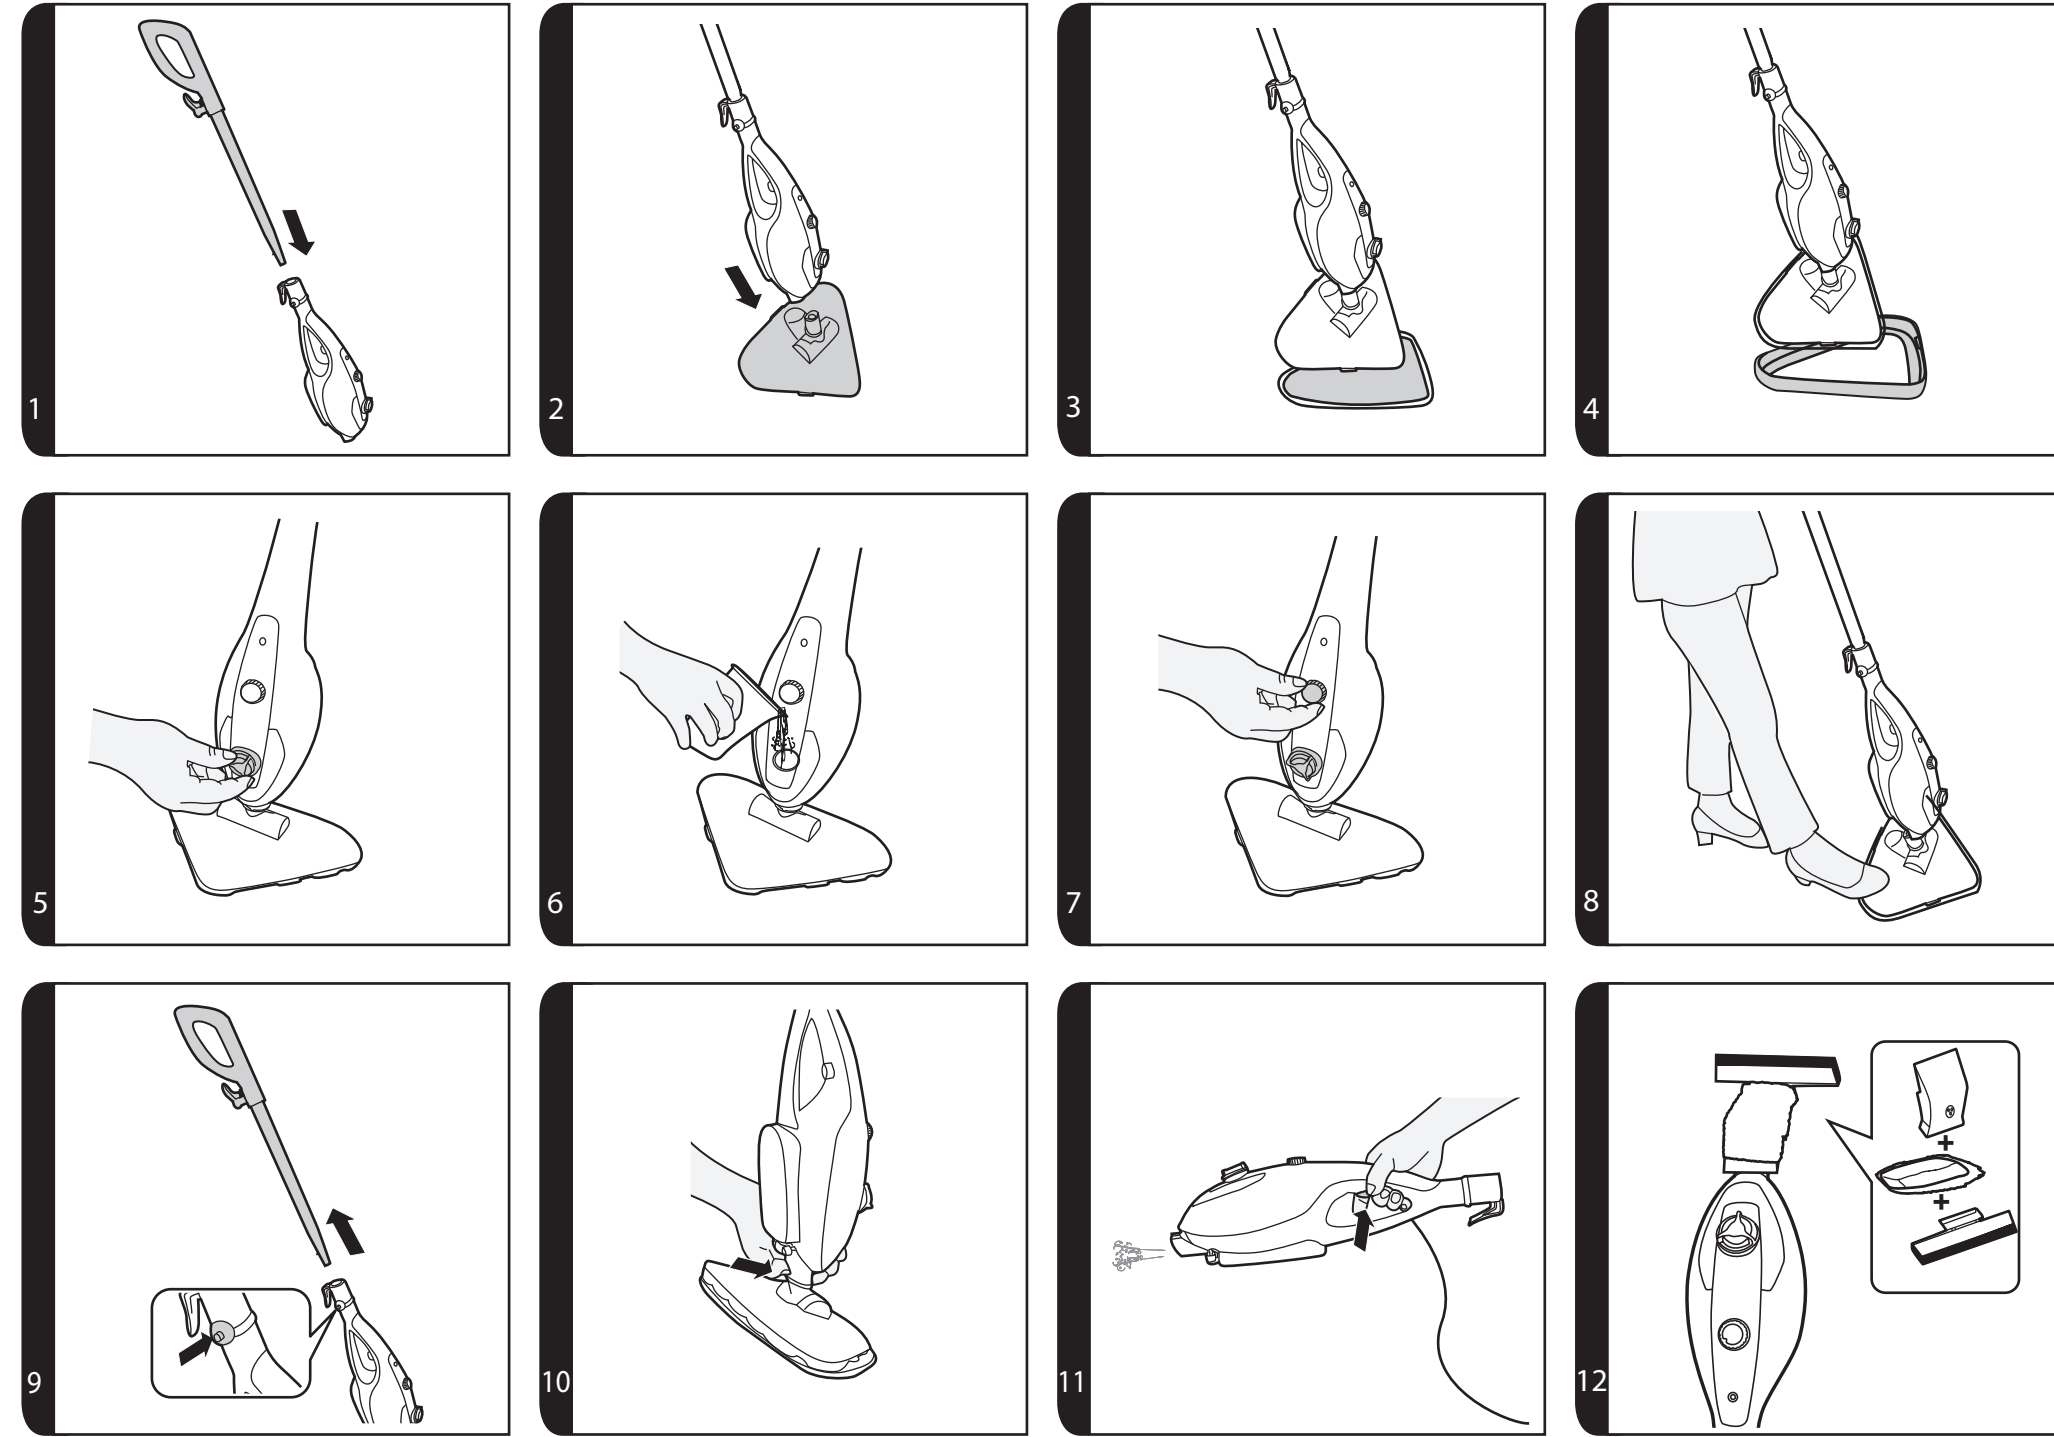

INSTRUCTIONS FOR SAFE USE

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Keep the appliance out of reach of children when it is energized or cooling down.

The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Hoover service engineer must replace the power cord.

This appliance must be earthed.

The appliance shall not be left unattended while it is connected to the supply mains.

Do not use your appliance out of doors.

Use only attachments, consumables or spares recommended or supplied by Hoover.

Do not use the appliance to clean or direct steam towards animals, people or plants.

Liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

Unplug the cleaner and switch off before filling the water container. Do not fill over the MAX mark. The filling aperture must not be opened during use.



Danger of Scalding.



Surfaces are liable to get very hot during use. Avoid contact with steam.

Do not stand on or wrap the cord around arms or legs when using your appliance.

Do not position the appliance above you when cleaning the stairs.

When using the cleaning tools ensure to always steady the appliance with your other hand. This will ensure that the appliance does not fall while in use.

Do not handle the plug or appliance with wet hands.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

Hoover service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

Do not immerse the appliance in water or other liquids.

Do not use detergents or liquids other than water inside the appliance.

For UK and Ireland only: This appliance has a 13 Amp mains plug. If you need to change the fuse in the mains plug, use a 13Amp ASTA (BS1362) fuse.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



This appliance complies with the European Directives 2006/95/EC, 2004/108/EC and 2011/65/EU.



HOOVER Limited, Pentrebach, Merthyr Tydfil, Mid Glamorgan, CF48 4TU, UK

GETTING TO KNOW YOUR CLEANER

- A. Handle
- B. Cord Hook
- C. Power Cord
- D. Handle Release Button
- E. Handheld Carry Handle
- F. Steam Trigger Button
- G. Water Tank
- H. Floor Head
- I. Water Tank Cap
- J. Steam Control Dial
- K. Power Light
- L. Utility Head
- M. Small Cloth
- N. Window Squeegee
- O. Conic Tool
- P. Hose
- Q. Round Brush
- R. Metal Brush
- S. Comb Brush
- T. De-scaling Tool
- U. Water Cup
- V. Carpet Glider
- W. Textile Pad

ASSEMBLING YOUR CLEANER

Remove all components from the packaging.

1. Insert the handle into the cleaner main body until it locks into position. [1]
2. Assemble the main body of the cleaner to the Floor Head. [2]

USING YOUR CLEANER

BEFORE YOU BEGIN CLEANING

1. Make sure Steam Control Dial is set to "OFF" position.
2. Rotate Water Tank Cap one quarter turn in "Unlock" direction (anti-clockwise) indicated by illustration on Cap, and remove.
3. Carefully fill Water Cup with water and pour into Water Tank through the fill hole. Do not add any chemicals, detergents or perfumes to the clean Water Tank. [6]
- 4.

NOTE: In order to significantly reduce mineral build-up and prolong the life of your steam mop the use of distilled or de-mineralized water in the unit is highly recommended.

5. Attach a Textile Pad to the base of the Floor Head. [3]

IMPORTANT: Always unplug the cleaner when adding water or changing a Textile Pad.

NOTE: Wash the Textile Pad prior to use to remove any lint.

STEAM CLEANING HARD FLOORS

NOTE: Always sweep or vacuum the floor prior to use to remove any loose dirt or debris.

IMPORTANT: Do not use the cleaner without a Textile Pad attached to the Floor Head.

NOTE: Do not use the Carpet Glider when cleaning hard floors.

1. Plug the steam cleaner into the mains power. Turn Steam Control Dial clockwise from "OFF" to "MAX", Power light will blink. The desired steam intensity setting depends on the current steaming task. Rotate the Steam Control Dial for desired steam intensity.
2. After a few seconds Power Light stops blinking, indicating the cleaner is ready for use.
3. Recline the cleaner by placing a foot on the Floor Head and lowering the main body towards the floor. [8]
4. Move the cleaner slowly backwards and forwards paying particular attention to high traffic areas.

REFRESHING CARPETS

NOTE: Always sweep or vacuum the floor prior to use to remove any loose dirt or debris.

IMPORTANT: Do not use the cleaner without a Textile Pad attached to the Floor Head.

1. Attach the Carpet Glider to the Floor Head. [4]
2. Plug the steam cleaner into the mains power. Turn Steam Control Dial clockwise from "OFF" to "MAX", Power light will blink. The desired steam intensity setting depends on the current steaming task. Rotate the Steam Control Dial for desired steam intensity.
3. After a few seconds Power Light stops blinking, indicating the cleaner is ready for use.
4. Recline the cleaner by placing a foot on the Floor Head and lowering the main body towards the floor. [8]
5. Move the cleaner slowly backwards and forwards paying particular attention to high traffic areas.

METHODS OF USE FOR HANDHELD STEAM CLEANER

1. Make sure Steam Control Dial is set to "OFF" position.
2. Rotate Water Tank Cap one quarter turn in "Unlock" direction (anti-clockwise) indicated by illustration on Cap, and remove.
3. Carefully fill Water Cup with water and pour into Water Tank through the fill hole. Do not add any chemicals, detergents or perfumes to the clean Water Tank. [6]

NOTE: In order to significantly reduce mineral build-up and prolong the life of your steam mop the use of distilled or de-mineralized water in the unit is highly recommended.

4. Plug the steam cleaner into the mains power. Turn Steam Control Dial clockwise from "OFF" to "MAX", Power light will blink. The desired steam intensity setting depends on the current steaming task. Rotate the Steam Control Dial for desired steam intensity.
5. After a few seconds Power Light stops blinking, indicating the cleaner is ready for use.
6. To produce steam press Steam Trigger Button (Handheld).

NOTE: In order to significantly reduce mineral build-up and prolong the life of your steam mop the use of distilled or de-mineralized water in the unit is highly recommended.

IMPORTANT: Always unplug the cleaner when removing the Floor Head or handle. Always ensure the cleaner has fully cooled down before removing the Floor Head.

ACCESSORIES

Without hose

1. After removing the Floor Head, Attach Conic Tool to Steam nozzle of main body
2. Fit other small accessories to Conic Tool and secure

With hose

1. Fit the Hose to Steam nozzle of main body .
2. Attach Conic Tool to the nozzle on the hose.
3. Fit other small accessories to Conic Tool

Window Squeegee and Utility Head [12]

The Window squeegee is to be installed on the Utility Head before installing on the Steam nozzle of main body and is used for cleaning windows, mirrors and other smooth glass surfaces. Fit Small Cloth on Utility Head before putting Window Squeegee on.

The Utility Head with Small Cloth is to be used for removing wrinkles from different fabrics. Choose the steam intensity setting appropriate for the fabric you are steaming.

Comb Brush Ideal for cleaning all grout lines, sanded or not sanded.

Conic Tool Use on heavily soiled areas such as showers, kitchens.

Round Brush Use on stubborn grease and grime.

Metal Brush For oven grills and racks.

CLEANER MAINTENANCE

IMPORTANT: ALWAYS ENSURE THE CLEANER HAS FULLY COOLED DOWN BEFORE PERFORMING ANY MAINTENANCE TASKS.

Empty the Water Tank

1. Unplug the cleaner from the mains power and ensure the unit has cooled.
2. Remove the water tank cap, pull off directly.
3. Empty any excess water from the tank. Replace the water tank cap..

Removing and cleaning the Textile Pad

1. Unplug the cleaner from the mains power and ensure the unit has cooled.
2. If necessary remove the Carpet Glider, then peel the Textile Pad from the Floor Base.
3. Wash the Textile Pad in a washing machine with a mild detergent at max temperature 40°C.

IMPORTANT: Do not use bleach or fabric softener when washing the Textile Pad.

Cleaning the blockage

1. Unplug the cleaner from the mains power and ensure the unit has cooled.
2. Ensure the water tank is empty.
3. Detach floor nozzle from cleaner body.
4. Insert supplied de-scaling tool into steam outlet to clear any blockages.
5. Re-assemble floor nozzle to the appliance body.

TROUBLE SHOOTING

Should you have a problem with the product, complete this simple user checklist before calling your local Hoover service.

The steam stick will not switch on.

- Check the unit is plugged in.
- Check the power cord

The steam stick is not producing steam.

- There may be no water in the clean water tank.
- You may not wait for enough time when switch on.
- You may not turn Steam Control Dial from "OFF" to a desired steam rate position.

Steam output is weak or intermittent.

- Steam Control Dial is set too LOW. Turn Steam Control Dial to a desired steam rate position.
- Mineral build-up in unit. Refer to Cleaning the blockage section.

The Textile Pad won't pick up dirt.

- The cleaning pad may already be saturated with dirt and needs to be washed. Refer to the Maintenance section

CLEANING FAQs

When is Steamjet ready? In approximately 30 seconds.

Can I use Steamjet on all floor surfaces? On all hard floors like marble, ceramic, stone, linoleum, sealed hardwood floors and parquet.

Does Steamjet emit steam automatically? Yes for stick. No for handheld, to produce steam you should press Steam Trigger Button under the handle.

Can I put detergents or other chemicals inside the tank? No, you would damage the product.

What if in the city where I live the water is very hard? You can use filtered water or you will have to change the filter cassette more often. If you find very weak steam, check steam orifice, you can descale it by inserting small tools into steam orifice if necessary.

How long will one tank of water last before needing to be refilled? Approximately 12 minutes if you press continuously the trigger.

Is the mop washable? Yes, it can be washed by hand or in the washing machine with a mild detergent at max temperature 40°C. Do not use bleach or fabric softener.

How often should I replace the mop? It depends on different factors above all how hard the floor is. The best way to understand when to change the mop is when the mop is still dirty after having washed it or if you notice that it doesn't perform like before.

IMPORTANT INFORMATION

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Consumables

Textile Mop Pads (x2)	AC33	35601658
Flexible Hose	D151	35601656
Textile Small Cloths (x3)	AC27	35601392

Hoover Customer Helpline Service

Should any faults occur with your cleaner during the first 12 months, contact the Hoover Customer Helpline on the number below.

Tel: 08444 995 599

Email: customer.services@hoovercandy.com

Quality

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.