

Panasonic

Operating Instructions CD Stereo System

Model No. **SC-PM250B**



Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.
Please keep this manual for future reference.

*"EB" indicates the United Kingdom model.

Manufactured by: **Panasonic Corporation**
Kadoma, Osaka, Japan
Importer for Europe: **Panasonic Marketing Europe GmbH**
Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany



Panasonic Corporation
Web Site: <http://www.panasonic.com>

EB **En**
RQT0A08-B
L0215CH0

Your system and the illustrations can look differently.
These operating instructions are applicable to the following system.

System	SC-PM250B
Main unit	SA-PM250B
Speakers	SB-PM02



Back of product

Disposal of Old Equipment and Batteries Only for European Union and countries with recycling systems

These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local municipality. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Note for the battery symbol (bottom symbol):
This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- Do not break open or short-circuit the battery.
- Do not charge the alkaline or manganese battery.
- Do not use the battery if the cover has peeled off.
- Remove the battery if you do not use the remote control for a long period of time. Keep in a cool, dark area.

Caution for AC mains lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 5-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.


If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local dealer.

Before use
Remove the connector cover.


How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug.

- Open the fuse cover with a screwdriver.

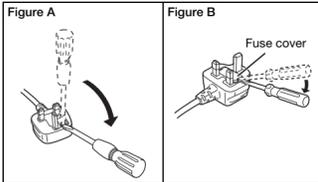

- Replace the fuse and close or attach the fuse cover.

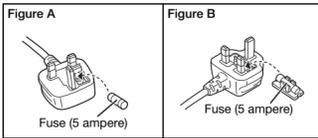

Supplied accessories

Check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts. (Product numbers correct as of February 2015. These may be subject to change.)

- 1 AC mains lead (K2CT2YY00097)
- 1 DAB antenna (N1EYYY000015)
- 1 Remote control (N2QAYB000984)

Sales and Support Information

Customer Communications Centre

- For customers within the UK: 0344 844 3899
- For customers within Ireland: 01 289 8333
- Monday – Friday 9:00am – 5:00pm (Excluding public holidays).
- For further support on your product, please visit our website: www.panasonic.co.uk

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre Monday – Friday 9:00am – 5:00pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.pas-europe.com.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.

Troubleshooting

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated do not solve the problem, consult your dealer for instructions.

Common problems

The unit does not work.

- The safety device has been activated. Do the following:
 - Press  on the main unit to switch the unit to standby mode. If the unit does not switch to standby mode,
 - Press and hold the button for a minimum of 10 seconds. Or,
 - Disconnect the AC mains lead and connect it again.
 - Press  again to switch on the unit. If the problem persists, consult your dealer.

- No operations can be done with the remote control.
- Examine that the battery is installed correctly.

Sound is distorted or no sound.

- Adjust the volume of the system.
- Switch off the system, determine and correct the cause, and then switch on again. It can be caused by straining of the speakers through excessive volume or power, and when using the system in a hot environment.

A humming sound can be heard during playback.

- An AC mains lead or fluorescent light is near the cables. Keep other appliances and cords away from the cables of this system.

Disc

Display not shown correctly.

Playback does not start.

- You have not put in the disc correctly. Put it in correctly.
- Disc is dirty. Clean the disc.
- Replace the disc if it is scratched, warped, or non-standard.
- There is condensation. Let the system dry for 1 to 2 hours.

USB

The USB device or the contents in it cannot be read.

- The format of the USB device or the contents in it are not compatible with the system.
- USB devices with storage capacity of more than 32 GB cannot work in some conditions.

Slow operation of the USB device.

- Large content size or large memory USB device takes longer time to read.

The elapsed time shown is different from the actual play time.

- Transfer the data to another USB device or backup the data and reformat the USB device.

Radio/DAB+

Sound is distorted.

- Use an optional outdoor antenna. The antenna should be installed by a competent technician.

A beat sound is heard.

- Switch off the TV or move it away from the system.
- Move mobile telephones away from the system if the interference is apparent.

Bluetooth®

Pairing cannot be done.

- Check the Bluetooth® device condition.
- The device is out of the 10 m communication range. Move the device nearer to the system.

The device cannot be connected.

- The pairing of the device was unsuccessful. Do pairing again.
- The pairing of the device has been replaced. Do pairing again.
- This system might be connected to a different device. Disconnect the other device and try pairing the device again.

The device is connected but audio cannot be heard through the system.

- For some built-in Bluetooth® devices, you have to set the audio output to "SC-PM250" manually. Read the operating instructions of the device for details.

Sound from the device is interrupted.

- The device is out of the 10 m communication range. Move the device nearer to the system.
- Remove any obstacle between the system and the device.
- Other devices that use the 2.4 GHz frequency band (wireless router, microwaves, cordless phones, etc.) are interfering. Move the device nearer to the system and distance it from the other devices.
- Select "MODE 1" for stable communication.

Playback image and sound are not synchronised.

- Restart the playback app of the device.

Main unit displays

"--:--"

- You connected the AC mains lead for the first time or there was a power failure recently. Set the clock.

"ADJUST CLOCK"

- The clock is not set. Adjust the clock.

"ADJUST TIMER"

- The play timer is not set. Adjust the play timer.

"AUTO OFF"

- The system has not been used for 20 minutes and will switch off within a minute. To cancel, press any button.

"ERROR"

- An incorrect operation was done. Read the instructions and try again.

"F61"

- "F77"
- Disconnect the AC mains lead and consult your dealer.

"F70"

- Examine the Bluetooth® device.
- Disconnect the Bluetooth® device. Switch off the system and then switch on again.

"F76"

- There is a problem with the power supply.
- Disconnect the AC mains lead and consult your dealer.

"NODEVICE"

- The USB device is not connected. Examine the connection.

"NO DISC"

- You have not put in a disc.

"NO MEMORY"

- DAB memory presetting has not been done.

"NO PLAY"

- Examine the content. You can only play supported format.
- The system may have a problem. Switch off the system and then switch on again.

"NO SIGNAL"

- The station cannot be received. Adjust the antenna.

"PLAYERERROR"

- You played an unsupported MP3 file. The system will skip that track and play the next one.

"REMOTE 1"

"REMOTE 2"

- The remote control and the main unit are using different codes. Change the code of the remote control.
 - When "REMOTE 1" is shown, press and hold  and  for a minimum of 4 seconds.
 - When "REMOTE 2" is shown, press and hold  and  for a minimum of 4 seconds.

"SCAN FAILED"

- Stations cannot be received. Adjust the antenna or do manual tuning.

"USB OVER CURRENT ERROR"


- The USB device is using too much power. Disconnect the USB device, switch off the system and then switch on again.

"-VBR-"

- The system cannot show the remaining play time for variable bit rate (VBR) tracks.


Making the connections

Connect the AC mains lead only after all the other connections have been made.

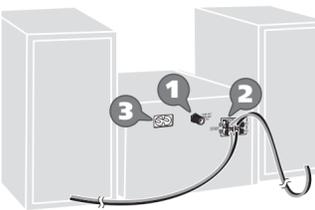


- Connect the DAB antenna.

 Be sure to tighten fully the nut.
Tape the antenna to a wall with the least amount of interference.



Use an outdoor antenna if the reception is poor.

- Connect the speakers.

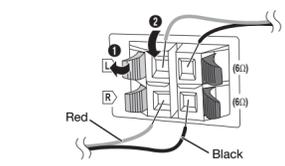

Be careful not to cross (short-circuit) or reverse the polarity of the speaker wires as doing so may damage the speakers.

Remote control code

When other Panasonic equipment responds to the remote control of this system, change the remote control code for this system.

Preparation
Press  to select "CD".

To set the code to "REMOTE 2"

- Press and hold  on the main unit and  on the remote control. "REMOTE 2" is shown.
- Press and hold  and  for a minimum of 4 seconds.

To set the code to "REMOTE 1"

- Press and hold  on the main unit and  on the remote control. "REMOTE 1" is shown.
- Press and hold  and  for a minimum of 4 seconds.

System memory reset

Reset the memory when the following situations occur:

- There is no response when buttons are pressed.
- You want to clear and reset the memory contents.

- Disconnect the AC mains lead.

- While you press and hold  on the main unit, connect the AC mains lead again.

Continue to press and hold the button until "-----" is shown.

- Release . All the settings are set back to the factory preset. It is necessary to set the memory items again.

Maintenance

To clean this system, wipe with a soft, dry cloth.

- Never use alcohol, paint thinner or benzine to clean this system.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.

CE1177

Declaration of Conformity (DoC)

Hereby, "*Panasonic Corporation*" declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Customers can download a copy of the original DoC to our R&TTE products from our DoC Server: <http://www.doc.panasonic.de>
Contact to Authorised Representative: Panasonic Marketing Europe GmbH, Panasonic Testing Centre, Winsbergring 15, 22525 Hamburg, Germany

This product is intended for general consumer. (Category 3)

Licenses

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

Placement of speakers



The left and right speakers are the same. You cannot remove the net of the speakers.

Use only the supplied speakers. You can cause damage to the system and decrease the sound quality if you use other speakers.

- Note:**
 - Keep your speakers more than 10 mm from the main unit for ventilation.
 - Put the speakers on a flat safe surface.
 - These speakers do not have magnetic shielding. Do not put them near TVs, PCs or other equipment easily influenced by magnetism.
 - When you play at high levels for a long period, it can cause damage to the speakers and decrease the life of the speakers.
 - Decrease the volume in these conditions to prevent damage:
 - When the sound is distorted.
 - When you adjust the sound quality.

CAUTION!
Use the speakers only with the recommended system. If not, you can cause damage to the amplifier and speakers and can cause a fire. Consult an approved service personnel if damage occurs or if there is a sudden apparent change in performance.
Do the procedures included in these instructions when you attach the speakers.

