 


## 160GB jukebox with display

Installation & User Instructions – Please keep for future reference

428/1289 (D)

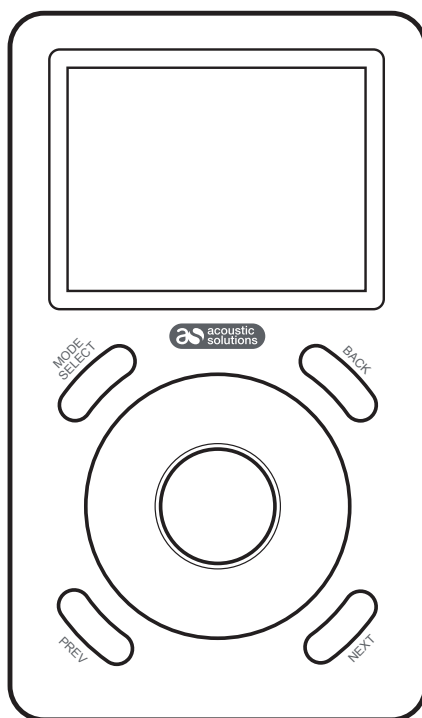

 
**Important** – Please read these instructions fully before using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct installation, use and maintenance.

If you need help or have damaged or missing parts, call the Customer Helpline: 0870 600 3030

# Table of contents

<b>Care &amp; maintenance</b> .....	2
<b>Disposal information</b> .....	2
<b>Rechargeable battery disposal</b> .....	2
Accessories included .....	3
Overview of controls .....	3
<b>Getting started</b> .....	3
<b>Connecting to a PC</b> .....	4
<b>Earphone connection</b> .....	4
<b>Basic operation</b> .....	4
Power On/ Off .....	4
Playback controls .....	4
Navigation controls .....	5
Volume controls .....	5
<b>The playlist menu</b> .....	5
Updating the playlist library .....	5
Navigating the playlist menu .....	5
<b>The file browser menu</b> .....	5
<b>The file browser menu (cont)</b> .....	6
<b>Now playing</b> .....	6
Playback mode .....	6
Favourites .....	6
<b>Music setting menu</b> .....	7
Play mode .....	7
Boot volume .....	7
Memory playback .....	7
Update playlist .....	7
<b>System setting menu</b> .....	7
Background pattern .....	7
Backlight time .....	7
Backlight brightness .....	7
Power off .....	8
Information .....	8
Restore factory settings .....	8
Format internal memory .....	8
<b>Technical specifications</b> .....	8
<b>Troubleshooting</b> .....	9

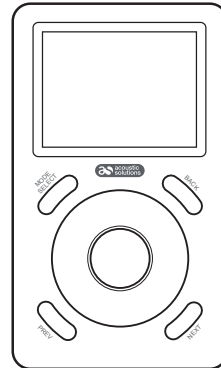

Product Code

CMP3160CLASSIC




## Safety information

**Important – Please read these instructions fully before using**

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.**

- Please read this owner's guide
- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features.
- Please save this owner's guide for future reference.
- The product label is located on the back of the product.
- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.
- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped -
- Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltages or other hazards.
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product. Before making any electrical connections, ensure the following:
  - Do not bend, stretch or pull the supply cable in order to avoid electric shock.
  - The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
  - Batteries shall not be exposed to excessive heat such as sun, fire or the like

 This product complies with European low voltage (2006/95/EC) and electromagnetic compatibility (2004/108/EC) directives.

### Care & maintenance

#### Care and cleaning

- **All care and cleaning operations should be carried out with the unit unplugged from the mains power.**
- **Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.**

### Disposal information



#### WEEE marking "Information for the consumer"

**Disposal of your old product** Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please make yourself aware of the local collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

### Rechargeable battery disposal

Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC. To safeguard the functionality and safety of your product, always take your product to an official collection point or service centre where a professional can remove the battery.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health. Please do not dispose of your batteries with your normal household waste. Always bring your product to a professional to remove the battery.

This product complies with Electromagnetic compatibility (2004/108/EC) directives.


# Functions & controls

Please familiarize yourself with the parts and accessories listed below

## Accessories included

- 1 x CMP3160CLASSIC
- 1 x Instruction manual
- 1 x USB charging cable
- 1 x earphones

## Overview of controls

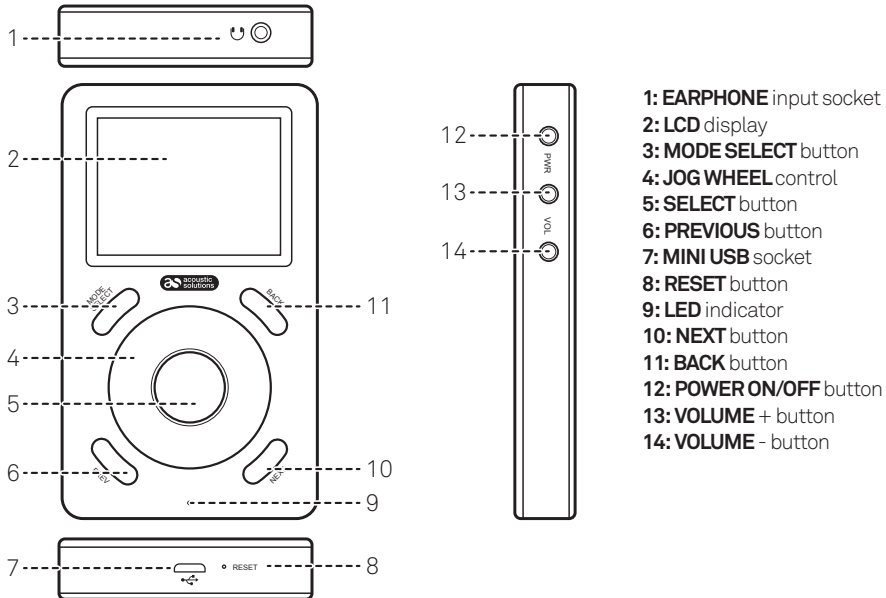

## Getting started

Before use your player will require charging fully. Follow the below instructions to charge.




- 1: Using the usb charging cable connect the mini usb plug into the usb charge socket (7) on the bottom of the unit.
- 2: Connect the other end of the cable to a laptop/pc usb input & power on the pc/laptop.
- 3: The unit will power **ON**.
- 3: During the charging process the **LED** indicator (9) will display a **RED** led light.
- 4: When fully charged the **LED** indicator (9) will display a **PURPLE (RED & BLUE)** led light.

# User instructions

## Connecting to a PC


Once the unit is charged or during charging you can copy files to the player.

- 1: Follow steps 1-2 of **'Getting started'** to connect the player to a pc/ laptop.
- 2: Once connected the player will power up and display the following screen.

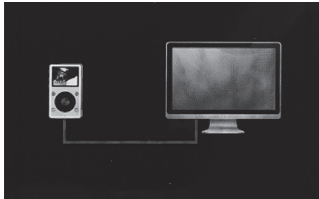

- 3: When the unit is connected a hardware driver is automatically installed and the device is then available in the list of devices (**Named CMP3160\_160**). On some operating systems an auto play window will appear. Choose to take no action and click **OK** to close the window.
- 4: Double click **'My Computer'** Or **'Computer'** on some operating systems. Look for **'Removable disks or storage'** option and locate the device named **'CMP3160\_160'** and double click.


**NOTE:** Do not disconnect the USB cable at any time when copying data to or from the device.

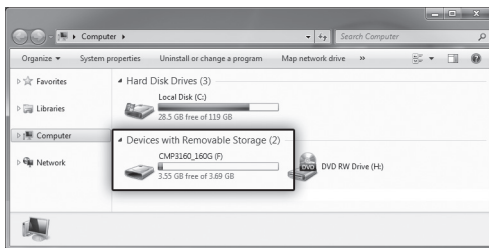

- 5: Drag & drop media files into the applicable folders on the removable device.
- 6: After data transfer has completed you can disconnect the device from the PC by right clicking on the **'CMP3160\_160G'** device and selecting **'EJECT'**.
- 7: Remove the **USB** cable from the **PC** & bottom of the unit **(7)**.

## Earphone connection

Instructions for earphone usage.

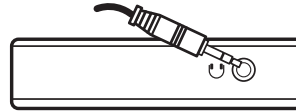

- 1: Connect the **3.5mm** earphone plug into the **EARPHONE** socket **(1)** on the bottom of the unit.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

In music mode, when the volume is adjusted to 85dB the above warning will appear on the display.

If you hear no sound during playback, do not turn the volume up as the music may suddenly begin at a high volume.

Excessive sound pressure from earphones and headphones can cause hearing loss.

To avoid damaging your ears, adjust the volume to the lowest safe level before playing, and turn up to the desired level when playback has started.

## Basic operation

### Power On/ Off

- 1: Press and hold the **POWER** button **(12)** for **2** seconds to power the unit **ON**.
- 2: Press and hold the **POWER** button **(12)** for **2** seconds to power the unit **OFF**. A pop up message will appear to check you want to power **OFF**.
- 3: Press the **SELECT** button **(5)** to proceed and power **OFF**.

### Playback controls


- (5) PLAY:** ..... **SELECT** button  
**(5) PAUSE:** ..... **SELECT** button during playback  
**(10) SKIP NEXT:** ..... **NEXT** button  
**(6) SKIP PREVIOUS:** ..... **PREV** button

# User instructions

## Navigation controls

- (10) **SKIP NEXT:** . . . . . Press to navigate **NEXT** option
- (6) **SKIP PREVIOUS:** . . . . . Press to navigate **PREV** option
- (4) **JOG WHEEL:** . . . Rotate to scroll **NEXT/PREV** options
- (11) **BACK:** . . . . . Press to return to previous screen
- (3) **MODE SELECT:** . . . . . Press for current mode options
- (5) **SELECT:** . . . . . Press to select

## Volume controls

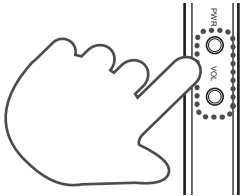

- 1: Press or press & hold the **VOLUME+** button (13) to increase the volume output.
- 2: Press or press & hold the **VOLUME-** button (14) to decrease the volume output.

## The playlist menu

### Updating the playlist library

The PLAYLIST menu allows songs to be browsed in various sorted libraries. For example : All Songs, Album, Artists, Style & Favourite. Follow the below steps to familiarise yourself with the functions.

---

**NOTE:** Before the 'playlist' library can be used the music files on the internal memory need to be compiled into the various libraries.

---

- 1: Once audio tracks have been transferred to the internal memory and the device is switched **ON**, The playlist database will begin updating automatically in the background.
- 2: Should you wish to access music immediately without waiting you can browse all files using the '**File browser menu**'.
- 3: Instructions on how to perform the database update manually can be found on page 7.

---

**NOTE:** The more audio files you add to the internal memory the longer the process will take.

---

## Navigating the playlist menu

- 1: Navigate to the '**PLAYLIST**' menu icon on the main screen using the **NEXT (10)**, **PREV (6)** buttons or jog wheel.



- 2: Press the **SELECT** button (5) to enter the menu.
- 3: Using the **NEXT (10)**, **PREV (6)** buttons or jog wheel select an option from the below list:

**All Songs:** Displays all songs on the internal memory in one list.

**Album:** Sorts all songs in album format.

**Artist:** Sorts all songs by artist.

**Style:** Sorts all songs by genre

**Favourite:** Displays all songs designated as a 'favourite' (see favourites section page 6).

---

**NOTE:** Some libraries like Album, Artist & Style require an addition press of the **SELECT (5)** button to enter the selected Album, Artist or Style.

---

- 4: To begin playback of a selected track press the **SELECT (5)** button.

## The file browser menu

The FILE BROWSER menu enables navigation of the internal memory as it is displayed on a PC.

- 1: Navigate to the '**FILE BROWSER**' menu icon on the main screen using the **NEXT (10)**, **PREV (6)** buttons or jog wheel.



# User instructions

## The file browser menu (cont)

- 2: Press the **SELECT** button (5) to enter the menu.
- 3: Using the **NEXT** (10), **PREV** (6) buttons or jog wheel select a track or folder from the list.
- 4: To begin playback of a selected track or to enter a selected folder press the **SELECT** (5) button.


## Now playing

Whenever a track is playing you can access the playback screen by selecting the 'NOW PLAYING' icon.

- 1: Navigate to the '**NOW PLAYING**' menu icon on the main screen using the **NEXT** (10), **PREV** (6) buttons or jog wheel.



- 2: Press the **SELECT** button (5) to enter the playback screen.

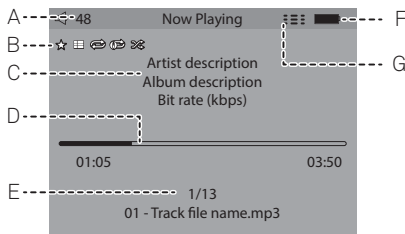

Below is a breakdown of playback screen functions.

- A:** Volume output level.
- B:** Play mode icons (see **Playback mode section**).
- C:** Audio Track tags: Artist, Album & bit rate.
- D:** Track time line including elapsed time & time left.
- E:** Number of track & tracks available in the album/ folder.
- F:** Battery level indicator.
- G:** Active playback mode icon (see **Playback mode section**).

## Playback mode

Select a playback mode from the below options.

 Favourite	Assign as a favourite track
 Order	Play all tracks in order
 Repeat all	Repeats all tracks
 Repeat one	Repeats the current track
 Shuffle	Plays all tracks in a random order

- 1: Press the **MODE SELECT** button (3) to display the playback options.
- 2: Use the **NEXT** (10), **PREV** (6) buttons or jog wheel to select one of the above options and press the **SELECT** button (5) to activate the function.

## Favourites

You can tag multiple tracks to appear in the 'favourite' section of the 'Playlist' menu. These can then be played back in order or randomly using the playback modes described in the previous section.

- 1: From the '**Now Playing**' screen with a track playing press the **MODE SELECT** button (3) to display the play mode icons.
- 2: Use the **NEXT** (10), **PREV** (6) buttons or jog wheel to select the ☆ 'favourite' icon. Press the **SELECT** button (5) to store.
- 3: The current track is now assigned as a favourite track and will appear in the '**Favourite**' list from the **PLAYLIST** menu.
- 4: To remove a favourite there are two options.

Press the **MODE SELECT** button (3) from the '**Now playing**' menu and select the ☆ 'favourite' icon once more.

Or from the **PLAYLIST** menu select the **FAVOURITE** list, highlight the track and press the **MODE SELECT** button (3). Press the **SELECT** button when you see '**CLEAR FAVOURITE**' appear.





## User instructions

### Music setting menu

#### Play mode

As an alternative to using the icons in the 'Now playing' menu you can assign a playback mode from here.

Select one of the options explained below.

 Order	Play all tracks in order
 Repeat all	Repeats all tracks
 Repeat one	Repeats the current track
 Shuffle	Plays all tracks in a random order

#### Boot volume

Select from the below options to set the volume level when powering ON the device.

**Default volume:** Restores the volume level to '69' when powering ON the device.

**Memory Volume:** Resumes the last volume level when powering ON the device.

#### Memory playback

When activated memory playback will remember the last track played and begin playback of the same track when powered ON.

#### Update playlist

The PLAYLIST functions are explained on page 5. The below instructions explain how to manually update the playlist database.

- 1: Select the **UPDATE PLAYLIST** option to begin updating the database manually.
- 2: If you need to cancel the operation at any time press the **BACK** button (11).

---

**NOTE:** The more audio files you add to the internal memory the longer the process will take.

---

### System setting menu

#### Background pattern

Select from 4 different background patterns.

- 1: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select a pattern.

---

**NOTE:** As you scroll through the patterns the background pattern changes automatically.

---

- 2: Press the **SELECT** button (5).
- 3: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select **OK** from the 'Save?' option box and press **SELECT** to store the setting.

#### Backlight time

Set the time the backlight stays on after no buttons have been pressed.

- 1: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select a duration from **15s**, **30s**, **45s**, **60s**, **120s** or **Always on**.
- 2: Press the **SELECT** button (5).
- 3: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select **OK** from the 'Save?' option box and press **SELECT** to store the setting.

#### Backlight brightness

Set the brightness of the backlight.

- 1: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select a brightness level from level **1-5**.

---

**NOTE:** As you scroll through the settings the backlight changes automatically.

---

- 2: Press the **SELECT** button (5).
- 3: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select **OK** from the 'Save?' option box and press **SELECT** to store the setting.



# User instructions

## Power off

Set the time the unit stays on with no activity.

- 1: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select a duration from No power off, **15 mins**, **30 mins**, **45 mins**, **60 mins**, **90 mins** or **120 mins**.
- 2: Press the **SELECT** button (5).
- 3: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select **OK** from the 'Save?' option box and press **SELECT** to store the setting.

## Information

When activated displays system information such as internal storage available capacity & the total number of tracks stored on the internal memory.

## Restore factory settings

To restore the device back to the default settings follow the below instructions.

- 1: With '**Restore factory settings**' selected in the menu, press the **SELECT** button (5) to display the confirmation pop up.
- 2: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select **OK** from the '**Restore to factory settings?**' option box and press **SELECT** to reset the settings.

---

NOTE: This does not delete any audio files stored on the internal memory.

---

## Format internal memory

To delete all audio files stored on the internal memory and restore to a blank state follow the below instructions.

- 1: With '**Format internal memory**' selected in the menu, press the **SELECT** button (5) to display the confirmation pop up.
- 2: Use the **NEXT (10)**, **PREV (6)** buttons or jog wheel to select **OK** from the '**Formatting Internal Memory will erase all songs!**' option box and press **SELECT** to format the internal memory.

---

NOTE: This function will remove all files stored on the internal memory.

---

## Technical specifications

Power Supply ..... 2050mAh, 3.7V  
Dimensions ..... 96.5 x 57 x 13.6mm  
Weight ..... 90g  
Capacity ..... 160GB internal flash memory  
Supported OS ..... Windows 2000, XP or above  
Interface ..... USB 2.0

Supported music ..... MP3, WMA, AAC, OGG, APE, formats ..... ALAC, FLAC, WAV, AAC MPC, AIF, AIFF

# User instructions

## Troubleshooting

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below.  
If the problem persists, visit the technical support website: [www.argos-support.co.uk](http://www.argos-support.co.uk)

Problem	Reason(s)	Solution(s)
No Power	<ul style="list-style-type: none"><li>• The unit requires charging</li></ul>	<ul style="list-style-type: none"><li>• Connect to a PC or laptop using the supplied cable to charge.</li></ul>
No Sound	<ul style="list-style-type: none"><li>• Volume is too low</li><li>• No audio files have been copied to the internal memory</li><li>• The earphones have not been connected correctly</li></ul>	<ul style="list-style-type: none"><li>• Increase the volume</li><li>• Follow 'Connecting to a PC' instructions on page 4 of this manual</li><li>• Insert the 3.5mm earphone plug into the earphone socket on the MP3 player</li></ul>
Sound is distorted	<ul style="list-style-type: none"><li>• Volume is too high</li></ul>	<ul style="list-style-type: none"><li>• Reduce the volume</li></ul>

# Guarantee



## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW