 


BUSH


Instruction Manual

V6SDW
V6SDS
V6SDB

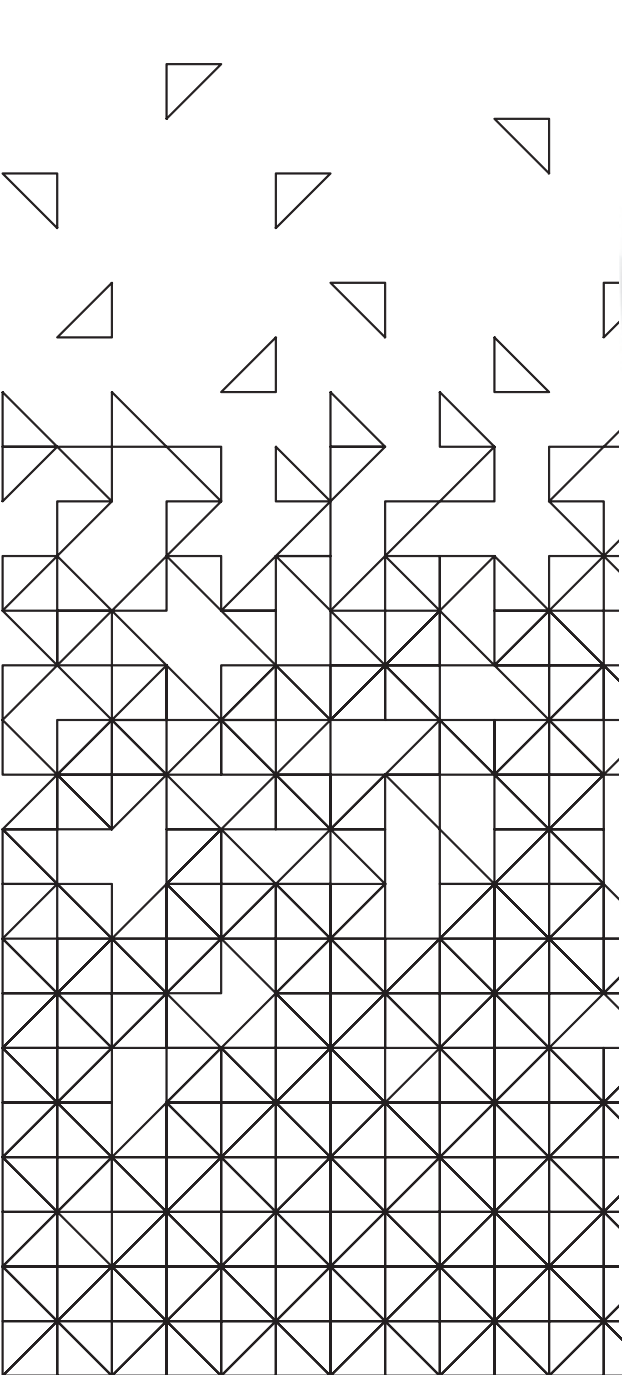

Contents

Safety Information	3-7
Parts	8
Installation	9-11
Transportation	9
Installation	9
Hose Connection	10
Electrical Connection	11
User Instructions	12-13
Before first use	12
Garments suitable for drying in tumble dryer	12
Garments NOT suitable for drying in tumble dryer	12
Preparation for the clothes to be dried	12
Load capacity	13
Control panel	13
Operating steps for the machine	14
Full program chart & consumption table	15
Program Selection	15
Ending the program – Cancelled by customer	16
Child Safety Lock	16
Overheat safety device	16
Care and Maintenance	17
General	17
Clean the lint filter	17
Moving your appliance	17
Trouble Shooting	18
Technical Specifications	19
Disposal information	19
Product fiche	20
Guarantee	21

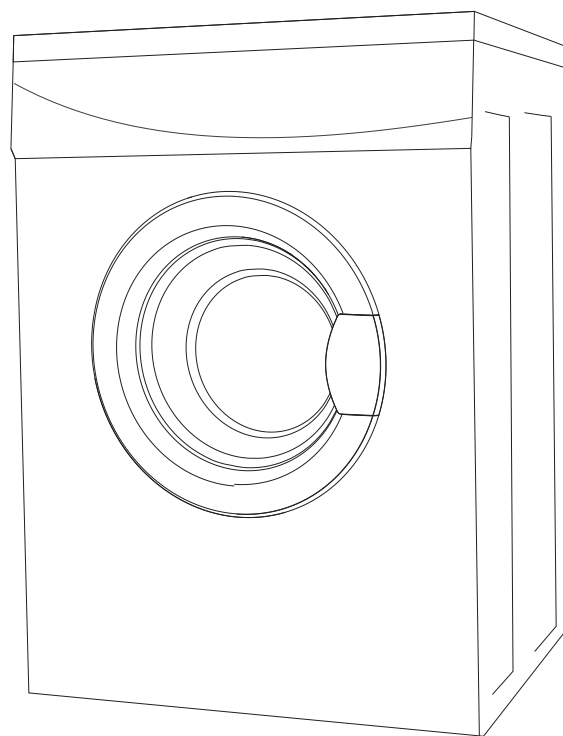 

Important – Please read these instructions fully before installing or using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct installation, use and maintenance.

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 257 7271



Safety Information

Important – Please read these instructions fully before installation

Before use

The installation of this appliance is best carried out by 2 people.

- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for household use. **Do not** use the appliance for industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- For appliance with ventilation openings in the base, the carpet **must not** obstruct the openings.



Safety Information

Important – Please read these instructions fully before installation

Before use

- The appliance **must not** be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- **Do not** allow children to play with the appliance to avoid the risk of entrapment and suffocation.
- Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.
- The lint trap has to be cleaned frequently, if applicable.
- Clean lint screen before or after each load.
- Never use the dryer without the lint filter.



Safety Information

Important – Please read these instructions fully before installation

During use

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Lint **must not** to be allowed accumulate around the tumble dryer.
- **Do not** dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.



Safety Information

Important – Please read these instructions fully before installation

During use

- Items such as foam rubber(latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads **should not** be dried in the tumble dryer.
- Fabrics softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.
- **WARNING** : Never stop a tumble dryer before the end of drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Children of less than 3 years should be kept away unless continuously supervised.
- **Do not** attempt to repair the appliance yourself. Contact the Customer Helpline: 0345 257 7271.



Safety Information

Important – Please read these instructions fully before installation

During use

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.



CAUTION: HOT SURFACE !

 


CAUTION: RISK OF FIRE !

Parts

If you have damaged or missing parts,
call the **Customer Helpline: 0345 257 7271**

Please familiarize yourself with the parts and accessories listed below

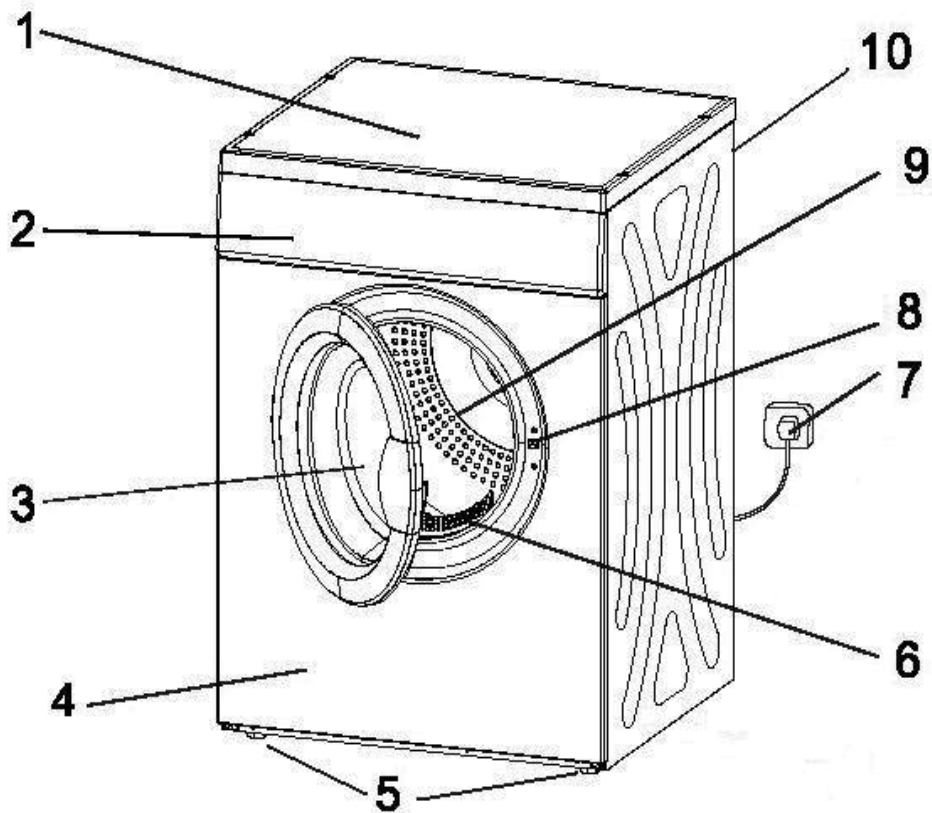


- 1. Top board
- 2. Control panel
- 3. Door
- 4. Front case
- 5. Adjustable feet

- 6. Lint filter
- 7. Plug
- 8. Door sensor
- 9. Tumble drum
- 10. Overheat Safety reset switch (back)

Accessories included



 Instructions x 1



Hose (2.5M) x 1

Installation

Transportation

 
 


Caution: 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.

- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45°. The packaging as supplied must be intact during transportation.
- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.
- Ensure the supply cable is not caught under the appliance during and after moving.
- Carefully remove all packaging materials including the foam base, dispose of correctly.

Installation

- Ensure sufficient spacing is provided for the appliance to be installed. Leave space on back (10cm) to ensure proper ventilation.
- Install the tumble dryer in a well ventilated room.
- Make sure that your machine is not placed on the power cord.
- Do not place the appliance near a heat source or in direct sunlight.
- Do not put any heavy objects on top of the appliance. It will damage the appliance.
- Do not install the appliance in moist and wet place.
- Adjust the feet at front to level the appliance. It should be installed on a smooth surface to avoid excessive vibration and noise.
- Never unscrew the adjustable feet from their housings.
- Refer to section “User instructions” to prepare your appliance for use.

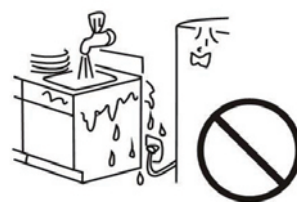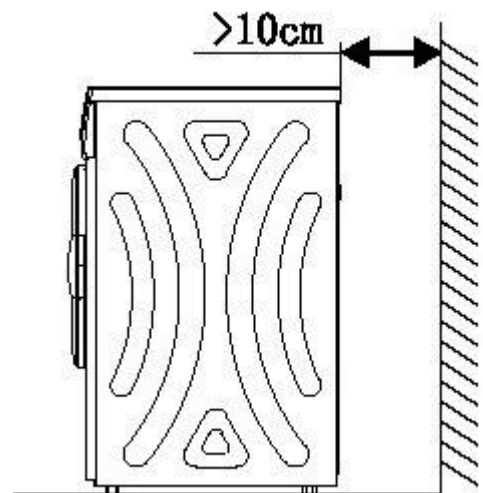

Installation

Hose connection



 
 
Warning: 2 people may be required to install the hose. It is recommended to wear the gloves.

NOTE : Ventilation hose assures exhausting of the air from the inside of the tumble dryer.

- Carefully remove all packaging materials including from the foam, dispose of correctly.
 - Before installation, ensure that the unit is power off and unplug from the mains.
1. Connect hose to the air outlet of the machine by screwing it tight in a clockwise direction.
 2. Extended the hose to the suitable length.
 3. Route the hose to the outdoors via a window or it can be connected to an outlet in the wall (see the diagrams).
- The air outlet hose must be extended directly to the outdoors. keep bends to a minimum to ensure adequate ventilation.
 - To prevent water accumulation in the hose, make sure the hose is not folded on the floor.
 - In winter, the room temperature may be cold. The water may condense inside the hose. Periodical check is required to avoid hose damaged by the water.



Warning: Do not connect the hose to the chimney of a stove or fireplace.

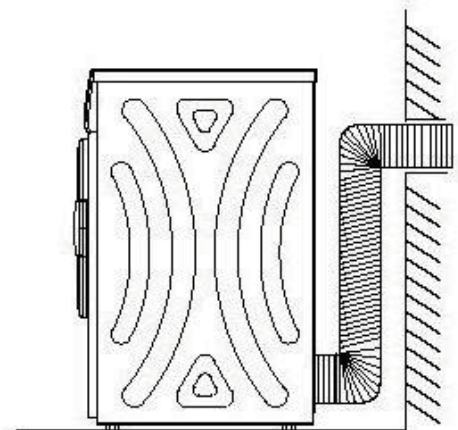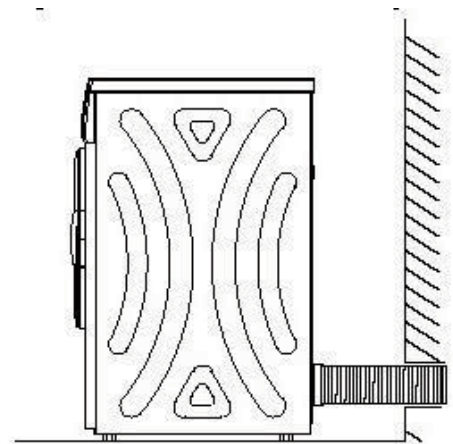

Installation

Electrical connection



Any electrical work that is required to install this appliance **MUST** be carried out by a qualified electrician.



Warning: THIS APPLIANCE MUST BE EARTHED

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house is in accordance with the related local regulations.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Ensure the power socket is suitable for the maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- The use of adapters, multiple connectors or extension cables are not recommended.
- The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.
- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362/A must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

Plug replacement (UK & Ireland only)

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue – Neutral 'N'

Brown – Live 'L'

Green & Yellow – Earth 'E'

 
As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The green & yellow wire must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol.

The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

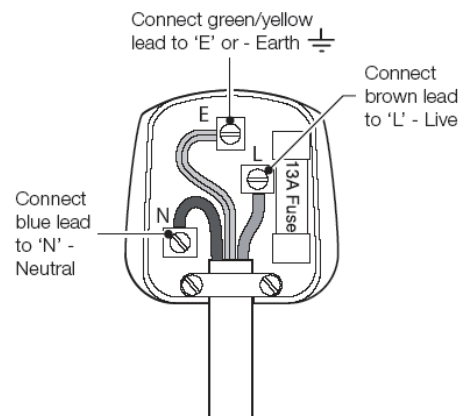

User Instructions

 
Before first use

Final checks before operating the appliance

1. Good air circulation around the appliance positioned appliance.
2. The feet have been adjusted for perfect levelling.
3. Check the hose has been extended to the outdoors.
4. Plug in the appliance.

Garments suitable for drying in tumble dryer

Before using the tumble dryer, you have to ensure the laundry is suitable to dry in the tumble dryer. Always follow the advice on the garment labels. Dry only laundry with a label stating they are suitable for drying in the dryer and select the appropriate program.

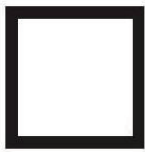

Dry



Do not dry



Do not tumble dry



Tumble dry, high heat



Tumble dry, middle heat



 
Dry horizontally



Hang without spinning



Dry on a hanger

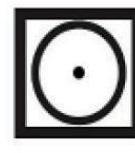

Tumble dry, low heat

Garment NOT suitable for drying in tumble dryer

- Do not dry articles that have been previously cleaned in, washed in, soaked in or spotted with petrol,/gasoline, dry-cleaning solvents or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not dry the articles containing rubber, plastic or similar elastic materials such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, raincoat plastic bags or pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.
- Do not dry clothes / articles made of foam or rubber as they may be deformed.
- Clothes / articles made of or containing metal, hard plastic and similar materials, such as belt buckles, jeans, bra wires, buttons and similar accessories will damage the machine and may cause breakdown. Do not place such items in the tumble dryer.
- Do not dry items such as woolen, silk articles and nylon stockings, delicate embroidered fabrics, garments with metal accessories and items such as sleeping bags.
- Too wet laundry or laundry with dripping water must not be put into the tumble dryer.

Preparation for the clothes to be dried

- Thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
- Separate your laundry before placing them into the tumble dryer.
- Sort the laundry according to their types and thickness. Put the same type of laundry together.

User Instructions

Load capacity



Caution : Overload is not recommended. The drying performance will be degraded when it is overloaded. The machine and your clothes may get damaged.

Please refer to the program table to select the desired loading for each setting. Do not overload the machine.

- Following table can provide you the idea of the weight for different kind of clothes.

Articles / clothes	Approx. weight(g)
Cotton quilt covers (single/double)	900/1500
Bed sheets (single/double)	600/900
Work clothes	1120
Large tablecloths	700
Small tablecloths	350
Tea napkins	100
Bath towels	700
Hand towels	300
Blouses	150
Cotton shirts	300
shirts	180
cotton dresses	500
Jeans	800
Jacket	800
Handkerchiefs	100
T-shirts	150
Shorts	70
Socks	50

- Place your clothes into dryer loosely so that they have enough room during drying and will not get tangled.

Control panel

On/Off button

 
- To turn on the machine press once.
- To turn off the machine press once again.

Start / pause button

- To start the set program, press once.
- To pause the running program, press once. To continue the program, press once again.

Program

- Continue to press the program button to select the desired drying program (Mixed/Cotton/Synthetic/1HR). The indicator next to the selected program will be illuminated.

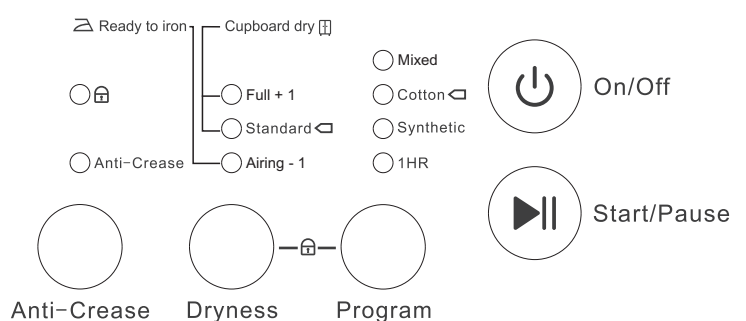

User Instructions

Dryness

- Continue to press the **dryness** button to select the desired **dryness** setting (Full + 1/Standard/Airing - 1). The indicator next to the selected program will be illuminated.

Anti-crease

- To turn on the anti-crease, press this button once. The anti-crease indicator will be illuminated. To turn it off, press the button once again. The anti-crease will be off and the indicator will go off. The Anti-Crease function provides approximately 120 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Dried laundry is prevented from becoming wrinkled by periodic drum one way running after the completion of the drying course.

Child safety lock (🔒)

- This is to avoid the operation being interrupted by a child.
- Lock : press both **dryness** and program knobs for 3 seconds, the child safety lock indicator will be illuminated denoting entering the child-lock state.
- Unlock : press both **dryness** and program knobs for 3 seconds, the child safety lock indicator will go off denoting that the lock is released.

Operating steps for the machine



Caution : Before using the machine, you should study the program chart to select the desired program setting for your clothes.

1. Open the door.
2. Make sure that the lint filter is installed
3. Load your clothes into dryer loosely. Do not overload the machine.
4. Turn on your machine by pressing "On/Off" button. The "Cotton" & "Standard" indicator lights will be illuminated.
5. Select the desired program for your clothes, i.e. Mixed-(Full + 1) -ANTI-CREASE
 - Continue to press "PROGRAM" button until the indicator for "Mixed" is illuminated.
 - Continue to press "dryness" button until the indicator for "Full + 1" is illuminated.
 - Press "ANTI-CREASE" once and the indicator is illuminated.
6. Close the door.
7. Press "START/PAUSE" button to start the drying cycle.
8. When the drying cycle is finished, it will beep one time.
9. Open the door and wait for several minutes in order to let the temperature inside the capacity to cool down.
10. Turn off the machine by pressing "On/Off" button. All the indicator lights will go off.
11. Remove all of the clothes from the dryer.
12. Clean the drum and pull out the lint filter to clean before next use.

Remark : The door is equipped with a sensor. When the door is opened during the operation, the program will change to pause mode immediately. You can close the door and press "START/PAUSE" to continue the operation. If you want to stop the operation, please press "On/Off" to stop and switch off the machine.
















User Instructions

Full program chart & consumption table

Choose the appropriate program in the below table which affect the time of the drying cycle.

Mixed	Suitable for clothing comprising particularly thick or multi-layered materials and towels.
Cotton	Suitable for cotton clothing fabrics.
Synthetics	Suitable for light man-made fabrics.
1 HR	A timed program of approximately 1 hour. Dryness level will be dependent on the amount of clothes within the machine.

 Program Selection

Program	Dryness	Customer expected result	Max Capacity (KG)	Approx. Drying time (minutes)
Cotton 				
Cotton	Full + 1	Ready to wear 	6	145
Cotton 	Standard 	Ready to wear 	6	100
Cotton	Airing - 1	Ready to iron 	6	70
Synthetic 				
Synthetic	Full + 1	Ready to wear 	3	60
Synthetic	Standard	Ready to wear 	3	45
Mixed				
Mixed	Full + 1	Ready to wear 	6	100
Mixed	Standard	Ready to wear 	6	110
Clothes equal or less than 1kg				
1Hr	/	/	<=1	60
Energy consumption values				
Program	Dryness	Customer expected result	Capacity (KG)	Energy consumption value kWh
Cotton 				
Cotton 	Standard 	Ready to wear 	6	3.81

- Please note that different program will have different max loading / capacity.
- All values given in the table have been fixed according to EN61121:2012 Standard. These values may deviate from the table according to the laundry type, laundry spin speed, environmental condition and voltage fluctuation.
- When the weight of the clothes is less than 1kg, please use the "1HR" program .

User Instructions

Ending the program – Cancelled by customer

To cancel the program ;

1. Press “ On/Off ” button.
2. The machine will stop immediately.
3. Open the door and wait for five minutes to let the temperature inside cool down.
4. Remove the clothes.



Warning : The temperature inside the capacity may still be high. Take extra care when remove the clothes.

- Clean the drum and lint filter after each drying.

Child safety lock

This machine is equipped with a child safety lock () to prevent any program interruption due to the pressing of buttons during the drying operation. All the buttons on the panel are deactivated when the child safety lock is active except the On/Off button.

- To activate the lock : press both **Dryness** and program buttons for 3 seconds, the child safety lock indicator will be illuminated denoting entering the child-lock state.
- To deactivate the lock : press both **Dryness** and program buttons for 3 seconds, the child safety lock indicator will go off denoting that the lock is released.

Overheat Safety device

This machine is equipped with an overheat safety device that switches off the machine in the event of overheating. Should the machine stop heating, turn the machine off and inspect lint filter or exhaust outlet or ventilation of the laundry room. Blockage on the filter & exhaust outlets (hose) and poor ventilation in laundry room will cause the overheating on the machine. Clean the blockage on filter & exhaust outlet and open the window in the laundry room to improve the situation. Wait for at least 10 minutes for the machine to cool down. Then press the reset key at the back of the machine before attempting to restart the machine.



Care and Maintenance

General



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Use luke warm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause a damage and fire hazard.
- Clean the exterior of the appliance, inner tube and door seal with a damp cloth. Open the door for aeration to dry the inner tube through.
- Avoid water going in the control panel. Clean with a dry cloth only.
- Clean the lint filter after each use.

Clean the lint filter



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Clean the lint filter after each use.
- Pull it upward to remove the filter from the machine.
- Clean the filter with a damp cloth.
- Put it back to the machine after cleaning.



Moving your appliance

Moving

Refer to section “Transportation” under “Installation”

Trouble Shooting

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below. If the problem persists, contact the retailer if the machine is still under guarantee. If the machine is out of guarantee, contact an approved service agent on **0345 257 7271**.

Problem	Possible cause	Solution
Appliance does not start	<ul style="list-style-type: none"> • The mains plug is not plugged in. • Protection devices or fuses of the electrical system at home open • Machine is overloaded. 	<ul style="list-style-type: none"> • Insert the mains plug. • Check the protection devices and fuses. • Remove the clothes until the weight of clothes is less than 6 kg.
Laundry has shrunk	<ul style="list-style-type: none"> • Incorrect program is used • Clothes are not suitable for drying in dryer. 	<ul style="list-style-type: none"> • Review the advice on garments label to select the suitable program setting. • Dry only the clothes which is suitable for drying in the dryer.
Laundry not dry enough at the end of drying	<ul style="list-style-type: none"> • Too many clothes put into the machine at the same time. • Lint filter is partially clogged. 	<ul style="list-style-type: none"> • Reduce the quantity of clothes for the drying each time. Do not overload • Clean the lint filter after each use.
Laundry too dry	<ul style="list-style-type: none"> • Not taken out the clothes in time while the drying cycle is finished. • Incorrect program is used 	<ul style="list-style-type: none"> • Take out the clothes immediately while the drying cycle is finished. • Review the advice on garments label to select the suitable program setting.
Noisy appliance	<ul style="list-style-type: none"> • Not position on even surface • Appliance is touching objects around 	<ul style="list-style-type: none"> • Install on even surface and leveling the appliance • Ensure spacing at both sides and above the appliance

Technical Specifications

Model	V6SDW V6SDS V6SDB
Energy efficiency class ①	C
Energy consumption – per year ②	452 kWh
Rated capacity (max.)	6kg
Operating noise level dB(A)	69
Product dimension	H840 x W595 x D550
Net Weight	33kg
Rated power input	2000W
Rated voltage/Frequency	220-240V~/50Hz
Minimum operation temperature	-10°C

NOTE :

- ① A+++ (most efficiency) to D (least efficiency)
- ② Energy consumption 452 kWh per year, based on Standard cotton program at full(6kg) and partial(2.5kg) load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.



Disposal information



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

Remember: Old machine must be disposed of carefully – Cut off the mains plug and /or remove the door to be unusable before disposed - if in doubt, contact your local council for details on how to dispose of an old dryer.

Product fiche

Brand	BUSH
Model	V6SDW/V6SDS/V6SDB
Dryer Type	Air-Vented
Rated capacity	6 kg
Energy efficiency class ①	C
Energy consumption ②	452 kWh
Automatic or non-automatic	Automatic
EU Ecolabel	N/A
Energy consumption of the standard cotton programme at full load	3.81 kWh
Energy consumption of the standard cotton programme and partial load	2.05 kWh
Power consumption of the off-mode (Po)	0.46 W
Power consumption of the left-on mode (PI)	0.46 W
Duration of the left-on mode	10 min
Weighted programme time of the standard cotton programme at full and partial load	90 min
Programme time of the standard cotton programme at full load	120 min
Programme time of the standard cotton programme at partial load	68 min
Sound power level for the standard cotton programme at full load	69 dB
<p>Cotton + Standard programme ,which is the "standard cotton programme" used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.</p>	

NOTE :

- ① A+++ (most efficiency) to D (least efficiency)
- ② Energy consumption 452 kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

BUSH

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the Customer Helpline on 0345 257 7271.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW