
Hartley Glass Dining Table

Assembly Instructions - Please keep for future reference

331/1538

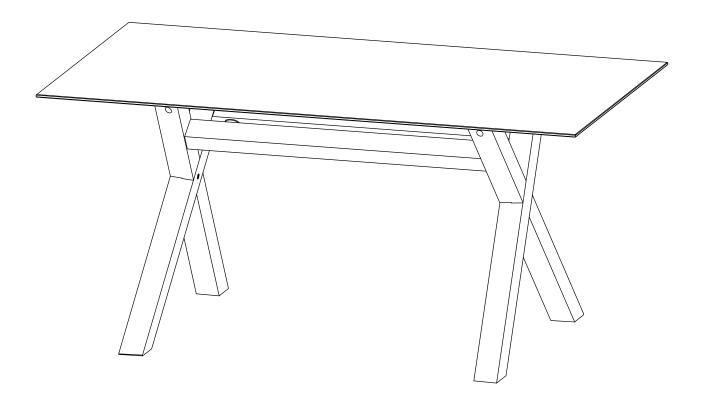

Dimensions

Width - 160cm Depth - 90cm Height - 75cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure that all bolts and fittings are tightend properly.

Glass Safty

- Keep these instruction for future reference.
- Imported by: Argos Ltd.

• Batch No: 545962 (按订单PO号)

· If the glass is chipped or broken, stop using the product and

- Date of Manufacture: Nov.2014 (按出货年月)
- Type of glass used: 8mm toughened glass

consult the Manufacturer or Supplier.


489-499 Avebury Boulevard. Saxon Gate West. Central Milton Keynes. MK9 2NW

- Warning:
- (a) Do not place very hot or very cold items on the glass surface(s) unless adequately thick table mats are used to prevent such items from coming into contact with the glass.
- (b) Do not sit or stand upon the glass surface(s).
- (c) Do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.
- (d) When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary, do not use washing powders or any other substance containing abrasives since these substances scratch glass.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**

Please check you have all the panels listed below

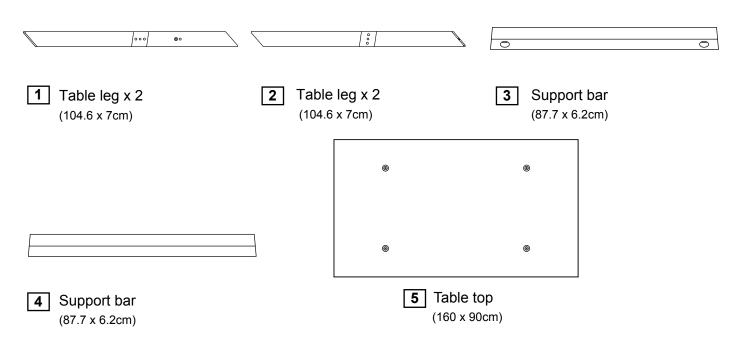

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	B ())))))))))))))))))))))))))))))))))))	© ())))))))))))))))))))))))))))))))))))
40mm Bolt x 4	50mm Bolt x 2	80mm Screw x 4
D O Plain washer x 8		
	Nut x 4	Connector x 4
G		
Cap x 4	Wooden dowel X 8	Wrench X 1
Hex key X 1		


Ruler - Use this ruler to help correctly identify the screws

The bolts length is measured from the head to the point (40mm bolt shown).

Step 1


Assemble table legs

a:Fix table leg 1 and 2 by using bolt **B**, wooden dowels **f**.

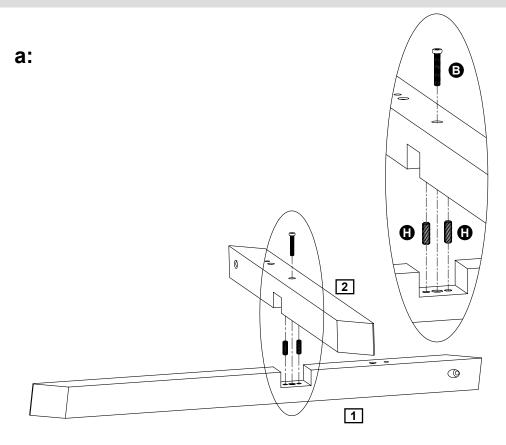

b:Fix screws **G** and insert wooden dowels **()** into table legs.


b:

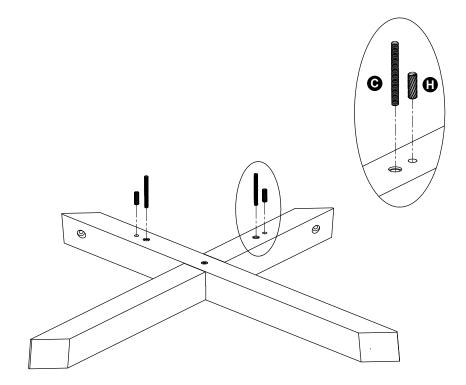



Step 2

Assemble support bars

 a:Attach support bars 3 and 4 to table legs, then fix with connectors 6, plain washers 0 and nuts

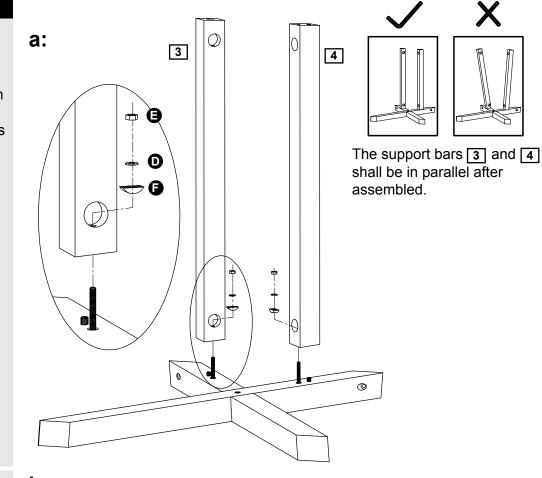



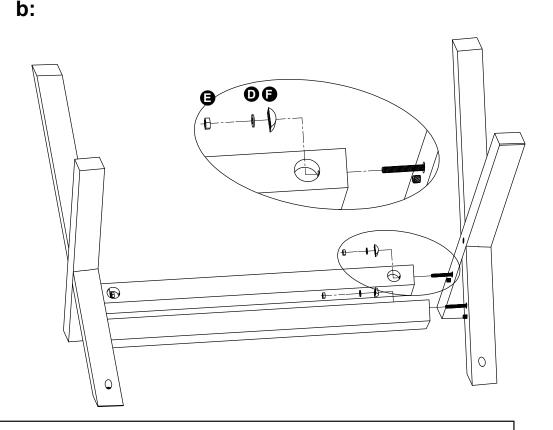



Important note: Do not fully tighten bolts at this stage.

Step 3

Assemble table top


Two people are needed here.

Place table top **5** upside down on a clean protected surface.

Fix the assembled unit frame onto table top using bolts (A), plain washers (D).



Important note: After all the parts are positioned, you can now fully tighten all bolts fixed on previous steps.

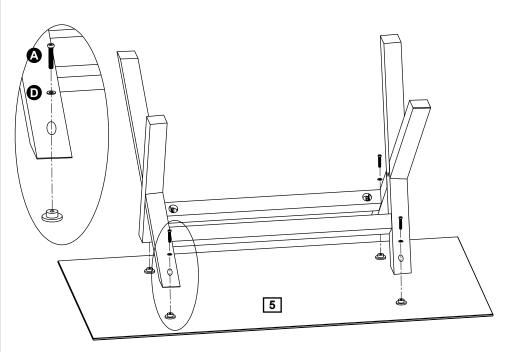

Step 4


Assemble cap

Cover the holes by using caps **G** as shown.

Turn the table upright.

Remove the plastic film on table top.

Assemble is complete

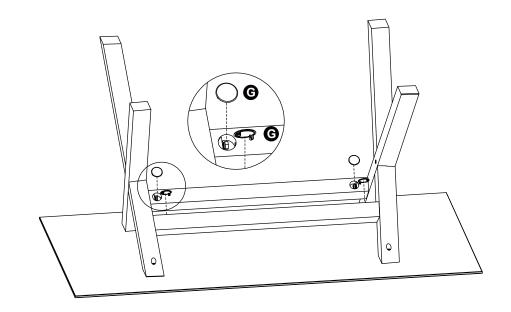

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800

Dining Chair



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

A Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

- Unit weight: 4.9kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

Care and maintenance


• Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish. • Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.

Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the parts listed below

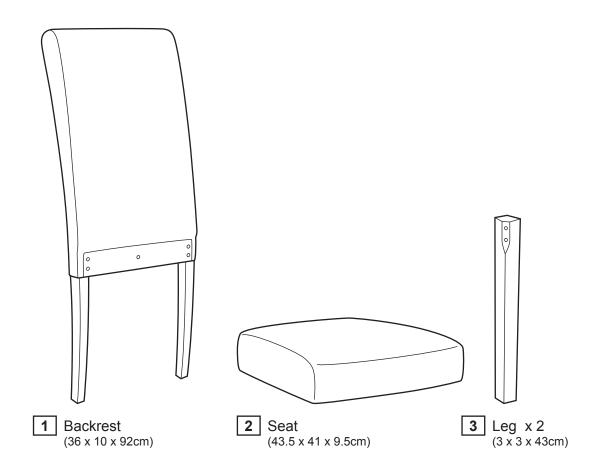

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	B©	C ()
M6 x 50mm Bolt x 9	Spring washer x 9	Flat washer x 9
Allen key x 1		

Ruler - Use this ruler to help correctly identify the screws

 $0 \quad 5 \quad 10 \quad 15 \quad 20 \quad 25 \quad 30 \quad 35 \quad 40 \quad 45 \quad 50 \quad 55 \quad 60 \quad 65 \quad 70 \quad 75 \quad 80 \quad 85 \quad 90 \quad 95 \quad 100 \quad 105 \quad 110 \quad 115 \quad 120 \quad 125 \quad 130 \quad 135 \quad 140 \quad 145 \quad 150 \quad 155 \quad 160 \quad 165 \quad 170 \quad 100 \quad 10$

Step 1

Attaching legs

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts (A), spring washers (B) and washers (C).




Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

Note:

Use oval head of allen key **D** on tight angles.

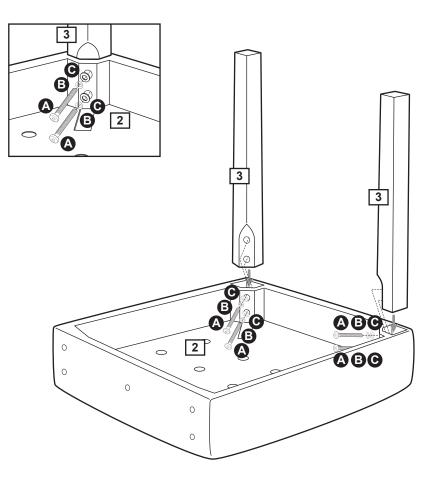

Step 2

Attaching backrest

Place the backrest on a flat protected surface.


Position the seat 2 on the backrest 1 as shown and fix using bolts (A), spring washers (B) and washers (C).

Important:

Fasten bolts using allen key D but do not fully tighten at this stage.

Note:

Use oval head of allen key **D** on tight angles.

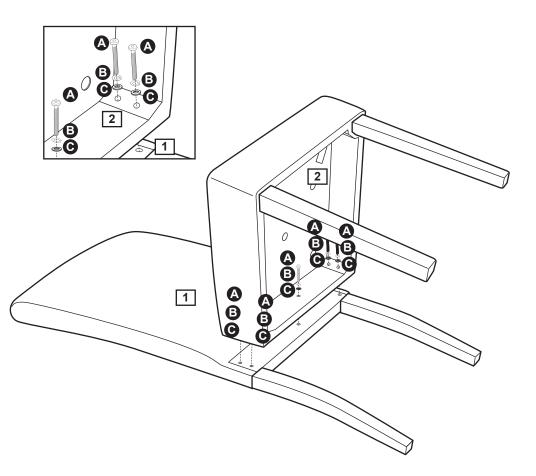

a:

Step 3

Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

a: Tighten all bolts using allen key**D**.

Note:

Use oval head of allen key **D** on tight angles.


Note: This step is essential to prevent the chair from wobbling due to uneven legs.

b: Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.

C: After the sitting test, re-tighten bolts again if any adjustment is needed.

Note: It is highly recommended to re-tighten all bolts after using the chair for 7 days.

Note: Keep allen key to re-tighten bolts when required.

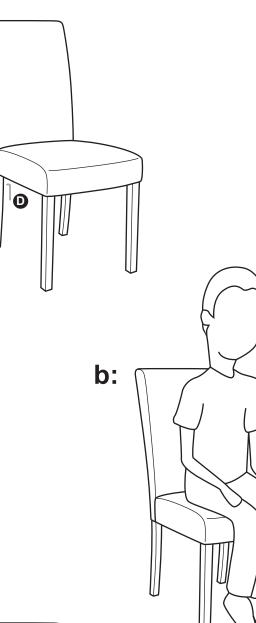



Assembly is complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800