

vax[®]

DynamoPower
TOTAL HOME

**DYNAMIC POWERFUL PERFORMANCE,
FOR TOTAL HOME CLEANING**

LET'S GET STARTED.



C85-ZH-Te

Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

- Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.
- This vacuum cleaner can be used by children aged from 8 years and above and persons with reduced physical, sensory



Don'ts

- Don't use this vacuum cleaner if it has been dropped, damaged or left outdoors.
- Don't run over the power cord or use vacuum cleaner if the power cord or plug is damaged. Please contact our Customer service Line on: 0330 026 8455 (Mon-Fri 8:30am to 6:30pm, Sat 9:00am to 5:00pm).
- Don't handle the plug or use the vacuum cleaner with wet hands.
- Don't pull or carry this vacuum cleaner by the power cord.
- Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord.



Do's

- Turn off all controls on the vacuum cleaner before disconnecting or connecting the power cord.
- Always make sure both the pre-motor/post-motor filters are in place before use.
- Always switch off the vacuum cleaner before disconnecting or connecting the hose and accessories.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Always replace the fuse in the plug with a British 13amp fuse.
- Always protect the power cable from heated surfaces and open flames.

or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the vacuum cleaner in a safe way and understand the hazards involved. Children shall not play with the vacuum cleaner. Cleaning and user maintenance shall not be made by children without supervision.

- Only Vax recommended tools and accessories should be used with this vacuum cleaner.

- Don't unplug vacuum cleaner by pulling on the power cord.
- Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the vacuum cleaner in an area with explosive vapours or liquid.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- Don't attempt to remove blockages with sharp objects as this may cause damage to your vacuum cleaner.
- Don't vacuum up hard or sharp objects such as glass, nails, screws or coins etc.
- Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- Take extra care when positioning and using the vacuum cleaner on the stairs.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Store your vacuum cleaner in a cool, dry area. If filters have been cleaned as per user guide instructions ensure they are thoroughly dry before storing away.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Thank you for buying this Dynamo Power Total Home.

Taking care of your carpets and hard floors

The Dynamo Power Total Home is designed to make vacuuming carpets and hard floors regularly, as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your carpets and hard floors will ensure they keep their appearance for longer. You've chosen carpets and hard floors for your home for a reason and Vax will help you take good care of them.

Taking care of your Dynamo Power Total Home

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:

Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WR9 0LW, UK

This user guide can be found online at: vax.co.uk/support

The Vax logo is displayed in a bold, orange, sans-serif font. The letters are lowercase, and there is a registered trademark symbol (®) to the upper right of the 'x'.

Let us know what you think @VaxUK

Contents

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

Let's talk technical

Accessories

 
Notes

What to do if it goes wrong


Getting in touch

Dynamo Power
Total Home
(Included with all models)

Included with your machine



Combination Floorhead

 


Telescopic Extension Tube



3-in-1 Tool



 Accessory Hose



Hardfloor Tool



TurboTool



Tool Connector



Stretch Hose

 


Up-top Tool

Initial Setup for normal operation

1. Use the base accessories.
 - a. Shortest hose.
 - b. Extension tube set to shortest practicable length.
2. Clean filters installed.
3. Dust receptacle empty.
4. All Bleeds must be closed.
5. Floorheads/tools set to Carpet Mode for carpet cleaning.
6. Mechanical Agitation turned ON for carpet cleaning.
7. Floorheads/tools set to Hard Floor Mode for hard floor cleaning.
8. Mechanical Agitation turned OFF for hard floor cleaning.

Getting to know your machine

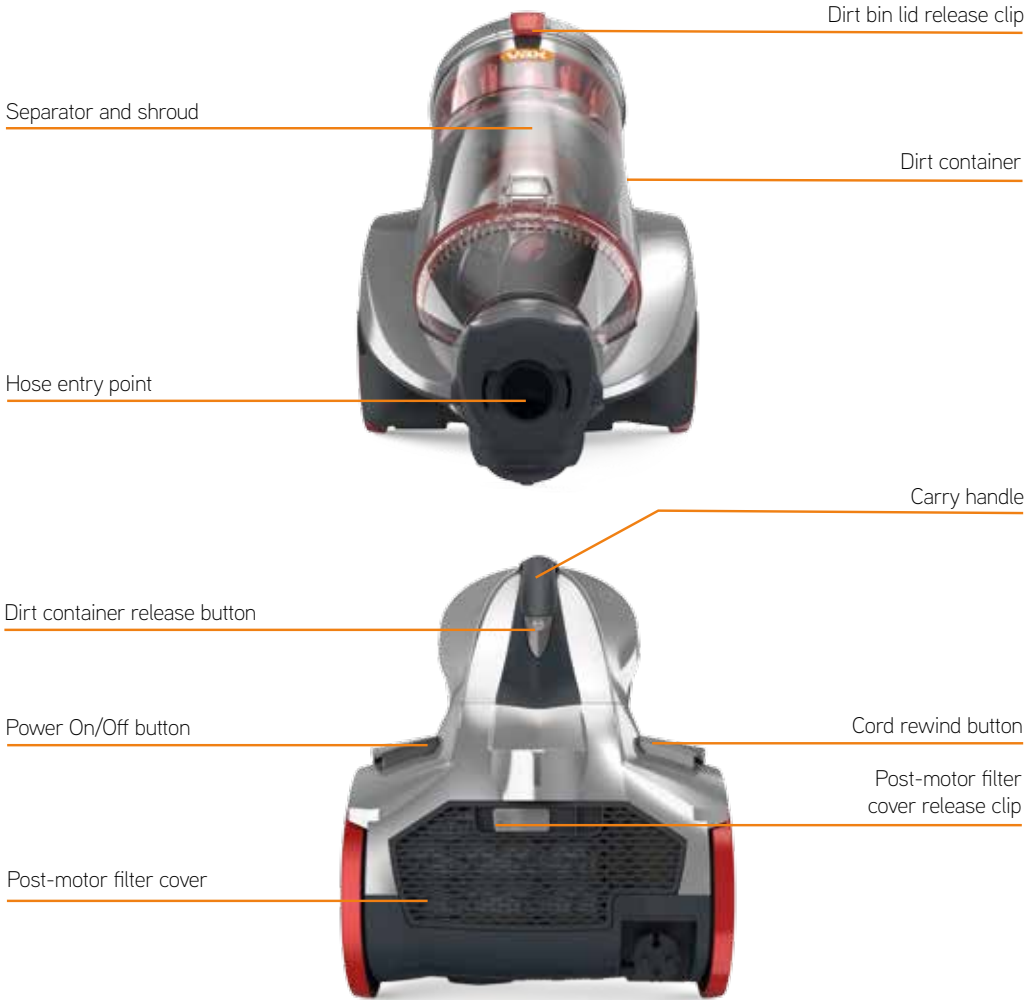

Technical Specification

Name **Dynamo Power Total Home**
Voltage **220-240V-50Hz**
Wattage **800w**
Cord length **6m**
Weight **5.2kg**

Accessories & Consumables


Pre filter 1-7-136844-24	Tool connector (Type 1) 1-1-133838-00
Post-motor 1-7-136845-24	Hardfloor tool (Type 2) 1-9-128016-00
TurboTool (Type 5) 1-1-134419-00	Combination floorhead tool (Type 5) 1-1-134341-00

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE


Before you begin cleaning

- Always switch off and unplug the vacuum cleaner before connecting or disconnecting the hose/attachments, or removing and emptying the dirt container.
- The vacuum cleaner is equipped with a thermal cut-out. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens, switch the vacuum cleaner off and unplug from electrical socket. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filters please wait 24 hours for the filters to fully dry before putting back into the vacuum machine).
- For best cleaning results, filters should be tapped over a bin every 4-6 uses to remove dirt and debris and washed every 3 to 6 months (depending on the level of use).
- If the vacuum cleaner is blocked, switch off and unplug before removing the blockage.

 
Assembling your vacuum cleaner

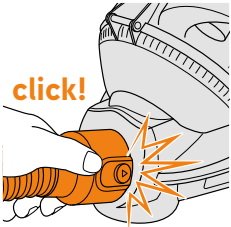

 
Press both buttons at the end of the hose and push hose into the hose entry point.



 
Insert the hose grip into the telescopic extension tube.



 
Press the button on the telescopic extension tube and adjust to required length.

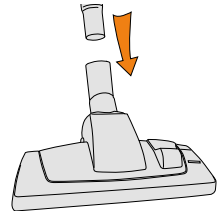

 Insert the other end of the telescopic extension tube into the floor head.

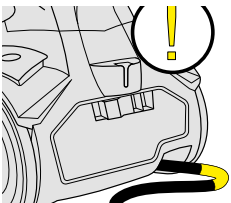

 Fully unwind the power cord. A yellow mark on the cord indicates the recommended cord length. Do not exceed the cord beyond the yellow mark.

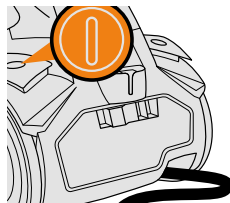

Plug in and switch the unit on by pressing the power button.

When unwinding the power cord always pull out to the yellow marker but no further.

 
CAUTION



Using your machine

CAUTION: The base of the vacuum cleaner should always be positioned flat on the floor when starting and in use. The dirt container should be locked into place before lifting the vacuum cleaner by the carry handle.


How to use

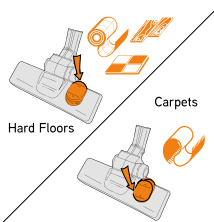


For use on carpets, click rocker switch forward.
For use on hard floors click rocker switch back.



 
Raise brushes for carpets.



Lower brushes for hard floors.

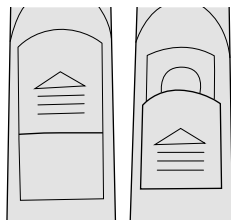 


 Slide vent cover on hose grip open to reduce suction if required.

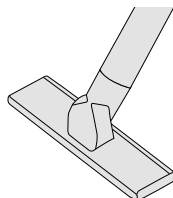

For the **most efficient** results on hard floors replace the combination floorhead with the specialist hard floor tool.

 
Using accessories

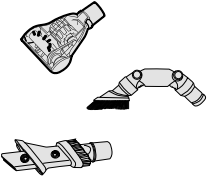

Choose an accessory.




 Choose an accessory and push onto the telescopic extension tube or hose.

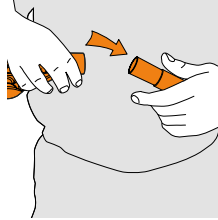


The TurboTool connector must be fitted on the hose when using the TurboTool.

 Storage

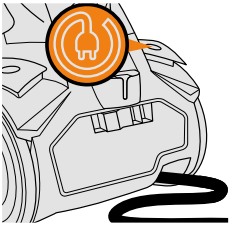

 Press the cord rewind button to retract the cord into the vacuum cleaner.

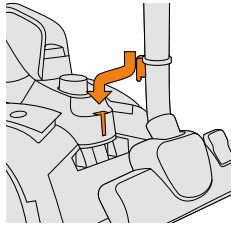

Place the floorhead into the parking slot on the back of the vacuum cleaner for storage and carrying.

CAUTION: Make sure to hold the cord with your other hand to prevent injury when rewinding.

 
Taking care of your machine

IMPORTANT: Always switch off and unplug the vacuum cleaner from the electrical socket before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.


Pre-motor filter should be tapped over a bin every 4-6 uses to remove dirt and debris. Do not use your vacuum cleaner without all of the filters in place.

The motor is equipped with a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off.

Emptying and cleaning the dirt container

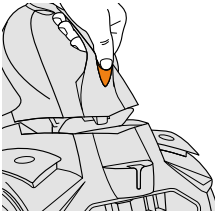

 Remove dirt container by pushing down the dirt container release button and lifting the dirt container.

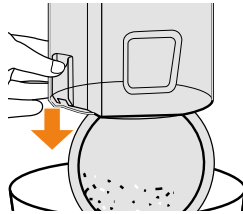

Hold the dirt container over a bin. Push down the dirt release clip at the bottom of the dirt container. The dirt release door will open allowing dirt/debris to fall out.

Don't over fill the dirt container to avoid blocking the air flow through the vacuum cleaner.



Cleaning the Pre-motor filter

 
CAUTION: Incorrect fitting of the separator cap will reduce suction.



Lift the dirt bin lid release clip. In a hinge like manner lift open the dirt bin lid.




Pull the filter tab and remove the pre-motor filter.

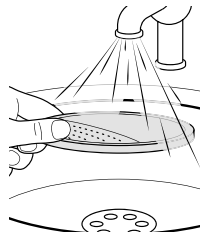


Tap the filter over a bin to remove any dirt/debris. Wash the filter under running water (40 degrees max).

 
Taking care of your machine

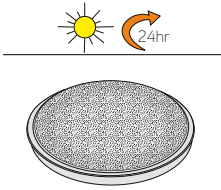

 Leave for 24 hours or until fully dry before replacing.

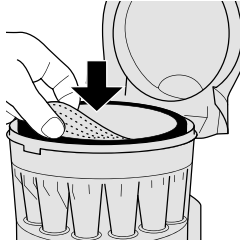

 
Refit the pre-motor filter into the dirt container with the tab being visible.

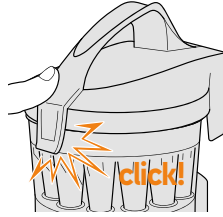


In a hinge like manner close the dirt bin lid until it clicks into place.

Post-motor filter maintenance

 
IMPORTANT: The post motor filter is designed to offer long life with no maintenance. The filter should be checked periodically and when heavily discoloured it should be replaced. Please do not wash, scrub or brush the filter as this will damage the filter

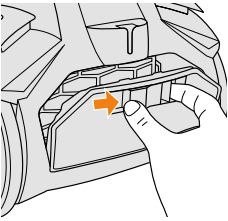

 Push the post-motor filter cover release clip to the right to remove the post motor filter cover.

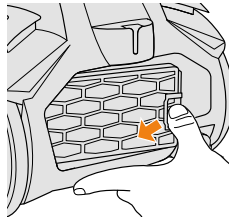


 Pull the post motor filter to the left and remove the post motor filter.

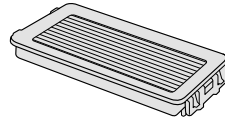


Check the post motor filter for discolouration. Do not wash the post motor filter.

 Cleaning the separator, shroud and separator plate

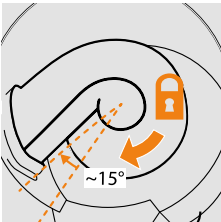


After emptying the dirt container, twist the separator clockwise to unlock and lift to remove.

 Taking care of your machine

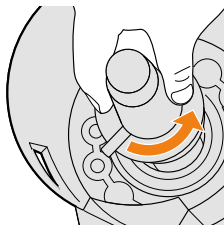

 Unscrew the shroud anti clockwise and remove.

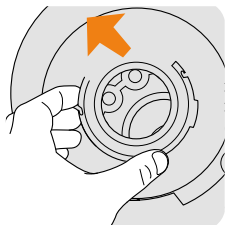


Pull to remove the separator plate.




Tap the separator, shroud and separator plate over a bin to remove any dirt/debris. Using a dry cloth wipe the remaining dirt /debris from the separator, shroud and separator plate.

 
Re-fitting the separator plate, shroud plate

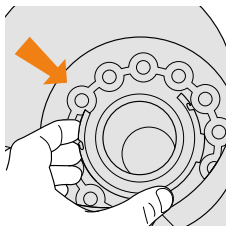

 
Line up and push the separator plate into place.

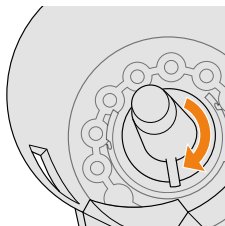

 
Refit the shroud twisting clockwise to lock into place.

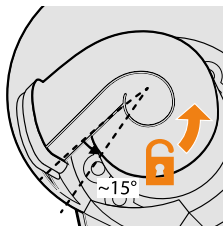

 Line up the separator making sure both rectangular holes in the dirt container and separator line up.

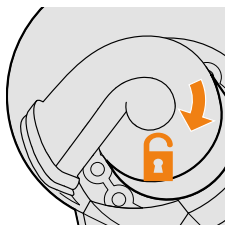


 Twist the separator anti clockwise to lock into place.

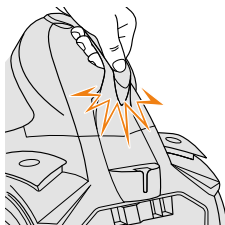


Refit the dirt container pushing down firmly until it clicks and locks into place.

 
Removing blockages from the TurboTool

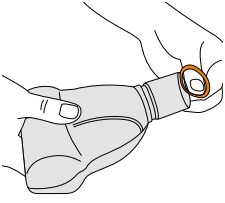


Slide the locking ring to remove.

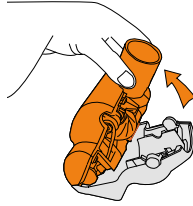 

Lift and separate the housing.

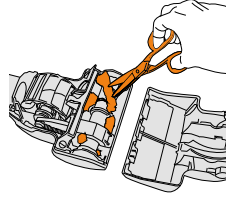 


 Using a pair of scissors, cut any hair or debris free from around the brushes.

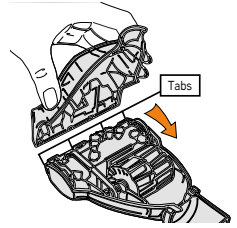

Line up the tabs on front of housing and push together to refit. Slide locking ring into groove to secure.

 Removing blockages from the hose

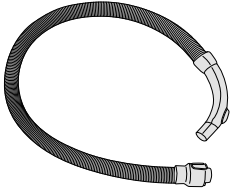

Remove the hose from the vacuum cleaner and telescopic extension tube. Insert a broom handle or similar blunt instrument into the hose to remove blockage.

To test for a blockage in the hose, drop a small ball of paper into the hose. The paper will drop through if the hose is clear.



Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Pro Cleaning Kit (Type 2)

1-1-133326-00

All our best tools all in one kit that makes cleaning your home quicker, easier and with even better results. We've taken care of cleaning all of the hard to reach areas such as on top of cupboards and in between blinds to the dust that collates behind and within the radiator.



TurboTool (Type 6)

1-1-134419-00

Use the TurboTool for vacuuming your stairs, upholstery and car interiors. It's great for picking up stubborn pet hair.



Fur 'n' Fluff Tool

1-1-131392-00

Specifically designed to remove extra stubborn pet hair from upholstery, furniture and carpets.







Notes



What to do if it goes wrong

Problem

There is an accessory missing

Solution

- Check the 'This pack contains' panel on the box to make sure the part is included with your vacuum cleaner.

Why won't the vacuum cleaner pick up?

- The dirt container may not be correctly fitted, remove the dirt container from the vacuum cleaner and check it's assembled correctly, refit ensuring it's locked into place.
- The separator/shroud are blocked. Go to 'Taking care of your machine'
- The separator/shroud are incorrectly fitted. Go to 'Taking care of your machine'
- The filter may be clogged, clean the filter. Go to 'Taking care of your machine'.
- The dirt container may be blocked, empty the dirt container. Go to 'Taking care of your machine'.
- There may be a blockage in the hose/tube. Disconnect from the vacuum cleaner and carefully remove any blockages. Go to 'Let's talk technical'.

Why does my vacuum cleaner have no power?

- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing, always replace with a British 13amp fuse.
- The motor thermostat may have tripped. If this has happened, unplug the vacuum cleaner. Remove and empty the dirt container and check the hose for blockages. Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).

Why is dust escaping from the vacuum?

- The filters may be clogged, clean the filter. Go to 'Taking care of your machine'.

IMPORTANT: To reduce the risk of personal injury, unplug the vacuum before performing maintenance/troubleshooting checks.

It's quick and easy to
register for your **FREE**

**2 year
guarantee[†]**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

we're here if you need us

Online **vax.co.uk/support**

Call: (UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm*

Alternatively, you can write to us at:

Vax Ltd, Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich,
Worcestershire, WL9 0LW, UK

[†] Registration required. Terms and conditions apply, see vax.co.uk for details.

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

GET IN TOUCH

 0330 026 8455  info@vax.co.uk  vax.co.uk  [VaxVacuums](https://www.facebook.com/VaxVacuums)  [@VaxUK](https://twitter.com/VaxUK)

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the C85-ZH-Te is manufactured in compliance with the following Directives: **Safety:** 2006/95/EC Low Voltage Directive.
EMC: 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 All rights reserved. VAX®, VAX Lozenge, are trade marks or registered trade marks of Techtronic Floor Care Technology Ltd.

