
# 1 Door TV Unit

#### Assembly Instructions - Please keep for future reference

033 xx 6002 457/1016

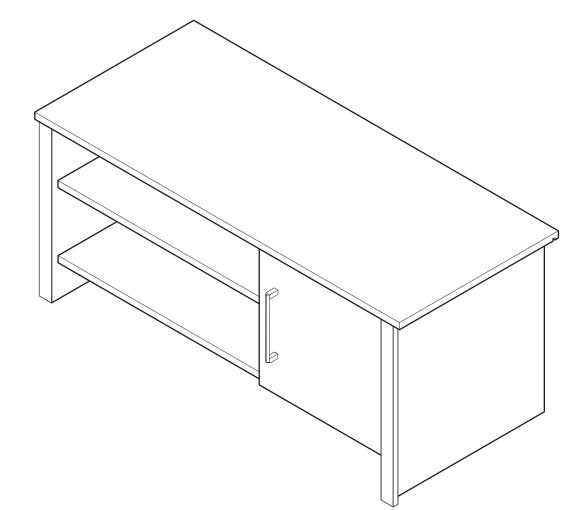

#### Dimensions

Width - 89.0cm

Depth - 38.8cm

Height - 40.0cm



#### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 01709 534123** Please turn to back page for important information when contacting Customer Helpline.



# Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and seperate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

• We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Do Not dispose of packaging until assembly complete.
- Dispose of all packaging carefully and responsibly when assembly complete.

#### Care and maintenance

• To protect the furniture, position the furniture out of direct sunlight and away from direct heat sources such as radiators and fires.

• Do not place the furniture in excessively dry and humid conditions.

• From time to time check that there are no loose screws on this unit.

• Always lift furniture when moving it (do not drag) otherwise the joints may be damaged. • Do not place hot or cold objects on the surface, always use protective mats to avoid marking the furniture.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- Clean spills up immediately
- Dust surfaces with a soft, dry, lint free cloth.

• More stubborn marks can be removed using a damp (not wet) cloth. Wipe the surface dry immediately using a soft lint free cloth.

• Do not use detergents, abrasive cleaning products or cleaning products that contain ammonia, solvents or silicone as these may damage the surface finish.


Components - Pa	If you have damaged or missing Customer Helpline: 01709 53 for important information when contact	<b>4123</b> Please turn to back page
Please check you have all the p	anels listed below	
Important - Thick lines -	indicate finished edges	3
.       .       .         D015       .       .         Top       .       .         (90038.8cm)       .       .         0       .       .	ο       ο         i       i	O   O   O   O   Door   30.0x30.0cm)     OO23   Back   (30.8x30.8cm)

I


If you have damaged or missing components, call the **Customer Helpline: 01709 534123** Please turn to back page for important information when contacting Customer Helpline.

#### Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly, In some case more fittings may be supplied than are required.

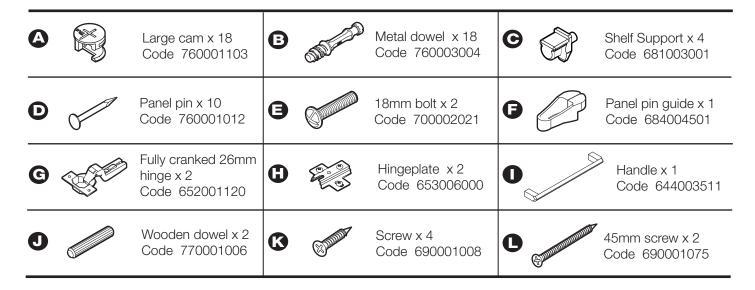



#### Tools required

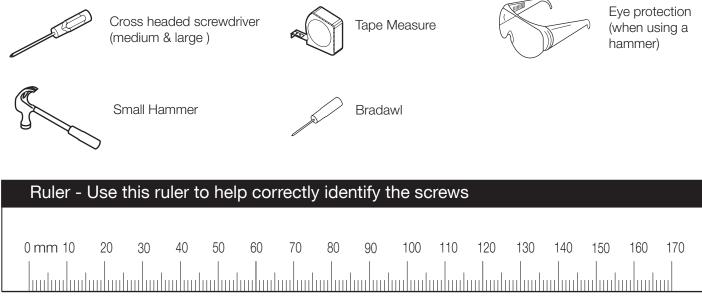



# Exploded View

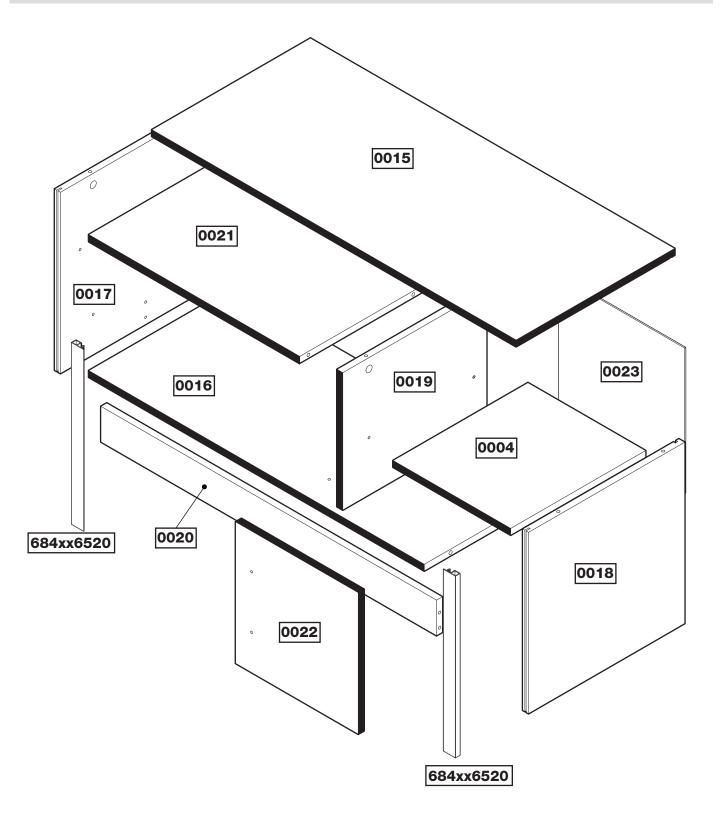

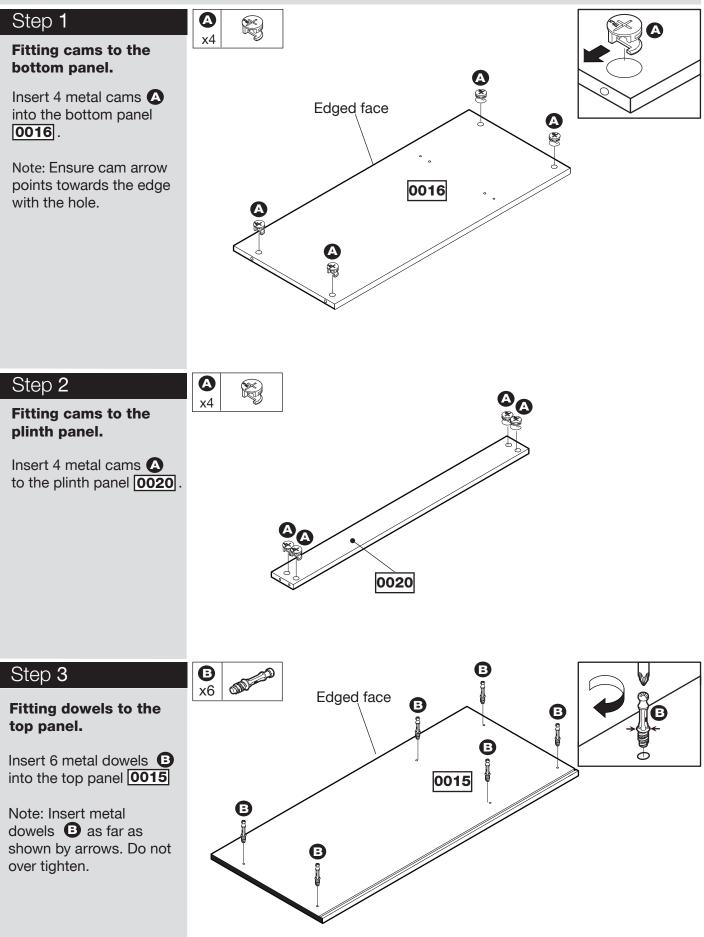

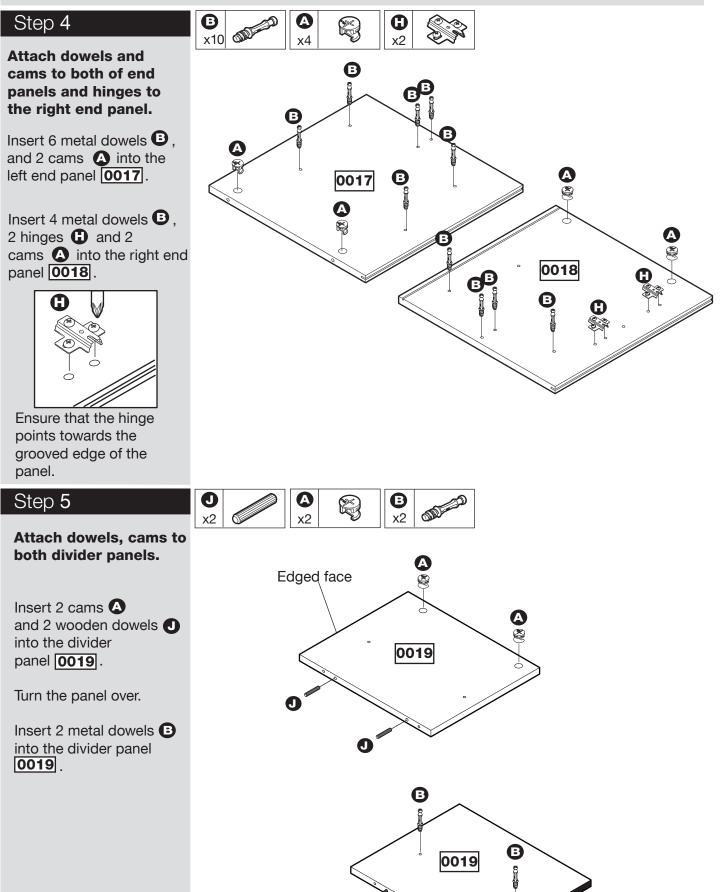

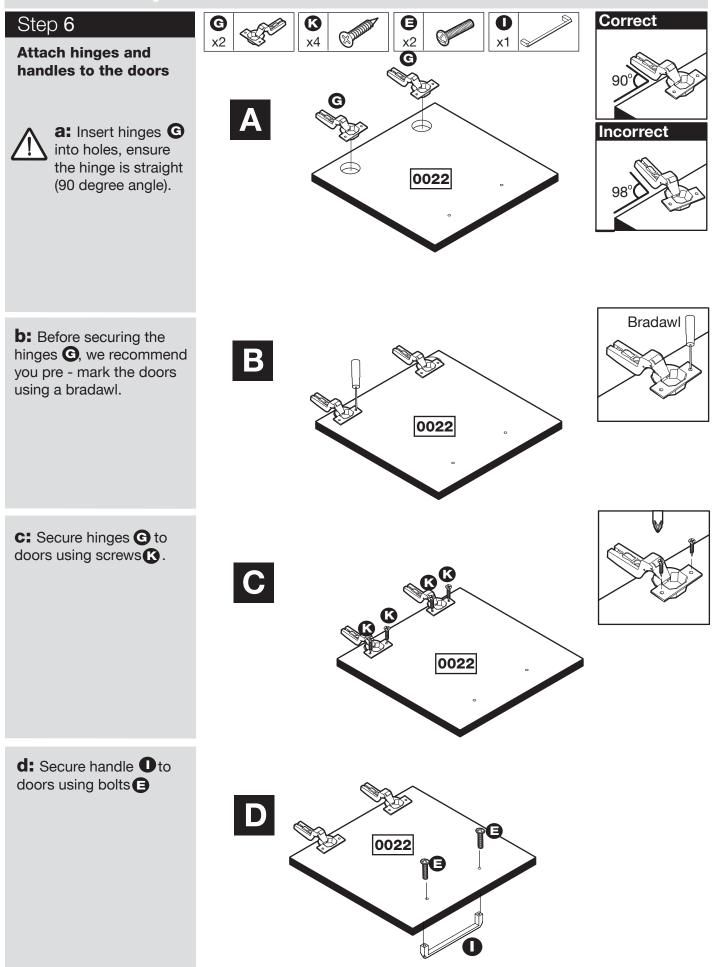

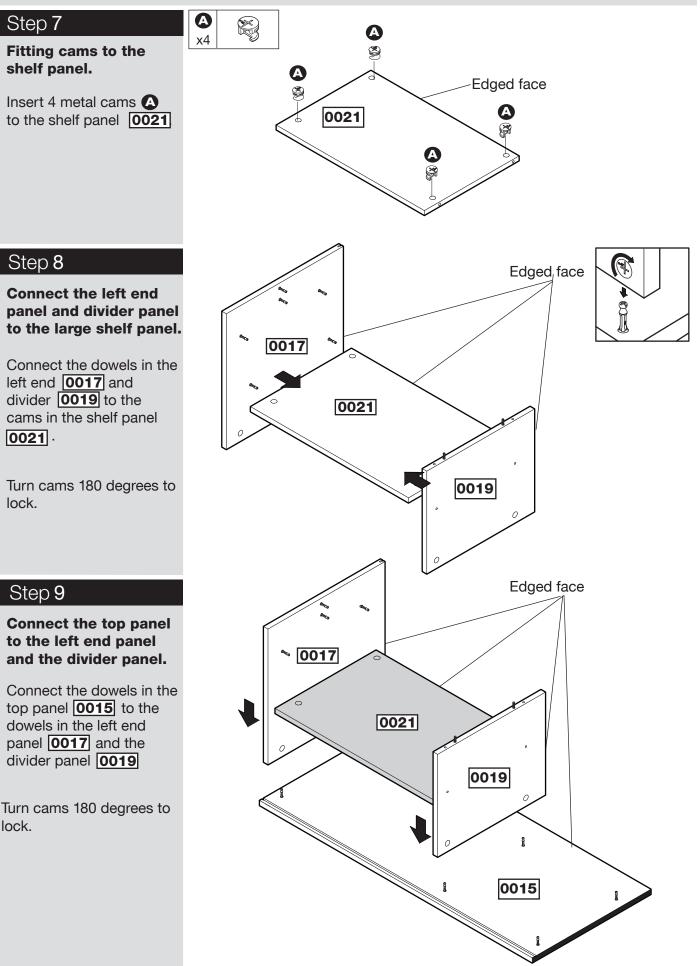


### Step 10

#### Connect the bottom and the plinth panel to the left end panel.

Connect the dowels in the left end panel **0017** to the cams in the bottom panel **0016** and the plinth panel **0020**. Ensure that dowels in **0019** locate into bottom panel guide holes.

Turn cams 180 degrees to lock.

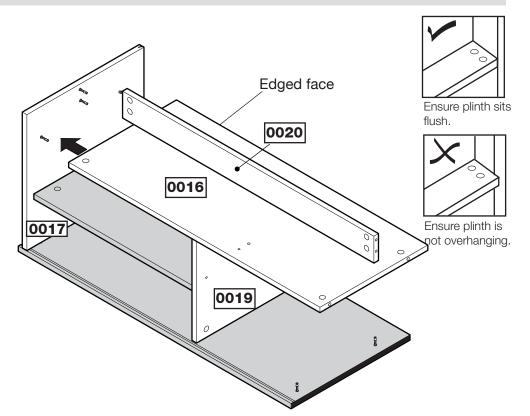


### Step 11


Connect the right end panel to the top, bottom and plinth panel.

Connect the dowels in the top panel **0015** to the cams in the right end panel **0018**.

Connect the dowels in the right end panel **0018** to the cams in the bottom panel **0016** and the plinth panel **0020**.

Turn cams 180 degrees to lock.

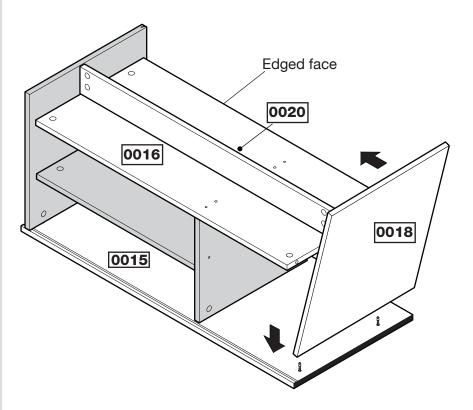

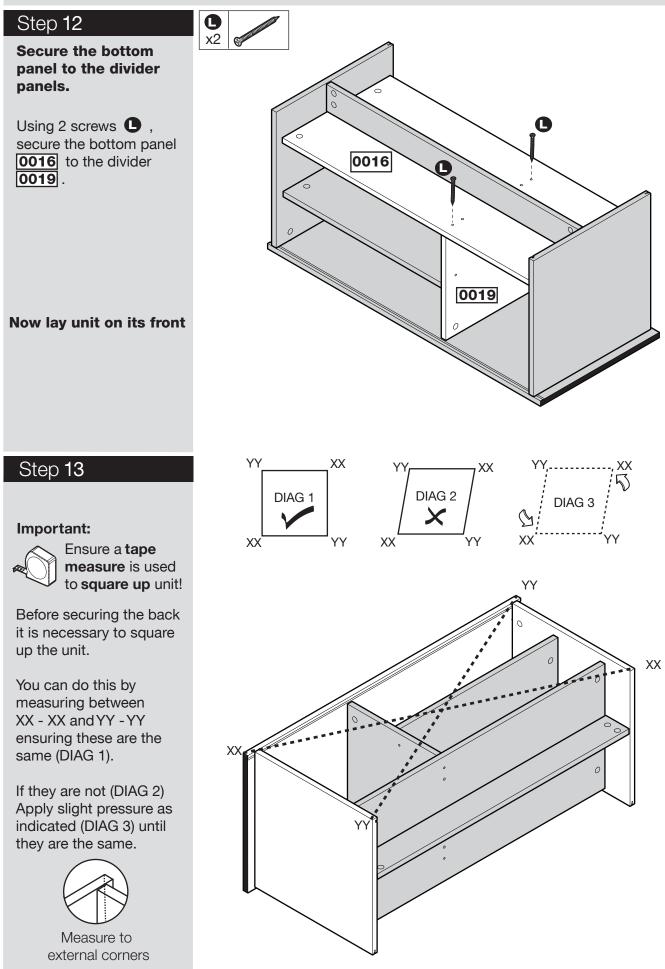


### Step 14

#### Attach the backpanel

Slide the back panel into the end and top panel grooves.

Use the panel pin guide when locating the panel pins. This will hold the panel pins vertical and ensure the correct distance from the edge.

Ensure that the backpanel is fully inserted into grooves.

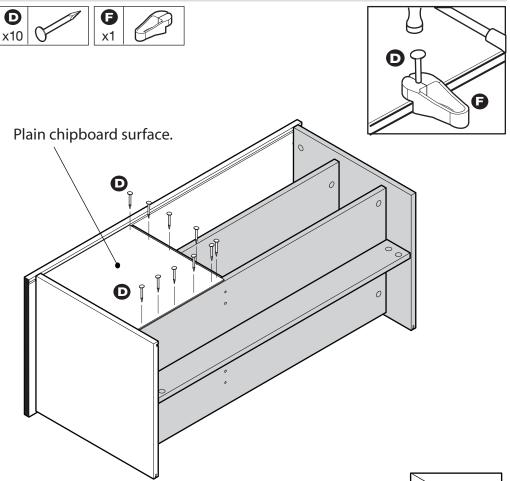

#### Step 15


### Lay unit on its back to attach the trims

Remove protective film from silver trim.

Locate the notch on the trim into the grooves in the end panels.

To insert trims use a hammer, place a cardboard packing piece between the hammer and trims to protect the trims.

Ensure that the trims are inserted fully.

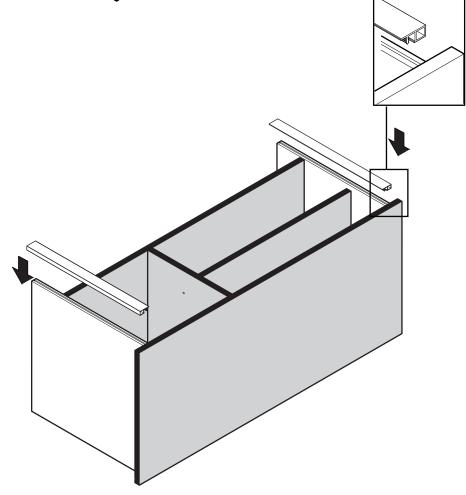

#### Step 16

**Fitting the shelf** supports.

#### Stand Unit Upright.

Insert shelf supports G into the right end 0018 and divider panel 0019.

Once inserted, seat the shelf on top of the shelf supports.


Step 17

hingeplate.

**Hanging door** 

a: With help, slot door

Ensure screw on hinge slides into the slot on

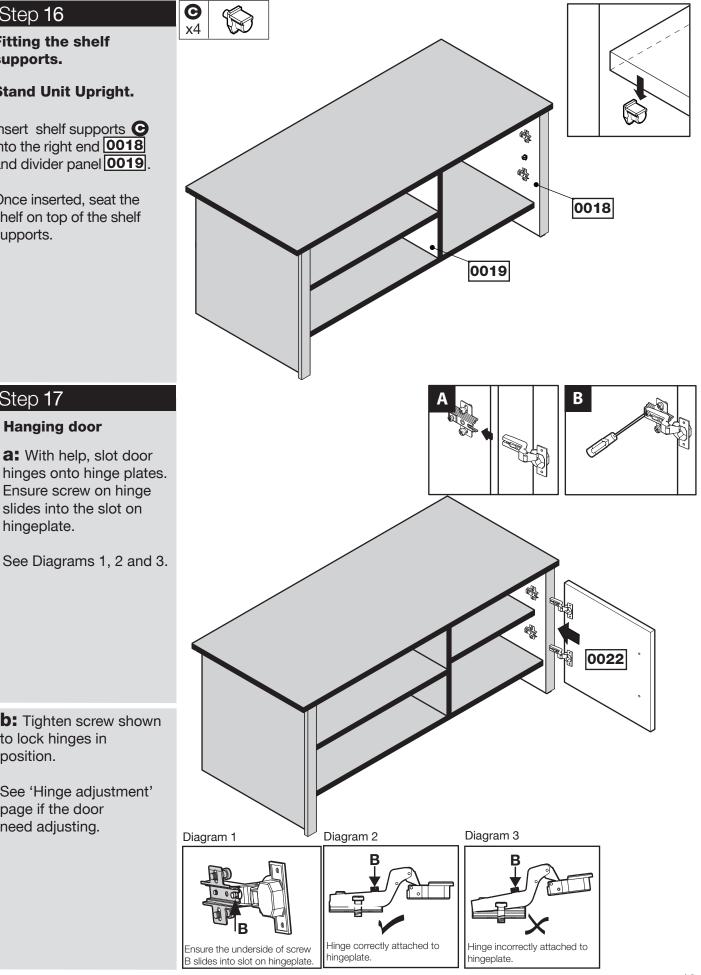

**b:** Tighten screw shown to lock hinges in position.

See 'Hinge adjustment' page if the door need adjusting.

### Step 18

#### Hinge adjustment

**a:** To move door up or down: loosen screws shown and move door to suit.


Re-tighten screws.

**b:** To move door in or out: loosen screw shown and move door to suit.


Re-tighten screw.

**C:** To move door left or right: loosen or tighten screw as shown.

Be careful not to fully unscrew.

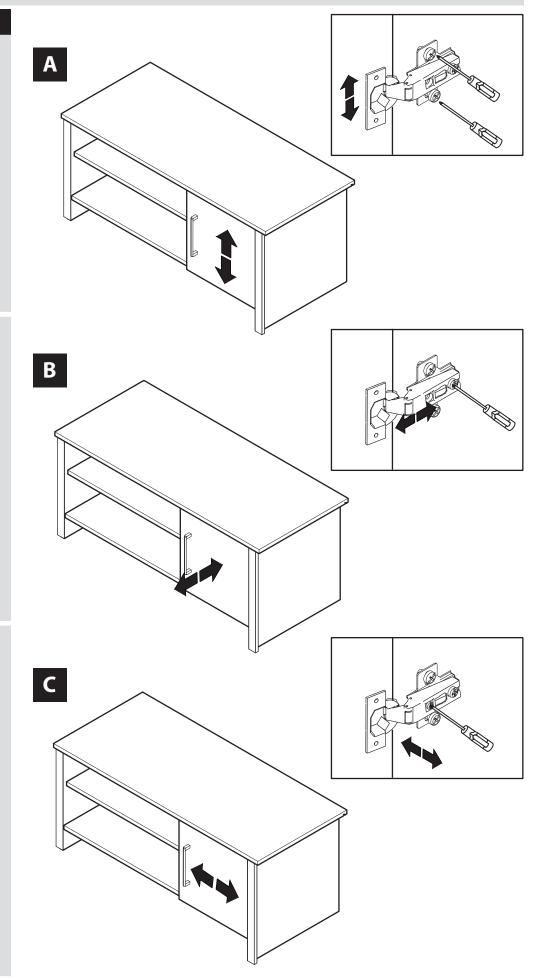

### Congratulations! Your unit is complete.

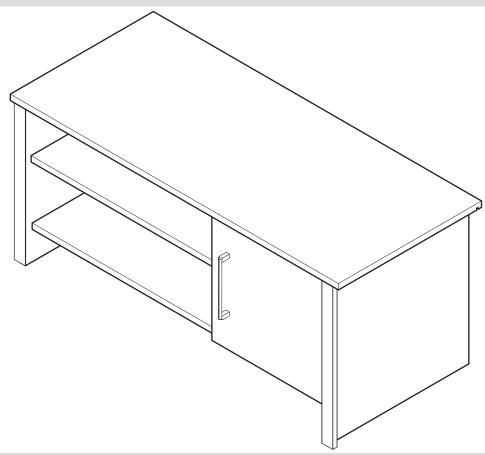

### Important Information

If you need help or have damaged or missing parts, call the Customer Helpline:

### 01709 534123

8am - 4.30pm (Monday to Thursday)

(by contacting the customer service line your statutory rights are not affected)

Please have the following information to hand:

- >> Unit Description
- >> Product Code
- >> Product Colour
- >> Place of Purchase
- >> Catalogue Ref. No.
- >> Item Code
- >> Assembly Instructions

We do have an answer machine should you contact us out of office hours, so in addition to the above information could you leave your name, address, daytime telephone number and the nature of your call on the answerphone. All calls will be actioned asap.

You can also e-mail your requests to us at:

#### customer.helpdesk@addspacefl.co.uk

Alternatively, you can write to us at: Customer Service Department, Addspace Furniture Limited, Braithwell Way, Hellaby Industrial Estate, Hellaby, Rotherham, South Yorkshire, S66 8QY.