
Sliding Door TV Unit

Assembly Instructions - Please keep for future reference

457/2170

hygena

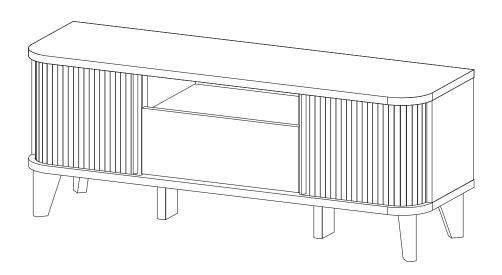

Dimensions

Width - 117 cm

Depth - 35 cm

Height - 45.2 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 6400 800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 3 and 4.
- · Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the panels during assembly, this could cause damage.
- · Assemble the unit as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.
- · Parts of the assembly will be easier with 2 people.
- If using power tools, please follow the safety instructions supplied with the tools.



· We do not recommend the use of power drill/ drivers for inserting screws, as this

could damage the unit. Only use hand screwdrivers.

· Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth From time to time check that and mild detergent, do no use bleach or abrasive cleaners.
 - there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly .Keep this page with these instructions for future reference.

Component - Panels

 
If you have damaged or missing components call the Customer Helpline: 0845 6400 800

Please check you have all the panels listed below

 


 













4 Right side (28 x 26cm)

 

2 **Bottom** (117 x 35 cm)



(28x 30 cm)

 


 


 




 
Shelf (44.2 x 29.8 cm)

 















Drawer back 11 (39.3 x 11.6 cm)

 




 



  







Back panel (114.9 x 29.1 cm) Wooden Handle x 2 (27.4 x 1.2 cm)




Components - Fittings

Please check you have all the fittings listed below

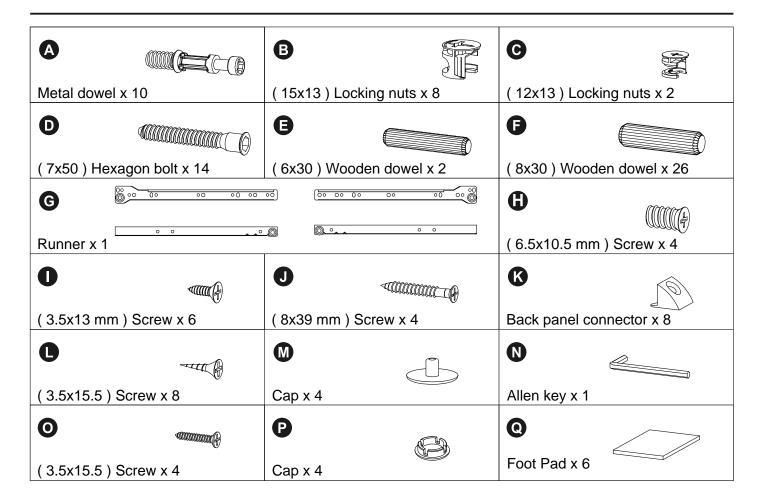

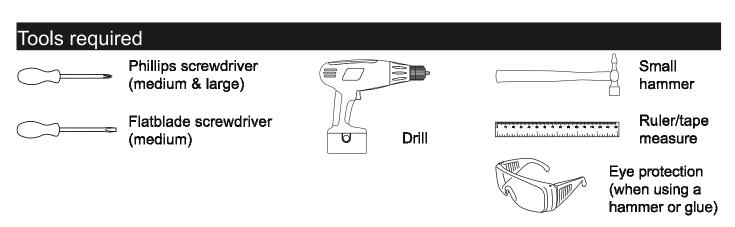

 Ruler - Use this ruler to help correctly identify the screws



Step 1

a: Fitting metal dowels

Screw metal dowels

A into Top Panel 1.

Note: Insert metal
dowels as far as
shown.

Do not over tighten.

b: Fitting wood dowels

Insert wood dowels


into Vertical

 
Partitions 3 and 4.


Insert wood dowels
into Shelf 7, Leg
and Leg 15.

Gently tap dowels into the components with a hammer if necessary.

Peel off protective film off foot pads **Q** and paste them onto Legs **15** and **16**.

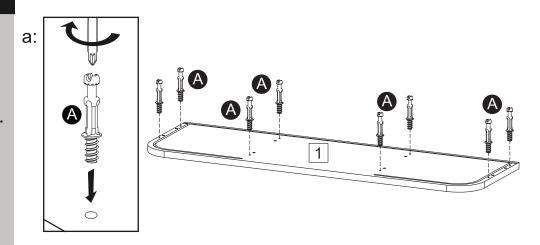



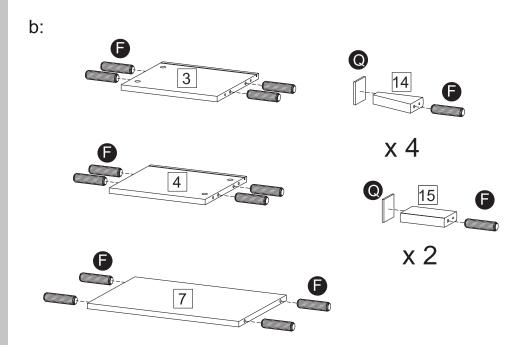



Step 2

Fitting wood dowels

Insert wood dowels
into Vertical
Partitions 5 and 6.

 Gently tap the dowels into the components with a hammer if necessary.

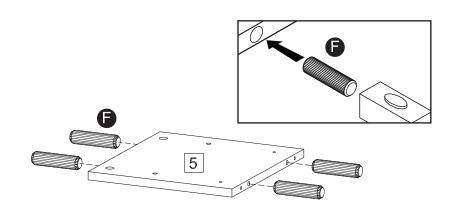





Attaching runners


Position runner **6** on Partition **5** as shown.
Fix through holes shown using screws

Repeat with Partition 6.

  (1).

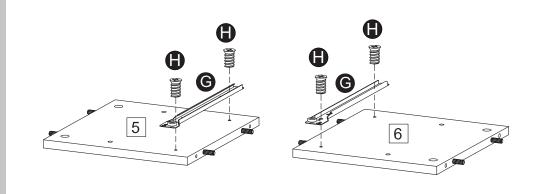






Step 3

Attaching panels

Position partition panel 5 and 6 onto shelf 7 with the finished front edge facing up.

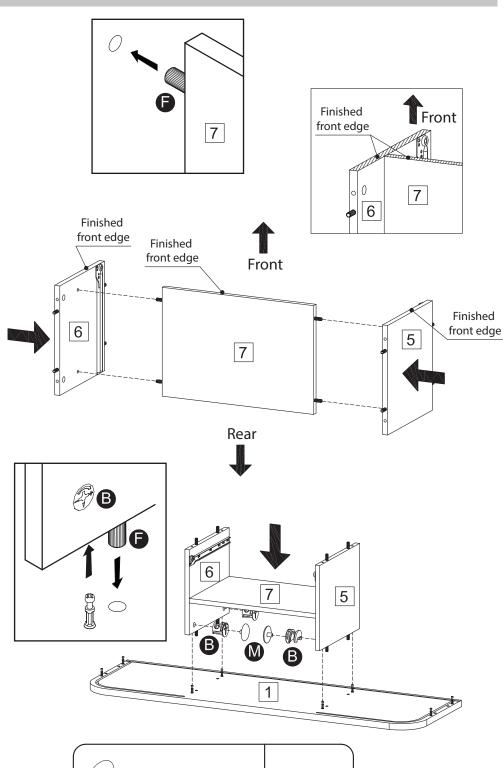

Step 4

Attaching panels

Two people are needed here.

Position the panel assembly onto Top Panel 1.

Insert two locking nuts **B** into Panel 6 and Shelf **7** where shown.

Use Allen key Nto turn locking nuts B clockwise to lock.

Cover locking nuts **B**with caps **M**.

Step 5

Attaching side panels

Position Left Side

3 and Right Side 4

onto Top Panel 1


as shown.

Insert two locking nuts **B** into Panel **6** and Shelf **7** where shown.

Use Allen key Nto turn locking nuts B clockwise to lock.

Cover locking nuts **B**with caps **N**.

4 B 3

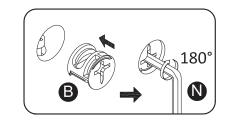


Step 6

Attaching handles

Attach wooden handle 17 to sliding door 13 using screws **①**.

Repeat with remaining door.

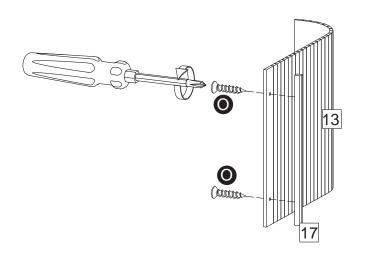


Step 7

Installing doors

Fit one door 13 into the groove on top panel 1.

Repeat with the remaining door on the other side.

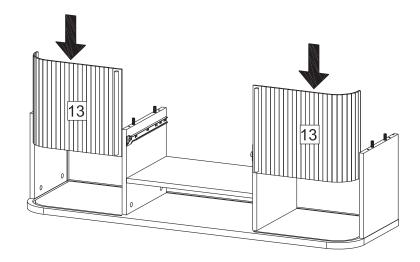


Step 8

Installing back panel

Turn the Back Panel 16 so that the long edge with cable hole goes in first.

Slide Back Panel 16 with so that it fits into the grooves on the Side Panels 3 and 4 and Top Panel 1.

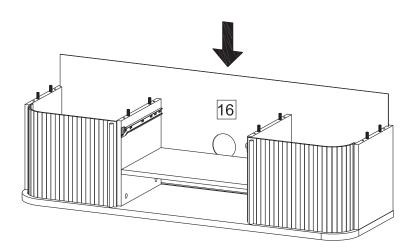


Step 9

Attaching legs

Fit Legs 14 and 15 to Bottom Panel 2.

Attach Legs 14 and 15 to Bottom Panel 2 using hexagon bolts **D**.

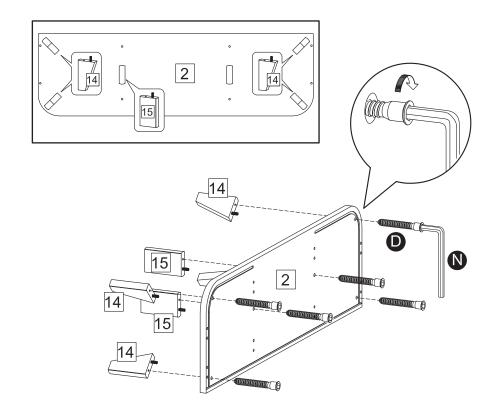

Step 10


Installing base

Two people are needed here.

Position Bottom Panel 2 onto the assembly.

Attach bottom panel using hexagon bolts **D**.

With help, carefully stand the TV Unit upright.

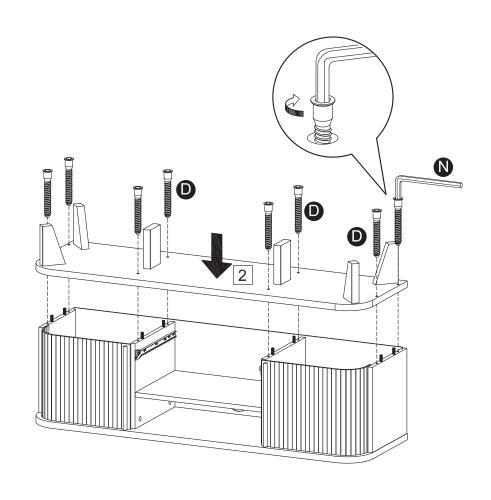

Step 11

Drawer assembly

a: Insert wood dowels **(E)** into Drawer Left Side **(9)** and Drawer Right Side **(10)**.

 
Gently tap dowels into the components with a hammer if necessary.

 
- b: Screw metal dowels **A** into the back of Drawer Front 8.
- c: Position Drawer Sides 9 and 10 to the back of Drawer Front 8 as shown.


Insert a locking nut each into Drawer Sides 9 and 10 where shown.

Use a screw driver to turn locking nuts clockwise to lock.

Continued on next page.






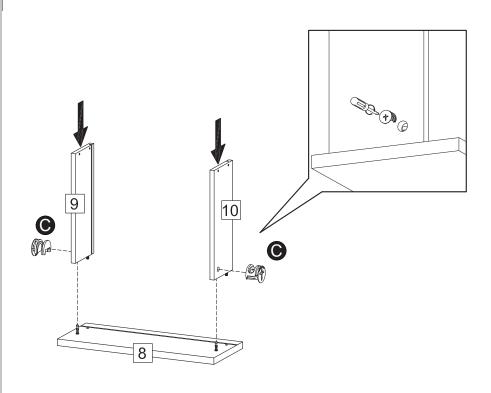

Step 11 (cont'd)

- d: Slide Drawer Bottom 12 into the grooves.
- e: Position Drawer Back 11 over the assembly.


Fix Drawer Back
11 to the Drawer
Sides with
Screws 1.

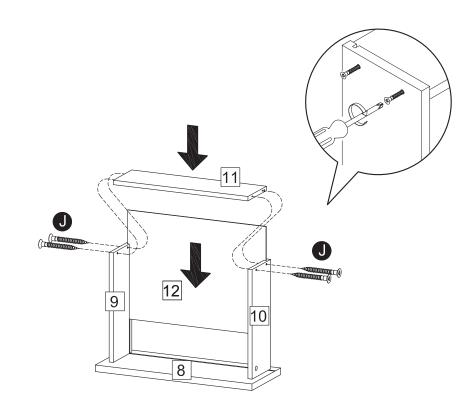

f: Position runner

G onto the
bottom of Drawer
Sides.


Fasten runner **G** with screws **1**.

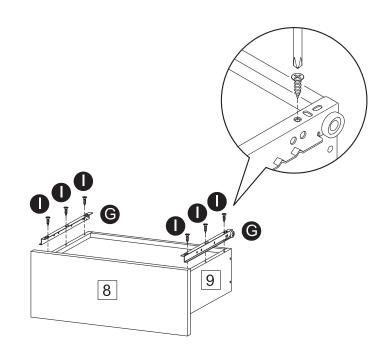


Step 12

Inserting drawers

 Insert the drawer into the unit, matching the rollers on drawer slides with the slots on the TV Unit runners.



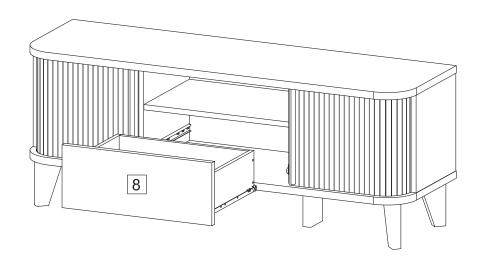


Step 13

Fixing rear panels

Fit a Back Panel Connector & between the Back Panel and its adjacent panel. Fix with Screw


Repeat with the remaining connectors around the perimeter of the back as shown.

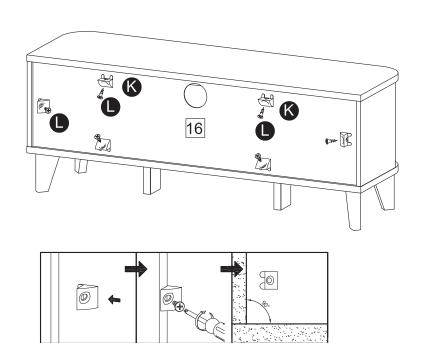


Step 14

Fixing caps

Cover the screw heads with caps **P** as shown.

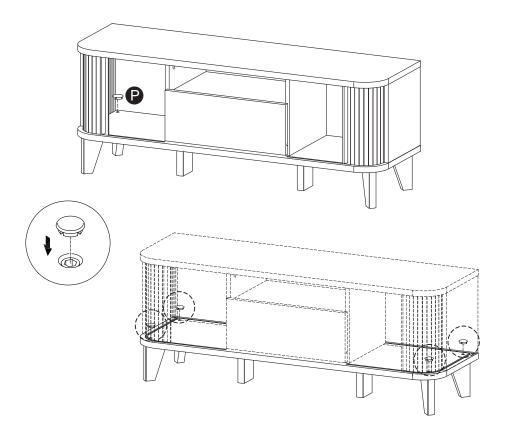

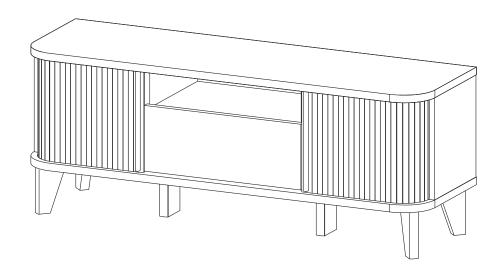

Assembly is complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 6400 800