

210MM

15MM

4577900

### Components


Ⓐ 1 x Flysheet

Ⓑ 1 x Tent Bag

Ⓓ 1 x Peg Bag

Ⓒ 2 x Black Fibreglass Pole

Ⓔ 1 x Pole Bag

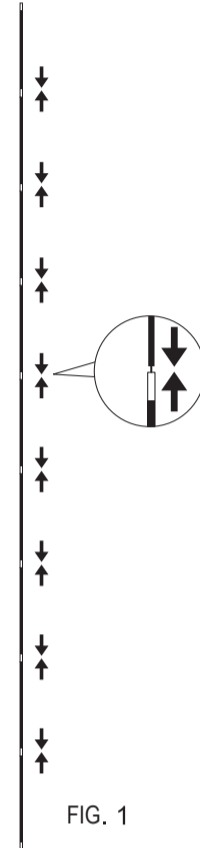

150MM

front

### Fittings

Ⓐ 12 x Peg



Ⓑ 1 x Spare Peg



1. Open the Tent Bag Ⓑ, take out and separate components.

2. Assemble the fibreglass poles Ⓒ

All the poles are for the flysheet.  
(FIG. 1)

FIG. 1

3. Spread tent. Take 2 longer poles Ⓒ and insert to sleeve poles.

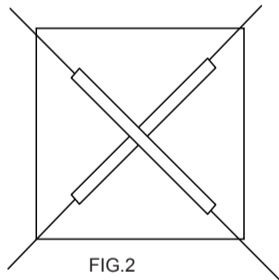


FIG. 2

5. Use metal pegs Ⓐ to secure the tent (FIG. 5) Keep the front door zipped closed before secure the metal pegs

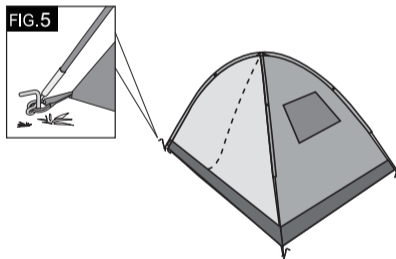


FIG. 5

7. The guy ropes can be adjusted to even the tension all around the tent (FIG. 7)

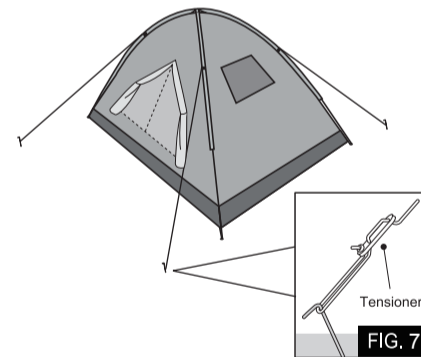


FIG. 7

YOUR TENT IS NOW READY FOR USE.

4. This Step need at least two persons to assemble. One person need take the joint of two poles (FIG. 3). And the other inserts the poles Ⓒ to the pin and ring (FIG. 4) and bend to fit the other end.

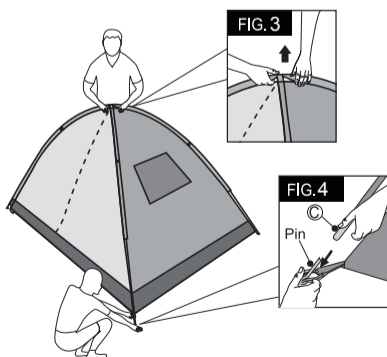


FIG. 3

FIG. 4

6. Secure the completed tent by pegging the guy ropes and flysheet into the ground using pegs (FIG. 6)

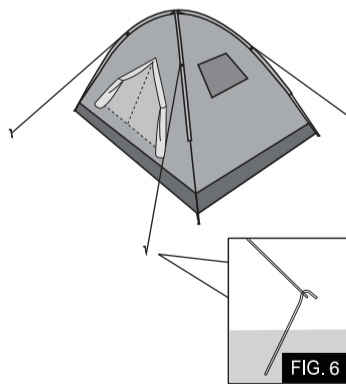


FIG. 6

back

150MM

### ⚠ IMPORTANT

For Expert advice, please Phone Argos Helpline On:  
**0345 640 0800**

Address: 489-499 Avebury Boulevard Saxon Gate West,  
Central Milton Keynes Bucks, MK9, 2NW