

BaByliss[®]



DIAMOND BIG HAIR DUAL

Model 2995U

BaByliss[®]

Diamond Big Hair Dual

The BaByliss Diamond Big Hair Dual airstyler with rotating barrel is the perfect tool to create a salon perfect blow-dry finish. Two interchangeable barrel sizes for fullness, body and shape giving complete styling versatility. The select mixture of soft bristles combined with active ionic conditioners and the Diamond infused ceramic barrel gives instant frizz-control for visibly smoother hair with healthy shine.

FEATURES

- 700W
- 50mm barrel for adding volume, body and shape
- 42mm barrel for shorter styles, layers and fringes
- Interchangeable brush heads with secure locking system
- Select mixture of soft bristles for superior smoothness and shine
- Active ionic conditioners for frizz-control
- Diamond infused ceramic barrel
- 2 heats plus a cool setting
- 2 rotation speeds for total control
- Multi-directional spinning brush
- Protective bristle covers
- 2.5m swivel cord
- 2 year guarantee

DIAMOND RADIANCE SHINE SYSTEM

Diamond Radiance Shine System combines luxuriously smooth diamond infused ceramic with active ionic conditioners to transform the hair:

- ✓ Giving ultimate smoothness
- ✓ Adding brilliant healthy shine
- ✓ Calming frizz
- ✓ Leaving hair beautifully silky soft

SAFETY CAUTIONS

This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling)
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.

- Do not use this appliance in the bathroom.



- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not leave the appliance unattended when switched on or plugged in.
- This unit is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the airstyler to the "0" position, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- Always ensure that the rear air filter is kept away from hair during use to prevent it being dragged into the

fan which may cause the appliance to overheat.

- Take care using this appliance when wearing jewellery, in particular necklaces and earrings to avoid entanglement in the rotating brush heads.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

Heat Settings

There are 2 heats plus a cool setting. Slide the 'on/off' switch to the first position to select the cool setting '*', the second position for the low heat 'I', and the third position for the high heat 'II'.

Rotation Settings

There are two rotation speed settings. To make the brush head rotate, press the buttons marked < and >, this will make the brush head rotate clockwise and anti-clockwise. When the appliance is set on the high heat setting the brush head rotation will be faster. When the appliance is set on the low heat setting the brush head rotation will be slower. Use the rotating brush feature to create styles with gorgeous volume, shape and shine.

NOTE: When the appliance is used on the cool setting, the brush head will not rotate.

Protective bristle covers

After every use, always ensure the protective cover is placed over the brush head. This protects the bristles from damage. When placing the protective cover over the brush head, ensure to line it up with the grooves around the top of the airstyler so it slides easily into place.

NOTE: The diagram on the protective cover demonstrates the direction it should be placed on to the brush head. If placed on incorrectly it may be difficult to remove.

INSTRUCTIONS FOR USE

- The 50mm brush is perfect for styling longer hair lengths whilst the 42mm brush is perfect for short layers and fringes.
- If you have long or thick hair, you may find it quicker and easier to use a hairdryer first, to rough dry your hair and remove the excess moisture. For added volume, turn your head upside down as you dry.
- Once the hair is 80% dry, you should start to create your style using the styler.

Interchangeable Brush Heads

- To attach a brush head, place it over the body of the unit and slide it down into position.
- Lock the brush head in place by sliding the switch on the top of the brush to the locked position.
- To remove a brush head, ensure the switch on the top of the brush head is in the open position.
- Gently slide the brush head up and off the unit to remove.

Volume, Body & Shape

- 1) Start by sectioning the hair and combing through to remove any tangles.
- 2) To turn the appliance on, slide the 'on/off' switch to the correct heat setting for your hair.
- 3) Place the brush underneath the hair section close to the roots and brush through the section to remove any tangles.
- 4) For added root lift, hold the brush in place at the root for a few seconds.
- 5) Starting at the root, move the brush through the hair section. Towards the end of the hair section start to rotate the brush away from your head by pressing and holding the appropriate rotation button, this will create shape and movement through the lengths of the hair.
- 6) As you do this, resist the rotation of the brush by pulling the brush downwards. This will create tension through the section of hair.

IMPORTANT! It may take several attempts to perfect this technique, if the brush spins too quickly, simply release the rotation button and remove from the hair.

- 7) For maximum volume, place the brush at the end of the hair section and allow the brush to rotate up the hair section by pressing and holding the appropriate rotate button. Wind the entire section of hair around the barrel until you reach the root. Release the rotate button and then hold the brush in the hair for a few seconds.
- 8) Slide the switch to the cool setting '*' for a further few seconds, this cools the hair to create longer lasting volume.
- 9) To release the section, move the switch back to the 'I' or 'II' setting and then press and hold the opposite rotation button to unwind the hair section.
- 10) Repeat as necessary.
- 11) After use, switch off and unplug the appliance.
- 12) Allow to cool before storing away.
- 13) Place the protective shield over the brush head to protect the bristles. Please see the 'Bristle Protection Shields' section for direction.

Helpful Hints and Tips

- To define layers and add shape to the ends of the hair, follow steps 5 - 6 and repeat through the sections.
- To get root volume and body through the top section of hair, follow steps 7 - 9 using an upward motion.

CLEANING & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

General

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side when storing away.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

Cleaning the Filter

- Unplug the appliance and let it cool completely before cleaning.
- Holding the handle of the appliance firmly pull the top of the rear filter towards you, this will enable the rear filter to open.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by pushing back into position.
- To clean the outside of the appliance, wipe with a damp cloth. Make sure no water enters the appliance and it is completely dry before use.

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 2 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com.


The return address is:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.


UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 5A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 5A fuse must be fitted.

