

# vax

SteamFresh  
POWER PLUS

**POWERFUL STEAM CLEANING  
FROM FLOOR TO CEILING**

LET'S GET STARTED.

**S84-W7-P**



## Let's talk safety



### Basic safety precautions

#### **This steam cleaner is intended for household use only and NOT for commercial or industrial use.**

- Only use the steamer indoors and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the steamer.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



### Don'ts

- Don't touch any hot areas/accessories on the steamer. It's normal for the steamer and accessories to heat up during use, always turn off and allow them to cool down before handling or changing.
- Don't use on windows with extreme outside temperatures to avoid stressing the glass surface. Excessive temperature differences between the glass window and the steam can break the window.
- Don't leave the steamer plugged in when unattended.
- Don't use the steamer if it has been dropped, damaged, immersed in water or left outdoors.
- Don't run over the power cord or use steamer if the power cord or plug is damaged. Please contact our Customer Care Line (UK) 0330 026 8455 (ROI) 1-800 928 308.



### Do's

- Always stand the steamer using the wall bracket or securely against a wall/fixed structure, alternatively lie flat on the floor in a suitable location so it does not become a trip hazard or can be stepped on.
- Always fill the twin tank with water/Vax detergent only as per the instructions in this user guide, never add perfume, stain remover or products containing alcohol.
- Always vacuum your carpets thoroughly and make sure hard floor areas are free from grit and debris before using the steamer.
- Always unplug the steamer before carrying out any maintenance.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Please refer to floor/surface manufacture's care recommendations before use, and test your flooring/carpet/rugs/surfaces by running the steamer over a small hidden area. If no pile distortion or damage occurs continue cleaning. Not suitable for use on wax polished floors or furniture, acrylic surfaces and synthetics, velvet or steam/water sensitive materials.
- This steamer should not be used to clean electrical appliances such as microwaves, televisions, electrical heating systems, etc.
- Only Vax recommended accessories and detergent should be used with the steamer.

- Don't handle the plug or use the steamer with wet hands.
- Don't pull or carry the steamer by the power cord. Don't use the power cord as a handle, pull the power cord around corners and sharp edges or close a door over the power cord. Don't unplug steamer by pulling on the power cord.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the steamer, remove blockages only as instructed in this guide.
- Don't aim the steamer at people, animals, plants or electrical components such as interior of ovens or wires. Never touch the steam jet or accessories (there is a risk of scalding).
- Don't use the steamer with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the rating label.

- Always replace the fuse in the plug with a British 13amp fuse. Always protect the power cord from heated surfaces or near open flames.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it could be a trip hazard.
- Always carry the steamer by the handle.
- Store the steamer in a cool, dry area. Before storing the steamer please ensure the twin tank is thoroughly clean and dry.

**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.**

# Thank you for buying this Steam Fresh Power Plus

## Taking care of your sealed hard floors and surfaces

The Steam Fresh Power Plus is designed to make the regular cleaning of your home as effective and efficient as possible. This user guide will help you get the most out of your machine.

Maintaining your home with the Steam Fresh Power Plus will ensure it is kept looking beautiful, smell fresh and is hygienically clean.

## Taking care of your Steam Fresh Power Plus

Also inside this guide are instructions on maintaining your new machine, so that it is always ready to tackle your home when you are.

## Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

**vax.co.uk/support** or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:

**Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WR9 0LW, UK**

This user guide can be found online at: [vax.co.uk/support](http://vax.co.uk/support)

The Vax logo is displayed in a bold, orange, sans-serif font.

Let us know what you think @VaxUK

# Contents

 [Let's talk safety](#)

 [Getting to know your machine](#)


 [Getting started](#)

 [Using your machine](#)

 [Taking care of your machine](#)

 [Notes](#)

 [Accessories](#)

 [What to do if it goes wrong](#)

 [Getting in touch](#)

## Steam Fresh Power Plus

### Included with your machine



Microfibre Pad x2



Carpet Glider



Accessory Bag



360° Connector  
& Adaptor



Precision Tool



Soft Scrub Brush



250ml Steam Detergent

# Getting to know your machine

Control panel

Twin tank release button

Water tank

Detergent tank


Handheld release buttons

Steam reach wand

Compact scrub brush

Floorhead

Steam boost nozzle

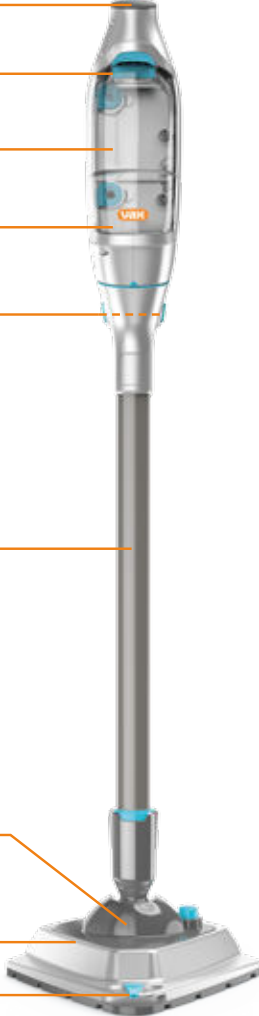

Handle


Power ON/OFF switch

Handheld

Quick release cord hooks – (Lower cord hook does not rotate)

Steam reach wand release pedal

Steam boost button

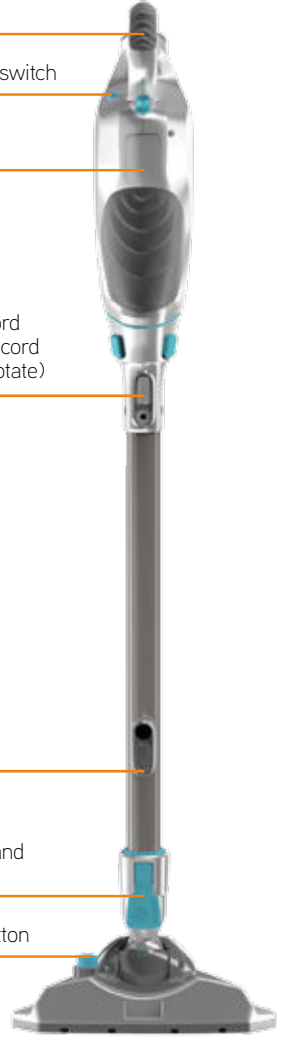

## Technical Specification

Name **Steam Fresh Power Plus**

Voltage **Please refer to product rating label**

Wattage **Please refer to product rating label**

Cord length **8m**

Weight **3.4kg**

## Accessories & Consumables\*

Microfibre Cleaning Pads (Type 1)  
1-1-131448-00

Hard Water Filter (Type 7)  
1-1-133327-00

Clean & Scrub Kit (Type 1)  
1-1-137101

Multi-Surface Kit (Type 1)  
1-1-137102

## Before you Begin

**CAUTION:** The steamer and accessories get very hot during use, always allow them to cool down before handling, or changing to handheld or reach wand mode. Always switch off and unplug the steamer when assembling. Always switch off the steamer before emptying the twin tank or changing the cloths/accessories.

**CAUTION:** This steamer is not free standing, always stand using the wall bracket or securely against a wall/fixed structure, alternatively lie the steamer flat on the floor in a suitable location so it does not become a trip hazard or can be stepped on.

**IMPORTANT:** Please refer to floor/surface manufacturer's care recommendations before use and test the steamer on a hidden area to begin with. Test for colour fastness in a small hidden area of upholstery/fabric to check for colour removal before use. When using the steamer, basic safety precautions should always be observed. Don't aim the steamer at people, animals, plants, and electrical components or wires. Never touch the steam jet or floorhead from a short distance (there is a risk of scalding). The steamer is equipped with a thermostat and a thermal cut-out. If for any reason the steamer overheats it will switch off. If this happens switch off and unplug the steamer, allow to cool for at least 2 to 4 hours and re-try.

## Assembling the steamer



Push the steam reach wand down into the floorhead until it clicks into place.




Push the handheld down onto the steam reach wand until it clicks into place.



The steamer is not free standing and must always be stood either in the wall bracket or safely and securely against a wall or fixed structure when not in use.

## Fixing the wall bracket

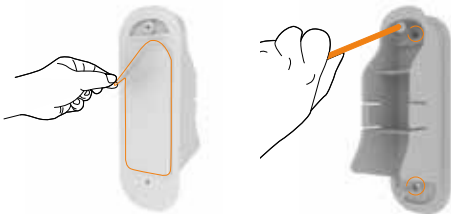


The wall bracket can be fixed against the wall by either adhesive strips or screw

# Getting started

## Fixing the wall bracket with adhesive strip



Fully assemble the unit and position it against the wall where it will be stored.

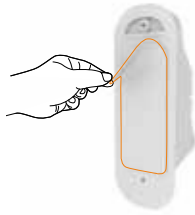

Remove the adhesive cover.



Attach the wall bracket to the handle.



Stand the unit close and upright against the wall.



Firmly press the handheld and wall storage clip to fix the wall storage clip to the wall in the correct place.

## Fixing the wall bracket with screws



Fully assemble the unit and position it against the wall where it will be stored.



Attach the wall bracket to the handle.



Using one of the supplied screws, screw the wall bracket to the wall using the top screw hole.



Carefully remove the unit from the wall bracket and use the other screw to secure the wall bracket to the wall.



# Using your machine

**IMPORTANT:** Always test on an inconspicuous area of flooring first before using detergent. Don't over fill the clean twin tanks or exceed the maximum amount required. Don't use the steamer without water in the water tank. Always top up with water in good time.

**CAUTION:** This steamer is not free standing, when filling or carrying out any maintenance always stand securely against a wall/ fixed structure or lie the steamer flat on the floor in a suitable location so it does not become a trip hazard or can be stepped on.


## Filling the twin tank



Press the twin tank release button down, grip the twin tank and pull to remove.



Grip the twin tank and pull the tab on the water tank cap to open.

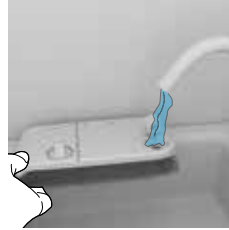

Fill the water tank with water. Replace the cap and push firmly to close.




Grip the twin tank and pull the tab on the detergent tank cap to open.



Fill the detergent tank up to the fill line with water and top up with detergent replace the cap and push firmly to close.



Before replacing the twin tank make sure the hard water filter is in place.

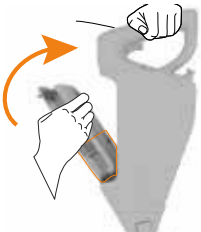

Line up the lip on the base of twin tank with the main body. Push in a hinge like manner to click into place.



**IMPORTANT:** If the twin tank is not fitted correctly there will be a reduction in the amount of steam/ detergent produced.

# Using your machine

## Using the floor steamer

**IMPORTANT:** Never use the steam mop without a microfibre cleaning pad attached to the floorhead.

Never leave the steam mop in one spot for an extended period of time or with a damp or wet microfibre pad attached as this may damage the floor surface.

**CAUTION:** This steamer is not free standing, always stand using the wall bracket or securely against a wall/fixed structure alternatively, lie the steamer flat on the floor in a suitable location so it does not become a trip hazard or can be stepped on.



Place the microfibre pad on the floor white side facing up. Place the floorhead onto microfibre pad making sure the microfibre pad covers the entire floorhead.



Plug the steamer into mains power supply and slide the On/Off switch to "On".



The orange light will illuminate to indicate power on.



The green light will illuminate to indicate the steamer is ready to use. The steamer will automatically set to Max steam (no detergent).



Press the button in the centre of the control panel to select steam and detergent setting. The light will illuminate at the desired setting:



Pull handle backwards to recline.



To produce steam squeeze the trigger in short bursts. Don't hold the trigger continuously to prevent over wetting floors.



Move the steamer slowly forwards and backwards across the floor paying particular attention to high traffic areas. Squeeze/release trigger to release steam as required.

**STEAM FUNCTIONS**

● ●	High Steam
●	Low Steam
● ●	High Steam and Detergent
●	Low Steam and Detergent

When the steamer is switched on the control panel will automatically set to max steam (no detergent).



# Using your machine



For more concentrated steam use the steam boost.  
For best results use max steam + detergent setting.  
Press the steam boost button on the floorhead to activate. Squeeze the trigger to release steam.  
Press the steam boost button to switch off.



After cleaning, switch off and unplug the steamer.  
Allow the steamer to cool down. Hold the corner of the microfibre pad down with your foot and lift steamer to peel away.

**CAUTION:** The steamer and accessories get very hot during use, always allow them to cool down before handling.

## Using the floor steamer with the Compact Scrub Brush



Place foot on outer floorhead and lift steamer to release the compact scrub brush.




To produce steam squeeze the trigger in short bursts. Don't hold the trigger continuously to prevent over wetting floors.



Move the steamer forwards and backwards across the floor, getting into corners and awkward places.



For more concentrated steam use the steam boost.  
For best results use Max steam + detergent setting.  
Press the steam boost button on the floorhead to activate. Squeeze the trigger to release steam.  
Press the steam boost button to switch off.

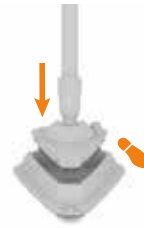

Re-fit the compact scrub brush by lining up with floorhead and pushing firmly into place.

For best cleaning results on stubborn stains in awkward places use the compact scrub brush on the max steam detergent setting.



# Using your machine

**IMPORTANT:** When using on carpets, always make sure the microfibre cleaning pad covers the floorhead entirely before using the carpet glider. Only use the carpet glider when refreshing carpets. Never leave the steam mop in one spot for extended period of time or with a damp or wet pad attached as this may damage the floor surface.

## Refreshing carpets



Place the microfibre pad on the floor white side facing up. Place steamer onto pad making sure the entire pad covers the floorhead.



With microfibre pad attached, slide the floorhead into the carpet glider, then push the back of the floorhead downwards into the clip to secure. The carpet glider should only be used when refreshing carpets.



Plug the steamer into mains and slide the On/Off switch to "On". The green light will illuminate when it is ready to use. The steamer will automatically set to Max steam (no detergent).



To refresh your carpets press the button on the control panel to select Steam only LOW. Do not use detergent when refreshing carpets.



Pull handle backwards to recline.




To produce steam squeeze the trigger in short bursts. To prevent over wetting carpets avoid holding the trigger continuously.



Move the steamer slowly backwards and forwards across the carpet.



When releasing the carpet glider, ensure the steam trigger is fully released first. To release the carpet glider, place your foot on the clip and press down. Lift steamer out of the glider to remove.

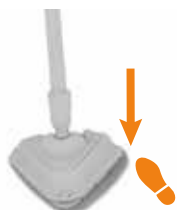

After refreshing carpets, switch off and unplug the steamer. Allow the steamer to cool down. Hold the corner of the microfibre pad down with your foot and lift steamer to peel away.

# Using your machine

## Using the 360° connector



Slide the rotation collar forward and rotate the 360° connector to the most suited cleaning position.

## Using 360° Steam Tools



### Precision Tool

Ideal for hard to access areas such as corners or around taps. The concentrated jet of steam penetrates heavily soiled areas removing soap scum in baths and shower enclosures and blasting away grease and grime from hobs and cookers.




### Soft Scrub Brush

Agitates dried on grease and grime and removes build up of dirt. Perfect for use on cookers and hobs, sinks, taps, worktops and more with minimal effort. The soft bristles tackle dirt and are ideal for more delicate surfaces. The integrated scraper edge helps remove stubborn dried on stains without having to change the tool.

## Using the 360° connector with cleaning tools



To attach cleaning tools to the 360° connector, line up the edge of the tool with the 360° connector and in a hinge like manner rotate the tool until it clicks securely in place.

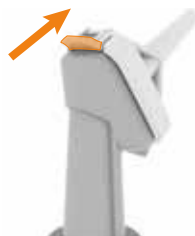

To remove the tool from the 360° connector, push the release tab at the front of the tool.

After attaching your chosen accessory tool, gently pull to make sure it's locked into place



# Using your machine


**CAUTION:** Always switch off the steamer and allow steamer to cool before attaching/detaching the reach wand, floorhead, accessories and twin tank.

Always stand steamer securely against a wall/fixed structure or lie the steamer flat on the floor in a suitable location so it does not become a trip hazard or can be stepped on.

When using the steam do not aim towards electrical components such as light fittings, sockets and wiring.

**IMPORTANT:** Always check the accessories are clean and free from debris, don't use if damaged, broken or worn.

## Using the Steam Fresh Power Plus reach wand

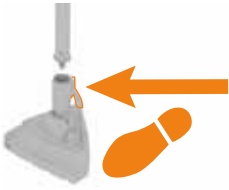

Press the reach wand release pedal and pull the reach wand and handheld out of the floorhead.



With the adaptor and cleaning tool attached to the 360° connector, slide it onto the reach wand nozzle.




Twist the adaptor clockwise and listen for the locking click.




Plug the steamer into mains and slide the On/Off switch to on. The green light will illuminate when it is ready to use. The steamer will automatically set to max steam (no detergent).



Press the centre pad on the control panel to select preferred setting steam/detergent.

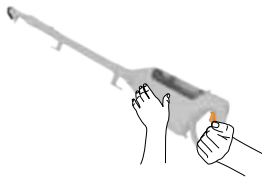


To produce steam squeeze the trigger in short bursts. Don't hold the trigger continuously to prevent over wetting.

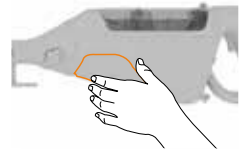

To improve your comfort, use the additional handgrip on the handheld to support the unit and help you clean difficult to reach areas.



# Using your machine

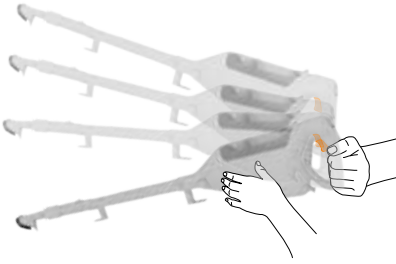

The steam reach wand can be used at different heights for hard to reach places.



To remove the 360° connector, slide the release button forward and un-twist the adaptor.




Then grip the adaptor and pull it away from the reach wand.

**CAUTION:** Always switch off the steamer and allow to cool before attaching/detaching the reach wand, floorhead, accessories and twin tank. Always stand securely against a wall/fixed structure or lie the steamer flat on the floor. When using the steam reach wand do not aim towards electrical components such as light fittings, sockets and wiring.

**IMPORTANT:** Always check the tools are clean and free from debris, don't use if damaged, broken or worn.


## Using the Steam Fresh Power Plus handheld

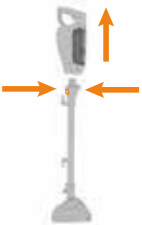


Standing behind the unit, press the handheld release buttons and carefully release the handheld from the reach wand.



Place the reach wand safely and securely to one side against a wall or fixed structure.

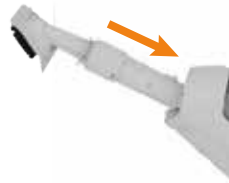

With the adaptor and cleaning tool attached to the 360° connector, insert it into the handheld.

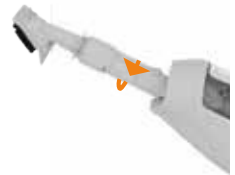

Twist the adaptor clockwise and listen for the locking click.



Plug into mains and slide the On/Off switch to on. The green light will illuminate when it is ready to use. The steamer will automatically set to max steam (no detergent).



Press the button on the control panel to select preferred setting steam/detergent.




To produce steam squeeze the trigger in short bursts. Don't hold the trigger continuously to prevent over wetting.

# Using your machine




To remove the 360° connector, slide the release button forward and un-twist the adaptor.

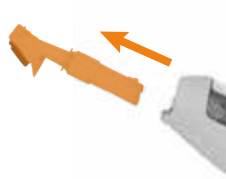

Then grip the adaptor and pull it away from the handheld.



To re-attach the handheld to the reach wand, grip the top of the reach wand, and line-up the handheld. Push down firmly until the handheld clicks into place.

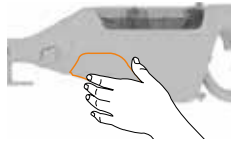

To improve your comfort, use the additional handgrip on the handheld to support the unit and help you clean difficult to reach areas.



**CAUTION:** Always switch off the steamer before attaching/detaching the reach wand, floorhead, accessories and twin tank. Always stand steamer securely against a wall/fixed structure or lie the steamer flat on the floor. The steamer and accessories get very hot during use, always allow them to cool down before handling. Taps should be turned off when steaming around them. Don't steam clean ovens, oven surfaces or grills when hot, allow to cool to room temperature first.

**IMPORTANT:** Always check the tools are clean and free from debris, don't use if damaged, broken or worn.



# Taking care of your machine

**CAUTION:** Switch off the steamer and unplug from the mains. Allow the steamer to fully cool down before performing any maintenance or troubleshooting checks.

Don't leave water or detergent in the tanks between uses, as this can effect the steamer performance, the water/detergent twin tanks need to be emptied and rinsed after each use.

## Emptying the twin tank




Press the twin tank release button, grip the twin tank and pull to remove tanks.



Grip the twin tank and pull the tab on the water tank cap open, then the tab on the detergent tank cap open.



Turn the twin tank over to empty any excess water and detergent over the sink.

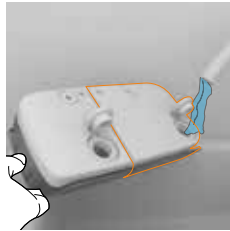

Rinse the detergent tank with water and replace both caps, pushing firmly to close before replacing the twin tank back onto the steamer.

## Cleaning the Microfibre Cleaning Pad

**IMPORTANT:** Don't use bleach or fabric softener when washing the microfibre cleaning pad. Always switch off the steamer and allow the steamer to fully cool down before removing the microfibre cleaning pad.



Hold the corner of the microfibre pad down with your foot and lift steamer to peel away.

Max 40°C



The microfibre pad is machine washable (max 40°C) allow to fully dry before use.

After cleaning, ensure the microfibre pad is thoroughly dried before using with the steamer again or storing.



# Taking care of your machine

**CAUTION:** Switch off the steamer and unplug from the mains. Allow the steamer to fully cool down before performing any maintenance or troubleshooting checks.


## Cleaning the Compact Scrub Brush



Press the reach wand release pedal and pull the reach wand and handheld out of the floorhead.



Pull to remove the compact scrub brush from the floorhead.

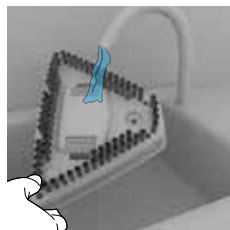

Remove any dirt /debris from the brushes and wash under running water (max 40°C) Leave to dry before re-fitting the compact scrub brush onto the steamer.

**IMPORTANT:** Don't operate the steamer without hard water filter in place. The condition of the filter affects the performance of your steamer, check and change filter periodically. Depending on water hardness and frequency of use, the filter should be changed every 3 to 6 months.

## Replacing the Hard Water Filter



Press the twin tank release button grip the twin tank and pull to remove tanks.




Use your thumb and index finger to grip the hard water filter. Pull the hard water filter towards you to remove.



The hard water filter should be replaced every 3 to 6 months.

**CAUTION:** Switch off and unplug steamer, allow to fully cool down before performing maintenance or troubleshooting checks.

## Clearing blockages from the handheld

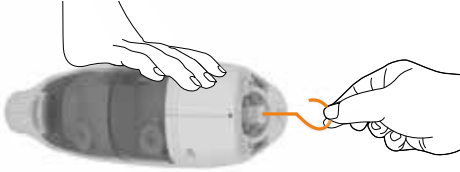

Place the handheld on a firm surface and hold securely. Grip the large end of the de-scaling pin, insert the pin into the nozzle and push the de-scaling pin through. Move the pin inwards and outwards to allow the tip of the pin to unblock the nozzle



Remove the pin from the nozzle. Holding the handheld steamer vertically, tap the nozzle on a hard surface to release any mineral deposits.



## Notes

# Also available 360° Steam Tools

Order at: [www.vax.co.uk/spares-and-solutions](http://www.vax.co.uk/spares-and-solutions)

360° Steam tools provide everything you need to clean a multitude of surfaces – rotating at 4 angles through 360°, they do the twisting so you don't have to.

Below is a selection of other 360° steam tools for you to enhance your steam cleaning experience. We have also put together some handy tool kits on the next few pages.

## The Pads

Tackle everyday surfaces easily with the 360° cleaning pads. Both are easy to attach and detach, and machine-washable for re-use.

### Microfibre Pad

The microfibre pad captures dirty water and spills, and is ideal for cleaning a variety of surfaces.

**Uses:** worktops, sinks, cupboards, tables, doors, shelves and much more.



### Pro Cleaning Pad

The pro cleaning pad has a textured surface to tackle stuck-on dirt, and is ideal for those grimeier jobs.

**Uses:** oven doors, hobs, tiles, baths, child seats, work surfaces and much more.



## The Brushes

The 360° steam brushes help you tackle dirt and grime. They are easy to attach and detach, with a rounded bristle head that makes reaching awkward angles and small crevices even easier.

### Deep Scrub Brush

The deep scrub brush has tough, strong bristles that help tackle more stubborn dirt and grime. The specially designed 'scraper edge' helps you to remove stuck-on dirt without changing tools.

**Uses:** oven doors and hobs, grills, taps, work surfaces and much more.



### Grout Brush

The grout brush is the tool you need for tackling dirt, mould and mildew on tile grout. The slim bristle head design means you can target the grout line with ease.

**Uses:** tile grout in all areas.



# Accessories

## The Window Tool

The window tool is perfect for cleaning glass and other mirrored surfaces. It is designed to give edge to edge steam distribution, for a more even steam clean. Use with the squeegee side first to clean and wipe away excess water, and then rotate to use the window pad to dry the surface. The pad is easy to attach and detach, and machine-washable for re-use.


**Uses:** windows, shower screens, tiles, mirrors and other similar surfaces.



## The Flexi-Tool

The flexi-tool is our ultimate steam cleaning tool for a multitude of tasks. The long, thin, flexible design helps to reach into crevices or tackle large flat surfaces quickly. It comes with 2 coloured Microfibre Socks (one for upholstery and one for hard surfaces), allowing you to easily switch between cleaning tasks.

**Uses:** between blinds, kitchen appliances and cupboard door handles, as well as worktops, cupboards, curved shower screens, curtains, car seats and much more.

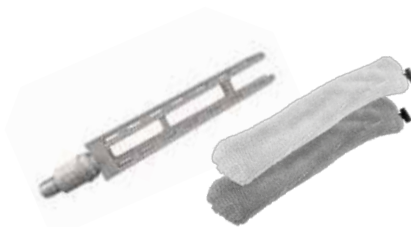

**IMPORTANT:** Always support the handheld by the handle when using the hose.

## The Flexible Extension Hose

The flexible extension hose attaches to your handheld to provide some extra cleaning reach. Use with the 360° connector and steam tools for high or hard to reach areas.



## Attaching and detaching the hose



Push the end of the hose with the locking clip into the handheld nozzle until it clicks into place. Make sure the locking clip on the flexi-hose is securely attached by gently pulling the flexi-hose.



Push and attach the 360° connector with tool attached into the other end of the flexi-hose until it clicks into place. Make sure the locking clip is securely attached by gently pulling the 360° connector.



Press the unlocking button on the flexi-hose and pull to remove the hose from handheld.

# 360° Steam Tools

## Clean & Scrub Kit (Type 1)

1-1-137101

All you need to clean and scrub at all angles. 360° Steam Tools provide full rotational cleaning. This kit includes: 1 x Pro Clean pad and 1 x Microfibre pad for general cleaning, 1 x Deep Scrub Brush, 1 x Soft Scrub brush and 1 x Grout Brush for cleaning tough stains around the home. A free accessory bag is also included.



## Multi-Surface Kit (Type 1)

1-1-137102

All you need to tackle awkward crevices and a multitude of surfaces around the home. 360° Steam Tools provide full rotational for cleaning at all angles. The kit includes: 1 x Window tool and pad (for glass, mirrored or shiny surfaces), 1 x Deep Scrub Brush and 1 x Grout Brush, 1 x Extension Hose (for extra flexible reach) and 1 x Flexi-Tool with 2 x Microfibre Socks (for tackling a multitude of surfaces and awkward nooks and crannies). A free accessory bag is also included.



## 360° Window Pads

1-1-137252


Contains 4 x replacement window pads for your 360° Window Tool. Pads are machine washable.



## 360° Scrub Pads

1-1-137251

Contains 4 x replacement Microfibre Pads and 4 x replacement Pro Cleaning pads. Pads are machine washable.

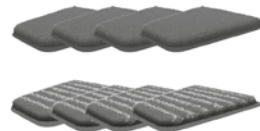

## 360° Flexi-Tool Socks

1-1-137250

Contains 2 x replacement Microfibre Socks for your 360° Flexi-Tool. Socks are machine washable.



# Don't forget your accessories!

Order at: [www.vax.co.uk/spares-and-solutions](http://www.vax.co.uk/spares-and-solutions)

### 2x Microfibre Cleaning Pads (Type 1)

1-1-131448-00

Microfibre cleaning pads, ideal to remove dirt and grime. These cleaning pads attach to the base of the steam mop, so it's quick and easy to fit and remove.



### 2x Microfibre Pet Pads (Type 9)

1-1-133265-00


Microfibre pet pads. Super absorbent, touch stain removal and ideal for picking up pet hairs. These cleaning pads attach to the base of the steam mop, so it's quick and easy to fit and remove.



### Pro Cleaning Pads (Type 6)

1-1-132319-00

3x pro cleaning pads. Ideal for stubborn stain removal throughout your home. These cleaning pads attach to the base of the steam mop, so it's quick and easy to fit and remove.

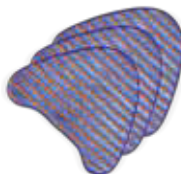

### Steam Mop Cleaning Pads

(1-1-131864-00)

2x microfibre cleaning pads, ideal to remove dirt and grime.  
2x coral cleaning pads for your Steam mop cleaner.  
Super absorbent and are ideal for removing stubborn stains.



### Total Home

1-1-132528-00

8x microfibre cleaning pads. Avoid cross contamination between different areas of your home with this Total Home Cleaning Kit. Kit contains 8 x coloured microfibre cleaning pads for all areas of your home. Kit also contains a free wash bag worth £9.99.





## Hard Water Filter (Type 7)

**1-1-136462-00**

3x hard water filters to prevent the build-up of lime scale deposits in hard water areas.



## Steam Detergent Pet

**1-9-132813-00**

Vax Pet Steam Detergent cuts through grease and grime, neutralises pet odours, and leaves your floors smelling of Apple Blossom.



## Steam Detergent Spring Fresh

**1-9-132807-00**

Vax Spring Fresh Steam Detergent cuts through grease and grime, neutralises odours and leaves your floors smelling Spring Fresh.



## Steam Detergent Lime Zest

**1-9-132809-00**

Vax Lime Zest Steam Detergent cuts through grease and grime, neutralises odours, and leaves your floors smelling of Lime Zest.



## Steam Detergent Ocean Breeze

**1-9-132811-00**

Vax Ocean Breeze Steam Detergent cuts through grease and grime, neutralises odours, and leaves your floors smelling of Ocean Breeze.



# What to do if it goes wrong

## Problem

## Solution

There is an accessory missing?

- Check the 'This pack contains' panel on the box to make sure the part is included with your machine.

The steamer has no power

- Check the On/Off button has been switched to on. The red light should illuminate when on. The green light will illuminate when product is ready to steam.
- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug. If this needs replacing, always replace with a British 13amp fuse.

Why is the steamer not producing steam?

- There may be no water in twin tank. Fill the twin tank. Go to 'Using your machine'.
- Check the twin tank is correctly fitted. Go to 'Using your machine'.
- The water may not yet be at temperature, the green indicator light will be illuminated when it is ready.
- Trigger on handle has not been pressed go to 'Using your machine'. The trigger may need to be pumped a few times before steam is visible.
- Check the hard water filter is in place, not damaged or needs replacing. Go to 'Taking care of your machine'.
- The float in twin tank may be stuck. Shake handheld to release.
- Steam path may be blocked. Go to 'Let's talk technical'.
- Tools/accessories not correctly fitted. Go to 'Using your machine'.

Why is the steamer not delivering detergent?

- Check correct setting has been selected on control panel dial go to 'Using your machine'.
- Check the detergent has been diluted to correct strength. Go to 'Using your machine'.
- Check the twin tank is correctly fitted. Go to 'Using your machine'.
- There may be no water/detergent mix in twin tank. Fill the twin tank. Go to 'Using your machine'.

Why won't the cleaning pad pick up dirt?

- The cleaning pad may already be saturated or dirty. Switch off the steamer, unplug from mains and allow to cool. Then wash the cleaning pad. Go to 'Taking care of your machine'.

**Caution:** Always unplug the steam cleaner before performing maintenance/troubleshooting checks.

It's quick and easy to  
register for your **FREE**

**2 year  
guarantee<sup>†</sup>**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

**we're here if you need us**

Online **vax.co.uk/support**

Call: (UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm\*

Alternatively, you can write to us at:

Vax Ltd. Plot 302, Stonebridge Cross Business Park, Hampton Lovett,  
Droitwich, WR9 OLW, UK

<sup>†</sup> Registration required. Terms and conditions apply, see vax.co.uk for details.

\* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

## GET IN TOUCH

 0330 026 8455     [info@vax.co.uk](mailto:info@vax.co.uk)     [vax.co.uk](http://vax.co.uk)     [VaxVacuums](https://www.facebook.com/VaxVacuums)     [@VaxUK](https://twitter.com/VaxUK)

**EEC Statement of Compliance:** Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the S84-W7-P manufactured in compliance with the following Directives: **Safety:** 2006/95/EC Low Voltage Directive.  
**EMC:** 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 Vax Limited. All rights reserved. The VAX trade mark and Vax lozenge is the property of Techtronic Floor Care Technology Ltd and is registered in the EU and may be pending or registered in other countries.

